



Merlin 3100 Series

Industrial Cellular Router

Table of Contents

1. General Information	3
1.1. Legal Information	3
1.2. About This Guide	3
1.3. License and Copyright for Included FLOSS	3
2. Safety and Regulations	4
2.1. Warning Levels	4
2.2. Safety Information	5
2.3. Care Recommendations	7
2.4. Product Disposal	7
2.5. Compliance Information	8
2.5.1. Agency Approvals and Standards Compliance	8
2.5.2. Simplified Declaration of Conformity	8
3. Product Description	9
3.1. Product Description	9
3.2. Available Models	9
3.3. Hardware Overview - 4G, Cat-M1 and 5G RedCap variants	10
3.4. Hardware Overview - 5G variants	11
3.5. Connector Information Merlin	11
3.5.1. Power Input	11
3.5.2. Antennas for model with two SMA Connectors	12
3.5.3. Antennas with LTE 4G and GNSS	12
3.5.4. Antennas	12
3.5.5. Reset Button	12
3.6. LED Indicators	13
3.7. Ethernet Port LED Behaviour	14
3.8. Dimensions	14
4. Installation	16
4.1. Mounting the Router	16
4.2. Cooling	16
4.3. Connecting Cables	16
4.4. Connecting the Antenna	16
4.5. Inserting SIM Cards	17
4.5.1. Inserting SIM 1 Card	17
4.5.2. Inserting SIM 2 Card	17
4.6. Powering Up	17
5. Specifications	18
5.1. Interface Specifications	18
5.2. Type Tests and Environmental Conditions	19
6. Revision Notes	20

1. General Information

1.1. Legal Information

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind are made in relation to the accuracy and reliability or contents of this document, either expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at www.westermo.com.

1.2. About This Guide

This guide is intended for installation engineers and users of the Westermo products.

It includes information on safety and regulations, a product description, installation instructions and technical specifications.

1.3. License and Copyright for Included FLOSS

This product includes software developed by third parties, including Free/Libre Open Source Software (FLOSS). The specific license terms and copyright associated with the software are included in each software package respectively. Please visit the product web page for more information.

Upon request, the applicable source code will be provided. A nominal fee may be charged to cover shipping and media. Please direct any source code request to your normal sales or support channel.

2. Safety and Regulations

2.1. Warning Levels

Warning signs are provided to prevent personal injuries and/or damages to the product. The following levels are used:





Level of warning	Description	Consequence personal injury	Consequence material damage
 WARNING	Indicates a potentially hazardous situation	Possible death or major injury	Major damage to the product
 CAUTION	Indicates a potentially hazardous situation	Minor or moderate injury	Moderate damage to the product
 NOTICE	Provides information in order to avoid misuse of the product, confusion or misunderstanding	No personal injury	Minor damage to the product
 NOTE	Used for highlighting general, but important information	No personal injury	Minor damage to the product

Table 1. Warning levels

2.2. Safety Information

Before installation:

Read this manual completely and gather all information available on the product. Make sure it is fully understood. Check that your application does not exceed the safe operating specifications for the product.



SAFETY DURING INSTALLATION

The product must be installed and operated by qualified service personnel and installed into an apparatus cabinet or similar, where access is restricted to service personnel only.

Before energising and connecting communication cables to the product, ensure a protective earthing conductor is first connected to the protective earthing terminal (only valid for metallic housings). Westermo recommends a cross-sectional area of at least 4 mm².

Upon removal of the product, disconnect the product from the power supply and all other communication ports before disconnecting the protective earthing conductor.



SAFETY USE

This equipment is not suitable for use in locations where children are likely to be present.



HAZARDOUS VOLTAGE

Do not open an energised product. Hazardous voltage may occur when connected to a power supply.



PROTECTIVE FUSE

The power supply wiring must be sufficiently fused.

This product has no internal fuse and should be connected via an external fuse for protection.

The Merlin 3100 4G and Cat-M1 models have a typical current of 398mA drawn at 12 VDC. Hence a 1A fuse is recommended

The Merlin 3100 5G models have a maximum current of 1500mA drawn at 12 VDC. Hence a 2A fuse is recommended

It must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.



POWER SUPPLY CONNECTION

There are safety regulations governing the power source that can be used in conjunction with the product. Refer to the user guide for detailed information.



EARTH CONNECTION

For correct function, the earth connection needs to be properly connected to a designated protective earthing rail (only valid for metallic housings). Torque: 3.1 Nm.



INDOOR USE ONLY

The device is to be connected only to networks without routing to the outside plant. All communication ports are for indoor use only.



REDUCE THE RISK OF FIRE

To reduce the risk of fire, use only telecommunication line cords with a cable diameter of AWG 26 or larger. Regarding power cable dimensions, see chapter Interface Specifications.



RADIO PRODUCTS

Observe the usage limitations of radio products at filling stations, in chemical plants, in systems with explosives or potentially explosive locations.

The product may not be used in airplanes. Exercise particular caution near personal medical aids, such as pacemakers and hearing aids. Never perform work on the antenna system during a thunderstorm.

To fulfill human safety, a minimum separation distance of 20 cm or more should be maintained between the antenna of the product and personnel during operation.



ELECTROSTATIC DISCHARGE (ESD)

Prevent electrostatic discharge damage to internal electronic parts by discharging your body to a grounding point (e.g. use a wrist strap).



HOT SURFACE

Be aware that the surface of this product may become hot. When it is operated at high temperatures, the external surface may exceed Touch Temperature Limit according to the product's relevant electrical safety standard.



CABLE TEMPERATURE RATING FOR FIELD TERMINAL WIRES

There may be a requirement on the minimum temperature rating of the cable to be connected to the field wiring terminals, refer to the user guide for detailed information.

2.3. Care Recommendations

Follow the care recommendations below to maintain full operation of the product and to fulfill the warranty obligations:

- Do not drop, knock or shake the product. Rough handling above the specification may cause damage to internal circuit boards.
- Use a dry or slightly water-damp cloth to clean the product. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Do not paint the product. Paint can clog the product and prevent proper operation.

If the product is used in a manner not according to specification, the protection provided by the equipment may be impaired.

If the product is not working properly, contact the place of purchase, the nearest Westermo distributor office or Westermo technical support.

2.4. Product Disposal

This symbol means that the product shall not be treated as unsorted municipal waste when disposing of it. It needs to be handed over to an applicable collection point for recycling electrical and electronic equipment.

Proper disposal of the product helps minimize hazardous substances and prevents potential negative impacts on both the environment and human health.



Figure 1. WEEE symbol for treatment of product disposal

2.5. Compliance Information

2.5.1. Agency Approvals and Standards Compliance

Type	Approval/Compliance
EMC	<ul style="list-style-type: none">• EN/IEC 61000-6-2, Immunity industrial environments• EN/IEC 61000-6-4, Emission industrial environments
Safety	<ul style="list-style-type: none">• EN 62368-1, Safety Communication Technology

Table 2. Agency approvals and standards compliance

2.5.2. Simplified Declaration of Conformity

Hereby, Westermo declares that this product is in compliance with applicable EU directives and UK legislations. The full declaration of conformity and other detailed information is available at www.westermo.com/support/product-support.



Figure 2. The European Conformity and the UK Conformity Assessment markings

3. Product Description

3.1. Product Description

The Merlin series of versatile cellular routers provide high speed data network connectivity for demanding industrial and smart grid applications. Coupled with the Zero Touch deployment software Activator, it provides cost-effective, reliable, and consistent onboarding of routers in large-scale projects.

This compact, rugged unit is suited to tight spaces. Its high MTBF and wide temperature range support maximum service life.

To achieve best-in-class cybersecurity, the Merlin series is equipped with a TPM (Trusted Platform Module) chip that keeps cryptographic keys secure. Secure Boot ensures that the unit boots using only software that is signed and trusted by manufacturer. A set of cybersecurity tools is available as standard including VPN and stateful Firewall support for data security and user authentication.

3.2. Available Models

See datasheet for full list of models available.

3.3. Hardware Overview - 4G, Cat-M1 and 5G RedCap variants

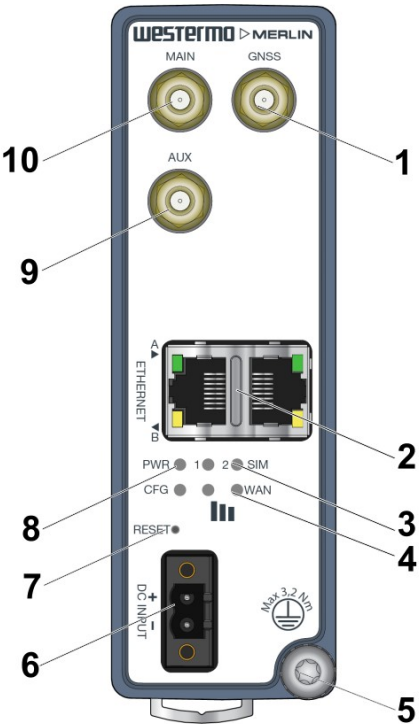


Figure 3. Location of interface ports and LEDs, illustrated by a Merlin-3103-T2G-QFR-G-DCi0936 model

No.	Description	No.	Description
1	GNSS SMA connector. Not present on 450MHz Private Network models	2	Ethernet RJ45 ports
3	SIM LEDs	4	WAN signal strength
5	Earthing lug	6	Power connection
7	Reset button	8	Power and configuration LEDs
9	WAN auxiliary SMA connector	10	WAN primary SMA connector

3.4. Hardware Overview - 5G variants

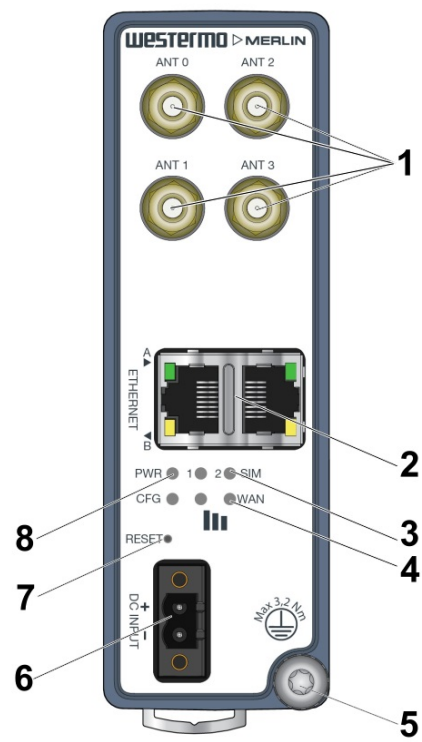


Figure 4. Location of interface ports and LEDs, illustrated by a Merlin-3103-T2G-PFO-DCi0936 model

No.	Description	No.	Description
1	SMA connectors	2	Ethernet RJ45 ports
3	SIM LEDs	4	WAN signal strength
5	Earthing lug	6	Power connection
7	Reset button	8	Power and configuration LEDs

3.5. Connector Information Merlin

3.5.1. Power Input

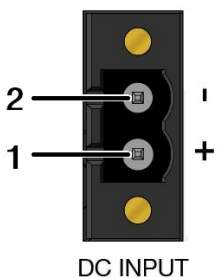
Illustration	Position	Product marking	Direction	Description
	1	DC+	Input	Supply voltage
	2	DC-	Input	Supply voltage

Table 3. Power input

The positive input is marked with a plus sign, "+". The negative input is marked with a minus sign, "-". Connect the voltage to the + pin and the return to the - pin on the power input.



NOTICE - POWER SUPPLY

Where an AC/DC-adaptor has not been supplied, a power supply of no greater than 100 W should be used, with a current limit of 1 Amp.

The product can be supplied with power from a source that complies with PS2/LPS according to UL/IEC 62368-1 or with LPS according to UL/IEC 60950-1, the latest edition or equivalent. Such a power supply shall not exceed 100W after 5 seconds.

3.5.2. Antennas for model with two SMA Connectors

Where the router has two SMA connectors for mobile radio LTE antennas, one is for MAIN and the other for AUXiliary.

3.5.3. Antennas with LTE 4G and GNSS

For routers with single radio LTE 4G and GNSS, they are:

- Two LTE antennas for the mobile radio - a MAIN and an AUXiliary
- Single antenna for GNSS/GPS

3.5.4. Antennas

For routers with four SMA connectors for mobile radio LTE antennas, marked Ant 0 through Ant 3, they are used for 5G communication. It is recommended to use all four antenna connectors.

3.5.5. Reset Button

Use the reset button to request a system reset. When pressing the reset button, all LEDs turn on simultaneously. The length of time holding the reset button will determine its behaviour.

Press duration	PWR/CONFIG LED behaviour	Router behaviour on depress
0-3 seconds	Solid on	Normal reset to running config. No special LED activity.
3-15 seconds	Flashing fast	Releasing 3-15 seconds switches the router back to factory configuration. Note: this will wipe the configurations, both config1 and config2.
15-20 seconds	Solid on	Releasing 15-20 seconds performs a normal reset to running config.
20-30 seconds	Flashing slowly	Releasing 20-30 seconds reboots the router to recovery mode. Only to be done in case of emergency and under the guidance of Westermo support staff. Note: this may wipe the configurations, both config1 and config2.
> 30 seconds	Solid on	Releasing after 30 seconds performs a normal reset.

Table 4. Merlin series router reset behaviour

3.6. LED Indicators

The LED indicators described in this section are all single colour LEDs. When the router is powered on, the power LED is green.

The possible LED states are:

- Off
- Flashing slowly
- Flashing quickly
- On

LED	Status	Description
Booting up		The router takes less than a minute to boot up. During this time, the power LED flashes. Other LEDs display different diagnostic patterns during boot up. Booting is complete when the power LED stops flashing and stays on steady.
Power	On	Power is present
	Off	No power. Boot loader does not exist.
	Flashing	Booting
CFG	On	The router is running a valid configuration file.
	Flashing slowly	The router is running in recovery mode (2.5 flashes/second)
	Flashing quickly	The router is running in factory configuration (5 flashes/second)
SIM	On	SIM selected and registered on the 3G/4G network
	Off	Not selected or SIM not inserted
	Flashing	SIM selected and not registered on the network
Cellular signal strength LED	Both LEDs off	Data link not connected or signal strength ≤ -113 dBm
	Right LED on	Data link connected and signal strength ≤ -89 dBm
	Left LED off	
	Right LED off	Data link connected and signal strength is between -89 to -69 dBm
	Left LED on	
	Both LEDs on	Data link connected and signal strength > -69 dBm

Table 5. LED indicators

3.7. Ethernet Port LED Behaviour

There are two Ethernet ports and each has a pair of LEDs: a LINK LED (green) and a SPEED LED (amber). When looking at the port, the LED on the top is the LINK LED, and the SPEED LED is on the bottom.

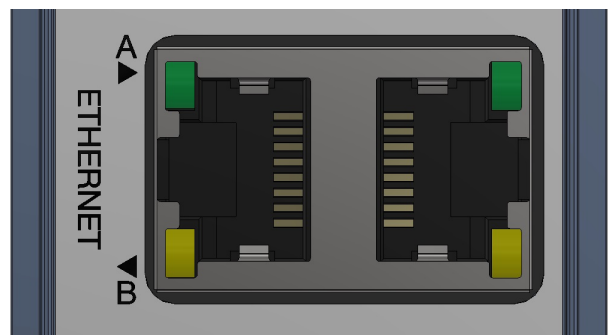


Figure 5. Merlin 3100 Ethernet ports

LINK LED (green)	On	Physical Ethernet link detected
	Off	No physical Ethernet link detected
	Flashing	Data is being transmitted or received over the link
SPEED LED (amber)	On	Link operating at 1000 Mbps
	Off	Link operating at 10 Mbps or at 100 Mbps

Table 6. Ethernet LED behaviour and descriptions

3.8. Dimensions

Dimensions are stated in millimetres and are regardless of model.

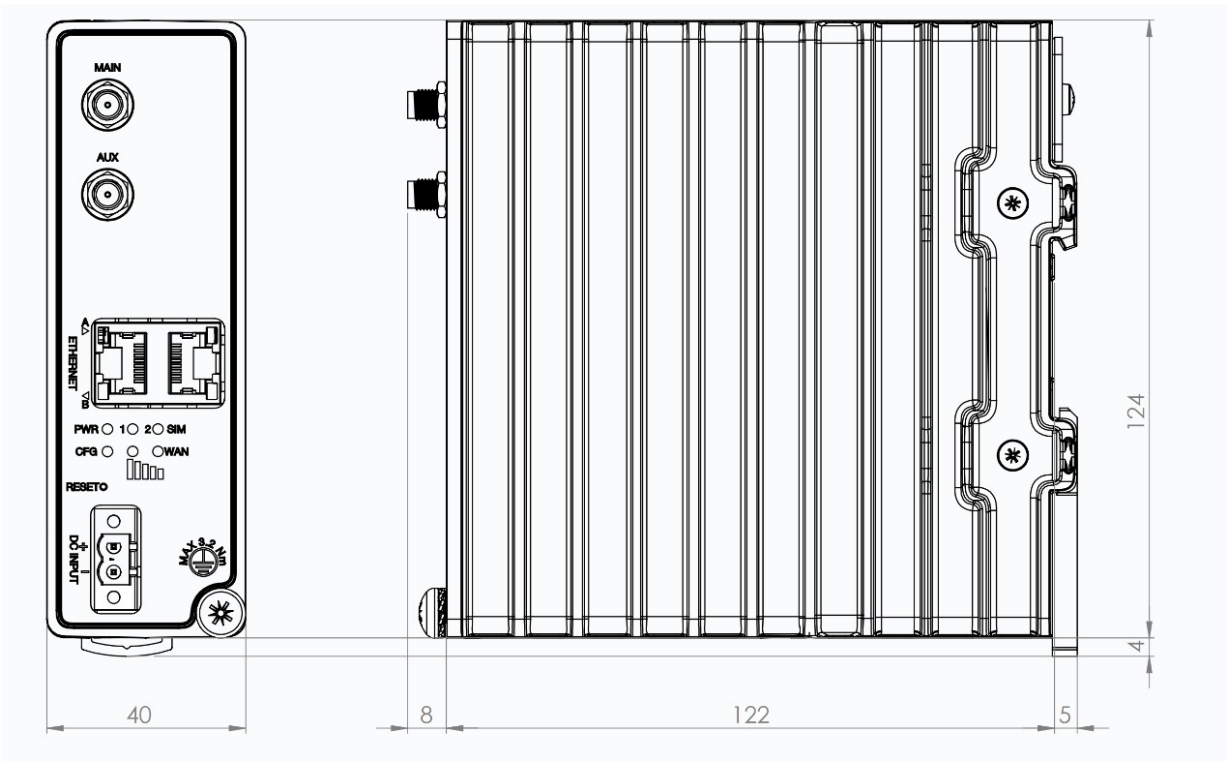


Figure 6. Dimensional drawing - 4G variants

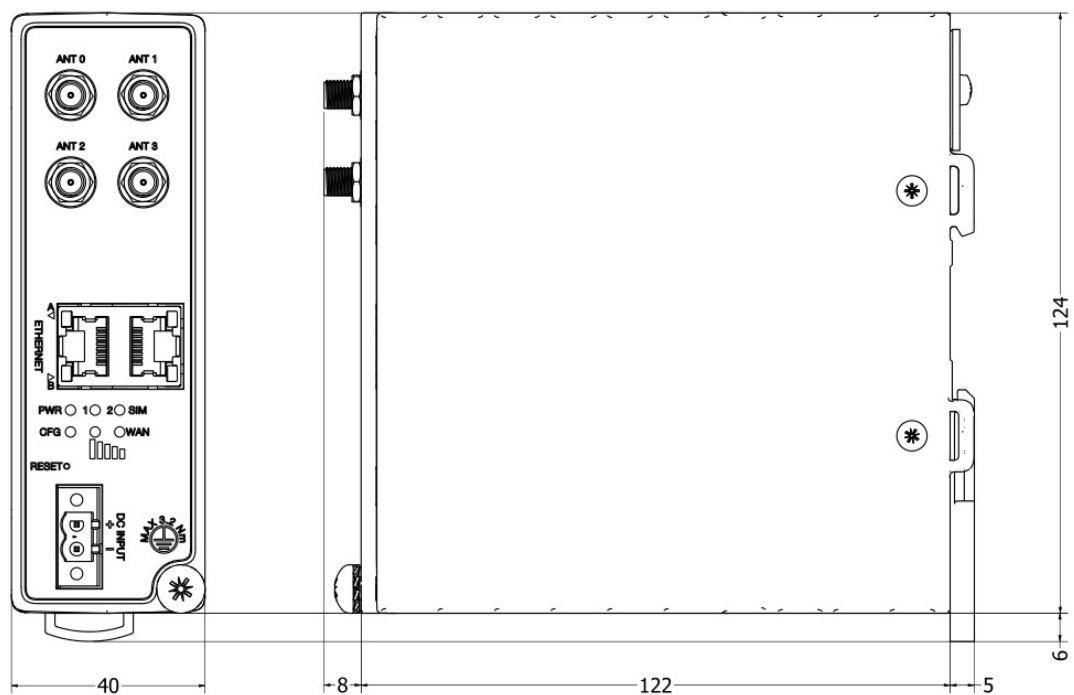


Figure 7. Dimensional drawing - 5G variant

4. Installation

4.1. Mounting the Router

The router has an integrated DIN-rail clip. To attach the router to a DIN-rail:

1. Pull down the plastic clasp at rear until it snaps into place in the downward position
2. Position the router so that the top hook of the DIN-clip rests on top of the DIN-rail
3. Allow the router to pivot under gravity so that it sits on the DIN-rail in the vertical position
4. Push up the plastic clasp until it snaps into place, locking the router firmly to the DIN-rail

To remove the router from the DIN-rail, simply reverse the procedure.



MOUNTING HEIGHT

To reduce the risk of personal injury and damage to the device, the unit must not be mounted at a height greater than two metres above the ground beneath it.

4.2. Cooling

This product uses convection cooling. Spacing is recommended for the use of the product in full operating temperature range and service life. To avoid obstructing the airflow around the product, use the following spacing rules.

A minimum spacing of 25 mm (1 inch) above and below, and 10 mm (0.4 inches) left and right of the product is recommended.



REDUCE THE RISK OF FIRE

To reduce the risk of fire, use only telecommunication line cords with a cable diameter of AWG 26 or larger. Regarding power cable dimensions, see chapter Interface Specifications.

4.3. Connecting Cables

Connect one end of the Ethernet cable into port A and the other end to your PC or switch.

4.4. Connecting the Antenna

If only connecting one LTE antenna to a 4G or 5G Redcap model, screw the antenna into the MAIN SMA connector. If you are using more than one LTE antenna, screw the main antenna into the MAIN SMA connector and the secondary antenna into the WAN-AUX SMA connector.

If only connecting one LTE antenna to a 5G model, screw the antenna into the SMA connector marked 'Ant 0'.

Be careful to select an antenna that ensures the equipment complies with local regulatory requirements.

In North America, Westermo has indicated to PTCRB the following set of antennas for use with this equipment:

Article Number	Model
160-00148	2J 2J7724Ma - Cellular/LTE MIMO Magnetic Mount with two 3m LL100 leads, SMA Male
160-00184	2J 2J2183K-B07H-300LL195-C91GST - Cellular/LTE wall mount antenna with a 3m LL195 lead, SMA Male

Table 7. List of antennas for use with this equipment in North America, as indicated to PTCRB

To comply with the requirements of PTCRB in North America:

1. It is recommended to select an antenna from the list above.
2. Should a user select their own antenna, Westermo strongly recommends that it be mounted with at least 20cm of cable.
3. Where a user selects a directly mounted antenna, it must comply with the OTA requirements of the PTCRB.

4.5. Inserting SIM Cards

On the rear side of the router there are two SIM slots. To access the SIM cards, first remove the SIM cover using a suitable screwdriver (not supplied). Only the proper driver can drive a specific head size without risk of damaging the driver or screw.

The product datasheet indicates the correct size of SIM card to use. A Mini-SIM card (2FF) is of size 25mm x 15mm x 0.76mm. Do not use a card larger than or smaller than that specified in the product datasheet or you may cause damage to the unit. Using the correct SIM card size helps avoid issues such as incompatibility or improper insertion that can lead to device malfunction.

4.5.1. Inserting SIM 1 Card

Ensure the router is powered off.

- Remove the SIM cover using a suitable screwdriver.
- Hold the SIM 1 card with the chip side facing down and the cut corner facing away from you, to the left.
- Gently push the SIM card into the upper SIM slot 1 until it clicks in.
- Screw the SIM cover back on with the screwdriver.

4.5.2. Inserting SIM 2 Card

- If you are using a second SIM, hold the SIM 2 card with the chip side facing up and the cut corner front right facing away from you.
- Gently push the SIM card into the lower SIM slot 2 until it clicks in.
- Screw the SIM cover back on with the screwdriver.

4.6. Powering Up

Plug the power cable first into the device and then to a suitable power source. The router takes less than a minute to boot up. During this time, the power LED flashes.

Other LEDs display different diagnostic patterns during boot up. Booting is complete when the power LED stops flashing and stays on steady.

5. Specifications

5.1. Interface Specifications

DC, Power port	
Operating voltage	9 to 36 VDC
Rated frequency	DC
Polarity	Reverse polarity protected
Redundant power input	No
Isolation	All other ports
Connector	Push-in spring connectors
Conductor cross section	0.2-2.5 mm ² (AWG 24-12)
Stripping length cable	7 mm
Tightening torque, screw flange	0.3 Nm
Shielded cable	Not required

Ethernet TX	
Electrical specification	IEEE std 802.3
Data rate	10 Mbit/s, 100 Mbit/s, 1000 Mbit/s manual or auto
Duplex	Full or half, manual or auto
Transmission range	Up to 150 m with CAT5e cable or better
Isolation	All other ports
Connection	RJ-45, auto MDI/MDI-X
Cabling	Shielded CAT5e or better is recommended
Number of ports	2

5.2. Type Tests and Environmental Conditions

Environmental phenomena	Basic standard	Description	Test levels
ESD	EN 61000-4-2	Enclosure	Contact: ± 6 kV Air: ± 8 kV
Fast transients	EN 61000-4-4	Power port	± 2 kV, direct coupling
		Ethernet ports	± 1 kV, capacitive coupling clamp
Surge	EN 61000-4-5	Power port	L-E: ± 2 kV, 12Ω , $9 \mu\text{F}$, $1.2/50 \mu\text{s}$ L-E: ± 2 kV, 42Ω , $0.5 \mu\text{F}$, $1.2/50 \mu\text{s}$ L-L: ± 1 kV, 2Ω , $18 \mu\text{F}$, $1.2/50 \mu\text{s}$ L-L: ± 1 kV, 42Ω , $0.5 \mu\text{F}$, $1.2/50 \mu\text{s}$
		Ethernet ports	L-E: ± 1 kV, 2Ω , direct on shield, $1.2/50 \mu\text{s}$
Power frequency magnetic field	EN 61000-4-8	Enclosure	30 A/m; 50 Hz
Radiated RF immunity	EN 61000-4-3	Enclosure	10 V/m at 800 MHz to 1 GHz 10 V/m at 80 MHz to 3 GHz 10 V/m at 2.7 GHz to 6 GHz 1 kHz sine, 80% AM
Conducted RF immunity	EN 61000-4-6	Power port	10 V, 80% AM, 1 kHz; 0.15 MHz to 80 MHz
		Ethernet	
Radiated RF emission	EN 55032, EN 61000-6-4	Enclosure	30 MHz to 12.75 GHz
Conducted RF emission	EN 55032, EN 61000-6-4	Power port	150 kHz to 30 MHz
		Ethernet	150 kHz to 30 MHz
Dielectric strength	EN 62368-1	Power port to all other ports	3.0 kVrms, 50 Hz, 1 min
	EN 62368-1	Ethernet TX to all other ports	0.5 kVrms, 50 Hz, 1 min

Table 8. EMC and electrical conditions

Environmental phenomena	Basic standard	Description	Test levels
Temperatures	EN 60068-2-1 EN 60068-2-2	Operational	-40 to +70°C ^a
Humidity	EN 60068-2-30	Operational	5-95 % relative humidity
MTBF	Telcordia	Ground benign, 25°C	1,524,000 hours
Enclosure	EN 62368-1	Aluminium	Fire enclosure
Weight			490g
Cooling			Convection

^aRefer to "Safety Information" chapter regarding touch temperature

Table 9. Environmental and mechanical conditions

6. Revision Notes

Revision	Date	Change description
Rev. A	2024-10-25	First version
Rev. B	2024-10-29	After internal review
Rev. C	2025-03-14	Further detail in Type Tests section
Rev. D	2025-03-21	Details of 5G
Rev. E	2025-03-26	Power consumption details
Rev. F	2025-07-29	Revised temperature range
Rev. G	2025-10-07	Updated dimensional drawing
Rev. H	2025-11-03	Details specific to 450MHz Private Network models
Rev. I	2025-11-20	Revised temperature range
Rev. J	2025-12-18	Removed GNSS connector in image of 4G variant

Westermo

Westermo • Metallverksgatan 6, SE-721 30 Västerås, Sweden

Tel +46 16 42 80 00 Fax +46 16 42 80 01

E-mail: info@westermo.com

www.westermo.com