

# **GW1000 Series User Manual**

GW1000

GW1000M

Issue: 2.3

Date: 20 September 2018

1	Int	roduction	10
	1.1	Document scope	10
	1.2	Using this documentation	10
2	GW	/1000 and GW1000M Series router hardware	13
	2.1	GW1000 Series router hardware model features	13
	2.2	GW1000 Series router dimensions	13
	2.3	GW1000M Series router hardware model features	14
	2.4	GW1000M Series router dimensions	15
	2.5	GSM technology	16
	2.6	WiFi technology	16
	2.7	Power supply	16
	2.8	Compliance	16
	2.9	Operating temperature range	16
	2.10	Antenna	17
	2.11	GW1000 and GW1000M Series components	18
	2.12	Inserting a SIM card	19
	2.13	Connecting the SIM lock	19
	2.14	Connecting cables	19
	2.15	Connecting the antenna	19
	2.16	Powering up	19
	2.17	Reset button	20
3	GW	/1000 and GW1000M Series LED behaviour	21
	3.1	Main LED behaviour	21
	3.2	GW1000 and GW1000M Series Ethernet port LED behaviour	22
4	Ins	talling a router into a vehicle	23
	4.1	Installing a router into a vehicle using a non-fused power cable	23
	4.2	Installing a router into a vehicle using a fused power cable	23
5	Fac	tory configuration extraction from SIM card	25
6	Acc	essing the router	26
	6.1	Configuration packages used	26
	6.2	Accessing the router over Ethernet using the web interface	26
	6.3	Accessing the router over Ethernet using an SSH client	27
	6.4	Accessing the router over Ethernet using a Telnet client	28
	6.5	Configuring the password	28
	6.6	Configuring the password using the web interface	28
	6.7	Configuring the password using UCI	29
	6.8	Configuring the password using package options	29
	6.9	Accessing the device using RADIUS authentication	30
	6.10	Accessing the device using TACACS+ authentication	31
	6.11	SSH	34

6.12	Package dropbear using UCI	36
6.13	Certs and private keys	37
6.14	Configuring a router's web server	38
6.15	Basic authentication (httpd conf)	43
6.16	Securing uhttpd	44
6.17	Displaying custom information via login screen	44
7 Rou	uter file structure	46
7.1	System information	46
7.2	Identify your software version	47
7.3	Image files	48
7.4	Directory locations for UCI configuration files	48
7.5	Viewing and changing current configuration	48
7.6	Configuration file syntax	49
7.7	Managing configurations	49
7.8	Exporting a configuration file	5C
7.9	Importing a configuration file	51
8 Usi	ng the Command Line Interface	55
8.1	Overview of some common commands	55
8.2	Using Unified Configuration Interface (UCI)	58
8.3	Configuration files	63
8.4	Configuration file syntax	63
9 Upg	grading router firmware	65
9.1	Software versions	65
9.2	Upgrading firmware using CLI	71
9.3	Firmware recovery	73
10 Sys	stem settings	74
10.1	Syslog overview	74
10.2	Configuration package used	74
10.3	Configuring system properties	75
10.4	System settings using command line	81
10.5	System diagnostics	82
10.6	Advanced filtering of syslog messages	85
11 Cor	nfiguring an Ethernet interface on a GW1000 router	90
11.1	Configuration packages used	90
11.2	Configuring an Ethernet interface using the web interface	90
11.3	Interface overview: editing an existing interface	91
11.4	Configuring an Ethernet interface using command line	101
11.5	Interface diagnostics	103
12 Cor	nfiguring VLAN	107
12.1	Maximum number of VLANs supported	107

12.2	Configuration package used	. 107
12.3	Configuring VLAN using the web interface	. 107
12.4	Viewing VLAN interface settings	. 110
12.5	Configuring VLAN using the UCI interface	. 111
13 Cor	nfiguring ignition sense	.112
13.1	Configuration packages used	. 112
13.2	Configuring vapowermond using the web interface	. 112
13.3	Configuring vapowermond using the command line	. 114
13.4	Ignition sense diagnositcs	. 115
14 Cor	nfiguring a WiFi connection	.116
14.1	Configuration packages used	. 116
14.2	Configuring a WiFi interface using the web interface	. 116
14.3	Configuring WiFi in AP mode	. 122
14.4	Configuring WiFi using UCI	. 124
14.5	Creating a WiFi in client mode using the web interface	. 127
14.6	Configuring WiFi in client mode using command line	. 128
15 Cor	nfiguring a mobile connection	130
15.1	Configuration package used	130
15.2	Configuring a mobile connection using the web interface	130
15.3	Configuring a mobile connection using CLI	137
15.4	Diagnositcs	138
16 Cor	nfiguring mobile manager	141
16.1	Configuration package used	. 141
16.2	Configuring mobile manager using the web interface	. 141
16.3	Configuring mobile manager using command line	146
16.4	Monitoring SMS	148
16.5	Sending SMS from the router	149
16.6	Sending SMS to the router	149
17 Cor	nfiguring a GRE interface	150
17.1	Configuration packages used	. 150
17.2	Creating a GRE connection using the web interface	150
17.3	GRE configuration using command line	155
17.4	GRE configuration using UCI	155
17.5	GRE configuration using package options	155
17.6	GRE diagnostics	156
18 Cor	nfiguring static routes	.158
18.1	Configuration package used	. 158
18.2	Configuring static routes using the web interface	. 158
18.3	Configuring IPv6 routes using the web interface	159
18.4	Configuring routes using command line	. 159

18.5	IPv4 routes using UCI	160
18.6	IPv4 routes using package options	161
18.7	IPv6 routes using UCI	161
18.8	IPv6 routes using packages options	161
18.9	Static routes diagnostics	162
19 Cor	nfiguring BGP (Border Gateway Protocol)	163
19.1	Configuration package used	163
19.2	Configuring BGP using the web interface	163
19.3	Configuring BGP using command line	167
19.4	View routes statistics	169
20 Cor	nfiguring OSPF (Open Shortest Path First)	171
20.1	Introduction	171
20.2	Configuration package used	176
20.3	Configuring OSPF using the web interface	177
20.4	Configuring OSPF using the command line	180
20.5	OSPF using UCI	181
20.6	OSPF using package options	182
20.7	OSPF diagnostics	183
20.8	Quagga/Zebra console	184
21 Cor	nfiguring VRRP	190
21.1	Overview	190
21.2	Configuration package used	190
21.3	Configuring VRRP using the web interface	190
21.4	Configuring VRRP using command line	194
22 Cor	nfiguring Routing Information Protocol (RIP)	197
22.1	Introduction	197
22.2	Configuration package used	198
22.3	Configuring RIP using the web interface	199
22.4	Configuring RIP using command line	203
22.5	RIP diagnostics	207
23 Cor	nfiguring Multi-WAN	211
23.1	Configuration package used	211
23.2	Configuring Multi-WAN using the web interface	211
23.3	Configuring Multi-WAN using UCI	215
23.4	Multi-WAN diagnostics	217
24 Aut	omatic operator selection	219
24.1	Configuration package used	219
24.2	Configuring automatic operator selection via the web interface	219
24.3	Configuring via UCI	242
24.4	Configuring no PMP + roaming using UCI	247

24.5	Automatic operator selection diagnostics via the web interface	249
24.6	Automatic operator selection diagnostics via UCI	250
25 Cor	nfiguring Connection Watch (cwatch)	255
25.1	Configuration package used	255
25.2	Configuring Connection Watch using the web interface	255
25.3	Configuring cwatch using command line	257
25.4	cwatch diagnostics	258
26 Cor	nfiguring DHCP server and DNS (Dnsmasq)	259
26.1	Configuration package used	259
26.2	Configuring DHCP and DNS using the web interface	259
26.3	Configuring DHCP and DNS using command line	269
27 Cor	nfiguring DHCP client	274
27.1	Configuration packages used	274
27.2	Configuring DHCP client using the web interface	274
27.3	Configuring DHCP client using command line	280
27.4	DHCP client diagnostics	281
28 Cor	nfiguring DHCP forwarding	284
28.1	Configuration packages used	284
28.2	Configuring DHCP forwarding using the web interface	284
28.3	Configuring DHCP forwarding using command line	285
28.4	DHCP forwarding over IPSec	286
28.5	DHCP forwarding diagnostics	289
29 Cor	nfiguring Dynamic DNS	291
29.1	Overview	291
29.2	Configuration packages used	291
29.3	Configuring Dynamic DNS using the web interface	291
29.4	Dynamic DNS using UCI	293
30 Cor	nfiguring hostnames	295
30.1	Overview	295
30.2	Local host file records	295
30.3	PTR records	297
30.4	Static leases	299
31 Cor	nfiguring firewall	302
31.1	Configuration package used	302
31.2	Configuring firewall using the web interface	302
31.3	Configuring firewall using UCI	314
31.4	IPv6 notes	317
31.5	Implications of DROP vs. REJECT	317
31.6	Connection tracking	318
31.7	Firewall examples	318

32 Cor	nfiguring IPSec	326
32.1	Configuration package used	326
32.2	Configuring IPSec using the web interface	326
32.3	Configuring IPSec using UCI	335
32.4	Configuring an IPSec template for DMVPN via the web interface	339
32.5	Configuring an IPSec template to use with DMVPN	346
32.6	IPSec diagnostics using the web interface	348
32.7	IPSec diagnostics using UCI	348
33 Dyı	namic Multipoint Virtual Private Network (DMVPN)	349
33.1	Prerequisites for configuring DMVPN	349
33.2	Advantages of using DMVPN	349
33.3	DMVPN scenarios	350
33.4	Configuration packages used	352
33.5	Configuring DMVPN using the web interface	352
33.6	DMVPN diagnostics	354
34 Cor	nfiguring multicasting using PIM and IGMP interfaces	357
34.1	Overview	357
34.2	Configuration package used	357
34.3	Configuring PIM and IGMP using the web interface	357
34.4	Configuring PIM and IGMP using UCI	359
35 Qo	S: VLAN 802.1Q PCP tagging	361
35.1	Configuring VLAN PCP tagging	361
36 Qo	S: type of service	364
36.1	QoS configuration overview	364
36.2	Configuration packages used	364
36.3	Configuring QoS using the web interface	364
36.4	Configuring QoS using UCI	366
36.5	Example QoS configurations	369
37 Ma	nagement configuration settings	370
37.1	Activator	370
37.2	Monitor	370
37.3	Configuration packages used	370
37.4	Autoload: boot up activation	371
37.5	Autoload packages	371
37.6	Autoload using UCI	373
37.7	HTTP Client: configuring activation using the web interface	374
37.8	Httpclient: Activator configuration using UCI	377
37.9	Httpclient: Activator configuration using package options	377
37.10	User management using UCI	378
37.11	Configuring the management user password using UCI	379

37.12	Configuring management user password using package options	380
37.13	User management using UCI	380
37.14	User management using package options	380
37.15	Configuring user access to specific web pages	381
38 Con	figuring Monitor	382
38.1	Introduction	382
38.2	Reporting device status to Monitor	382
38.3	Reporting GPS location to Monitor	388
38.4	Reporting syslog to Monitor	389
38.5	Configuring ISAD	391
39 Con	figuring SNMP	394
39.1	Configuration package used	394
39.2	Configuring SMNP using the web interface	394
39.3	Configuring SNMP using command line	
39.4	Configuring SNMP interface alias with static SNMP index	409
39.5	SNMP diagnostics	411
40 Eve	nt system	413
40.1	Configuration package used	413
40.2	Event system overview	
40.3	Configuring the event system using the web interface	
40.4	Configuring the event system using command line	
40.5	Event system diagnostics	
41 Con	figuring data usage monitor	
41.1	Introduction	
41.2	Configuration package used	437
41.3	Configuring data usage using the web interface	437
41.4	Data usage status	
41.5	Data usage diagnostics	
42 Con	ifiguring Terminal Server	
42.1	Overview	
42.2	Configuration packages used	442
42.3	Configuring Terminal Server using the web interface	442
42.4	Terminal Server using UCI	
42.5	Terminal Server using package options	
42.6	Terminal server DSR signal management network configuration	
42.7	Serial mode GPIO control	
42.8	Terminal Server diagnostics	
	ifiguring terminal package	
43.1	Configuration packages used	
	Configuring terminal package using the web interface	459

43.3	Configuring terminal package using UCI	459
43.4	Configuring terminal using package options	460
43.5	Terminal diagnostics	460
44 Ser	ial interface	461
44.1	Overview	461
44.2	Monitoring serial interfaces using the web interface	461
44 3	Monitoring serial interfaces using command line	462

# 1 Introduction

This user manual describes the features and how to configure Virtual Access GW1000 and GW1000M Series routers.

The Virtual Access GW1000 and GW1000M Series routers enable 3G or LTE connectivity in vehicles such as buses, taxis and fleet vehicles for applications such as passenger WiFi internet access, telemetry and employee WiFi access to corporate network services.

Designed for managed network providers, GW1000 and GW1000M Series routers provide secure WAN connectivity for internet and private networking environments over 3G or 4G broadband paths and incorporate optional 802.11n WiFi connectivity.

# 1.1 Document scope

This document covers models in the GW1000 Series and the GW1000M Series. For general references, we refer to the GW1000 Series throughout. Feature variations between GW1000 Series and GW1000M Series are described in separate sections.

#### 1.1.1 GW1000 Series routers

The Virtual Access GW1000 Series router is a compact 3G, 4G/LTE router with WiFi, designed with a lightweight plastic case with optional carrier for use in vehicles and a wide range of site-based applications.

GW1032: Dual Ethernet, 3G, Dual SIM, WiFi
GW1042: Dual Ethernet, 4G/LTE, Dual SIM, WiFi

#### 1.1.2 GW1000M Series routers

The Virtual Access GW1000M Series router is a compact 3G, 4G/LTE router with WiFi, designed with a rugged metal housing for use in vehicles and a wide range of site-based applications.

GW1032M: Dual Ethernet, 3G, Dual SIM, Dual WiFi SMA female connectors
GW1042M: Dual Ethernet, 4G/LTE, Dual SIM, Dual WiFi SMA female connectors

# 1.2 Using this documentation

You can configure your router using either the router's web interface or via the command line using UCI commands. Each chapter explains first the web interface settings, followed by how to configure the router using UCI. The web interface screens are shown along with a path to the screen for example, 'In the top menu, select **Service -> SNMP**.' followed by a screen grab.

After the screen grab there is an information table that describes each of the screen's fields.

#### 1.2.1 Information tables

We use information tables to show the different ways to configure the router using the router's web and command line. The left-hand column shows three options:

- Web: refers the command on the router's web page,
- UCI: shows the specific UCI command, and
- Opt: shows the package option.

The right-hand column shows a description field that describes the feature's field or command and shows any options for that feature.

Some features have a drop-down menu and the options are described in a table within the description column. The default value is shown in a grey cell.

Values for enabling and disabling a feature are varied throughout the web interface, for example, 1/0; Yes/No; True/False; check/uncheck a radio button. In the table descriptions, we use **0** to denote Disable and **1** to denote Enable.

Some configuration sections can be defined more than once. An example of this is the routing table where multiple routes can exist and all are named 'route'. For these sections, the UCI command will have a code value [0] or [x] (where x is the section number) to identify the section.

Web Field/UCI/Package Option	Description
Web: Metric	Specifies the route metric to use.
UCI: network.@route[0].metric	
Opt: metric	

**Note**: these sections can be given a label for identification when using UCI or package options.

```
network.@route[0]=route
network.@route[0].metric=0
```

can be witten as:

```
network.routename=route
network.routename.metric=0
```

However the documentation usually assumes that a section label is not configured.

The table below shows fields from a variety of chapters to illustrate the explanations above.

Web Field/UCI/Package Option	Descript	ion
Web: Enable	Enables C	CESoPSN services.
UCI: cesop.main.enable	0	Disabled.
Opt: enable	1	Enabled.
Web: Syslog Severity UCI: cesop.main.severity		ne severity used for logging events CESoPSN in syslog. wing levels are available.
Opt: log_severity	0	Emergency
3 3	1	Alert
	2	Critical
	3	Error
	4	Warning
	5	Notice
	6	Informational
	7	Debug
Web: Agent Address UCI: snmpd.agent[0].agentaddress	Specifies listen.	the address(es) and port(s) on which the agent should
Opt: agentaddress	[(udp tcp	):]port[@address][,]

Table 1: Example of an information table

#### 1.2.2 Definitions

Throughout the document, we use the host name 'VA\_router' to cover all router models.

UCI commands and package option examples are shown in the following format:

root@VA\_router:~# vacmd show current config

### 1.2.3 Diagnostics

Diagnostics are explained at the end of each feature's chapter.

#### 1.2.4 UCI commands

For detailed information on using UCI commands, read chapters 'Router File Structure' and 'Using Command Line Interface'.

# 2 GW1000 and GW1000M Series router hardware

#### 2.1 GW1000 Series router hardware model features





Figure 1: GW1000 Series router front

Figure 2: GW1000 Series router back

GW1032: Dual SIM sockets

Dual antenna SMA connectors for 3G main and aux

GPS antenna with 3.3V active power feed

Two 10/100 Mbps Ethernet ports

WiFi internal antennas

Concurrent Access Point and Station mode

Optional plastic casing and carrie

GW1042: Dual SIM sockets

Dual antenna SMA connectors for LTE main and aux

GPS antenna with 3.3V active power feed

Two 10/100 Mbps Ethernet ports

WiFi internal antennas

Concurrent Access Point and Station mode

Optional plastic casing and carrier

# 2.2 GW1000 Series router dimensions

Unit size: 114W 114D 29Hmm
Unit size with carrier: 120W 120D 32Hmm

Unit weight: 209g

Virtual Access 2018

#### 2.3 GW1000M Series router hardware model features

### 2.3.1 GW1000M with standard locking DC power connector





Figure 3: GW1000M Series router front

Figure 4: GW1000M Series router back

GW1032M Dual SIM sockets

Dual antenna SMA connectors for 3G main and aux

GPS antenna with 3.3V active power feed

Two 10/100 Mbps Ethernet ports

Dual WiFi internal antennas

Dual WiFi SMA female connectors

Concurrent Access Point and Station mode

Metal casing

Carrier bracket

GW1042M Dual SIM sockets

Dual antenna SMA connectors for LTE main and aux

GPS antenna with 3.3V active power feed

Two 10/100 Mbps Ethernet ports

Dual WiFi internal antennas

Dual WiFi SMA female connectors

Concurrent Access Point and Station mode

Metal casing Carrier bracket

© Virtual Access 2018

### 2.3.2 GW1000M with isolated DC power connector





Figure 5: GW1000M Series router front

Figure 6: GW1000M Series router back

GW1032M Dual antenna SMA connectors for 3G main and aux

GPS antenna with 3.3V active power feed

Two 10/100 Mbps Ethernet ports

Concurrent Access Point and Station mode

No WiFi Metal casing Carrier bracket

GW1042M Dual SIM sockets

Dual antenna SMA connectors for LTE main and aux

GPS antenna with 3.3V active power feed

Two 10/100 Mbps Ethernet ports

Concurrent Access Point and Station mode

No WiFi Metal casing Carrier bracket

### 2.4 GW1000M Series router dimensions

Unit size: 114W 114D 38Hmm
Unit size with carrier: 120W 120D 42Hmm

Unit weight: 450g

# 2.5 GSM technology

- LTE
- HSPA+
- EDGE/GPRS
- GPS

# 2.6 WiFi technology

- 802.11 b/g/n
- Single band 2.4GHz
- Up to 20dBm output power
- Internal antenna

# 2.7 Power supply

The GW1000 and GW1000M Series router has four power supply options:

- External standard 12V DC 0.5 A
- External standard 12V DC 0.5 A with extended temp (-20°C to -70°C)
- Internal isolated 18-36V DC input
- Power lead with 3 connectors for 12V permanent, 12V switched (ignition sense) and ground

# 2.8 Compliance

The GW1000 and GW1000M Series router is compliant and tested to the following standards:

Safety EN60950-1: 2006

EMC EN55022:1998 Class B and EN55024:1998 ETSI 301489-17

Environmental ETSI 300 019-1-3 Sinusoidal Vibration and Shock ETSI 300 019-2-3 Random Vibration.

WiFi 2.4GHz ETSI EN 300 328 V1.9 (2015-02)

# 2.9 Operating temperature range

The operating temperature range depends on the RF band of the module.

RF Band	Region	2G Bands	3G Bands	LTE Bands	Operating Temp	Order Code
Α	Europe China	850/900/1800/ 1900	900/2100	-	-40°C to 70°C	-RFA
В	Europe Asia	850/900/1800/ 1900	850/900/1900/ 2100	-	-40°C to 70°C	-RFB
С	Europe Asia	850/900/1800/ 1900	850/900/1900/2100	B1/B2/B3/B5/B7/B 8/B20	-30°C to 70°C	-RFC
D	Worldwide	-	-	B3/B7/B20/B31	-20°C to 60°C	-RFD

© Virtual Access 2018

Issue: 2.3 Page 16 of 463

E	Europe	900/1800	900/2100	B1/B3/B7/B8/B20/ B38/B40	-30°C to 70°C	-RFE
F	Worldwide	-	CDMA TX 452.500 ~ 457.475 RX 462.000 ~ 467.475	-	-20°C to 60°C	-RFF
G	Worldwide	850/900/1800/ 1900	850/900/2100	B1/B3/B5/B7/B20	-400C to 70°C	-RFG
Н	North America	-	850/1900	B2/B4/B5/B17	-30°C to 70°C	-RFH
J	Worldwide	450	-		-40°C to 70°C	-RFJ
K	EMEA APAC	850/900/1800/ 1900	850/900/1800/ 1900	B1/B2/B3/B7/B8/B 20/B5/B28	-20°C to 70°C	-RFK
L	Europe APAC	900/1800	900/2100	-	-40°C to 70°C	-RFL
М	North America	-	850/1900	B2/B4/B5/B17	-30°C to 70°C	-RFM
N	Worldwide	-	850/900/1700/1800/ 1900/2100	B1/B2/B3/B4/B5/ B7/B12/B13/B20/ B25/B26/B29/B30/ B41	-40°C to 70°C	-RFN
Р	Australia New Zealand Latin America Taiwan	850/900/1800/ 1900	850/900/1900/2100	B1/B2/B3/B4/B5/ B7/B8/B28/B40	-40°C to 70°C	-RFP
Q	Mexico USA Canada	-	850/1900	B1/B2/ B4/B5/ B12/B13	-40°C to 70°C	-RFQ
R	EMEA Korea Thailand Indonesia	900/1800	850/900/2100	B1/B2/B3/B5/B7 B8/B20/B38/B40 B41	-40°C to 70°C	-RFR
S	Europe	900/1800	850/900/2100	B1/B3/B5/B7/B8 B20/B38/B40/B41	-40°C to 70°C	-RFS
Χ	Australia	900/1800	850/900/2100	B1/B3/B5/B7/B28	-40°C to 70°C	-RFX

Table 2: RF bands with operating temperatures

### 2.10 Antenna

The GW1000 Series router has two SMA connectors for connection of two antennas for antenna diversity. Antenna diversity helps improve the quality of a wireless link by mitigating problems associated with multipath interference.

The GW1000M Series router standard locking DC power connector model has two additional SMA female WiFi antenna sockets.

#### 2.10.1 Antennas on the GW1000 Series router

- 2 x LTE SMA female antenna connectors
- MIMO support in LTE versions
- 1 x GPS SMA female antenna connector with 3v3 active power feed

#### 2.10.2 Antennas on the GW1000M Series router

- 2 x LTE SMA female antenna connectors
- MIMO support in LTE versions
- 1 x GPS SMA female antenna connector with 3v3 active power feed
- 2 x SMA female WiFi antenna sockets\*

# 2.11 GW1000 and GW1000M Series components

To enable and configure connections on your router, it must be correctly installed.


The routers contain an internal web server that you use for configurations. Before you can access the internal web server and start the configuration, ensure the components are correctly connected and that your PC has the correct networking setup.

### 2.11.1 Standard components



Table 3: GW1000 Series router standard components

#### 2.11.2 Optional components

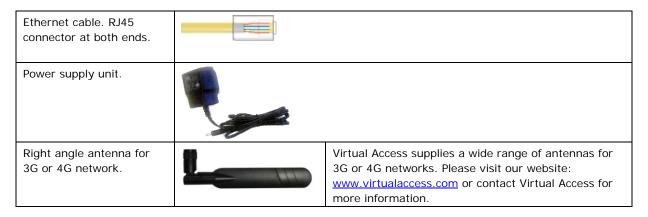

<sup>\*</sup>No WiFi on GW1000M isolated DC power connector models.

Right angle or straight stubby antenna for WiFi connection

Virtual Access supplies a wide range of antennas for WiFi. Please visit our website: <a href="https://www.virtualaccess.com">www.virtualaccess.com</a> or contact Virtual Access for more information.

1 x fused automotive cable

1 x non-fused automotive cable

Table 4: GW1000 Series router optional components

### 2.12 Inserting a SIM card

- 1. Ensure the unit is powered off.
- 2. Hold the SIM 1 card with the chip side facing down and the cut corner front left.
- 3. Gently push the SIM card into SIM slot 1 until it clicks in.
- 4. If using SIM 2 then hold the SIM with the cut corner front right
- 5. Gently push the SIM card into SIM slot 2 until it clicks in.

# 2.13 Connecting the SIM lock

Connect the SIM lock using the Allen key provided.

# 2.14 Connecting cables

Connect one end of the Ethernet cable into port A and the other end to your PC or switch. For information on connecting cables for a vehicle installation, read chapter 4, 'Installing a router into a vehicle'.

# 2.15 Connecting the antenna

If you are connecting only one antenna, screw the antenna into the MAIN SMA connector.

If you are using two antennas, screw the main antenna into the MAIN SMA connector and the secondary antenna into the AUX SMA connector.

# 2.16 Powering up

The router takes approximately 2 minutes to boot up. During this time, the PWR/CONFIG LED flashes in a double flash pattern – 2 quick fashes followed by a pause.

Other LEDs display different diagnostic patterns during boot up.

Booting is complete when the PWR/CONFIG LED stops double flashing and stays solid or flashing steady, indicating the particular running configuration is loaded. Read the chapter 'GW1000 LED behaviour', for PWR/CONFIG LED states.

### 2.17 Reset button

The reset button is used to request a system reset.

When you press the reset button the PWR/CONFIG LED will display different patterns depending on how long you press the button. The flashing patterns will be different for the 2 flashing phases indicated below. The length of time you hold the reset button will determine the router behaviour.

Press duration	PWR/CONFIG LED behaviour	Router behaviour on depress
0-3 seconds	Solid on	Normal reset to running config. No special LED activity.
Between 3 and 15 seconds	Flashing fast	Releasing between 3-15 seconds switches the router back to factory configuration.
Between 15 and 20 seconds	Solid on	Releasing between 15-20 seconds performs a normal reset to running config.
Between 20 seconds and 30 seconds	Flashing slowly	Releasing between 20-30 seconds reboots the router in recovery mode.
Over 30 seconds	Solid on	Releasing after 30 seconds performs a normal reset.

Table 5: GW1000 Series router reset behaviour

#### 2.17.1 Recovery mode

Recovery mode is a fail-safe mode where the router can load a default configuration from the routers firmware. If your router goes into recovery mode, all config files are kept intact. After the next reboot, the router will revert to the previous config file.

You can use recovery mode to manipulate the config files, but should only be used if all other configs files are corrupt. If your router has entered recovery mode, contact your local reseller for access information.

**GW1000 and GW1000M Series LED behaviour** 

#### 3.1 Main LED behaviour

There are five LEDs on the GW1000 and GW1000M Series router



Figure 7: LEDs on the GW1000 Series router



Figure 8: LEDs on the GW1000M Series router

The possible LED states are:

- Off
- Flashing slowing (2 flashes per second)
- Flashing quickly (5 flashes per second)
- Double flash (2 quick flashes then a pause)
- On

The following table describes the possible LED behaviours and meanings on the GW1000 and GW1000M Series router.

		The router takes approximately 2 minutes to boot up. During this time, the power LED flashes.
Booting		Other LEDs display different diagnostic patterns during boot up.
		Booting is complete when the power LED stops flashing and stays on steady.
0	Off	No power/boot loader does not exist.
	Double flash	Unit is booting from power on.
PWR/CONFIG F	lashing slowly	Unit is in recovery mode.
	lashing quickly	Unit is in factory configuration.
S	Solid on	Unit has completed booting up process and is in either config 1 or config2.
0	Off	Not selected or SIM not inserted.
SIM LEDs F	lashing	SIM selected and data connection is being established.
S	Solid on	SIM selected and registered on the network.
В	Both LEDs off	Not connected or signal strength <= -113dBm.
L	eft LED on	Connected and signal strength <= -89dBm.
Signal LEDs R	Right LED off	
Signal LEDS L	eft LED off	Connected and signal strength between -89dBm and -69dBm.
R	Right LED on	
В	Both LEDs on	Connected and signal strength >-69dBm.
0	Off	WiFi not enabled.
WiFi LEDs F	lashing	Data activity on WiFi interface.
S	Solid on	WiFi is enabled.

Table 6: LED behaviour and descriptions

**Note**: when a data connection does not exist, none of the signal LEDs will light regardless of signal strength.

# 3.2 GW1000 and GW1000M Series Ethernet port LED behaviour

The Ethernet port has two physical LEDs, one is green and one is amber. When looking at the port the green LED is on the left and is the only active LED.



Figure 9: Ethernet LED on the rear of the GW1000 Series router

Link LED	Off	No physical Ethernet link detected
Link LED (green)	On	Physical Ethernet link detected
	Flashing	Data is being transmitted/ received over the link

**Table 7: The Ethernet LEDs activity descriptions** 

# 4 Installing a router into a vehicle

The type of cable you need depends on your application and vehicle. You will have received either a fused or non-fused power cable for the installation.

### 4.1 Installing a router into a vehicle using a non-fused power cable

Install the router using the vehicle installation power cable 840-00076 provided.

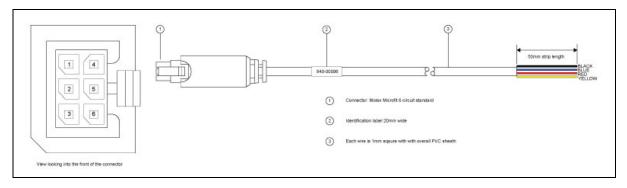


Figure 10: 840-00096 3 core power cable

- Link pins 1 and 2 and bring out on a BLACK ground wire.
- Wire pin 3 and bring out on a **BLUE** wire to a 12V switched vehicle ignition wire.
- Link pins 5 and 6 and bring and bring out on a **RED** 12v permanent wire.
- Wire pin 4 and bring out on a **YELLOW** voltage sense wire.
- Plug the 6 pin connector into the router.

**Note**: requires 5 amp fuse in series with red and blue wires.

# 4.2 Installing a router into a vehicle using a fused power cable

Install the router using the vehicle installation power cable 840-00105 provided.

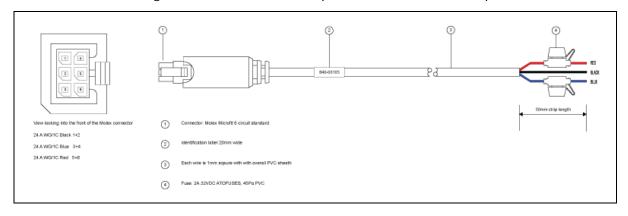


Figure 11: 840-00105 3 core power cable

Issue: 2.3

(1)	Connector: Molex Microfit 6circuit standard
(2)	Label 20mm wide
(3)	Each wire is 1.0mm square, with overall PVC sheath
(4)	Fuse
Note:	Requires 5 amp fuse in series with red and blue wires

**Table 8: Power cable descriptions** 

- Connect the **BLACK** wire to a ground wire.
- Connect the **BLUE** wire to a 12V switched vehicle ignition wire.
- Connect the **RED** wire to a 12V permanent wire.

Plug the 6 pin connector into the router.

\_\_\_\_\_

# 5 Factory configuration extraction from SIM card

Virtual Access routers have a feature to update the factory configuration from a SIM card. This allows you to change the factory configuration of a router when installing the SIM.

- 1. Make sure the SIM card you are inserting has the required configuration written on it.
- 2. Ensure the router is powered off.
- 3. Hold the SIM 1 card with the chip side facing down and the cut corner front left.
- 4. Gently push the SIM card into SIM slot 1 until it clicks in.
- 5. Power up the router.

Depending on the model, the power LED and/or the configuration LED flash as usual.

The SIM LED starts flashing. This indicates the application responsible for 3G and configuration extraction management is running. It also means the update of the configuration is happening.

When the update is finished, depending on the model, the power LED and/or the configuration LED blink alternatively and very fast for 20 seconds.

**Note:** factory configuration extraction is only supported on mobile modules that support phone book operations.

\_\_\_\_

# 6 Accessing the router

Access the router through the web interface or by using SSH. By default, Telnet is disabled.

### 6.1 Configuration packages used

Package	Sections
dropbear	dropbear
system	main
uhttpd	main
	cert

# 6.2 Accessing the router over Ethernet using the web interface

DHCP is disabled by default, so if you do not receive an IP address via DHCP, assign a static IP to the PC that will be connected to the router.

PC IP address	192.168.100.100
Network mask	255.255.255.0
Default gateway	192.168.100.1

Assuming that the PC is connected to Port A on the router, in your internet browser, type in the default local IP address 192.168.100.1, and press **Enter**. The Authorization page appears.

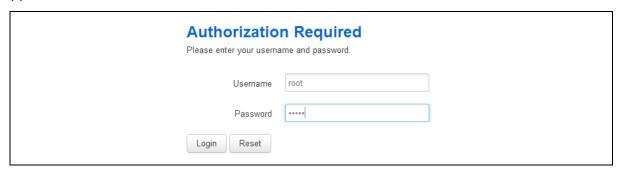


Figure 12: The login page

The password may vary depending on the factory configuration the router has been shipped with. The default settings are shown below. The username and password are case sensitive.

In the username field, type root.

In the Password field, type admin.

Click Login. The Status page appears.

6.3 Accessing the router over Ethernet using an SSH client

You can also access the router over Ethernet, using Secure Shell (SSH) and optionally over Telnet.

To access CLI over Ethernet start an SSH client and connect to the router's management IP address, on port **22: 192.168.100.1/24**.

On the first connection, you may be asked to confirm that you trust the host.



Figure 13: Confirming trust of the routers public key over SSH

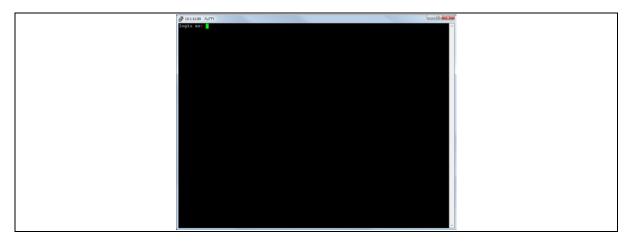


Figure 14: SSH CLI logon screen

In the SSH CLI logon screen, enter the default username and password.

Username: **root**Password: **admin** 

# 6.3.1 SCP (Secure Copy Protocol)

As part of accessing the router over SSH, you can also use SCP protocol. Use the same user authentication credentials as for SSH access. You can use SCP protocol to securely, manually transfer files from and to the router's SCP server.

No dedicated SPC client is supported; select the SCP client software of your own choice.

## 6.4 Accessing the router over Ethernet using a Telnet client

Telnet is disabled by default, when you enable Telnet, SSH is disabled.

To enable Telnet, enter:

```
root@VA_router: ~# /etc/init.d/dropbear disable
root@VA_router: ~# reboot
```

To re-enable SSH, enter:

```
root@VA_router: ~# /etc/init.d/dropbear enable
root@VA_router: ~# reboot
```

**Note**: as SSH is enabled by default, initial connection to the router to enable Telnet must be established over SSH.

### 6.5 Configuring the password

### 6.5.1 Configuration packages used

Package	Sections
system	main

# 6.6 Configuring the password using the web interface

To change your password, in the top menu click **System -> Administration**. The Administration page appears.



Figure 15: The router password section

In the Router Password section, type your new password in the password field and then retype the password in the confirmation field.

Scroll down the page and click Save & Apply.

Note: the username 'root' cannot be changed.

Web Field/UCI/Package Option	Description
Web: Password	Defines the root password. The password is displayed encrypted
UCI: system.main.password	via the CLI using the 'hashpassword' option.
Opt: password	UCI: system.main.hashpassword
	Opt: hashpassword

### 6.7 Configuring the password using UCI

The root password is displayed encrypted via the CLI using the hashpassword option.

```
root@VA_router:~# uci show system
system.main=system
system.main.hostname=VA_router
system.main.hashpassword=$1$jRX/x8A/$U5kLCMpi9dcahRhO17eZV1
```

If you are changing the password using UCI, enter the new password in plain text using the password option.

```
root@VA_router:~# uci system.main.password=newpassword
root@VA_router:~# uci commit
```

The new password will take effect after reboot and will now be displayed in encrypted format via the hashpassword option.

# 6.8 Configuring the password using package options

The root password is displayed encrypted via the CLI using the hashpassword option.

```
root@VA_router:~# uci export system
package system

config system 'main'
   option hostname 'VA_router'
   option hashpassword '$1$wRYYiJOz$EeHN.GQcxXhRgNPVbqxVw
```

If you are changing the password using UCI, enter the new password in plain text using the password option.

```
package system

config system 'main'
    option hostname 'VA_router'
    option hashpassword '$1$wRYYiJOz$EeHN.GQcxXhRgNPVbqxVw
    option password 'newpassword'
```

The new password will take effect after reboot and will now be displayed in encrypted format via the hashpassword option.

# 6.9 Accessing the device using RADIUS authentication

You can configure RADIUS authentication to access the router over SSH, web or local console interface.

```
package system
config system 'main'
        option hostname 'VirtualAccess'
        option timezone 'UTC'
config pam_auth
        option enabled 'yes'
        option pamservice 'login'
        option pammodule 'auth'
        option pamcontrol 'sufficient'
        option type 'radius'
        option servers '192.168.0.1:3333|test|20 192.168.2.5|secret|10'
config pam_auth
       option enabled 'yes'
       option pamservice 'sshd'
       option pammodule 'auth'
       option pamcontrol 'sufficient'
                                               it checks package
management_users
       option type 'radius'
       option servers '192.168.0.1:3333|test|20 192.168.2.5|secret|10'
config 'pam_auth'
       option enabled 'yes'
       option pamservice 'luci"
       option pammodule 'auth'
       option pamcontrol 'sufficient'
       option type 'radius'
       servers '192.168.0.1:3333|test|20 192.168.2.5|secret|10'
```

UCI/Package Option	Description			
UCI: system.@pam_auth[0].enabled=yes	Enables and disables RADIUS configuration sections.			
Opt: enabled	yes		s following RADIUS uration section.	
	no		es following RADIUS uration section.	
UCI: system.@pam_auth[0].pamservice	Selects the method	which u	sers should be authenticated by.	
Opt: pamservice	login	User co	onnecting over console cable.	
	sshd	User co	onnecting over SSH.	
	luci	User co	onnecting over web.	
UCI: system.@pam_auth[0].pamcontrol Opt: pamcontrol	Specifies authentication to RADI		naviour after authentication fails o er is broken.	or
	Sufficient		First authenticates against remarkablus if password authenticates fails then it tries local database (user defined in package management_users)	tion
	Required		If either authentication fails or RADIUS server is not reachable then user is not allowed to accept the router.	
	[success=done new_authtok_requauthinfo_unavail= default=die]		Local database is only checked RADIUS server is not reachable	
UCI: system.@pam_auth[0].pammodule.auth	Enables user authentication.			
Opt: pammodule				
UCI: system.@pam_auth[0].type.radius Opt: type	Specifies the authentication method.			
UCI: system.@pam_auth[0].servers Opt: servers	Specifies the RADIUS server or multiple servers along with port number and password. The example below explains the syntax. 192.168.0.1:3333 test 20 192.168.2.5 secret 10			

Table 9: Information table for RADIUS authentication

# 6.10 Accessing the device using TACACS+ authentication

TACACS+ authentication can be configured for accessing the router over SSH, web or local console interface.

```
package system

config system 'main'

option hostname 'VirtualAccess'

option timezone 'UTC'

config pam_auth

option enabled 'yes'

option pamservice 'sshd'
```

© Virtual Access 2018 GW1000 Series User Manual

option pammodule 'auth' option pamcontrol 'sufficient' option type 'tacplus' option servers '192.168.0.1:49|secret' config pam\_auth option enabled 'yes' option pamservice 'sshd' option pammodule 'account' option pamcontrol 'sufficient' option type 'tacplus' option servers '192.168.0.1:49|secret' option args 'service=ppp' config pam\_auth option enabled 'yes' option pamservice 'sshd' option pammodule 'session' option pamcontrol 'sufficient' option type 'tacplus' option servers '192.168.0.1:49|secret' option args 'service=ppp' config pam\_auth option enabled 'yes' option pamservice 'luci' option pammodule 'auth' option pamcontrol 'sufficient' option type 'tacplus' option servers '192.168.0.1:49|secret' config pam\_auth option enabled 'yes' option pamservice 'luci' option pammodule 'account' option pamcontrol 'sufficient' option type 'tacplus'

```
option servers '192.168.0.1:49|secret'
        option args 'service=ppp'
config pam_auth
        option enabled 'yes'
        option pamservice 'luci'
        option pammodule 'session'
        option pamcontrol 'sufficient'
        option type 'tacplus'
        option servers '192.168.0.1:49|secret'
        option args 'service=ppp'
config pam_auth
        option enabled 'yes'
        option pamservice 'login'
        option pammodule 'auth'
        option pamcontrol 'sufficient'
        option type 'tacplus'
        option servers '192.168.0.1:49|secret'
config pam_auth
        option enabled 'yes'
        option pamservice 'login'
        option pammodule 'account'
        option pamcontrol 'sufficient'
        option type 'tacplus'
        option servers '192.168.0.1:49|secret'
        option args 'service=ppp'
config pam_auth
        option enabled 'yes'
        option pamservice 'login'
        option pammodule 'session'
        option pamcontrol 'sufficient'
        option type 'tacplus'
        option servers '192.168.0.1:49|secret'
        option args 'service=ppp'
```

© Virtual Access 2018

UCI/Package Option	Description			
UCI: system.@pam_auth[0].enabled=yes		Enables and disables TACACS configuration sections.		
Opt: enabled	yes		s following TACACS uration section.	
	no		es following TACACS uration section.	
UCI: system.@pam_auth[0].pamservice	Selects the method	which u	sers should be authenticated by.	
Opt: pamservice	login	User co	onnecting over console cable.	
	sshd	User connecting over SSH.		
	luci	User co	onnecting over web.	
UCI: system.@pam_auth[0].pamcontrol Opt: pamcontrol	Specifies authentic connection to TACA		naviour after authentication fails c er is broken.	or
	Sufficient		First authenticates against remote TACACS if password authentication fails then it tries local database (user defined in package management_users)	
	Required		If either authentication fails or TACACS server is not reachable then user is not allowed to access the router.	
	[success=done new_authtok_req authinfo_unavail= default=die]		Local database is only checked if TACACS server is not reachable.	
UCI: system.@pam_auth[0].pammodule.auth	Selects which TAC/	ACS mod	ule this part of configuration relat	tes
Opt: pammodule	auth		nodule provides the actual attention and sets credentials	
	account		nt module checks to make sure	
	session		n module performs additional which are needed to allow	
system.@pam_auth[0].type=tacplus Opt: type	Specifies the authentication method.			
UCI: system.@pam_auth[0].servers Opt: servers	Specifies the TACACS servers along with port number and password. The example below explains the syntax.			
UCI: system.@pam_auth[1].args=service=ppp Opt: args	192.168.0.1:49 secret ' Additional arguments to pass to TACACS serer.			

Table7: Information table for TACACS authentication

# 6.11 SSH

SSH allows you to access remote machines over text-based shell sessions. SSH uses public key cryptography to create a secure connection. These connections allow you to issue commands remotely via a command line.

The router uses a package called Dropbear to configure the SSH server on the box. You can configure Dropbear via the web interface or through an SSH connection by editing the file stored on: /etc/config\_name/dropbear.

### 6.11.1 Configuration packages used

Package	Sections
dropbear	dropbear

### 6.11.2 SSH access using the web interface

In the top menu, click **System -> Administration**. The Administration page appears. Scroll down to the SSH Access section.

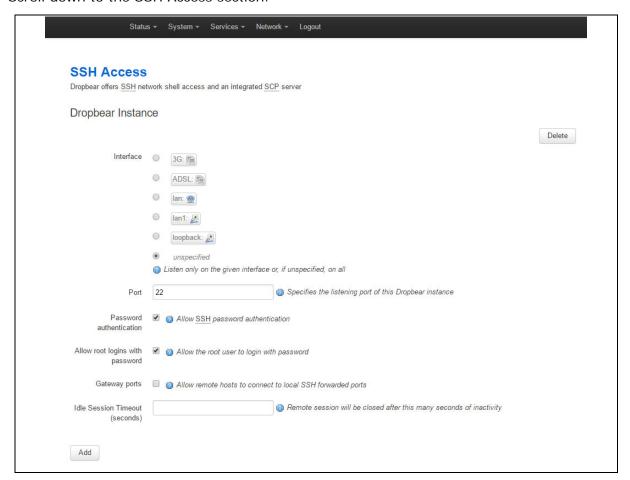


Figure 16: The SSH access section

Web Field/UCI/Package Option	Description		
Basic settings			
Web: Interface UCI: dropbear.@dropbear[0].Interface Opt: interface	Listens only on the selected interface. If unspecified is checked, listens on all interfaces. All configured interfaces will be displayed via the web GUI.		
Opt: interface	(unspecified)	listens on all interfaces.	
	Range	Configured interface names.	
Web: Port	Specifies the liste	ning port of the Dropbear instance.	
UCI: dropbear.@dropbear[0].Port	22		
Opt: port	Range	0-65535	
Web: Password authentication	If enabled, allows	S SSH password authentication.	
UCI:	0	Disabled.	
dropbear.@dropbear[0].PasswordAuth	1	Enabled.	
Opt: PasswordAuth			
Web: Allow root logins with password	Allows the root us	ser to login with password.	
UCI:	0	Disabled.	
dropbear.@dropbear[0].RootPasswordAuth	1	Enabled.	
Opt: RootPasswordAuth			
Web: Gateway ports	Allows remote hosts to connect to local SSH forwarded ports.		
UCI: dropbear.@dropbear[0].GatewayPorts	0	Disabled.	
Opt: GatewayPorts	1	Enabled.	
Web: Idle Session Timeout UCI: dropbear.@dropbear[0].IdleTimeout	Defines the idle period where remote session will be closed after the allocated number of seconds of inactivity.		
Opt: IdleTimeout	30	30 seconds.	
	Range		
Web: n/a	Defines a banner file to be displayed during login.		
UCI: dropbear.@dropbear[0]. BannerFile	/etc/banner		
Opt: BannerFile	Range		
Web: n/a	Specifies maximum login failures before session terminates.		
UCI:	10		
dropbear.@dropbear[0].MaxLoginAttempts	0-infinite		
Opt: MaxLoginAttempts			

Table 10: Information table for SSH access settings

# 6.12 Package dropbear using UCI

```
root@VA_router:~# uci show dropbear
dropbear.@dropbear[0]=dropbear
dropbear.@dropbear[0].PasswordAuth=on
dropbear.@dropbear[0].RootPasswordAuth=on
dropbear.@dropbear[0].GatewayPorts=0
dropbear.@dropbear[0].IdleTimeout=30
dropbear.@dropbear[0].Port=22
dropbear.@dropbear[0].MaxLoginAttempts=3
Package dropbear using package options
```

0.00

```
root@VA_router:~# uci export dropbear
package dropbear
config dropbear'
    option PasswordAuth 'on'
    option RootPasswordAuth 'on'
    option Port '22'
    option GatewayPorts '0'
    option IdleTimeout '30'
    option MaxLoginAttempts '3'
```

# 6.13 Certs and private keys

Certificates are used to prove ownership of a public key. They contain information about the key, its owner's ID, and the digital signature of an individual that has verified the content of the certificate.

In asymmetric cryptography, public keys are announced to the public, and a different private key is kept by the receiver. The public key is used to encrypt the message, and the private key is used to decrypt it.

To access certs and private keys, in the top menu, click **System -> Administration**. The Administration page appears. Scroll down to the Certs & Private Keys section.

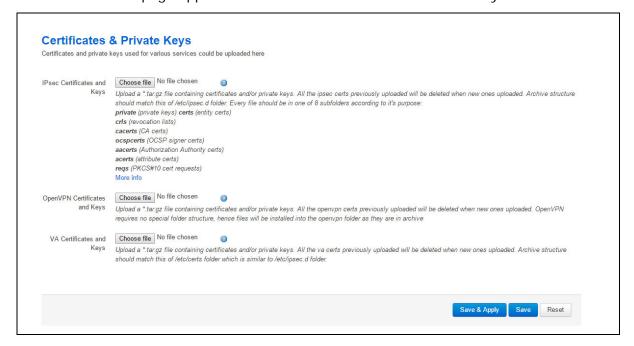


Figure 17: The certificates & private keys section

This section allows you to upload any certificates and keys that you may have stored. There is support for IPSec, OpenVPN and VA certificates and keys.

If you have generated your own SSH public keys, you can input them in the SSH Keys section, for SSH public key authentication.

SSH-Keys
Here you can paste public SSH-Keys (one per line) for SSH public-key authentication.

Figure 18: The SSH-keys box

# 6.14 Configuring a router's web server

The router's web server is configured in package uhttpd. This file defines the behaviour of the server and default values for certificates generated for SSL operation. uhttpd supports multiple instances, that is, multiple listen ports, each with its own document root and other features, as well as cgi and lua. There are two sections defined:

Main: this uHTTPd section contains general server settings.

Cert: this section defines the default values for SSL certificates.

#### 6.14.1 Configuration packages used

Package	Sections		
uhttpd	main		
	cert		

To configure the router's HTTP server parameters, in the top menu, select **Services -> HTTP Server**. The HTTP Server page has two sections.

Main Settings	Server configurations
Certificate Settings	SSL certificates.

\_\_\_\_\_

#### 6.14.2 Main settings

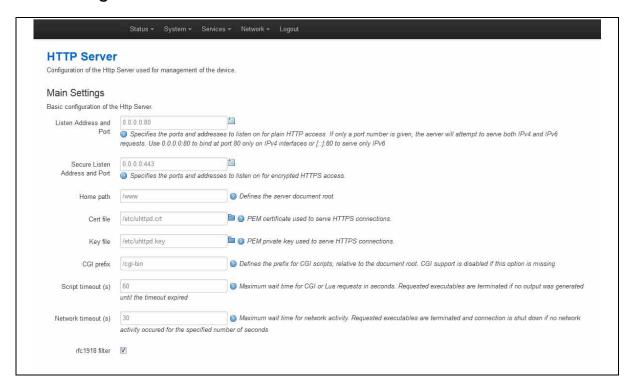


Figure 19: HTTP server settings

Web Field/UCI/Package Option	Description			
Web: Listen Address and Port UCI: uhttpd.main.listen_http Opt: list listen_http	Specifies the ports and addresses to listen on for plain HTTP access. If only a port number is given, the server will attempt to serve both IPv4 and IPv6 requests.			
Opt. list listeri_rittp	0.0.0.0:80	Bind at port 80 only on IPv4 interfaces.		
	[::]:80	Bind at port 80 only on IPv6 interfaces		
	Range	IP address and/or port		
Web: Secure Listen Address and Port UCI: uhttpd.main.listen_https	Specifies the ports and address to listen on for encrypted HTTPS access. The format is the same as listen_http.			
Opt: list listen_https	0.0.0.0:443	Bind at port 443 only		
	[::]:443			
	Range	IP address and/or port		
Web: Home path	Defines the server document root.			
UCI: uhttpd.main.home	/www			
Opt: home	Range			
Web: Cert file UCI: uhttpd.main.cert	ASN.1/DER certificate used to serve HTTPS connections. If no listen_https options are given the key options are ignored.			
Opt: cert	/etc/uhttpd.crt			
	Range			
Web: Key file UCI: uhttpd.main.key	ASN.1/DER private key used to serve HTTPS connections. If no listen_https options are given the key options are ignored.			
Opt: key	/etc/uhttpd.key			
	Range			

\_\_\_\_\_

Web: CGI profile	Defines the prefix for CGI scripts, relative to the document root.
UCI: uhttpd.main.cgi_prefix	CGI support is disabled if this option is missing.
Opt: cgi_prefix	/cgi-bin
	Range
Web: N/A UCI: uhttpd.main.lua_prefix Opt: lua_prefix	Defines the prefix for dispatching requests to the embedded lua interpreter, relative to the document root. Lua support is disabled if this option is missing.
	Range
Web: N/A UCI: uhttpd.main.lua_handler	Specifies the lua handler script used to initialise the lua runtime on server start.
Opt: lua_handler	/usr/lib/lua/luci/sgi/uhttpd.lua
	Range
Web: Script timeout UCI: uhttpd.main.script_timeout Opt: script_timeout	Sets the maximum wait time for CGI or lua requests in seconds.  Requested executables are terminated if no output was generated.  60  Range
Web: Network timeout	Maximum wait time for network activity. Requested executables
UCI: uhttpd.main.network_timeout Opt: network_timeout	are terminated and connection is shut down if no network activity occured for the specified number of seconds.
	30
	Range
Web: N/A	Defines basic authentication realm when prompting the client for credentials (HTTP 400).
UCI: uhttpd.main.realm	OpenWrt
Opt: realm	Range
Web: N/A	Config file in Busybox httpd format for additional settings.  Currently only used to specify basic auth areas.
UCI: uhttpd.main.config	/etc/http.conf
Opt: config	
	Range
Web: N/A	Index file to use for directories, for example, add index.php when using php.
UCI: uhttpd.main.index_page	using prip.
Opt: index_page	Dange
	Range
Web: N/A	Virtual URL of file of CGI script to handle 404 requests. Must begin with '/' (forward slash).
UCI: httpd.main.error_page	Degin With 7 (lorward stasti).
Opt: error_page	Dange
	Range
Web: N/A	Does not follow symbolic links if enabled.
UCI: uhttpd.main.no_symlinks	0 Disabled.
Opt: no_symlinks	1 Enabled.
Web: N/A	Does not generate directory listings if enabled.
UCI: uhttpd.main.no_dirlists	0 Disabled.
Opt: no_symlinks	
Opt. 110_symilins	1 Enabled.

Web: rfc 1918 filter	Enables option to reject requests from RFC1918 IPs to public		
UCI: uhttpd.main.rfc1918_filter=1	server IPs (DNS rebinding counter measure).		
Opt: rfc1918_filter	0	Disabled.	
	1	Enabled.	

Table 11: Information table for http server basic settings

#### 6.14.3 HTTP server using UCI

Multiple sections of the type uhttpd may exist. The init script will launch one webserver instance per section.

A standard uhttpd configuration is shown below.

```
root@VA_router:~# uci show uhttpd
uhttpd.main=uhttpd
uhttpd.main.listen_http=0.0.0.0:80
uhttpd.main.listen_https=0.0.0.0:443
uhttpd.main.home=/www
uhttpd.main.rfc1918_filter=1
uhttpd.main.cert=/etc/uhttpd.crt
uhttpd.main.key=/etc/uhttpd.key
uhttpd.main.cgi_prefix=/cgi-bin
uhttpd.main.script_timeout=60
uhttpd.main.network timeout=30
uhttpd.main.config=/etc/http.conf
HTTP server using package options
root@VA_router:~# uci export dropbear
config uhttpd 'main'
        list listen_http '0.0.0.0:80'
        list listen https '0.0.0.0:443'
        option home '/www'
        option rfc1918_filter '1'
        option cert '/etc/uhttpd.crt'
        option key '/etc/uhttpd.key'
        option cgi_prefix '/cgi-bin'
        option script_timeout '60'
        option network_timeout '30'
        option config '/etc/http.conf'
```

#### 6.14.4 HTTPs server certificate settings

To configure HTTPs server certificate settings, in the top menu, select **Services -> HTTP Server**. Scroll down to the Certificate Settings section.

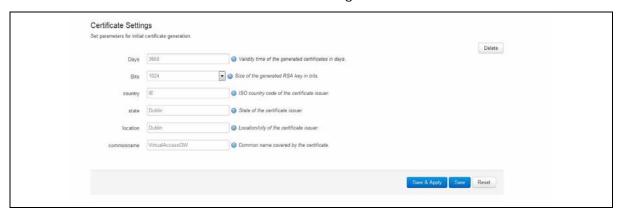


Figure 20: HTTP server certificate settings

Web Field/UCI/Package Option	Description			
Web: Days	Validity time of the generated certificates in days.			
UCI: uhttpd.px5g.days	730			
Opt: days	Range			
Web: Bits	Size of the generated RSA key in bits.			
UCI: uhttpd.px5g.bits	1024			
Opt: bits	Range			
Web: Country	ISO code of the certificate issuer.			
UCI: uhttpd.px5g.country				
Opt: country				
Web: State	State of the certificate issuer.			
UCI: uhttpd.px5g.state				
Opt: state				
Web: Location	Location or city of the certificate user.			
UCI: uhttpd.px5g.location				
Opt: location				
Web: Commonname	Common name covered by the certificate. For the purposes of			
UCI: uhttpd.commonname	secure Activation, this must be set to the serial number (Eth0			
Opt: commonname	MAC address) of the device.			

Table 12: Information table for HTTP server certificate settings

#### 6.14.5 HTTPs server using UCI

```
root@VA_router:~# uci show uhttpd.px5g
uhttpd.px5g=cert
uhttpd.px5g.days=3650
uhttpd.px5g.bits=1024
uhttpd.px5g.country=IE
uhttpd.px5g.state=Dublin
uhttpd.px5g.location=Dublin
uhttpd.px5g.commonname=00E0C8000000
HTTPs server using package options
root@VA_router:~# uci export uhttpd
package uhttpdconfig 'cert' 'px5g'
      option 'days' '3650'
      option 'bits' '1024'
      option 'state' 'Dublin'
      option 'location' 'Dublin'
      option 'commonname' '00E0C8000000'
```

# 6.15 Basic authentication (httpd conf)

For backward compatibility reasons, uhttpd uses the file /etc/httpd.conf to define authentication areas and the associated usernames and passwords. This configuration file is not in UCI format.

Authentication realms are defined in the format prefix: username: password with one entry and a line break.

Prefix is the URL part covered by the realm, for example, cgi-bin to request basic auth for any CGI program.

**Username** specifies the username a client has to login with.

**Password** defines the secret password required to authenticate.

The password can be either in plain text format, MD5 encoded or in the form \$p\$user where the user refers to an account in /etc/shadow or /etc/passwd.

If you use \$p\$... format, uhttpd will compare the client provided password against the one stored in the shadow or passwd database.

6.16 Securing uhttpd

By default, uhttpd binds to 0.0.0.0 which also includes the WAN port of your router. To bind uhttpd to the LAN port only you have to change the listen\_http and listen\_https options to your LAN IP address.

To get your current LAN IP address, enter:

```
uci get network.lan.ipaddr
```

Then modify the configuration appropriately:

# 6.17 Displaying custom information via login screen

The login screen, by default, shows the hostname of the router in addition to the username and password prompt. However, the router can be configured to show some other basic information if required using a UDS script.

Note: this can only be configured via the command line.

#### 6.17.1 Configuration packages used

Package	Sections	
luci	main	
uds	script	

#### 6.17.2 Configuring login screen custom information

The luci package option <code>login\_page\_info\_template</code> is configured with the path to a UDS script that would render the required information on the right side of the login page.

The following example shows how to display serial number and mobile signal strength.

Note: this can only be configured via the command line.



Figure 21: Example login screen displaying serial and signal strength

6.17.2.1 Login screen custom information using UCI

```
root@VA_router:~# uci show luci
luci.main=core
luci.main.login_page_info_template=/tmp/uds/sysauth_template

root@VA_router:~# uci show uds
uds.sysauth_template=script
uds.sysauth_template.enabled=1
uds.sysauth_template.exec_type=none
uds.sysauth_template.fname=sysauth_template.htm
uds.sysauth_template.type=none
uds.sysauth_template.type=none
uds.sysauth_template.text=Serial: <%=pcdata(luci.version.serial)%><br/>><br/>% local sig = luci.dispatcher.uci.cursor_state():get("mobile", "3g_1_1",
    "sig_dbm") or -113 sig = tonumber(sig) local hue = (sig + 113) * 2 local
hue = math.min(math.max(hue, 0), 120) %> Signal strength: <h3
style="color:hsl(<%=hue%>, 90%, 50%); display:inline;"><%=sig%></h3> dBm
```

#### 6.17.2.2 Login screen custom information using package options

```
root@VA_router:~# uci export luci
package luci
config core 'main'
      option login_page_info_template '/tmp/uds/sysauth_template'
root@VA_router:~# uci export uds
package uds
config script 'sysauth_template'
        option enabled '1'
        option exec_type 'none'
        option fname 'sysauth_template.htm'
        option type 'none'
        list text 'Serial: <%=pcdata(luci.version.serial)%><br/>'
        list text '<% local sig =</pre>
luci.dispatcher.uci.cursor_state():get("mobile", "3g_1_1", "sig_dbm") or -
113'
        list text 'sig = tonumber(sig)'
        list text 'local hue = (sig + 113) * 2'
        list text 'local hue = math.min(math.max(hue, 0), 120) %>'
        list text 'Signal strength: <h3 style="color:hsl(<%=hue%>, 90%,
50%); display:inline;"><%=sig%></h3> dBm
```

#### 7 Router file structure

This section describes the file structure and location of essential directories and files on Virtual Access routers.

Throughout this document, we use information tables to show the different ways to configure the router using the router's web interface and command line interface (CLI).

When showing examples of the command line interface we use the host name 'VA\_router' to indicate the system prompt. For example, the table below displays what the user should see when entering the command to show the current configuration in use on the router:

root@VA\_router:~# va\_config.sh

# 7.1 System information

General information about software and configuration used by the router is displayed on the Status page. To view the running configuration file status on the web interface, in the top menu, select **Status -> Overview**. This page also appears immediately after you have logged in.

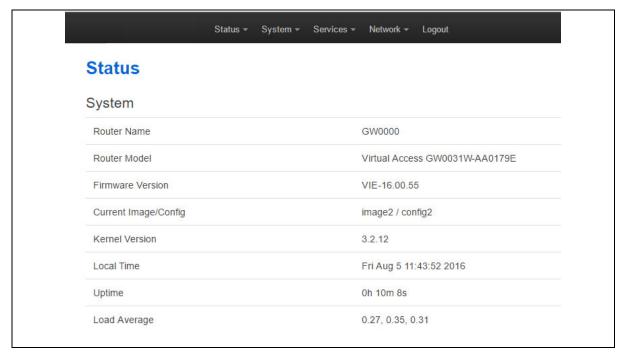


Figure 22: Example of the status page

System information is also available from the CLI if you enter the following command:

root@VA\_router:~# va\_vars.sh

The example below shows the output from the above command.

VA\_SERIAL: 00E0C8121215

VA\_MODEL: GW0000

VA\_ACTIVEIMAGE: image2

VA\_ACTIVECONFIG: config1

VA\_IMAGE1VER: VIE-16.00.44

VA IMAGE2VER: VIE-16.00.44

#### 7.2 Identify your software version

To check which software version your router is running, in the top menu, browse to **Status -> Overview**.



Figure 23: The status page showing a software version prior to 72.002

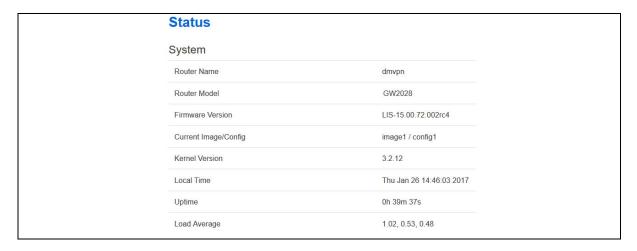


Figure 24: The status page showing software version 72.002

In the Firmware Version row, the first two digits of the firmware version identify the hardware platform, for example LIS-15; while the remaining digits: .00.72.002, show the software version.

# 7.3 Image files

The system allows for two firmware image files:

- · image1, and
- image2

Two firmware images are supported to enable the system to rollback to a previous firmware version if the upgrade of one image fails.

The image names (image1, image2) themselves are symbols that point to different partitions in the overall file system. A special image name "altimage" exists which always points to the image that is not running.

The firmware upgrade system always downloads firmware to "altimage".

# 7.4 Directory locations for UCI configuration files

Router configurations files are stored in folders on:

- /etc/factconf,
- /etc/config1, and
- /etc/config2

Multiple configuration files exist in each folder. Each configuration file contains configuration parameters for different areas of functionality in the system.

A symbolic link exists at /etc/config, which always points to one of factconf, config1 or config2 is the active configuration file.

Files that appear to be in /etc/config are actually in /etc/factconf|config1|config2 depending on which configuration is active.

If /etc/config is missing on start-up, for example on first boot, the links and directories are created with configuration files copied from /rom/etc/config/.

At any given time, only one of the configurations is the active configuration. The UCI system tool (Unified Configuration Interface) only acts upon the currently active configuration.

# 7.5 Viewing and changing current configuration

To show the configuration currently running, enter:

```
root@VA_router:~# va_config.sh
```

To show the configuration to run after the next reboot, enter:

```
root@VA_router:~# va_config.sh next
```

To set the configuration to run after the next reboot, enter:

```
root@VA_router:~# va_config.sh -s [factconf|config1|config2|altconfig]
```

7.6 Configuration file syntax

The configuration files consist of sections – or packages - that contain one or more config statements. These optional statements define actual values.

Below is an example of a simple configuration file.

```
package 'example'
config 'example' 'test'
    option 'string' 'some value'
    option 'boolean' '1'
    list 'collection' 'first item'
    list 'collection' 'second item'
```

The config 'example' 'test' statement defines the start of a section with the type example and the name test.

Command	Target	Description
export	[ <config>]</config>	Exports the configuration in a machine readable format. It is used internally to evaluate configuration files as shell scripts.
import	[ <config>]</config>	Imports configuration files in UCI syntax.
add	<config> <section-type></section-type></config>	Adds an anonymous section of type-section type to the given configuration.
add_list	<config>.<section>.<option>=<string></string></option></section></config>	Adds the given string to an existing list option.
show	[ <config>[.<section>[.<option>]]]</option></section></config>	Shows the given option, section or configuration in compressed notation.
get	<config>.<section>[.<option>]</option></section></config>	Gets the value of the given option or the type of the given section.
Set	<config>.<section>[.<option>]=<value></value></option></section></config>	Sets the value of the given option, or adds a new section with the type set to the given value.
delete	<config>[.<section[.<option>]]</section[.<option></config>	Deletes the given section or option.

Table 1: Common commands, target and their descriptions

# 7.7 Managing configurations

#### 7.7.1 Managing sets of configuration files using directory manipulation

Configurations can also be managed using directory manipulation.

To remove the contents of the current folder, enter:

```
root@VA_router:/etc/config1# rm -f *
```

Warning: the above command makes irreversible changes.

To remove the contents of a specific folder regardless of the current folder (config2), enter:

```
root@VA_router:/ # rm -f /etc/config1/*
```

Warning: the above command makes irreversible changes.

To copy the contents of one folder into another (config2 into config1), enter:

```
root@VA_router:/etc/config1# cp /etc/config2/* /etc/config1
```

# 7.8 Exporting a configuration file

If you have software versions prior to 72.002, to export a configuration file using the web interface, go to section 7.8.1.

If you have software version 72.002 or above, export a configuration file using the web interface go to section 7.8.2.

To export a configuration file using UCI, for any software version, go to section 7.8.3.

#### 7.8.1 Exporting a configuration file using the web interface for software versions pre- 72.002

The current running configuration file may be exported using the web interface.

In the top menu, select **System > Backup/Flash Firmware**. The Flash operations page appears.

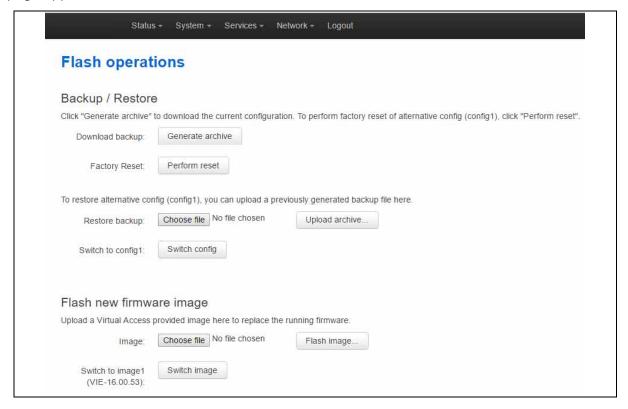


Figure 25: The flash operations page

In the Backup/Restore section, select **Generate Archive**.

© Virtual Access 2018 **GW1000 Series User Manual** Issue: 2.3

\_\_\_\_\_

# 7.8.2 Exporting a configuration file using the web interface for software version 72.002 and above

The current running configuration file may be exported using the web interface.

In the top menu, select **System > Flash Operations**. The Flash operations page appears.

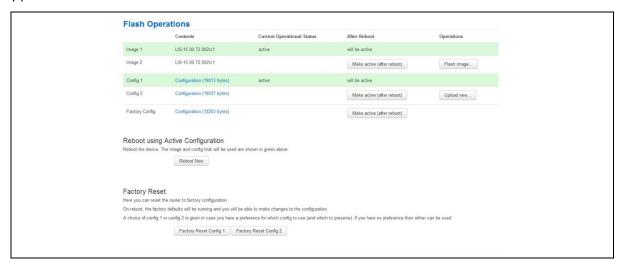


Figure 26: The flash operations page

In the **Flash Operation** section, click the configuration file in the Contents column to download it.

#### 7.8.3 Exporting a configuration file using UCI

You can view any configuration file segment using UCI.

To export the running configuration file, enter:

```
root@VA_router:~# uci export
```

To export the factory configuration file, enter:

```
root@VA_router:~# uci -c /etc/factconf/ export
```

To export config1 or config2 configuration file, enter:

```
root@VA_router:~# uci -c /etc/config1/ export
root@VA_router:~# uci -c /etc/config2/ export
```

# 7.9 Importing a configuration file

If you have software versions prior to 72.002, to import a configuration file using the web interface, go to section 7.9.1.

If you have software version 72.002 or above, to import a configuration file using the web interface go to section 7.9.2.

To import a configuration file using UCI, for any software version, go to section 7.9.3.

# 7.9.1 Importing a configuration file using the web interface for software versions pre- 72.002

You can import a configuration file to the alternate configuration segment using the web interface. This will automatically reboot the router into this configuration file.

In the top menu, select **System > Backup/Flash Firmware**. The Flash operations page appears.

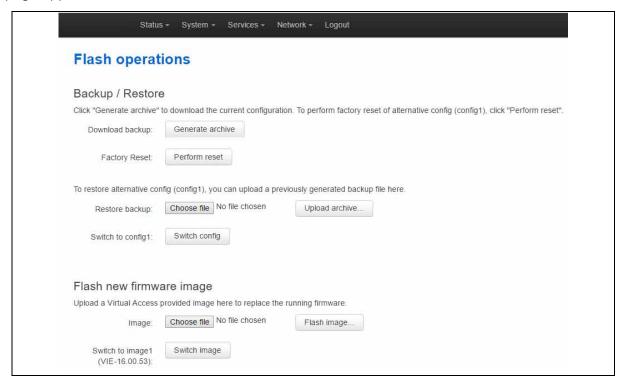


Figure 27: The flash operations page

Under Backup/Restore, choose **Restore Backup: Choose file**. Select the appropriate file and then click **Upload archive**.

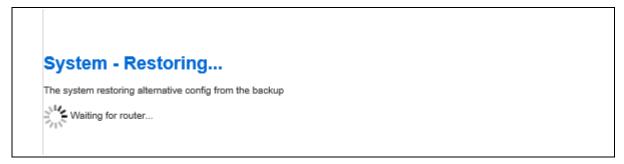


Figure 28: The system - restoring...page

When the 'waiting for router' icon disappears, the upgrade is complete, and the login homepage appears.

# 7.9.2 Importing a configuration file using the web interface for software version 72.002 and above

You can import a configuration file to the alternate configuration segment using the web interface.

In the top menu, select **System > Flash Operations**. The Flash operations page appears.

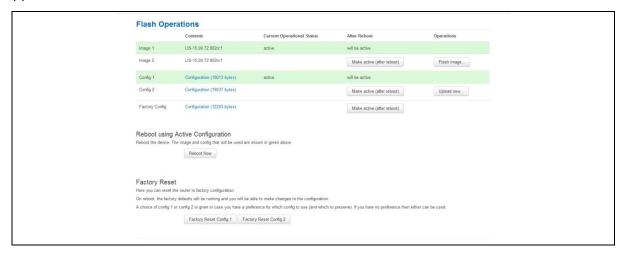


Figure 29: The flash operations page

In the Operations column, click **Upload new**. Select the appropriate file.

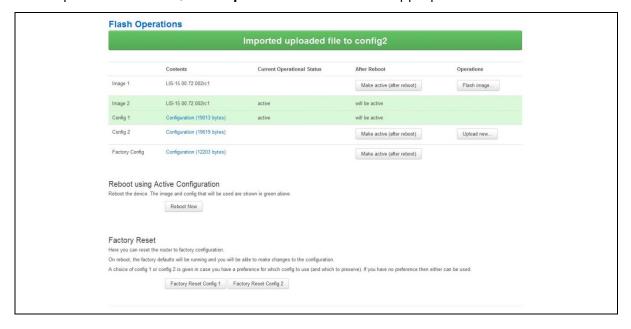


Figure 30: The flash operations succeed upload configuration page

If you select 'Flash image and do not reboot', the router will only run this configuration if you click **OK** to return to the Flash Operations page. There you can manually select **Made Active (after reboot)**. Then click **Reboot Now** in the 'Reboot using Active Configuration' section.

# 7.9.3 Importing a configuration file using UCI

You can import a configuration file to any file segment using UCI.

To import to config1, enter:

```
root@VA_router:~# uci -c /etc/config1/ import
<paste in config file>
<CTRL-D>
```

**Note**: it is very important that the config file is in the correct format otherwise it will not import correctly.

# 8 Using the Command Line Interface

This chapter explains how to view Virtual Access routers' log files and edit configuration files using a Command Line Interface (CLI) and the Unified Configuration Interface (UCI) system. Some commands may vary between router models.

#### 8.1 Overview of some common commands

Virtual Access routers' system has an SSH server typically running on port 22.

The factconf default password for the root user is **admin**.

To change the factconf default password, enter:

```
root@VA_router:/# uci set system.main.password="*****"
root@VA_router:/# uci commit system
```

To reboot the system, enter:

```
root@VA_router:/# reboot
```

The system provides a Unix-like command line. Common Unix commands are available such as ls, cd, cat, top, grep, tail, head, more and less.

Typical pipe and redirect operators are also available, such as: >, >>, <, |

The system log can be viewed using any of the following commands:

```
root@VA_router:/# logread
root@VA_router:/# logread | tail
root@VA_router:/# logread -f
```

These commands will show the full log, end of the log (tail) and continuously (-f). Enter **Ctrl-C** to stop the continuous output from logread -f.

To view and edit configuration files, the system uses the Unified Configuration Interface (UCI) which is described further on in this chapter. This is the preferred method of editing configuration files. However, you can also view and edit these files using some of the standard Unix tools.

For example, to view a text or configuration file in the system, enter:

```
root@VA_router:/# cat /etc/passwd
```

#### The command output information shows the following, or similar output.

```
root:x:0:0:root:/root:/bin/ash
daemon:*:1:1:daemon:/var:/bin/false
ftp:*:55:55:ftp:/home/ftp:/bin/false
sftp:*:56:56:sftp:/var:/usr/lib/sftp-server
network:*:101:101:network:/var:/bin/false
nobody:*:65534:65534:nobody:/var:/bin/false
```

#### To view files in the current folder, enter:

root@VA_r	outer:/#	ls			
bin	etc	lib	opt	sbin	usr
bkrepos	home	linuxrc	proc	sys	var
dev	init	mnt	root	tmp	WWW

#### For more details add the -I argument:

root@VA_rout	er:,	/# ls	-1					
drwxrwxr-x	2	root	root	642	Jul	16	2012	bin
drwxr-xr-x	5	root	root	1020	Jul	4	01:27	dev
drwxrwxr-x	1	root	root	0	Jul	3	18:41	etc
drwxr-xr-x	1	root	root	0	Jul	9	2012	lib
drwxr-xr-x	2	root	root	3	Jul	16	2012	mnt
drwxr-xr-x	7	root	root	0	Jan	1	1970	overlay
dr-xr-xr-x	58	root	root	0	Jan	1	1970	proc
drwxr-xr-x	16	root	root	223	Jul	16	2012	rom
drwxr-xr-x	1	root	root	0	Jul	3	22:53	root
drwxrwxr-x	2	root	root	612	Jul	16	2012	sbin
drwxr-xr-x	11	root	root	0	Jan	1	1970	sys
drwxrwxrwt	10	root	root	300	Jul	4	01:27	tmp
drwxr-xr-x	1	root	root	0	Jul	3	11:37	usr
lrwxrwxrwx	1	root	root	4	Jul	16	2012	var -> /tmp
drwxr-xr-x	4	root	root	67	Jul	16	2012	www

Ç

To change the current folder, enter **cd** followed by the desired path:

```
root@VA_router:/# cd /etc/config1
root@VA_router:/etc/config1#
```

**Note**: if the specified directory is actually a link to a directory, the real directory will be shown in the prompt.

To view scheduled jobs, enter:

```
root@VA_router:/# crontab -1
0 * * * * slaupload 00FF5FF92752 TFTP 1 172.16.250.100 69
```

To view currently running processes, enter:

```
root@VA_router:/# ps
 PID Uid
              VmSize Stat Command
                 356 S
   1 root
                         init
   2 root
                      DW [keventd]
   3 root
                      RWN [ksoftirqd_CPU0]
    4 root
                      SW [kswapd]
    5 root
                      SW
                         [bdflush]
   6 root
                         [kupdated]
                      SW
   8 root
                      SW
                         [mtdblockd]
  89 root
                 344 S
                          logger -s -p 6 -t
  92 root
                 356 S
                          init
  93 root
                 348 S
                          syslogd -C 16
  94 root
                 300 S
                          klogd
  424 root
                 320 S
                          wifi up
  549 root
                 364 S
                          httpd -p 80 -h /www -r VA_router
  563 root
                 336 S
                          crond -c /etc/crontabs
 6712 root
                  392 S
                          /usr/sbin/dropbear
 6824 root
                 588 S
                          /usr/sbin/dropbear
 7296 root
                  444 S
                          -ash
 374 root
                  344 R
                          ps ax
  375 root
                  400 S
                          /bin/sh /sbin/hotplug button
  384 root
                  396 R
                          /bin/sh /sbin/hotplug button
  385 root
                      RW [keventd]
```

To search for a process, enter: pgrep -fl 'rocess name or part of name>':

```
root@VA_router:/# pgrep -fl `wifi'

424 root 320 S wifi up
```

To kill a process, enter the PID:

```
root@VA_router:~# kill 424
```

# 8.2 Using Unified Configuration Interface (UCI)

The system uses Unified Configuration Interface (UCI) for central configuration management. Most common and useful configuration settings can be accessed and configured using the UCI system.

UCI consists of a Command Line Utility (CLI), the files containing the actual configuration data, and scripts that take the configuration data and apply it to the proper parts of the system, such as the networking interfaces. Entering the command 'uci' on its own will display the list of valid arguments for the command and their format.

```
root@VA_router:/lib/config# uci
```

Usage: uci [<options>] <command> [<arguments>]

```
Commands:
export
           [<config>]
import
           [<config>]
          [<confiq>]
changes
commit
           [<config>]
add
           <config> <section-type>
add list
          <config>.<section>.<option>=<string>
show
           [<config>[.<section>[.<option>]]]
get
           <config>.<section>[.<option>]
           <config>.<section>[.<option>]=<value>
set
delete
           <config>[.<section[.<option>]]
           <config>.<section>[.<option>]=<name>
rename
           <config>[.<section>[.<option>]]
revert
Options:
-c <path> set the search path for config files (default: /etc/config)
-d <str>
           set the delimiter for list values in uci show
-f <file> use <file> as input instead of stdin
-m
           when importing, merge data into an existing package
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3 \_\_\_\_\_

```
-n name unnamed sections on export (default)
-N don't name unnamed sections
-p <path> add a search path for config change files
-P <path> add a search path for config change files and use as default
-q quiet mode (don't print error messages)
-s force strict mode (stop on parser errors, default)
-S disable strict mode
-X do not use extended syntax on 'show'
```

The table below describes commands for the UCI command line and some further examples of how to use this utility.

Command	Target	Description		
commit	[ <config>]</config>	Writes changes of the given configuration file, or if none is given, all configuration files, to the filesystem. All "uci set", "uci add", "uci rename" and "uci delete" commands are staged into a temporary location and written to flash at once with "uci commit". This is not needed after editing configuration files with a text editor, but for scripts, GUIs and other programs working directly with UCI files.		
export	[ <config>]</config>	Exports the configuration in a UCI syntax and does validation.		
import	[ <config>]</config>	Imports configuration files in UCI syntax.		
changes	[ <config>]</config>	Lists staged changes to the given configuration file or if none given, all configuration files.		
add	<config> <section-type></section-type></config>	Adds an anonymous section of type section- type to the given configuration.		
add_list	<config>.<section>.<option>=<string></string></option></section></config>	Adds the given string to an existing list option.		
show	[ <config>[.<section>[.<option>]]]</option></section></config>	Shows the given option, section or configuration in compressed notation.		
get	<config>.<section>[.<option>]</option></section></config>	Gets the value of the given option or the type of the given section.		
set	<config>.<section>[.<option>]=<value></value></option></section></config>	Sets the value of the given option, or add a new section with the type set to the given value.		
delete	<config>[.<section[.<option>]]</section[.<option></config>	Deletes the given section or option.		
rename	<config>.<section>[.<option>]=<name></name></option></section></config>	Renames the given option or section to the given name.		
revert	<config>[.<section>[.<option>]]</option></section></config>	Deletes staged changes to the given option, section or configuration file.		

Table 13: Common commands, target and their descriptions

**Note**: all operations do not act directly on the configuration files. A commit command is required after you have finished your configuration.

8.2.1 Using uci commit to avoid router reboot

After changing the port, uhttpd listens on from 80 to 8080 in the file /etc/config/uhttpd; save it, then enter:

```
root@VA_router:~# uci commit uhttpd
```

Then enter:

```
root@VA_router:~# /etc/init.d/uhttpd restart
```

For this example, the router does not need to reboot as the changes take effect when the specified process is restarted.

#### 8.2.2 Export a configuration

Using the uci export command it is possible to view the entire configuration of the router or a specific package. Using this method to view configurations does not show comments that are present in the configuration file:

```
root@VA_router:~# uci export httpd

package 'httpd'
config 'httpd'
option 'port' '80'
option 'home' '/www'
```

#### 8.2.3 Show a configuration tree

The configuration tree format displays the full path to each option. This path can then be used to edit a specific option using the uci set command.

To show the configuration 'tree' for a given config, enter:

```
network.loopback=interface
network.loopback.ifname=lo
network.loopback.proto=static
network.loopback.ipaddr=127.0.0.1
network.loopback.netmask=255.0.0.0
network.lan=interface
network.lan.ifname=eth0
network.lan.proto=dhcp
network.wan=interface
network.wan.username=foo
```

© Virtual Access 2018 GW1000 Series User Manual

Issue: 2.3

network.wan.password=bar
network.wan.proto=3g
network.wan.device=/dev/ttyACM0
network.wan.service=umts
network.wan.auto=0
network.wan.apn=arkessa.com
network.@va\_switch[0]=va\_switch
network.@va\_switch[0].eth0=A B C
network.@va\_switch[0].eth1=D

It is also possible to display a limited subset of a configuration:

```
root@VA_router:/# uci show network.wan
network.wan=interface
network.wan.username=foo
network.wan.password=bar
network.wan.proto=3g
network.wan.device=/dev/ttyACMO
network.wan.service=umts
network.wan.auto=0
network.wan.apn=hs.vodafone.ie
```

# 8.2.4 Display just the value of an option

To display a specific value of an individual option within a package, enter:

```
root@VA_router:~# uci get httpd.@httpd[0].port
80
root@VA_router:~#
```

#### 8.2.5 High level image commands

To show the image running currently, enter:

```
root@VA_router:~# vacmd show current image
```

To set the image to run on next reboot, enter:

```
root@VA_router:~# vacmd set next image [image1|image2|altimage]
root@VA_router:~# reboot
```

8.2.6 Format of multiple rules

# When there are multiple rules next to each other, UCI uses array-like references for them. For example, if there are 8 NTP servers, UCI will let you reference their sections

as timeserver.@timeserver[0] for the first section; or timeserver.@timeserver[7] for the last section.

You can also use negative indexes, such as timeserver.@timeserver[-1] '-1' means the last one, and '-2' means the second-to-last one. This is useful when appending new rules to the end of a list.

```
root@VA_router:/# uci show va_eventd
va_eventd.main=va_eventd
va_eventd.main.enabled=yes
va_eventd.main.event_queue_file=/tmp/event_buffer
va_eventd.main.event_queue_size=128K
va_eventd.@conn_tester[0]=conn_tester
va_eventd.@conn_tester[0].name=Pinger
va_eventd.@conn_tester[0].enabled=yes
va_eventd.@conn_tester[0].type=ping
va_eventd.@conn_tester[0].ping_dest_addr=192.168.250.100
va_eventd.@conn_tester[0].ping_success_duration_sec=5
va_eventd.@target[0]=target
va_eventd.@target[0].name=MonitorSyslog
va_eventd.@target[0].enabled=yes
va_eventd.@target[0].type=syslog
va_eventd.@target[0].target_addr=192.168.250.100
va_eventd.@target[0].conn_tester=Pinger
va_eventd.@target[0].suppress_duplicate_forwardings=no
va_eventd.@forwarding[0]=forwarding
va_eventd.@forwarding[0].enabled=yes
va_eventd.@forwarding[0].className=ethernet
va_eventd.@forwarding[0].target=MonitorSyslog
va_eventd.@forwarding[1]=forwarding
va_eventd.@forwarding[1].enabled=yes
va_eventd.@forwarding[1].className=auth
va_eventd.@forwarding[1].target=MonitorSyslog
va_eventd.@forwarding[2]=forwarding
va_eventd.@forwarding[2].enabled=yes
va_eventd.@forwarding[2].className=adsl
```

```
va_eventd.@forwarding[2].target=MonitorSyslog
va_eventd.@forwarding[3]=forwarding
va_eventd.@forwarding[3].enabled=yes
va_eventd.@forwarding[3].className=ppp
va_eventd.@forwarding[3].target=MonitorSyslog
```

# 8.3 Configuration files

The table below lists common package configuration files that can be edited using uci commands. Other configuration files may also be present depending on the specific options available on the Virtual Access router.

File	Description
Management	
/etc/config/autoload	Boot up Activation behaviour (typically used in factconf)
/etc/config/httpclient	Activator addresses and urls
/etc/config/monitor	Monitor details
Basic	
/etc/config/dropbear	SSH server options
/etc/config/dhcp	Dnsmasq configuration and DHCP settings
/etc/config/firewall	NAT, packet filter, port forwarding, etc.
/etc/config/network	Switch, interface, L2TP and route configuration
/etc/config/system	Misc. system settings including syslog
Other	
/etc/config/snmpd	SNMPd settings
/etc/config/uhttpd	Web server options (uHTTPd)
/etc/config/strongswan	IPSec settings

# 8.4 Configuration file syntax

The configuration files usually consist of one or more config statements, so-called sections with one or more option statements defining the actual values.

Below is an example of a simple configuration file.

The config 'example' 'test' statement defines the start of a section with the type example and the name test. There can also be so-called anonymous sections with only a type, but no name identifier. The type is important for the processing programs to decide how to treat the enclosed options.

© Virtual Access 2018 GW1000 Series User Manual

The option 'string' 'some value' and option 'boolean' '1' lines define simple values within the section.

**Note**: there are no syntactical differences between text and boolean options. Per convention, boolean options may have one of the values '0', 'no', 'off' or 'false' to specify a false value or '1', 'yes', 'on' or 'true' to specify a true value.

In the lines starting with a list keyword, an option with multiple values is defined. All list statements that share the same name collection in our example will be combined into a single list of values with the same order as in the configuration file.

The indentation of the option and list statements is a convention to improve the readability of the configuration file but it is not syntactically required.

Usually you do not need to enclose identifiers or values in quotes. Quotes are only required if the enclosed value contains spaces or tabs. Also it is legal to use double-quotes instead of single-quotes when typing configuration options.

All of the examples below are valid syntax.

```
option example value

option 'example' value

option example "value"

option "example" 'value'

option 'example' "value"
```

In contrast, the following examples are not valid syntax.

```
option 'example" "value'
```

Quotes are unbalanced.

```
option example some value with space
```

Missing quotes around the value.

It is important to note that identifiers and config file names may only contain the characters a-z, A-Z, 0-9 and \_. However, option values may contain any character, as long they are properly quoted.

# 9 Upgrading router firmware

This chapter describes how to upgrade router firmware. The upgrade process is as follows:

- Firmware is transferred to the device.
- Firmware is checked to ensure there are no corruptions.
- Firmware is saved to persistent storage.
- Data in persistent storage is validated.

To avoid any unrecoverable errors during the process, you must follow several safety steps described in this chapter.

On successful completion of the process, you can restart the device running the new firmware.

#### 9.1 Software versions

If you have software versions prior to 72.002, to upgrade firmware using the web interface, go to section 9.1.2.

If you have software version 72.002 or above, to upgrade firmware using the web interface go to section 9.1.3.

To upgrade firmware using CLI, for any software version, go to section 9.2.

#### 9.1.1 Identify your software version

To check which software version your router is running, in the top menu, browse to **Status -> Overview**.



Figure 31: The status page showing a software version prior to 72.002

**Status** System Router Name dmvpn GW2028 Router Model Firmware Version LIS-15.00.72.002rc4 Current Image/Config image1 / config1 3.2.12 Kernel Version Local Time Thu Jan 26 14:46:03 2017 Uptime Load Average 1.02, 0.53, 0.48

Figure 32: The status page showing software version 72.002

In the Firmware Version row, the first two digits of the firmware version identify the hardware platform, for example LIS-15; while the remaining digits: .00.72.002, show the software version.

#### 9.1.2 Upgrading router firmware for software versions pre- 72.002

Copy the new firmware issued by Virtual Access to a PC connected to the router.

In the top menu, select **System tab -> Backup/Flash Firmware**. The Flash operations page appears.

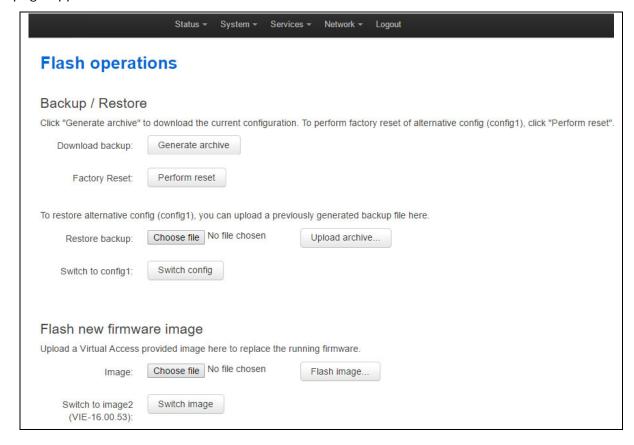


Figure 33: The flash operations page

Under Flash new firmware image, click Choose File or Browse.

Note: the button will vary depending on the browser you are using.

Select the appropriate image and then click **Flash Image**. The Flash Firmware – Verify page appears.

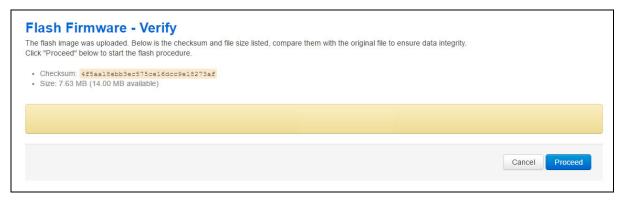


Figure 34: The flash firmware - verify page

Click **Proceed**. The System – Flashing... page appears.



Figure 35: The system - flashing...page

When the 'waiting for router' icon disappears, the upgrade is complete, and the login homepage appears.

To verify that the router has been upgraded successfully, click **Status** in the top menu. The Firmware Version shows in the system list.



Figure 36: The system status list

O Virtual Access 2018

\_\_\_\_\_

#### 9.1.3 Upgrading router firmware for software version 72.002 and above

Copy the new firmware issued by Virtual Access to a PC connected to the router.

In the top menu, select **System tab > Flash operations**. The Flash operations page appears.

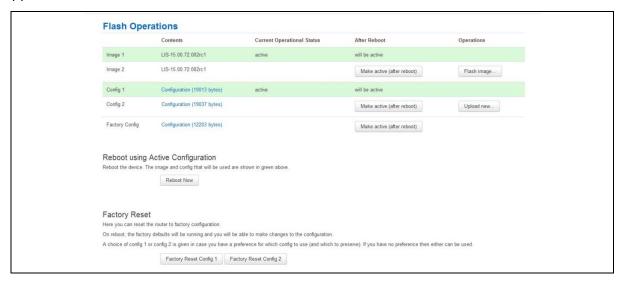


Figure 37: The flash operations page

Under Flash Operations, click **Flash Image**. Only the inactive image is available to flash. Select the appropriate image and then wait until image has loaded.

**Note**: this process may take a while depending on the available connection speed.

When the image has loaded, the Update Firmware page appears.

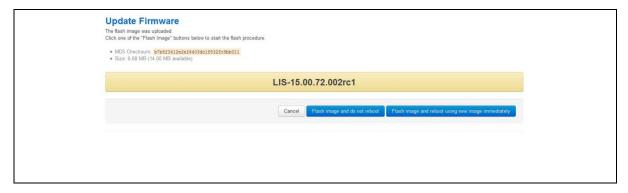


Figure 38: The flash firmware - verify page

Click either: Flash image and do not reboot, or Flash image and reboot using new image immediately. The 'Firmware update is being applied' message appears.

When the firmware update is complete, the Update Firmware page appears. There are various messages, depending on which option you selected, or if any corruptions have occurred.

\_\_\_\_\_

#### 9.1.4 Flash image and do not reboot option

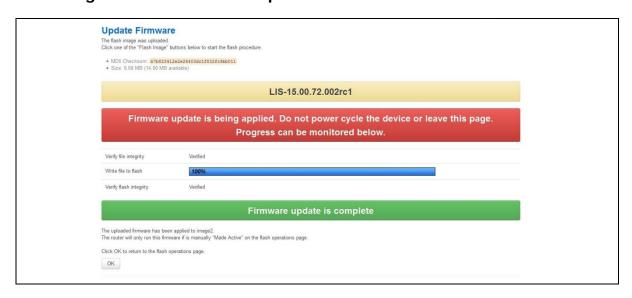


Figure 39: The firmware update page after '...do not reboot' option selected

If you select 'Flash image and do not reboot', the router will only run the firmware if you click **OK** to return to the Flash Operations page. There you can manually select **Made Active (after reboot)**. Then click **Reboot Now** in the 'Reboot using Active Configuration' section.

#### 9.1.5 Update flash image and reboot using new image immediately option

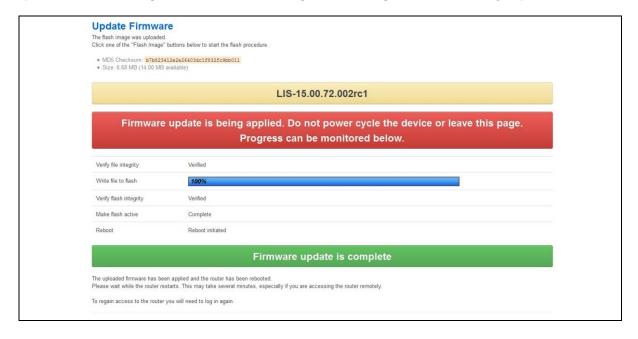


Figure 40: The firmware update page after 'update flash image and reboot...' option selected

If you select 'Update flash image and reboot using new image immediately' and the overall validation and flashing process has succeeded, the router will reboot immediately. To regain access to the router you must login again. If any part of the processes encounters an error the reboot does **not** occur and a report is given.

#### 9.1.6 Possible file corruption

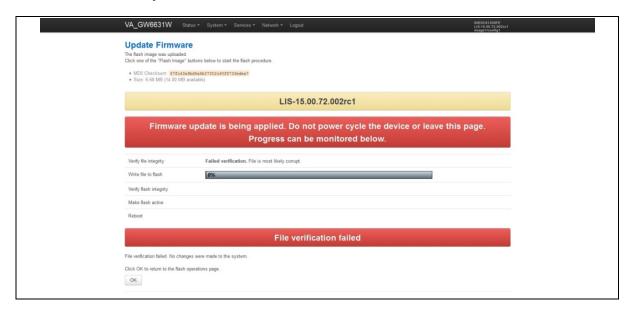


Figure 41: The firmware update failure page

In the unfortunate event that the firmware upgrade fails, the 'Failed verification File is most likely corrupt' or similar message will appear in the Verify file integrity row. No changes will be made to the system and the general message **File verification failed** appears.

#### 9.1.7 Verify the firmware has been upgraded successfully

To check the firmware version, in the top menu, browse to **System -> Flash Operations**, or after router reboots, in the top menu, click **Status**. The Firmware Version shows in the system list and also in the right top corner of the menu bar.



Figure 42: The system status list showing current firmware version

# 9.2 Upgrading firmware using CLI

#### 9.2.1 Transfer file to router

To upgrade firmware using CLI, you will need a TFTP server on a connected PC or SCP available.

Open up an SSH or Telnet session to the router.

Enter in the relevant username and password.

To access the temp folder, enter cd /tmp

Depending on the router's software version the following TFTP clients are available:

- atftp
- curl

To determine which is available on your router, enter:

```
which curl || which atftp
```

The output shows the available application:

/usr/bin/curl

#### **ATFTP**

Inline command usage:

```
atftp -g -r LIS-15.00.72.002.image -l /tmp/LIS-15.00.72.002.image x.x.x.x
```

where x.x.x.x is the IP address of your PC, -g is get operation and -I / -r are local and remote file name to store.

#### **CURL**

Inline command usage:

```
curl tftp://x.x.x.x/LIS-15.00.72.002.image -o /tmp/LIS-15.00.72.002.image
```

where x.x.x.x is the IP of your PC, **-o** is local file name to store.

#### **SCP**

Secure Copy (SCP) is a part of Secure Shell (SSH) and enables file transfers to the router using authentication and encryption. It is different to TFTP, which uses UDP, while SCP uses a TCP connection. On Unix machines, SCP is a standard part of the system; on Windows it requires an additional application.

The usage example below is for a Unix machine and therefore assumes the image file is in the current folder.

```
scp LIS-15.00.72.002.image root@x.x.x.x:/tmp/LIS-15.00.72.002.image
```

15 5

Where the first argument 'LIS-15.00.72.002.image' in SCP is the source and the second argument 'tmp/LIS-15.00.72.002.image' is the destination path, enter **root** as the username to connect to x.x.x.x IP address.

After you execute the above command you will be asked to provide a root password.

At this stage the output shows the process of copying the software file into destination directory.

```
root@192.168.100.1's password:
LIS-15.00.72.000.image 100% 6812KB 2.2MB/s 00:03
```

#### 9.2.2 Image verification before flashing

To verify the integrity of the image, firmware version xx.yy.72.002 and later uses an image-check application.

**Note**: it is the user's responsibility to verify the image before starting to write the image to flash process.

To use the image-check on downloaded image, enter:

```
image-check /tmp/LIS-15.00.72.002.image
```

In the case of any image corruption, an appropriate error message appears:

```
Error: no SquashFS filesystem after CRC'd section - data length 3

Error: read failed, expected at least 3 more bytes

or similar.
```

**Note**: the image is valid only if no error message appears. This process is done automatically during Web UI firmware update.

#### 9.2.3 Flashing

When downloaded firmware verification succeeds, the new image can be written to flash. To write the image into the alternative image, enter:

```
mtd write LIS-15.00.72.002.image altimage
```

**Note**: this is an example, substitute the correct file name.

#### 9.2.4 Flash verification after flashing

After the write process has finished, you must complete a post verification of the firmware.

To verify the checksum of downloaded firmware, enter:

```
va_image_csum.sh /tmp/LIS-15.00.72.002.image
```

...

The checksum of the downloaded binary is shown:

```
08761cd03e33c569873bcc24cf2b7389 7006920 LIS-15.00.72.002 This MD5
```

To verify the checksum of written firmware, enter:

```
va image csum.sh alt
```

After a while the checksum will be calculated:

```
Calculating checksum.....
```

```
08761cd03e33c569873bcc24cf2b7389 7006920 LIS-15.00.72.002 This MD5
```

Verify and compare the checksum with the MD5 sum of the downloaded image.

If the checksum of the written firmware in altimage matches the one from the downloaded image in /tmp, the new firmware has been programmed successfully.

## 9.2.5 Setup an alternative image

Provided the programming has succeeded, you can set it as the next image to use after reboot; enter:

```
vacmd set next image altimage
```

To reboot using the new firmware, enter:

reboot

# 9.3 Firmware recovery

The router has an automatic boot recovery feature that will

- revert the active firmware to the alternate firmware segment on three consecutive failed software restarts.
- Change the boot configuration to factory configuration after ten failed restarts

By design this feature is intended to allow recovery from firmware problems and therefore excludes restarts due to power loss.

# 10 System settings

The system section contains settings that apply to the most basic operation of the system, such as the host name, time zone, logging details, NTP server, language and style.

The host name appears in the top left hand corner of the interface menu bar. It also appears when you open a Telnet or SSH session.

**Note**: this document shows no host name in screen shots. Throughout the document we use the host name 'VA\_router'.

The system configuration contains a logging section for the configuration of a Syslog client.

# 10.1 Syslog overview

Most syslog settings appear in the main System Configuration page.

Syslog messages have a timestamp, source facility, priority, and message section. Often the message section begins with an optional tag identifying the usermode program name and process ID responsible for the message.

Messages can be stored locally and also forwarded remotely. Separate filter options apply to each case. At a broad level, you can set the minimum severity level for local and remote targets; only messages with a priority more severe than the configured level will be recorded.

Kernel messages are recorded separately in their own buffer. However, for convenience, these are copied to the system log automatically so that a unified system log is available.

In addition, you can also define filter rules to determine how particular log messages are handled. For example, you may decide that certain debug messages are directed into their own log file, to avoid cluttering up the main system log, and to save bandwidth if delivering to a remote syslog server. You can define filters to be applied to local and remote targets, or both. A filter matches specific log messages and then determines an action for them.

# 10.2 Configuration package used

Package	Sections
system	main
	syslog_fillter
	timeserver

0.00

# 10.3 Configuring system properties

To set your system properties, select **System -> System**. There are four sections in the System page.

Section	Description
General settings	Configure host name, local time and time zone.
Logging	Configure a router to log to a server. You can configure a Syslog client in this section.
Language and Style	Configure the router's web language and style.
Time synchronization	Configure the NTP server in this section.

## 10.3.1 General settings

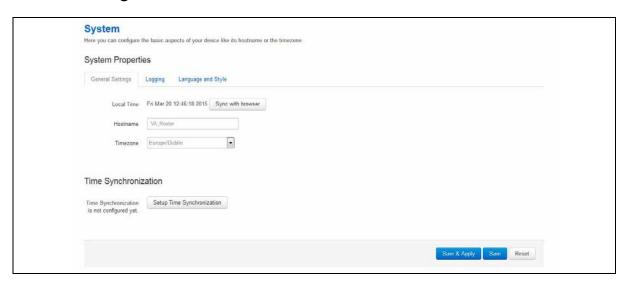


Figure 43: General settings in system properties

Web Field/UCI/Package Option	Description	
Web: Local Time	Sets the local time and syncs with browser. You can manually configure on CLI, using:	
	date -s YYYY.MM.DD-hh:mm:ss	
Web: hostname	Specifies the hostname for this system.	
UCI: system.main.hostname		
Opt: hostname		
Web: Timezone	Specifies the time zone that the date and time should be	
UCI: system.main.timezone	rendered in by default.	
Opt: timezone		
Web: n/a	Defines the interval in minutes to store the local time for use on	
UCI: system.main.timezone	next reboot.	
Opt: time_save_interval_min	10m	

Table 14: Information table for general settings section

# 10.3.2 Logging

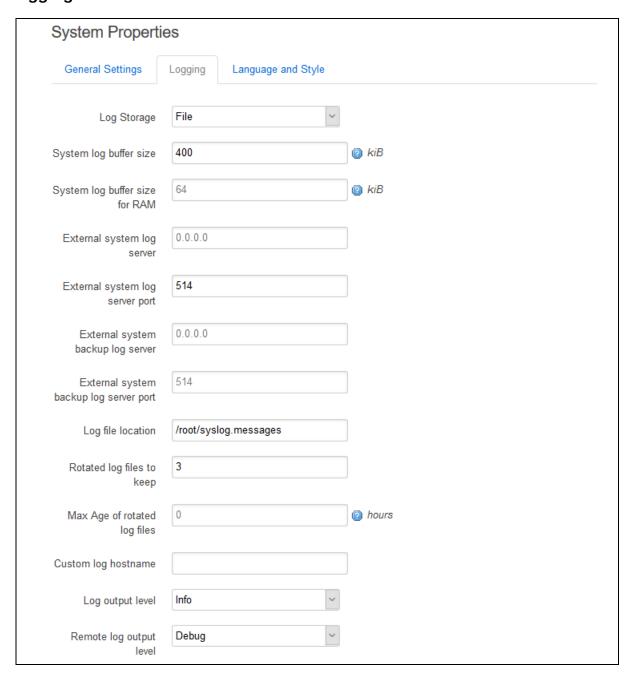


Figure 44: The logging section in system properties

Web Field/UCI/Package Option	Description		
Web: Log storage	Defines the system log storage type. Messages stored in RAM can be		d in RAM can be
UCI: system.main.log_type	seen using logre	ead.	
Opt: log_type	Note: system log stored in RAM will be lost on reboot.		
3-31	Web value	Description	UCI
	RAM	Store system log in RAM. Lost on reboot. Viewed using logread	circular
	File	Store system log in flash.  Maintained through reboot.  Viewed using cat /log_file	file

Web: System log buffer size	File log buffer	size in KB.	
UCI: system.main.log_size	Note: when the file reaches the configured size it is copied to the		
Opt: log_size	archive file (10	og_file_name.0).	
	Range		
	16	16 KB	
Web: System log buffer size for RAM	RAM log buffe	r size in KB.	
UCI: system.main.log_size_ram	Range		
Opt: log_size_ram	16	16 KB	
Web: External system log server		g server IP address. If defined syslog messages will be	
UCI: system.main.log_ip		n to local storage.	
Opt: log_ip	Range	IP of FQDN	
	0.0.0.0		
Web: External system log server port	External syslo	g server port number.	
UCI: system.main.log_port	Range		
Opt: log_port	514		
Web: External system backup log server	Backup extern	nal syslog server IP address. If defined syslog messages ere in addition to the main log server.	
UCI: system.main.log_ip_backup	Range	IP or FQDN	
Opt: log_ip_backup	0.0.0.0		
Web: External system backup log	<b>'</b>	g server port number for use with backup server.	
server port	Range	g cerver por triambor for the wint business control	
UCI: system.main.log_port_backup	514		
Opt: log_port_backup	[ 011		
Web: Log file location	Defines the file	e path for log storage when Log Storage is set to 'file'.	
UCI: system.main.log_file Opt: log_file		ne file reaches the configured size it is copied to the og_file_name.0).	
Opt. log_file		syslog.messages	
	Range		
	/root/syslog		
Web: Rotated log files to keep		e number of archive files for storage in flash when Log	
UCI: system.main.log_file_count		to file .  sem log file reaches the configured size it is copied to	
Opt: log_file_count		e (log_file_name.0). Existing archive files are copied to	
	Range		
	1	Store 1 archive log file in flash.	
Web: Max Age of rotated log files UCI: system.main.log_age	<u>'</u>	aximum duration in hours before archive syslog files are	
, , ,		fine no age limit.	
Opt: log_age	Range		
	0	No age limit	
Web: Custom log hostname	Defines a cust	om host name for syslog messages.	
UCI: system.main.log_hostname Opt: log_hostname		%hostname (system hostname), %ser (serial), and or dev_reference) are also recognised.	
	Range		
	Empty	Use router hostname for syslog messages.	

Web: Log output level UCI: system.main.conloglevel Opt: conloglevel	System events level or level ed console using the	num log output level severity for system are written to the system log. Messages qual to the configured level are displayed the logread command, or alternatively writed to the contractive of the logread command.	with a lower I on the
	file, if configure Web value	Description	UCI
	Debug	Information useful to developers for debugging the application.	8
	Info	Normal operational messages that require no action.	7
	Notice	Events that are unusual, but not error conditions.	6
	Warning	May indicate that an error will occur if action is not taken.	5
	Error	Error conditions	4
	Critical	Critical conditions	3
	Alert	Should be addressed immediately	2
	Emergency	System is unusable	1
Web: Remote log output level UCI: system.main. remoteloglevel	Sets the maxim	num log output level severity for system server.	events sent to
Opt: remoteloglevel	Web value	Description	UCI
·	Debug	Information useful to developers for debugging the application.	8
	Info	Normal operational messages that require no action.	7
	Notice	Events that are unusual, but not error conditions.	6
	Warning	May indicate that an error will occur if action is not taken.	5
	Error	Error conditions.	4
	Critical	Critical conditions.	3
	Alert	Should be addressed immediately.	2
	Emergency	System is unusable.	1
Web: n/a	Log every comr	mand executed in shell.	
UCI: system.main.audit_shell	1	Enable	
Opt: audit_shell	0	Disable	
Web: n/a	Log changes m	ade to configuration file through any inte	erface.
UCI: system.main.audit_cfg	1	Enable	
Opt: audit_cfg	0	Disable	
Web: n/a UCI:	Defines the interval, in hours, at which configuration changes are uploaded to Activator.		anges are
system.main.audit_cfg_hul_interval_h ours	Set to <b>0</b> to disable.		
Opt: audit_cfg_hul_interval_hours	Range		
opt. addit_org_nat_interval_nours	6	6 hours	
Web: n/a UCI:	Defines the ma units.	ximum size audit data can take in flash i	n 1024 byte
system.main.audit_cfg_max_size_kb	Range		
Opt: audit_cfg_max_size_kb	1024	6 hours	

Table 15: Information table for the logging section

## 10.3.3 Language and style



Figure 45: The language and style section in system properties

Web Field/UCI/Package Option	Description
Language	Sets the language to 'auto' or 'English'.
	Auto
	English
Design	Sets the router's style.

Table 16: Information table for the language and style page

## 10.3.4 Time synchronization

The router time must be synchronized using NTP. The router can act as both an NTP client and an NTP server. It is enabled as an NTP client by default and individual interfaces can be configured to respond to NTP requests.

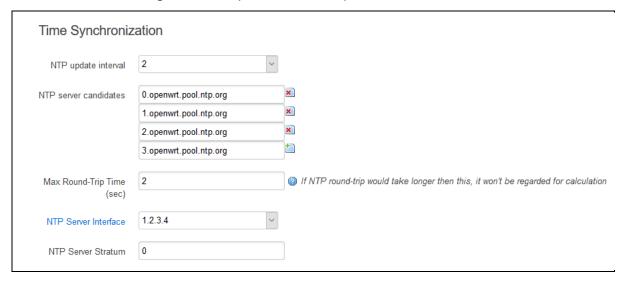


Figure 46: The time synchronization section in system properties

Web Field/UCI/Package Option	Description		
Web: NTP update interval UCI: system.ntp.interval_hours	Specifies interval of NTP requests in hours. Default value set to auto.		t to
Opt: interval_hours	Auto		
·	Range	auto; 1-23	
Web: NTP server candidates UCI: system.ntp.server Opt: list server	Defines the list of NTP servers to poll the time from. If the list is empty, the built-in NTP daemon is not started. Multiple servers can be configured and are separated by a space if using UCI.  By default all fields are set to 0.0.0.0.		
Web: Max Round-Tip Time (secs) UCI: system.ntp.max_ntp_roundtrip_sec	Defines the maximum time in seconds for an NTP poll. Any polls that take longer than this will be not be used for NTP calculation.		
Opt: max_ntp_roundtrip_sec	2	Two seconds.	
, _ , _ , _	Range		
Web: NTP Server Interface UCI: system.ntp.listen		of interfaces that respond to NTP requests. ould be delimited using space. Example:	
Opt: listen	option listen 'l	_AN1 LAN2′	1
- In the second	Blank	Do not respond to NTP requests.	
	Range		
Web: NTP Server Stratum UCI: system.ntp.stratum Opt: stratum	Defines how far this NTP Server is from the reference clock. For example, an NTP server getting time directly from the reference clock will have a stratum of 1. In general, this should be left blank, which means that the router NTP Server will derive the stratum from the NTP dialogue.		ence t
	Blank	NTP server will derive stratum	
	Range		

Table 17: Information table for time synchronization section

## 10.3.5 System reboot

The router can be configured to reboot immediately, or scheduled to reboot a configured time in the future.

In the top menu, select **System -> Reboot**. The System page appears.

Ensure you have saved all your configuration changes before you reboot.

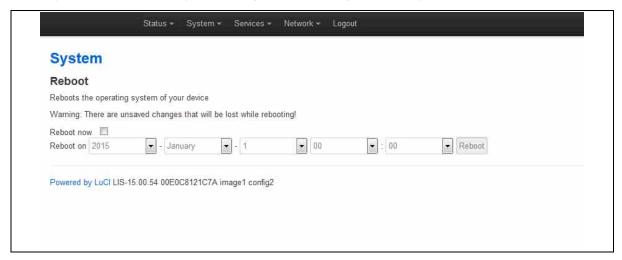


Figure 47: The reboot page

Check the **Reboot now** check box and then click **Reboot**.

....

## 10.4 System settings using command line

System settings are configured under the system package **/etc/config/system**. There are several configuration sections.

Section	Description
system	General system configuration options
timeserver	Router time and NTP conguration options
syslog_filter	Advanced filter rules (see Advanced filter section)

### 10.4.1 System settings using UCI

```
root@VA_router:~# uci show system
system.main=system
system.main.hostname=VA_router
system.main.timezone=UTC
system.main.log_ip=1.1.1.1
system.main.log_port=514
system.main.remoteloglevel=8
system.main.log_file=/root/syslog.messages
system.main.log_size=400
system.main.log_type=file
system.main.log_file_count=3
system.main.conloglevel=8
system.main.conloglevel=8
system.main.cronloglevel=8
system.ntp.interval_hours=auto
system.ntp.server=0.VA_router.pool.ntp.org 10.10.10.10
```

## 10.4.2 System settings using package options

```
root@VA_router:~# uci export system
package 'system'

config 'system' 'main'
    option 'hostname' "VA_router"
    option 'timezone' "UTC"
    option 'log_ip' "1.1.1.1"
    option 'log_port' "514"
    option remoteloglevel '8'
    option log_file '/root/syslog.messages'
    option log_size '400'
```

....

option log\_type 'file'
 option log\_file\_count '3'
 option time\_save\_interval\_min "10"
 option conloglevel '8'
 option cronloglevel '8'

config 'timeserver' 'ntp'
 option interval\_hours 'auto'
 list server "0.VA\_router.pool.ntp.org"
 list server '10.10.10.10.'
 option listen 'LAN1 LAN2'

# 10.5 System diagnostics

### 10.5.1 System log messages

System log messages comprise of a date, source facility, hostname, severity and message description in the form tag: message.

### 10.5.1.1 Source facility list:

F !!!!	Bernstatten	
Facitity	Description	
auth	Authorisation/security	
authpriv	Authorisation (private)	
cron	Scheduled jobs	
daemon	Background daemons	
kern	Kernel messages	
local0	hotplug scripts	
security	Same as auth	
syslog	Internal syslog events	
user	General user-mode application messages	

Table 18: Syslog message severity list

### 10.5.1.2 Event severity list

The severities are ordered from most severe to least severe.

Level	Name	Description
0	emerg	System is unusable
1	alert	Immediate action required
2	crit	Critical conditions
3	error	Error conditions
4	warning	Warning conditions
5	notice	Normal but significant
6	info	Informational
7	debug	Debug-level messages
-	none	No priority

Table 19: Syslog message severity list

### 10.5.1.3 System log messages in RAM

By default, system log messages are stored in the system log in RAM.

To view the system log in RAM, enter:

```
root@VA_router:~# logread
```

Shows the log.

```
root@VA_router:~# logread |tail
```

Shows end of the log.

```
root@VA_router:~# logread | more
```

Shows the log page by page.

```
root@VA_router:~# logread -f
```

Shows the log on an ongoing basis. To stop this option, press ctrl-c.

```
root@VA_router:~# logread -f &
```

Shows the log on an ongoing basis while in the background. This allows you to run other commands while still tracing the event logs. To stop this option, type **fg** to view the current jobs, then press **ctrl-c** to kill those jobs.

#### 10.5.1.4 System log messages in flash

Since logread is limited by memory size and does not survive a reset, it is beneficial to write system messages to flash memory. To do this, modify the system config under the system package. Set the options 'log\_file', 'log\_size', 'log\_type' and 'log\_file\_count' as shown below:

```
root@VA_router:~# uci export system
package system
config system 'main'
    option hostname 'VA_router'
    option zonename 'UTC'
    option timezone 'GMTO'
    option conloglevel '8'
    option cronloglevel '8'
    option time_save_interval_hour '10'
    option log_hostname '%serial'
    option log_port '514'
    option log_file '/root/syslog.messages'
```

option log\_size '400'
option log\_type 'file'
option log\_file\_count '3'

The above commands will take effect after a reboot, or by running the console command:

```
root@VA_router:~# /etc/init.d/syslogd restart
```

```
root@VA_router:~# cat /root/syslog.messages
```

Shows all the system events stored in flash.

```
root@VA_router:~# tail /root/syslog.messages
```

Shows end of the events stored flash.

```
root@VA_router:~# tail -f /root/syslog.messages &
```

Shows the log on an ongoing basis. To stop this option, press ctrl-c.

### 10.5.2 Kernel messages

To view kernel messages, enter dmesg

```
root@VA_router:~# dmesg
     0.000000] Linux version 3.10.12 (info@virtualaccess.com) (gcc version
4.8.1 20130401 (prerelease) (Linaro GCC 4.8-2013.04) ) #130 PREEMPT 1970-
01-01T00:00:00Z
Γ
     0.000000] SoC: xRX330 rev 1.1
     0.000000] bootconsole [early0] enabled
     0.000000] CPU0 revision is: 00019556 (MIPS 34Kc)
Γ
     0.000000] adding memory size:267386880 from DT
     0.000000] MIPS: machine is Virtual Access GW6600V series
     0.000000] Determined physical RAM map:
     0.000000] memory: 0ff00000 @ 00000000 (usable)
Γ
     0.000000] User-defined physical RAM map:
[
     0.000000] memory: 07200000 @ 00000000 (usable)
```

Note: kernel messages are also copied to the main system log by default.

### 10.5.3 Syslog process

To check the syslog process is running correctly, enter pgrep -fl syslogd

\_\_\_\_\_

```
root@VA_router:~# pgrep -fl syslogd
5409 /sbin/syslogd -h VARouter -L -R 192.168.14.202:514 -l 7 -r 8 -s 400 -0
/root/syslog.messages -b 3 -C64 -R localhost:2048
```

Changes to the syslog configuration will take effect with a restart of syslogd

```
root@VA_router:~# /etc/init.d/syslogd restart
```

### 10.5.4 NTP process

To check the NTP process is running correctly, enter pgrep -fl chrony

```
root@VA_router:~# pgrep -fl chrony
2553 /usr/sbin/chronyd -f /etc/chrony.conf
```

Changes to the NTP configuration will take effect with a restart of chrony

```
root@VA_router:~# /etc/init.d/chrony restart
```

# 10.6 Advanced filtering of syslog messages

Syslog messages can be filtered against a series of rules that are checked for each message generated. If a match is found, then the specified action is taken. If no match occurs, then the default action is taken, as defined in the main system logging settings.

A message may match multiple filters. They are processed in the order listed. For example, you may wish to record authorisation messages in the main system log, but also make a copy in a separate authorisation log which can span a much longer period of time.

By default, all matching filters will be applied to each message. However, you can mark a filter to indicate that after it matches, no further filter processing should take place.

The filter rules are defined in a free-form text list in the **syslog\_filter** configuration section. There are two section types, one for messages to be stored locally, and one for messages delivered remotely.

Configuring advanced filters on the web interface is not currently supported; they must be edited using the command line interface.

### 10.6.1 Advanced filtering using command line

Filters are defined in the **syslog\_filter** configuration section of the **system** package. A set of filters can be either **local** or **remote**.

• All messages are matched against both local and remote filter rules, if configured.

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3 3.

• Each local filter matched is executed; if there is no match, then the default local logging action applies.

• Any remote filter matched is executed; if there is no match, then the default remote logging action applies.

```
root@VA_router:~# uci export system
package system
.....

config syslog_filter 'local'
    list text "...line 1..."
    list text "...line 2..."
    list text "...line 3..."
    ...

config syslog_filter 'remote'
    list text "...line 1..."
    list text "...line 3..."
    ...

list text "...line 3..."
    ...
```

Lines defined here are copied to the router runtime file **/var/conf/syslog.conf** which may be reviewed to determine current rules in use.

#### 10.6.2 Filter definitions

Each filter ruleset is a series of lines. Each line can be:

- A filter pattern, of the form facility.[op]severity(pattern) target [~]
- A blank line, or comment line, starting with hash (#).

If a message does not match any of the filter lines for a destination, local or remote, the default action for that destination is taken.

The sections of a filter pattern break down as follows:

Section	Description
facility	Any keyword or comma-separated list of keywords from the source facility list. See the Source Facilities table in section 10.5.1.1.
	Use the wildcard '*' to match all facilities.
severity	Any keyword from the event severity list (see Event Severity table above). The rule will match all severities more urgent f the message severity level is at least as urgent as this.
	Use the wildcard '*' to match all facilities.

op	Defines an optional severity condition.
	(empty) match listed severity, and also anything more severe
	! match on less urgent severities than that listed
	= severity must match exactly
	!= match any severity other than the listed severity
	Examples:
	*.debug matches all messages of debug severity and greater (ie. debug, info, warning, etc.
	*.=debug matches all debug messages.
pattern	Defines an optional pattern to match against the message text. The pattern is used to restrict the number of log messages matching this filter.
	The pattern syntax is a simple case-insensitive regular expression, using these characters:
	* Matches zero or more characters.
	? Matches any single character (use this for spaces).
	! Matches anything not matching the following pattern.
	^ Matches the start of a message.
	\$ Matches the end of a message.
	Examples:
	(firewall:) Match any message containing the string 'firewall:'
	(up*eth1) Match any UP message referencing eth1
	(!mobile) Match only messages that don't include the string 'mobile'
	(^mobile) Match only messages beginning with the string 'mobile'
target	Defines what to do with the log message when a match occurs. It is optional for remote filters. It can be the name of a disk file, or one of the special target keywords listed below.
	default Do whatever the default action is, as if not filter rule matched.
	ignore Never log this message (useful for remote filtering).
	console Log this message to the console. To view the console use cat /proc/conlog For GW6600/GW6600V Series only.
	mem Log this message to the memory buffer (logread), if configured.  Note: logread is not stored through reboot.
~	Optional flag to indicate no further filters should be checked, if this filter matches. This prevents later filters from acting on the same message. For convenience this is automatically implied when a target of ignore is used. A space must be present before the ~ character.
	~ no further filters should be checked after a match.
	(empty) continue checking other filters after a match.

Table 20: Filter syntax definitions

## 10.6.3 Filter examples

### 10.6.3.1 Example 1

Log all debug messages to memory buffer. Do not log anywhere else locally.

Log all authorisation facility messages to filepath 'var/log/auth'. Do not log anywhere else locally.

Log all ipsec messages to filepath 'va/log/ipsec'. Do not log anywhere else locally.

For everything else, apply default local logging.

No remote filter rules defined, so apply default remote logging to all messages.

```
config syslog_filter 'local'
    list text '*.=debug mem ~'
    list text 'auth,authpriv.* /var/log/auth ~'
    list text '*.*(ipsec:) /var/log/ipsec ~'
```

#### 10.6.3.2 Example 2

As Example 1 but in addition to specified local files, copy auth, authoriv and ipsec to local default log.

```
config syslog_filter 'local'
    list text '*.=debug mem ~'
    list text 'auth,authpriv.* /var/log/auth'
    list text '*.*(ipsec:) /var/log/ipsec'
    list text '*.* default'
```

#### 10.6.3.3 Example 3

As in Example 2, except **do not** send any auth or auth priv messages remotely.

```
config syslog_filter 'local'
    list text '*.=debug mem ~'
    list text 'auth,authpriv.* /var/log/auth'
    list text '*.*(ipsec:) /var/log/ipsec'
    list text '*.* default'

config syslog_filter 'remote'
    list text 'auth,authpriv.* ignore'
```

#### 10.6.3.4 Example 4

As in Example 3, except only send auth or auth priv messages remotely.

```
config syslog_filter 'local'
    list text '*.=debug mem ~'
    list text 'auth,authpriv.* /var/log/auth'
    list text '*.*(ipsec:) /var/log/ipsec'
    list text '*.* default'

config syslog_filter 'remote'
    list text 'auth,authpriv.* ~'
    list text '*.* ignore'
```

# 10.6.4 Filter diagnostics

To view configured filters, enter cat /var/conf/syslog.conf

```
root@VA_router:~# cat /var/conf/syslog.conf
[local]
auth,authpriv.* /var/log/auth
*.*(ipsec:) /var/log/ipsec
*.* default

[remote]
auth,authpriv.info
*.* ignore
```

© Virtual Access 2018

# 11 Configuring an Ethernet interface on a GW1000 router

This section describes how to configure an Ethernet interface on a GW1000 or GW1000M router, including configuring the interface as a DHCP server, adding the interface to a firewall zone and mapping the physical switch ports.

# 11.1 Configuration packages used

Package	Sections
network	interface
	route
	alias
firewall	zone
dhcp	dhcp

# 11.2 Configuring an Ethernet interface using the web interface

To create and edit interfaces via the web interface, in the top menu, click **Network -> Interfaces**. The Interfaces overview page appears.

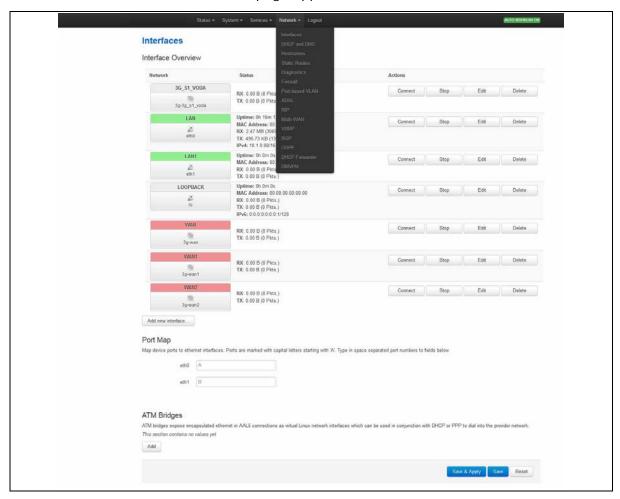


Figure 48: The interfaces overview page

There are two sections in the Interfaces page.

Section	Description
Interface Overview	Shows existing interfaces and their status. You can create new and edit existing interfaces here.
ATM Bridges	ATM bridges expose encapsulated Ethernet in AAL5 connections as virtual Linux network interfaces, which can be used in conjunction with DHCP or PPP to dial into the provider network.

# 11.3 Interface overview: editing an existing interface

To edit an existing interface, from the interface tabs at the top of the page, select the interface you wish to configure. Alternatively, click **Edit** in the interface's row.

### 11.3.1 Interface overview: creating a new interface

To create a new interface, in the Interface Overview section, click **Add** new interface. The Create Interface page appears.

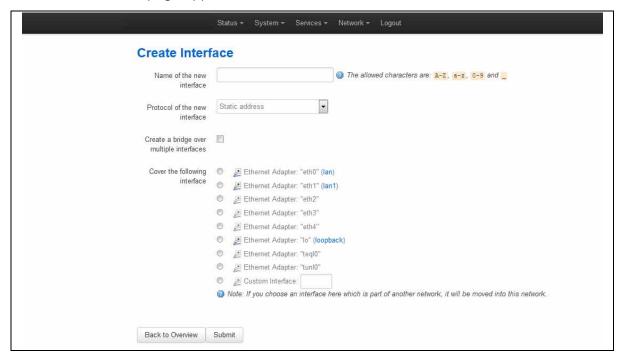


Figure 49: The create interface page

Web Field/UCI/Package Option	Description				
Web: Name of the new interface UCI: network. <if name=""></if>	Assigns a logical name to the interface. The network interface section will assign this name ( <if name="">).</if>		k interface		
Opt: config interface		Type the name of the new interface.			
Opt. coming interrace	"	ers are A-Z, a-z, 0-9 and _			
Web: Protocol of the new interface	Specifies what p	protocol the interface will operate or	n. Select		
UCI: network. <if name="">.proto Opt: proto</if>	Web	Description	UCI		
ορι. proto	Static	Static configuration with fixed address and netmask.	static		
	DHCP Client	Address and netmask are assigned by DHCP.	dhcp		
	Unmanaged	Unspecified	none		
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.			
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.			
	GRE	Generic Routing Encapsulation protocol.	gre		
	IOT	IOT	iot		
	L2TP	Layer 2 Tunnelling Protocol	I2tp		
	L2TPv3	L2TPv3 Tunnelling Protocol	I2tpv3		
	PPP	Point to Point Protocol	ppp		
	PPtP	Point to Point Tunnelling Protocol	pptp		
	PPPoE	PPP over Ethernet	pppoe		
	PPPoATM	PPP over ATM	pppoa		
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.	3g		
	PPP(PSTN- Modem)	PPP v90 modem	pppmodem		
Web: Create a bridge over multiple interfaces UCI: network. <if name="">.type</if>	3	s option the new logical interface cr terface between the chosen existing			
Opt: type	Empty				
орт. туро	Bridge	Configures a bridge over multiple interfaces.			
Web: Cover the following interface UCI: network. <if name="">.ifname Opt: ifname</if>	creating a bridg	ce name to assign to this logical interest over multiple interfaces select two sing uci, seperate the interface name 'eth2 eth3'.	interfaces to		

Table 21: Information table for the create new interface page

Click **Submit**. The Interface configuration page appears. There are three sections:

Section	Description
Common Configuration	Configure the interface settings such as protocol, IP address, gateway, netmask, custom DNS servers, MTU and firewall configuration.
IP-Aliases	Assigning multiple IP addresses to the interface.
DHCP Server	Configuring DHCP server settings for this interface.

## 11.3.2 Interface overview: common configuration

The common configuration section has four sub sections:

Section	Description
General Setup	Configure the basic interface settings such as protocol, IP address, gateway, netmask, custom DNS servers.
Advanced Settings	'Bring up on boot', 'Monitor interface state', Override MAC address, Override MTU and 'Use gateway metric'.
Physical Settings	Bridge interfaces, VLAN PCP to SKB priority mapping.
Firewall settings	Assign a firewall zone to the interface.

## 11.3.2.1 Common configuration – general setup

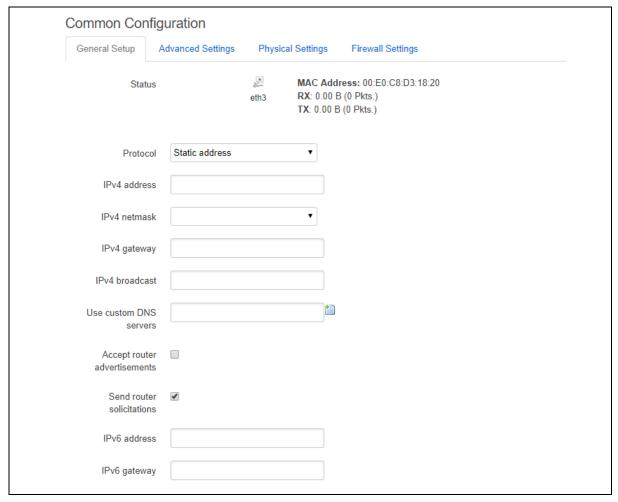


Figure 50: The Ethernet connection common configuration settings page

Web Field/UCI/Package Option	Description			
Web: status	Shows the current status of the interface.			
Web:Protocol UCI: nework. <if name="">.proto</if>	Protocol type. The interface protocol may be one of the options shown below. The protocol selected in the previous step will be displayed as default but can be changed if required.			
Opt: proto	Web	Description	UCI	
	Static	Static configuration with fixed address and netmask.	static	
	DHCP Client	Address and netmask are assigned by DHCP.	dhcp	
	Unmanaged	Unspecified	none	
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.		
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.		
	GRE	Generic Routing Encapsulation protocol	gre	
	IOT	IOT	iot	
	L2TP	Layer 2 Tunnelling Protocol.	I2tp	
	L2TPv3	L2TPv3 Tunnelling Protocol	I2tpv3	
	PPP	Point to Point Protocol.	ppp	
	PPtP	Point to Point Tunnelling Protocol.	pptp	
	PPPoE	PPP over Ethernet	pppoe	
	PPPoATM	PPP over ATM	ррроа	
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.	3g	
	PPP(PSTN- Modem)	PPP v90 modem	pppmodem	
Web: IPv4 address UCI: network. <if name="">.ipaddr Opt: ipaddr</if>	The IPv4 address provided.	ss of the interface. This is optional i	f an IPv6 address i	
Web: IPv4 netmask UCI: network. < if name > .netmask Opt: netmask	Subnet mask to	be applied to the IP address of this	s interface.	
Web: IPv4 gateway UCI: network. <if name=""> .gateway Opt: gateway</if>	IPv4 default gat	teway to assign to this interface (op	otional).	
Web: IPv4 broadcast UCI: network. <if name=""> .broadcast Opt: broadcast</if>	Broadcast address. This is automatically generated if no broadcast address is specified.			
Web: Use custom DNS servers UCI: network. <if name=""> .dns Opt: dns</if>	List of DNS server IP addresses (optional). Multiple DNS Servers are separated by a space when using UCI or CLI.			
Web: Accept router advertisements UCI: network. <if name=""> .accept_ra Opt: accept_ra</if>	Specifies whether to accept IPv6 Router Advertisements on this interface (optional).  Note: default is 1 if protocol is set to DHCP, otherwise defaults to 0.			
Web:Send router solicitations UCI: network. <if name=""> Opt:send_rs</if>	Specifies whether to send Router Soliticitations on this interface (optional).  Note: defaults to 1 for static protocol, otherwise defaults to 0.			
Web: IPv6 address UCI: network. <if name=""> .ip6addr</if>	The IPv6 IP address if the interface. Optional if an IPv4 address is provided.  CIDR notation for the IPv6 address is required.			

Web: IPv6 gateway	Assign given IPv6 default gateway to this interface (optional).
UCI: network. <if name=""> .ip6gw</if>	
Opt:ip6gw	

Table 22: Information table for LAN interface common configuration settings

## 11.3.2.2 Common configuration: advanced settings

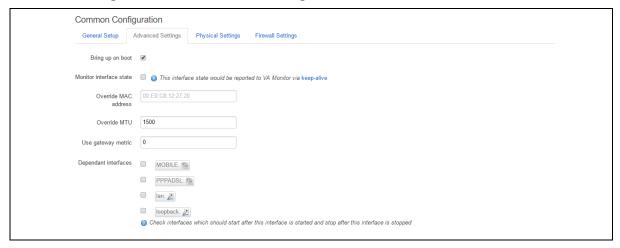


Figure 51: The Ethernet connection advanced settings page

Web Field/UCI/Package Option	Descrip	ption	
Web: Bring up on boot	Enables	s the interface to connect automatically on boot up.	
UCI: network. <if name="">.auto</if>	0	Disabled.	
Opt: auto	1	Enabled.	
Web: Monitor interface state	Enabled	d if status of interface is presented on Monitoring platform.	
UCI: network. <if name="">.monitored</if>	0	Disabled.	
Opt: monitored	1	Enabled.	
Web: Override MAC address  UCI: network. <if name="">.macaddr  Opt: macaddr</if>		de the MAC address assigned to this interface. Must be in m: hh:hh:hh:hh:hh:hh, where h is a hexadecimal number.	
Web: Override MTU	Defines	s the value to override the default MTU on this interface.	
UCI: network. <if name="">.mtu</if>	1500	1500 bytes	
Opt: mtu	Range	e	
Web: Use gateway metric UCI: network. <if name="">.metric</if>	Specifies (optional	es the default route metric to use for this interface nal).	
Opt: metric	0		
,	Range	e	
Web: Dependant Interfaces UCI: network.[x].dependants Opt: dependants	Depende	terfaces that are dependent on this parent interface. dent interfaces will go down when the parent interface is and will start or restart when parent interface starts.	
Opt. dopondants	Separate multiple interfaces by a space when using UCI.  Example: option dependants 'PPPADSL MOBILE'		
	This replaces the following previous options in child interfaces.		
	gre option local_interface		
	lt2p	option src_ipaddr	
	iot	option wan1 wan2	
	6in4	option ipaddr	
	6to4	option ipaddr	

Web: SNMP Alias ifindex UCI: network.[x].snmp_alias_ifindex Opt: snmp_alias_ifindex	can be polled via	NMP interface alias index for this interface, that the SNMP interface index ex+1000). Read the chapter, 'Configuring aformation.
	Blank Range	No SNMP interface alias index 0 - 4294966295

Table 23: Information table for common configuration advanced settings

## 11.3.2.3 Common configuration: physical settings

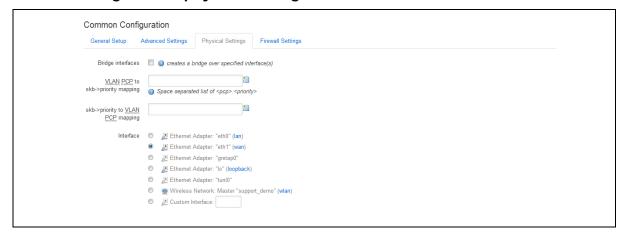


Figure 52: The common configuration physical settings page

Web Field/UCI/Package Option	Description	
Web: Bridge interfaces UCI: network. <if name="">.type Opt: type</if>	Sets the interface to bridge over a specified interface(s). The physical interfaces can be selected from the list and are defined in network. <if name="">.ifname.  Blank  Bridge Configures a bridge over multiple interfaces.</if>	
Web: Enable STP UCI: network. <if name="">.stp Opt: stp</if>	Enable Spanning Tree Protocol. This option is only available when the Bridge Interfaces option is selected.  O Disabled.  1 Enabled.	
Web: VLAN PCP to skb>priority mapping UCI: network. <if name="">.vlan_qos_map_ingress Opt: list vlan_qos_map_ingress Web: skb priority to &gt;VLAN PCP mapping UCI: network.<if name="">.vlan_qos_map_egress Opt: list vlan_qos_map_egress Web: Interface UCI: network.<if name="">.ifname</if></if></if>	VLAN priority code point to socket buffer mapping. Multiple priority mappings are entered with a space between them when using UCI.  Example: network. <if name="">. vlan_qos_map_ingress =1:2 2:1  Socket buffer to VLAN priority code point mapping. Multiple priority mappings are entered with a space between them when using UCI.  Example: network.<if name="">. vlan_qos_map_egress =1:2 2:1  Physical interface to assign the logical interface to. If mapping multiple interfaces for bridging the interface names are separated</if></if>	
Opt: ifname	by a space when using UCI and package options.  Example: option ifname 'eth2 eth3' or network. <if name="">.ifname=eth2 eth 3</if>	
Web: Auto Negotiation UCI: network. <if name="">.autoneg Opt: autoneg</if>	Specifies if sspeed and duplex mode should be autonegotiated.  O Disabled.  1 Enabled.	
Web: Full Duplex UCI: network. <if name="">.fullduplex Opt: fullduplex</if>	Ability to change duplex mode.  O Disabled.  1 Enabled.	

Web: Ethernet Speed	Sets Ethernet speed. Available options are:
UCI: network. <if name="">.speed</if>	Eth0: 10,100,1000
Opt: speed	Eth1: 10,100

Table 24: Information table for physical settings page

### 11.3.2.4 Common configuration: firewall settings

Use this section to select the firewall zone you want to assign to this interface.

Select unspecified to remove the interface from the associated zone or fill out the create field to define a new zone and attach the interface to it.



Figure 53: GRE firewall settings

#### 11.3.3 Interface overview: IP-aliases

IP aliasing is associating more than one IP address to a network interface. You can assign multiple aliases.

## 11.3.3.1 IP-alias packages used

Package	Sections
Network	alias

### 11.3.3.2 Configuring IP-alias using the web

To use IP-Aliases, enter a name for the alias and click **Add**. This name will be assigned to the alias section for this IP-alias. In this example the name ethalias1 is used.



Figure 54: The IP-Aliases section

Web Field/UCI/Package Option	Description
UCI: network. <alias name="">=alias</alias>	Assigns the alias name.
Opt: config alias 'aliasname'	
UCI: network. <alias name="">.interface</alias>	This maps the IP-Alias to the interface.
Opt: interface	
UCI: network. <alias name="">.proto</alias>	This maps the interface protocol to the alias.
Opt: proto	

Table 25: Information table for IP-Aliases name assignment

After you click **Add**, the IP Aliases configuration options page appears. The IP-Aliases page is divided into two sub sections: General Setup and Advanced Settings.

### 11.3.3.3 IP-aliases: general setup



Figure 55: The IP-aliases general setup section

Web Field/UCI/Package Option	Description
Web: IPv4-Address	Defines the IP address for the IP alias.
UCI: network. <alias name="">.ipaddr</alias>	
Opt: ipaddr	
Web: IPv4-Netmask	Defines the netmask for the IP alias.
UCI: network. <alias name="">.netmask</alias>	
Opt: netmask	
Web: IPv4-Gateway	Defines the gateway for the IP alias.
UCI: network. <alias name="">.gateway</alias>	
Opt: gateway	

Table 26: Information table for IP-Alias general setup page

### 11.3.3.4 IP-aliases: advanced settings

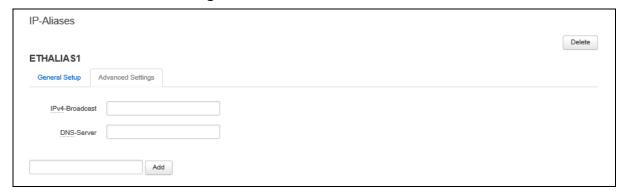


Figure 56: The IP-Aliases advanced settings section

Web Field/UCI/Package Option	Description
Web: IPv4-Broadcast	Defines the IP broadcast address for the IP alias.
UCI: network. <alias name="">.bcast</alias>	
Opt: bcast	
Web: DNS-Server	Defines the DNS server for the IP alias.
UCI: network. <alias name="">.dns</alias>	
Opt: dns	

Table 27: Information table for IP-Alias advanced settings page

### 11.3.4 Interface overview: DHCP server

### 11.3.4.1 DHCP server: packages used

Package	Sections
dhcp	dhcp

To assign a DHCP Server to the interface, uncheck the **Ignore Interface** box.

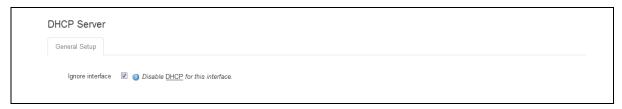


Figure 57: The DHCP Server settings section

The DHCP Server configuration options will appear. The DHCP Server section is divided into two sub sections: General Setup and Advanced Settings.

### 11.3.4.2 DHCP server: general setup

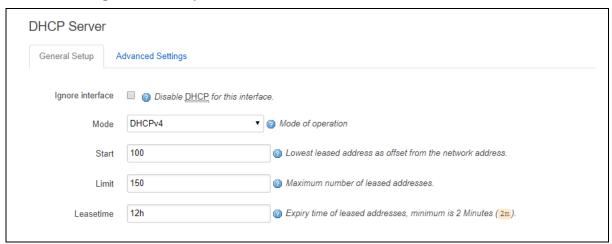


Figure 58: The DHCP server general setup section

Web Field/UCI/Package Option	Description		
Web: Ignore interface UCI: dhcp.@dhcp[x].ignore	Defines whether the DHCP pool should be enabled for this interface. If not specified for the DHCP pool then default is disable i.e. dhcp pool enabled.		
Opt: ignore	0 0	Disabled.	
	1 E	nabled.	
Web: Mode UCI: dhcp.@dhcp[x].mode Opt: mode	Defines whether the DHCP pool should be enabled for this interface. If not specified for the DHCP pool then default is disabled i.e. dhcp pool enabled.		
Opt. Mode	Web	Description	UCI
	DHCPv4	DHCP for IPv4	ipv4
	DHCPv6	DHCP for IPv6	ipv6_dhcp
	IPv6 Router Advertisements	IPv6 RA	ipv6_ra
	DHCPv6 Prefix Delegation	DHCPv6 prefix delegation	ipv6_pd

Web: Start	Defines the offset from the network address for the start of the		
UCI: dhcp.@dhcp[x].start	DHCP pool.		
Opt: start	Example: for network address 192.168.100.10/24, start=100, DHCP allocation pool will start at 192.168.100.100.		
	For subnets greater than /24, it may be greater than 255 to span subnets. Alternatively, specify in IP address notation using the wildcard '0' where the octet is required to inherit bits from the interface IP addess.		
	Example: to define a DHCP scope starting from 10.1.20.0 on an interface with 10.1.0.0/16 address, set start to 0.0.20.1		
	100		
	Range		
Web: Limit	Defines the size of the address pool.		
UCI: dhcp.@dhcp[x].limit Opt: limit	Example: for network address 192.168.100.10/24, start=100, limit=150, DHCP allocation pool will be .100 to .249		
Opt. mint	150		
	Range 0 – 255		
Web: leasetime UCI: dhcp.@dhcp[x].leasetime	Defines the lease time of addresses handed out to clients, for example 12h or 30m.		
Opt: leasetime	12h 12 hours		
Opt. leasetime	Range		
Web: n/a UCI: dhcp.@dhcp[x].interface	Defines the interface that is served by this DHCP pool. This must be one of the configured interfaces.		
Opt: interface	When configured through the web UI this will be automatically populated with the interface name.		
	lan		
	Range		

Table 28: Information table for DHCP server general setup page

### 11.3.4.3 DHCP Server: advanced settings

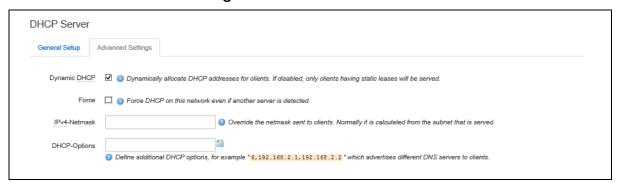


Figure 59: The DHCP server advanced settings section

Web Field/UCI/Package Option	Description	Description	
Web: Dynamic DHCP	Defines whe	Defines whether to dynamically allocate DHCP leases.	
UCI: dhcp.@dhcp[x].dynamicdhcp	1	1 Dynamically allocate leases.	
Opt: dynamicdhcp	0	Use /etc/ethers file for serving DHCP leases.	
Web: Force UCI: dhcp.@dhcp[x].force		Forces DHCP serving on the specified interface even if another DHCP server is detected on the same network segment.	
Opt: force	0	Disabled.	
		Enabled.	

Use network from interface subnet.

Web: IPv4-Netmask Defines a netmask sent to clients that overrides the netmask as calculated from the interface subnet. UCI: dhcp.@dhcp[x].netmask Use netmask from interface subnet Opt: netmask Range Web: DHCP-Options Defines additional options to be added for this dhcp pool. For example with 'list dhcp\_option 26,1470' or 'list dhcp\_option mtu, UCI: dhcp.@dhcp[x].dhcp\_option 1470' you can assign a specific MTU per DHCP pool. Your client Opt: list dhcp\_option must accept the MTU option for this to work. Options that contain multiple vales should be separated by a comma. Example: list dhcp\_option 6,192.168.2.1,192.168.2.2 No options defined. Syntax Option\_number, option\_value Web: n/a Assigns a network-id to all clients that obtain an IP address from

Table 29: Information table for DHCP advanced settings page

For more advanced configuration on the DHCP server, read 'DHCP server and DNS configuration section.

this pool.

Range

## 11.4 Configuring an Ethernet interface using command line

The configuration files are stored at **/etc/config/network**, **/etc/config/firewall** and **/etc/config/dhcp** 

### 11.4.1 Interface configuration using UCI

UCI: dhcp.@dhcp[x].networkid

Opt: networked

```
root@VA_router:~# uci show network
network.newinterface=interface
network.newinterface.proto=static
network.newinterface.ifname=eth0
network.newinterface.monitored=0
network.newinterface.ipaddr=2.2.2.2
network.newinterface.netmask=255.255.255.0
network.newinterface.gateway=2.2.2.10
network.newinterface.broadcast=2.2.2.255
network.newinterface.vlan_qos_map_ingress=1:2 2:1
network.ethalias1=alias
network.ethalias1.proto=static
network.ethalias1.interface=newinterface
network.ethalias1.ipaddr=10.10.10.1
network.ethalias1.netmask=255.255.255.0
network.ethalias1.gateway=10.10.10.10
```

```
network.ethalias1.bcast=10.10.10.255
network.ethalias1.dns=8.8.8.8
root@VA_router:~# uci show firewall
firewall.@zone[0]=zone
firewall.@zone[0].name=lan
firewall.@zone[0].input=ACCEPT
firewall.@zone[0].output=ACCEPT
firewall.@zone[0].forward=ACCEPT
firewall.@zone[0].network=lan newinterface
root@VA_router:~# uci show dhcp
dhcp.@dhcp[0]=dhcp
dhcp.@dhcp[0].interface=newinterfacedhcp@dhcp[0].mode=ipv4
dhcp.@dhcp[0].start=100
dhcp.@dhcp[0].leasetime=12h
dhcp.@dhcp[0].limit=150
To change any of the above values use uci set command.
```

## 11.4.2 Interface common configuration using package options

```
root@VA_router:~# uci export network

package network

......

config interface 'newinterface'

    option proto 'static'

    option ifname 'eth0'

    option monitored '0'

    option ipaddr '2.2.2.2'

    option netmask '255.255.255.0'

    option gateway '2.2.2.10'

    option broadcast '2.2.2.255'

    list vlan_qos_map_ingress '1:2'

    list vlan_qos_map_ingress '2:1'

config alias 'ethalias1'
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3

```
option proto 'static'
        option interface 'newinterface'
        option ipaddr '10.10.10.1'
        option netmask '255.255.255.0'
        option gateway '10.10.10.10'
        option bcast '10.10.10.255'
        option dns '8.8.8.8'
root@VA_router:~# uci export firewall
package firewall
config zone
      option name 'lan'
      option input 'ACCEPT'
      option output 'ACCEPT'
      option network 'lan newinterface'
root@VA_router:~# uci export dhcp
package dhcp
config dhcp
        option interface 'newinterface'
        option mode 'ipv4'
        option start '100'
        option leasetime '12h'
        option limit '150'
```

To change any of the above values use uci set command.

## 11.4.3 Configuring ATM bridges

The ATM bridges section is not used when configuring an Ethernet interface on a GW1000 router.

# 11.5 Interface diagnostics

### 11.5.1 Interfaces status

To show the current running interfaces, enter:

```
root@VA_router:~# ifconfig
3g-CDMA Link encap:Point-to-Point Protocol
```

```
inet addr:10.33.152.100 P-t-P:178.72.0.237 Mask:255.255.255.255
          UP POINTOPOINT RUNNING NOARP MULTICAST MTU:1400 Metric:1
          RX packets:6 errors:0 dropped:0 overruns:0 frame:0
          TX packets:23 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:3
          RX bytes:428 (428.0 B) TX bytes:2986 (2.9 KiB)
eth0
          Link encap: Ethernet HWaddr 00:E0:C8:12:12:15
          inet addr:192.168.100.1 Bcast:192.168.100.255
Mask: 255.255.255.0
          inet6 addr: fe80::2e0:c8ff:fe12:1215/64 Scope:Link
          UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
          RX packets:6645 errors:0 dropped:0 overruns:0 frame:0
          TX packets:523 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:569453 (556.1 KiB) TX bytes:77306 (75.4 KiB)
10
         Link encap:Local Loopback
          inet addr:127.0.0.1 Mask:255.0.0.0
          inet6 addr: ::1/128 Scope:Host
          UP LOOPBACK RUNNING MTU:16436 Metric:1
          RX packets:385585 errors:0 dropped:0 overruns:0 frame:0
          TX packets:385585 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:0
          RX bytes:43205140 (41.2 MiB) TX bytes:43205140 (41.2 MiB)
```

#### To display a specific interface, enter:

```
root@VA_router:~# ifconfig eth0
eth0    Link encap:Ethernet    HWaddr 00:E0:C8:12:12:15
        inet addr:192.168.100.1    Bcast:192.168.100.255
Mask:255.255.255.0
    inet6 addr: fe80::2e0:c8ff:fe12:1215/64    Scope:Link
        UP BROADCAST RUNNING MULTICAST    MTU:1500    Metric:1
        RX packets:7710 errors:0 dropped:0 overruns:0 frame:0
        TX packets:535 errors:0 dropped:0 overruns:0 carrier:0
        collisions:0 txqueuelen:1000
        RX bytes:647933 (632.7 KiB)    TX bytes:80978 (79.0 KiB)
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3 3 3

#### 11.5.2 Route status

To show the current routing status, enter:

```
root@VA_router:~# route -n
Kernel IP routing table

Destination Gateway Genmask Flags Metric Ref Use Iface

192.168.100.0 * 255.255.255.0 U 0 0 0 eth0
```

**Note**: a route will only be displayed in the routing table when the interface is up.

## 11.5.3 Switch duplex and speed

To show the Ethernet switch duplex and speed for a port, use the ethtool command with the required Ethernet port as a parameter. To view eth0, enter:

```
root@VA_router:~# ethtool eth0
Settings for eth0:
        Supported ports: [ TP MII ]
        Supported link modes: 10baseT/Half 10baseT/Full
                                100baseT/Half 100baseT/Full
                                1000baseT/Full
        Supported pause frame use: No
        Supports auto-negotiation: Yes
        Advertised link modes: 10baseT/Half 10baseT/Full
                                100baseT/Half 100baseT/Full
                                1000baseT/Full
        Advertised pause frame use: No
        Advertised auto-negotiation: Yes
        Link partner advertised link modes: 10baseT/Half 10baseT/Full
                                             100baseT/Half 100baseT/Full
        Link partner advertised pause frame use: No
        Link partner advertised auto-negotiation: Yes
        Speed: 100Mb/s
        Duplex: Full
        Port: MII
        PHYAD: 0
        Transceiver: external
        Auto-negotiation: on
        Current message level: 0x000000ff (255)
```

drv probe link timer ifdown ifup rx\_err tx\_err

12 Configuring VLAN

# 12.1 Maximum number of VLANs supported

Virtual Access' routers support up to 4095 VLANs.

# 12.2 Configuration package used

Package	Sections
Network	

# 12.3 Configuring VLAN using the web interface

### 12.3.1 Create a VLAN interface

To configure VLAN using the web interface, in the top menu, select **Network -** >Interfaces.

Click **Add** new interface. The Create Interface page appears.



Figure 60: The create interface page

Web Field/UCI/Package Option	Description	Description		
Web: Name of the new interface UCI: network.vlan1=interface Opt: interface	Type the name	Type the name of the new interface. For example, VLAN1.		
Web: Protocol of the new interface	Protocol type. S	Protocol type. Select <b>Static</b> .		
UCI: network.vlan_test.proto	Option	Description		
Opt: proto	Static	Static configuration with fixed address and netmask.		
	DHCP Client	Address and netmask are assigned by DHCP.		
	Unmanaged	Unspecified		
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.		
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.		
	GRE	Generic Routing Encapsulation protocol		
	IOT			
	L2TP	Layer 2 Tunnelling Protocol		
	PPP	Point to Point Protocol		
	PPPoE	PPP over Ethernet		
	PPPoATM	PPP over ATM		
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.		
Web: Create a bridge over multiple interfaces	Create a bridge	Create a bridge over multiple interfaces.		
UCI: network.vlan1.type				
Opt: type				
Web: Cover the following interface	Check the Custo	Check the <b>Custom Interface</b> radio button.		
UCI: network.vlan1.ifname Opt: ifname		Enter a name, for example eth0.100. This will assign VLAN 100 to the eth0 interface.		

Table 30: Information table for the create interface page

Click **Submit**. The Interfaces page for VLAN1 appears.

3 3

### 12.3.2 General setup: VLAN

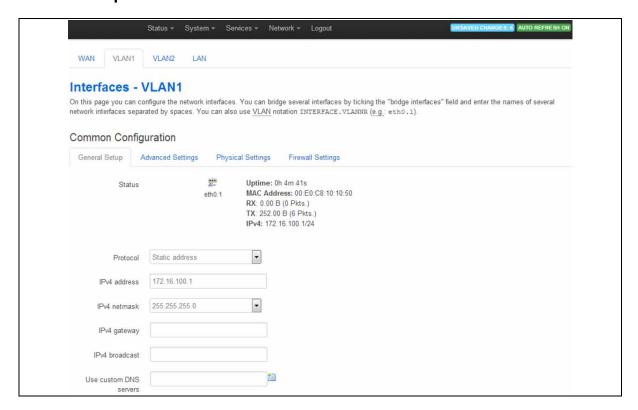


Figure 61: The VLAN 1 interface page

Web Field/UCI/Package Option	Description		
Web: Protocol	Protocol type.		
UCI: network.VLAN1.proto	Option	Description	
Opt: proto	Static	Static configuration with fixed address and netmask.	
	DHCP Client	Address and netmask are assigned by DHCP.	
	Unmanaged	Unspecified	
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.	
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.	
	GRE	Generic Routing Encapsulation protocol	
	IOT		
	L2TP	Layer 2 Tunnelling Protocol	
	PPP	Point to Point Protocol	
	PPPoE	PPP over Ethernet	
	PPPoATM	PPP over ATM	
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.	
Web: IPv4 address UCI: network.VLAN1.ipaddr	The IPv4 address of the interface. This is optional if an IPv6 address is provided.		
Opt: ipaddr			
Web: IPv4 netmask UCI: network.VLAN1.netmask	Subnet mask to be applied to the IP address of this interface.		
Opt: netmask			

G G

Web: IPv4 gateway UCI: network.VLAN1.gateway Opt: gateway	IPv4 default gateway to assign to this interface (optional).
Web: Use custom DNS servers	List of DNS server IP addresses (optional).
UCI: network.VLAN1.dns	
Opt: dns	

Table 31: Information table for VLAN general settings

#### 12.3.3 Firewall settings: VLAN

Use this section to select the firewall zone you want to assign to the VLAN interface.

Select **unspecified** to remove the interface from the associated zone or fill out the create field to define a new zone and attach the interface to it.



Figure 62: Firewall settings page

When you have added all the VLAN interfaces you require, click Save & Apply.

# 12.4 Viewing VLAN interface settings

To view the new VLAN interface settings, in the top menu, select **Network -> Interfaces**. The Interfaces Overview page appears.

The example below shows two VLAN interfaces configured.

VLAN1 VLAN2 LAN Interfaces Interface Overview Actions Uptime: 0h 1m 29s VLAN1 MAC Address: 00:E0:C8:10:10:50 RX: 0.00 B (0 Pkts.) TX: 378.00 B (9 Pkts.) Stop Edit Delete IPv4: 172.16.100.1/24 Uptime: 0h 1m 5s VLAN2 Connect Stop Edit Delete MAC Address: 00 E0 C8 10:10:50 RX: 0.00 B (0 Pkts.) TX: 126.00 B (3 Pkts.) IPv4: 192.168.200.1/24 Uptime: 0h 1m 43s MAC Address: 00:E0:C8:10:10:50 Stop Edit Delete RX: 3.81 MB (38450 Pkts.) TX: 1.51 MB (2437 Pkts.) IPv4: 10.1.10.248/16 LOOPBACK Uptime: 0h 1m 49s MAC Address: 00:00:00:00:00:00 Stop Edit Delete RX: 396.64 KB (3456 Pkts.) TX: 396.64 KB (3456 Pkts.) IPv4: 127.0.0.1/8

Figure 63: The interface overview page showing two VLAN interfaces

## 12.5 Configuring VLAN using the UCI interface

You can configure VLANs through CLI. The VLAN configuration file is stored on: **/etc/config/network** 

Modify these settings by running uci set command.

When specifying the ifname ensure that it is written in dotted mode, that is, eth1.100 where eth1 is the physical interface assigned to VLAN tag 100.

**Note**: VLAN1 is, by default the native VLAN and will not be tagged.

# 13 Configuring ignition sense

In automotive applications, the ignition sense input can detect when the vehicle's ignition has been enabled. This allows the router to remain powered on after the vehicle has stopped. The time delay between ignition off and power down is configurable.

Routers for ignition sense applications are supplied with a power lead with 3 connectors for 12V permanent, 12V switched (ignition sense) and ground.

# 13.1 Configuration packages used

Package	Sections
vapowermond	main

## 13.2 Configuring vapowermond using the web interface

You can configure the Vapowermond package using the web interface. In the top menu, click **Services ->Power Monitor**. The basic settings page appears.

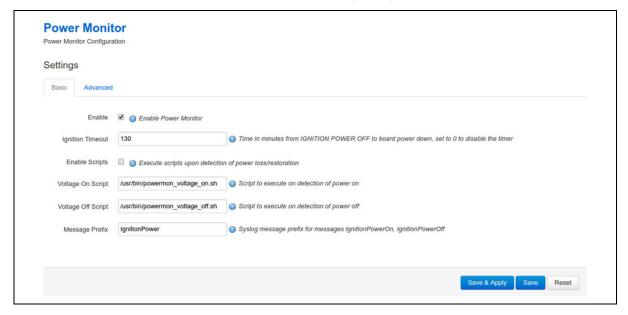


Figure 64: Power monitor basic settings page

# 13.2.1 Power monitor basic settings

Web field/UCI/Package Option	Description	
Web field: Enable	Enables vapowermond package on a router.	
UCI: vapowermond.main.enabled	0	
Opt: enabled	Range	0-1
Web field: Ignition Timeout  UCI: vapowermond.main.timeout		rom ignition power off to router power disable the timer.
Opt: timeout	30	
	Range	0-infinite
Web field: Enable Scripts	Execute scripts upon detection of power loss/restoration.	
UCI:	0	Disabled
vapowermond.main.voltage_sense_scripts_enable	Range	0-1
Opt:voltage_sense_scripts_enable		
Web field: Voltage On Script	Script to execute on detection of power on.	
UCI: vapowermond.main.voltage_on_script	/usr/bin/powermon_voltage_on.sh	
Opt: voltage_on_script		
Web field: Voltage Off Script	Script to execute on detection of power off.	
UCI: vapowermond.main.voltage_off_script	/usr/bin/powermon_voltage_off.sh	
Opt: voltage_off_script		
Web field: Message Prefix	Syslog message prefix for messages IgnitionPowerOn,	
UCI: vapowermond.main.voltage_msg	IgnitionPowerOff.	
Opt: voltage_msg		

Table 32: Information table for power monitor basic settings

# 13.2.2 Power monitor advanced settings

Click the **Advance** tab to access advanced settings.



Figure 65: Power monitor advanced settings page

Web field/UCI/Package Option	Description	
Web field: Syslog Severity	Specifies the	lowest severity to be logged by Power Monitor.
UCI: vapowermond.main.log_severity	0	Emergency
Opt: log_severity	1	Alert
	2	Critical
	3	Error
	4	Warning
	5	Notice
	6	Informational
	7	Debug

Table 33: Information table for power monitor advanced settings

# 13.3 Configuring vapowermond using the command line

#### 13.3.1 UCI

```
root@VA_router:~# uci show vapowermond
vapowermond.main=vapowermond
vapowermond.main.enabled=1
vapowermond.main.timeout=30
vapowermond.main.voltage_sense_scripts_enable=0
vapowermond.main.voltage_on_script=/usr/bin/powermon_voltage_on.sh
vapowermond.main.voltage_off_script=/usr/bin/powermon_voltage_off.sh
vapowermond.main.voltage_msg=powermon
vapowermond.main.log_severity=5
```

### 13.3.2 Package options

```
root@VA_router:~# uci export vapowermond
package vapowermond

config vapowermond 'main'
   option enabled '1'
   option timeout '30'
   option voltage_sense_scripts_enable '0'
   option voltage_on_script '/usr/bin/powermon_voltage_on.sh'
   option voltage_off_script '/usr/bin/powermon_voltage_off.sh'
   option voltage_msg 'powermon'
   option log_severity '5'
```

0.00

3 3 3

# 13.4 Ignition sense diagnositcs

### 13.4.1 Monitoring Vapowermond status using the command line interface

To view status information about the current ignition sense state, enter:

```
root@VA_router:~# cat /sys/class/gpio/gpio29/value
```

1 for ignition **on** 

0 for ignition off

14 Configuring a WiFi connection

This section explains how to configure WiFi on a Virtual Access router using the web interface or via UCI.

WiFi can act as an Access Point (AP) to another device in the network or it can act as a client to an existing AP.

You can configure WiFi in two different ways:

- on a new interface, or
- on an existing interface

#### Configuration packages used 14.1

Package	Sections	
network	wlan_ap	
	wlan_client	
wireless	wifi-device	
	wifi-iface	

#### Configuring a WiFi interface using the web interface 14.2

To create a new WiFi interface via the web interface, in the top menu, click Network -> Wifi. The Wireless overview page appears.



Figure 66: The wireless overview page

Click Add to create a new WiFi interface. The Wireless Network configuration page appears. The Wireless Network configuration page consists of two sections:

Section	Description
Device Configuration	Configuration of physical wireless radio settings such as channel and transmit power settings, HT mode, country code, distance optimization, fragmentation threshold and RTS/CTS threshold. The settings are shared among all defined wireless networks.
Interface Configuration	Configuration of the network interface - interface name, mode, network settings, security and filtering

### 14.2.1 Wireless network: device configuration

The Device Configuration section covers physical settings of the radio hardware such as channel, transmit power or antenna selection, which is shared among all defined wireless

© Virtual Access 2018 **GW1000 Series User Manual** Issue: 2.3

ů ů

networks (if the radio hardware is multi-SSID capable). There are two sections within the Device Configuration section.

Section	Description
General Setup	Channel and transmit power settings.
Advanced Settings	HT mode, country code, distance optimization, fragmentation threshold and RTS/CTS threshold.

#### 14.2.1.1 Device configuration: general setup

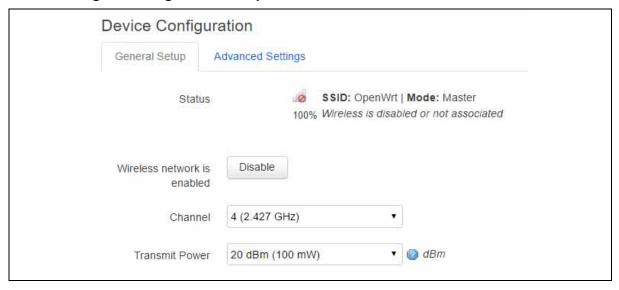


Figure 67: The device configuration general setup section

Web Field/UCI/Package Option	Description		
Web: Wireless network	Enable or disables	Enable or disables a wireless	
UCI: wireless.radio0.disabled	1	Disables Wifi interface.	
Opt: disanabled	0	0 Enables Wifi interface.	
Web: Channel	Select the channe	Select the channel you require.	
UCI: wireless.radio0.channel	Range 1-11		
Opt: channel	11 (2.462GHz)		
Web: Transmit power	Select the transmit power range range you require.		
UCI: wireless.radio0.txpower	Range	0dBm(1mW)-17dBm(50mW)	
Opt: txpower	17dBM(50mW)		

Table 34: Information table for the device configuration section

### 14.2.1.2 Device configuration: advanced settings

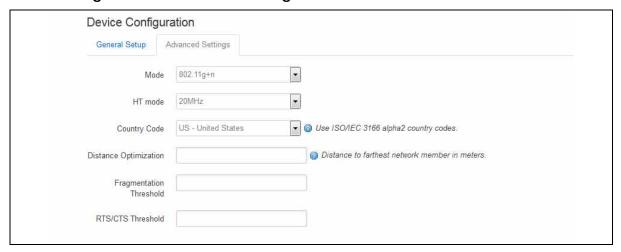


Figure 68: The device configuration advanced settings section

Web Field/UCI/Package Option	Description	Description		
Web: Mode	Mode options.			
UCI: wireless. radio0.hwmode	Option	Description		
Opt: hwmode	Auto	Wireless protocl negotiate with supplicat device.		
	802.11b	Select the wireless protocol to use.		
	802.11g	Select the wireless protocol to use.		
	802.11a	Select the wireless protocol to use.		
	802.11g+n	Select the wireless protocol to use.		
	802.11a+n	Select the wireless protocol to use.		
Web: HT mode	HT mode options			
UCI: wireless.radio0.htmode	20MHz	Specifies the channel width in 802.11		
Opt: country	40MHz 2nd channel below	Specifies the channel width in 802.11		
	40MHz 2nd channel above	Specifies the channel width in 802.11		
Web: Country Code UCI: wireless.radio0.country Opt: country	Sets the country	Sets the country code. Use ISO/1EC 3166 alpha2 country codes.		
Web: Distance Optimization UCI: wireless radio 0. distance	Defines the distar	nce between the AP and the furthest client in		
Opt: distance	15	15 meters		
	Range			
Web: Fragmentation Threshold	Defines the fragn	Defines the fragmentation threshold.		
UCI: wireless.radio0.frag	None	Routers defults applied		
Opt: frag	Range			
Web: RTS/CTS Threshold	Defines the RTS/	CTS threshold.		
UCI: wireless.radio0.rts	None	Router defaults applied		
Opt: rts	Range			

Table 35: Information table for device configuration advanced settings

### 14.2.2 Wireless network: interface configuration

The interface configuration section is used to configure the network and security settings. It has three sub sections.

Section	Description
General Setup	Identification, network and mode settings.
Wireless Security	Encryption, cipher and key security settings
MAC Filter	MAC address filter settings.

#### 14.2.2.1 Interface configuration: general setup

Use this section to configure the interface name, mode and network settings. Differing web options may be presented depending on the mode selected.

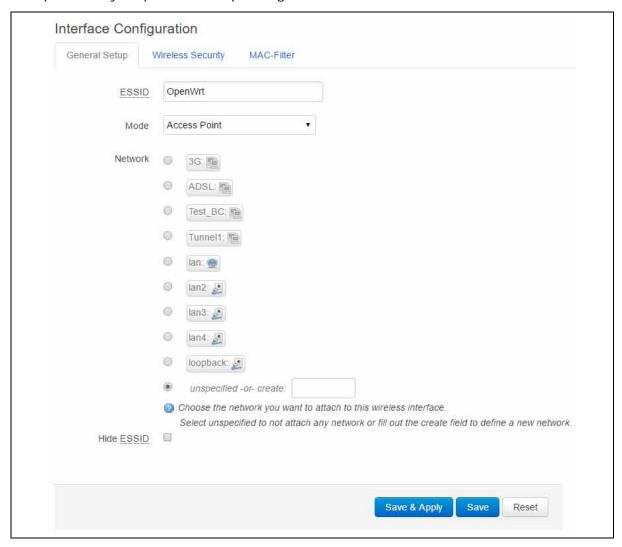


Figure 69: The interface configuration general setup section

Web Field/UCI/Package Option	Description		
Web: ESSID UCI: wireless. @wifi-iface[0]ssid Opt: ssid	Extended Service Set Identification. Type the name of the wireless local area network.		
Web: Mode	Mode type. For AP mode	e, select Access Point.	
UCI: wireless.@wifi-iface[0].mode	Web value	UCI	
Opt: mode	Access Point	ар	
	Client	sta	
	Ad-Hoc	adhoc	
	802.11s	mesh	
	Pseudo Ad-Hoc (ah demo)	ahdemo	
	Monitor	monitor	
	Access Point (WDS)	ap-wds	
	Client (WDS)	sta-wds	
Web: Mode UCI: wireless.@wifi-iface[0].bssid Opt: bssid	Defines the BSSID value. Only displayed if using client, ad-hoc or client (wds) modes.		
Web: Network UCI:wireless.@wifi-iface[0].network		The network the wireless interface is attached to. If using an existing interface select the appropriate network.	
Opt: network	Select <b>unspecified</b> to not attach to any network or fill out the <b>create</b> field to define a new network.		
Web: Hide ESSID UCI: wireless.@wifi-iface[0].hidden		Hides the SSID when enabled. Only displayed if using access point or access point (wds) modes.	
Opt: hidden	1 Enab		
	0 Disab	oled.	

Table 36: Information table for the interface configuration general setup section

### 14.2.2.2 Interface configuration: wireless security

Use this section to configure encryption, ciper and create a security key. Differing options will be defined depending on the encryption selected.

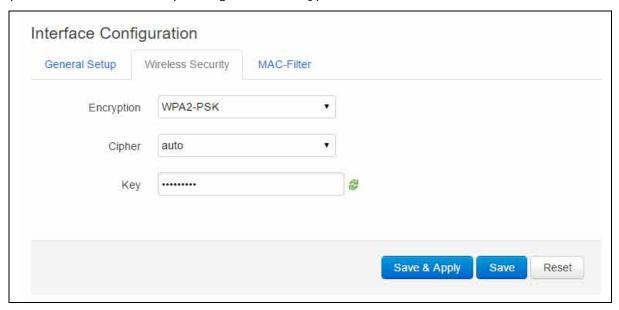


Figure 70: The wireless security section

Page 120 of 463

Web Field/UCI/Package Option	Description		
Web: Encryption	Method of encryption.		
UCI: wireless.@wifi-iface[0].encryption	Web value UCI value		
Opt: encryption	No encryption	none	
	WEP Open System	wep-open	
	WEP Shared Key	wep-shared	
	WPA-PSK	psk	
	WPA2-PSK	psk2	
	WPA-PSK/WPA2-PSK Mixed		
	Mode	psk-mixed	
	WPA-EAP	wpa	
	WPA2-WAP	wpa2	
Web: Cipher	Cipher type. Only displayed if		
UCI: wireless.@wifi-iface[0].cipher=	selected.	With elicityphon modes are	
Opt: cipher	Web value	UCI	
Opt. cipilei	Auto	auto	
	Force CCMP (AES)	ccmp	
	Force TKIP	tkip	
	Force TKIP and CCMP	tkip+ccmp	
Web: Key	Specifies the wireless key auth		
-	Specifies the wireless key autr	leritication prirase.	
UCI: wireless.@wifi-iface[0].key			
Opt: key	Consider the Good original and Lorent	and a set and a set and a set as	
Web: Key #1	Specifies the first wireless key	authentication phrase.	
UCI: wireless.@wifi-iface[0].key1			
Opt: key1	Consider the constant wind and		
Web: Key #2	Specifies the second wireless key authentication phrase.		
UCI: wireless.@wifi-iface[0].key2			
Opt: key2	Consider the Heimbert of the Lorentz		
Web: Key #3	Specifies the third wireless key authentication phrase.		
UCI: wireless.@wifi-iface[0].key3			
Opt: key3			
Web: Key #4	Specifies the fourth wireless key authentication phrase.		
UCI:wireless.@wifi-iface[0].key4			
Opt: key4			
Web: Radius Authentication-Server	Defines the Radius server for E	EAP authentication.	
UCI:wireless.@wifi- iface[0].auth_serverOpt: auth server			
Web: Radius Authentication-Port	Defines the Radius server port	for FAP authentication	
UCI:wireless.@wifi-iface[0].auth_port	Defines the Radius server port	.o. La addicitication.	
Opt: auth_port			
Web: Radius Authentication-Secret	Defines the Radius server secr	et for EAP authentication	
UCI: wireless.@wifi-iface[0].auth_secret	Donnes the radius server secr	et for EAF authentication.	
Opt: auth_secret	Defines the Padius convertes	TAP accounting	
Web: Radius Accounting-Server	Defines the Radius server for EAP accounting.		
UCI: wireless.@wifi-iface[0].acct_server			
Opt: acct_server	Defines the Dedition and for East		
Web: Radius Accounting -Port	Defines the Radius port for EA	accounting.	
UCI:wireless.@wifi-iface[0].acct_port			
Opt: acc_port			
Web: Radius Accounting -Secret	Defines the Radius secret for E	AP accounting.	
UCI:wireless.@wifi-iface[0].acct_secret			
Opt: acct_secret			

Web: NAS ID
UCI:wireless.@wifi-iface[0].nasid
Opt: nasid

Defines the nas ID for the wireless interface.

Table 37: Information table for the interface configuration wireless security section

#### 14.2.2.3 Interface configuration: MAC filter

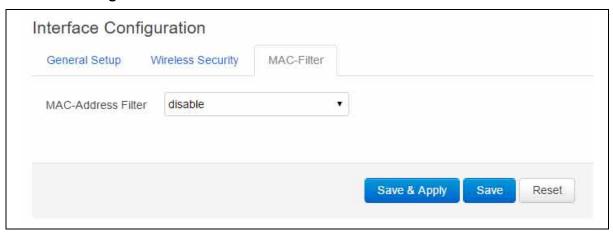


Figure 71: The MAC filter section

Web Field/UCI/Package Option	Description		
Web: MAC-Address Filter	MAC address filtering process.		
UCI: wireless.@wifi-iface[0].macfilter	Option	Description	UCI
Opt: macfilter	Disable	Disables MAC Address filter.	disable
	Allow listed only	Allows only the MAC address listed in the text field.	allow
	Allow all except listed	Allows everything but the MAC address listed in the text field.	deny
Web: MAC -List UCI: wireless.@wifi-iface[0].maclist Opt: list maclist	be separated by	Defines the MAC addresses to use. Multiple MAC address should be separated by a space if using UCI. MAC must be in the forma hh:hh:hh:hh:hh	

Table 38: Information table for interface configuration MAC filter section

# 14.3 Configuring WiFi in AP mode

AP mode is when the routers WiFi is used as an access point to one of the routers other interfaces. For example, if a router is connected to the internet via 3G, the WiFi on the router can be used as an access point for other devices to connect to the router and use its 3G internet connection.

#### 14.3.1 AP mode on a new interface

Configure the WiFi network in AP mode as described in the above section 'Configuring a WiFi interface', selecting a new interface for the Wireless Network in the Interface Configuration section.

Next, in the top menu, select **Network -> Interfaces**. The Interface Overview page appears.

ů č

In the Interface Overview page, click **Edit** on the newly created WiFi interface. Then configure the interface by following instructions in the chapter 'Configuring an Ethernet interface'. When you have completed those steps, continue with the section below.

#### 14.3.2 AP mode on an existing Ethernet interface

Configure the WiFi network in AP mode as described in the above section 'Configuring a WiFi interface'.

Next, in the top menu, select **Network -> Interfaces**. The Interface Overview page appears.

In the Interface Overview page, click **Edit** on the Ethernet interface that will be bridged into the router's WiFi AP. The Common Configuration page appears. It has four sections.

This configuration only uses the Physical Settings section.

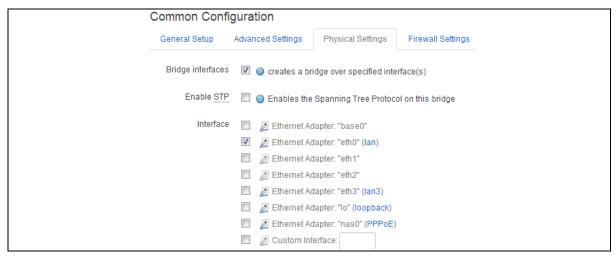


Figure 72: The physical settings section in the common configuration page

Web Field/UCI/Package Option	Description	
Web: Bridge Interfaces	Creates a bridge over the specified interface.	
UCI: network.lan.type	Empty	
Opt: Type	Bridge	Configures a bridge over multiple interfaces.
Web: Enable STP	Enables the Spa	anning Tree Protocol on this bridge.
UCI: network.lan.stp	0	Disabled.
Opt: stp	1	Enabled.
Web: Interface UCI: network.lan.ifname Opt:ifname	Select the physical interfaces to bridge. If mapping multiple interfaces for bridging the interface names are separated by a space when using UCI and package options.  Example: option ifname 'eth2 eth3' or network. <if name="">,ifname=eth2 eth 3</if>	

Table 39: Information table for the physical section on the common configuration page

# 14.4 Configuring WiFi using UCI

The configuration files are stored on:

- Network file /etc/config/network
- Wireless file /etc/config/wireless

#### 14.4.1 AP modem on a new Ethernet interface using package options

```
root@VA_router:~# uci export network
package network
config interface 'newwifilan'
        option proto 'static'
        option ipaddr '192.168.111.1'
        option netmask '255.255.255.0'
root@VA_router:~# uci export wireless
package wireless
config wifi-device 'radio0'
        option type 'mac80211'
        option channel '11'
        option phy 'phy0'
        option hwmode '11ng'
        option htmode 'HT20'
list ht_capab 'SHORT-GI-40'
        list ht_capab 'TX-STBC'
        list ht_capab 'RX-STBC1'
        list ht_capab 'DSSS_CCK-40'
        option txpower '17'
        option country 'US'
config wifi-iface
        option device 'radio0'
        option mode 'ap'
        option disabled '1'
        option ssid 'Test_AP'
        option network 'newwifilan'
        option encryption 'psk'
        option key 'secretkey'
```

14.4.2 AP modem on a new Ethernet interface using UCI

```
root@VA_router:~# uci show network
network.newlan=interface
network.newlan.proto=static
network.newlan.ipaddr=192.168.111.1
network.newlan.netmask=255.255.255.0
root@VA_router:~# uci show wireless
wireless.radio0=wifi-device
wireless.radio0.type=mac80211
wireless.radio0.channel=11
wireless.radio0.phy=phy0
wireless.radio0.hwmode=11ng
wireless.radio0.htmode=HT20
wireless.radio0.ht_capab=SHORT-GI-40 TX-STBC RX-STBC1 DSSS_CCK-40
wireless.radio0.txpower=17
wireless.radio0.country=US
wireless.@wifi-iface[0]=wifi-iface
wireless.@wifi-iface[0].device=radio0
wireless.@wifi-iface[0].mode=ap
wireless.@wifi-iface[0].disabled=1
wireless.@wifi-iface[0].ssid=Test_AP
wireless.@wifi-iface[0].network=newlan
wireless.@wifi-iface[0].encryption=psk
wireless.@wifi-iface[0].key=secretkey
```

### 14.4.3 AP mode on an existing Ethernet interface using packages options

....

```
config wifi-device 'radio0'
        option type 'mac80211'
        option channel '11'
        option phy 'phy0'
        option hwmode '11ng'
        option htmode 'HT20'
        list ht_capab 'SHORT-GI-40'
        list ht_capab 'TX-STBC'
        list ht_capab 'RX-STBC1'
        list ht_capab 'DSSS_CCK-40'
        option txpower '17'
        option country 'US'
config wifi-iface
        option device 'radio0'
        option mode 'ap'
        option disabled '1'
        option ssid 'Test_AP'
        option network 'lan'
        option encryption 'psk'
        option key 'secretkey'
```

#### 14.4.4 AP mode on an existing Ethernet interface using UCI

```
root@VA_router:~# uci show network
network.lan=interface
network.lan.ifname=eth0
network.lan.proto=static
network.lan.ipaddr=192.168.6.1
network.lan.netmask=255.255.255.0
network.lan.type=bridge
root@VA_router:~# uci show wireless
wireless.radio0=wifi-device
wireless.radio0.type=mac80211
wireless.radio0.channel=11
wireless.radio0.phy=phy0
wireless.radio0.hwmode=11ng
```

wireless.radio0.htmode=HT20
wireless.radio0.ht\_capab=SHORT-GI-40 TX-STBC RX-STBC1 DSSS\_CCK-40
wireless.radio0.txpower=17
wireless.@wifi-iface[0]=wifi-iface
wireless.@wifi-iface[0].device=radio0
wireless.@wifi-iface[0].mode=ap
wireless.@wifi-iface[0].disabled=1
wireless.@wifi-iface[0].ssid=Test\_AP
wireless.@wifi-iface[0].network=lan
wireless.@wifi-iface[0].encryption=psk
wireless.@wifi-iface[0].key=secretkey

# 14.5 Creating a WiFi in client mode using the web interface

A WiFi network in Client mode receives a wireless network from another WiFi AP.

Configure the Wifi network in Client mode as described in the above section 'Configuring a WiFi interface', selecting a new interface for the Wireless Network in the Interface Configuration section. For the examples below the new WiFi interface will be called 'newwifiClient'

#### Example:

```
wireless.@wifi-iface[0].network=newwifiClient
wireless.@wifi-iface[0].mode=sta
```

In the top menu, select **Network -> Interfaces**. The Interfaces Overview page appears. Click **Edit** in the newly created WiFi Client interface. The Common Configuration page appears.

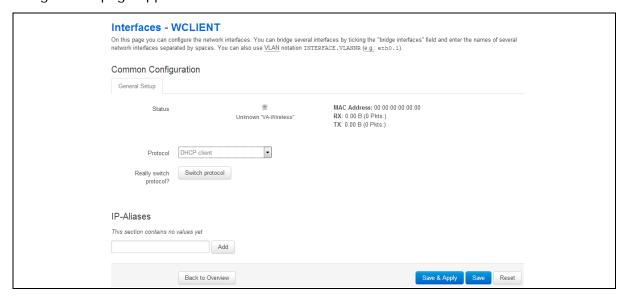


Figure 73: The client interface page

Web Field/UCI/Package Option Description Web: Protocol Specifies what protocol the interface will operate on. Select **DHCP Client** UCI: network. newwifiClient.proto Option Description Opt: proto Static Static configuration with fixed address and netmask **DHCP Client** Address and netmask are assigned by DHCP. Unmanaged Unspecified IPv6-in-IPv4 Used with tunnel brokers. (RFC4213) IPv6-over-Stateless IPv6 over IPv4 transport. IPv4 GRE Generic Routing Encapsulation protocol IOT L2TP Layer 2 Tunnelling Protocol PPP Point to Point Protocol PPPoE PPP over Ethernet

Table 40: Information table for interfaces WClient page

PPP over ATM

AT-style 3G modem.

CDMA, UMTS or GPRS connection using an

PPPoATM

LTE/UMTS/

GPRS/EV-DO

When you have clicked **Save and Apply**, the router will restart the network package. It may take up to one minute for connectivity to the router to be restored.

## 14.6 Configuring WiFi in client mode using command line

The configuration files are stored on:

- Network file /etc/config/network
- Wireless file /etc/config/wireless

#### 14.6.1 Client modem using package options

© Virtual Access 2018 GW1000 Series User Manual

Issue: 2.3

```
list ht_capab 'TX-STBC'

list ht_capab 'RX-STBC1'

list ht_capab 'DSSS_CCK-40'

option txpower '17'

option country 'US'

config wifi-iface

option device 'radio0'

option ssid 'Remote-AP'

option mode 'sta'

option network ' newwifiClient '

option key 'testtest'
```

#### 14.6.2 Client modem using UCI

```
root@VA_router:~# uci show network
network.new=interface
network.WCLIENT.proto=dhcp
```

#### 14.6.2.1 uci show wireless

```
root@VA_router:~# uci show wireless
wireless.radio0=wifi-device
wireless.radio0.type=mac80211
wireless.radio0.channel=11
wireless.radio0.phy=phy0
wireless.radio0.hwmode=11ng
wireless.radio0.htmode=HT20
wireless.radio0.ht_capab=SHORT-GI-40 TX-STBC RX-STBC1 DSSS_CCK-40
wireless.radio0.txpower=17
wireless.radio0.country=US
wireless.@wifi-iface[0]=wifi-iface
wireless.@wifi-iface[0].device=radio0
wireless.@wifi-iface[0].ssid=Remote-AP
wireless.@wifi-iface[0].mode=sta
wireless.@wifi-iface[0].network= newwifiClient
wireless.@wifi-iface[0].encryption=psk2
wireless.@wifi-iface[0].key=testtest
```

# 15 Configuring a mobile connection

# 15.1 Configuration package used

Package	Sections
network	interface

## 15.2 Configuring a mobile connection using the web interface

**Note**: if you are creating multiple mobile interfaces, simply repeat the steps in this chapter for each interface. Multiple interfaces are required for dual SIM or multiple radio module scenarios. Configuring static routes and/or Multi-WAN can be used to manage these interfaces.

In the top menu, select **Network -> Interfaces**. The Interfaces Overview page appears.

#### 15.2.1 Create a new mobile interface

To create a new mobile interface, in the Interface Overview section, click **Add new interface**. The Create Interface page appears. In the examples below, 3G has been used for the interface name.

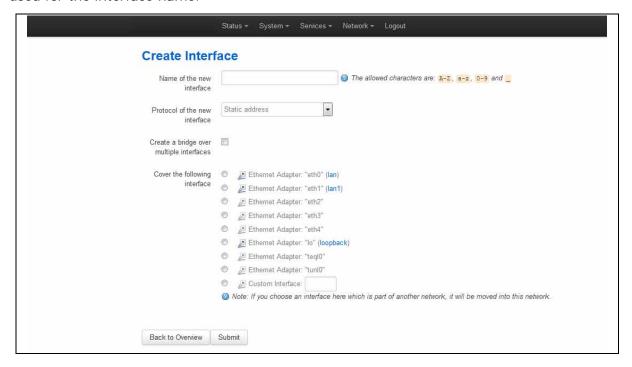


Figure 74: The create interface page

Web Field/UCI/Package Option	Description	Description	
Web: Name of the new interface	Allowed charact	Allowed characters are A-Z, a-z, 0-9 and _	
UCI: network.3G=interface			
Opt: interface			
Web: Protocol of the new interface	Protocol type. S	Select LTE/UMTS/GPRS/EV-DO.	
UCI: network.3G.proto	Option	Description	
Opt: proto	Static	Static configuration with fixed address and netmask.	
	DHCP Client	Address and netmask are assigned by DHCP.	
	Unmanaged	Unspecified	
	IPv6-in-IPv4		
	IPv6-over- IPv4		
	GRE		
	IOT		
	L2TP	Layer 2 Tunnelling Protocol.	
	PPP		
	PPPoE		
	PPPoATM		
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.	
Web: Create a bridge over multiple	Enables bridge	Enables bridge between two interfaces.	
interfaces	Not relevant wh	Not relevant when configuring a mobile interface.	
UCI: network.3G.type	0	Disabled.	
Opt: type	1	Enabled.	
Web: Cover the following interface	Select interface	s for bridge connection.	
UCI: network.3G.ifname	Not relevant wh	Not relevant when configuring a mobile interface.	
Opt: ifname			

Table 41: Information table for the create interface page

Click **Submit**. The Common Configuration page appears. There are three sections in the mobile interface common configurations:

Section	Description
General Setup	Configure the basic interface settings such as protocol, service type, APN information, user name and password.
Advanced Settings	Set up more in-depth features such as initialisation timeout, LCP echo failure thresholds and inactivity timeouts.
Firewall settings	Assign a firewall zone to the connection.

### 15.2.1.1 Mobile interface: general setup

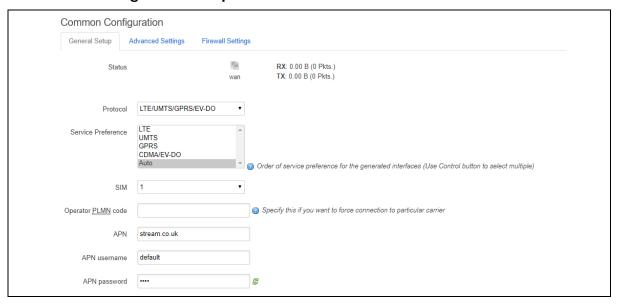


Figure 75: The common configuration page

Web Field/UCI/Package Option	Description		
Web: Status	Shows the current status of the interface.		
UCI: n/a			
Opt: n/a			
Web: Protocol	Protocol type. S	elect LTE/UMTS/GPRS/EV-DO.	
UCI: network.3G.proto	Web	Description	UCI
Opt: proto	Static	Static configuration with fixed address and netmask.	static
	DHCP Client	Address and netmask are assigned by DHCP.	dhcp
	Unmanaged	Unspecified	none
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.	
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.	
	GRE	Generic Routing Encapsulation protocol	gre
	IOT	IOT	iot
	L2TP	Layer 2 Tunnelling Protocol	I2tp
	L2TPv3	L2TPv3 Tunnelling Protocol	I2tpv3
	PPP	Point to Point Protocol	ррр
	PPtP	Point to Point Tunnelling Protocol	pptp
	PPPoE	PPP over Ethernet	pppoe
	PPPoATM	PPP over ATM	ррроа
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.	3g
	PPP(PSTN- Modem)	PPP v90 modem	pppmodem

Web: service Preference UCI: network.3G.service_order		ce separated list of services, in are gprs, umts, lte, auto.	preferred order.
Opt: service_order	If no valid_service order is defined, then the configured Service Type is used. Example:		
		service_order="gprs umts lt	e auto"
	Blank	Use configured service type	
	Range	gprs umts Ite auto	
Web: Operator PLMN code UCI: network.3G.operator	Specifies an o	operator PLMN code to force the rier. The PLMN code is identified	
Opt: operator	operator form how the operathe op formaticode.	erator option is used in conjunct nat option option opformat whator string is parsed. If configuration automatically set to '2' to incomplete the configuration of the configurat	ich is used to define ing via the web GUI dicate it is a PLMN
Web: n/a UCI: network.3G.opformat		alternative options for the oper perator format. We recommende	
Opt: opformat		is case sensitive so if using long to match the operator exactly.	or short character
		rrent operator using SSH enter mobile or using the web mobile obile Stats.	
	0	Long character format	
	1	Short character format	
	2	PLMN code	
Web: SIM	Defines which	SIM is used on this interface.	
UCI: network.3G.sim	Web	Description	UCI
Opt: sim	Auto	automatically detect	any
	1	SIM 1	1
	2	SIM 2	2
Web: APN UCI: network.3G.apn Opt: apn	APN name of	Mobile Network Operator.	
Web: APN username UCI: network.3G.username Opt: username	Username use	ed to connect to APN.	
Web: APN password UCI: network.3G.password Opt: password	Password use	d to connect to APN.	
Web: n/a UCI: network.3G.retry_interval_sec	,	o specify exact integer or range dom number to delay PPP conne	
Opt: retry_interval_sec	0	PPP will connect immediatel delay.	y, without any
	1-infinite	PPP will attempt to connect specified interval.	again after
	Range	PPP will attempt to connect range. The exact interval is randomly from specified range to the interval sec. 40,120	calculated
	1 [	retry_interval_sec 60 180	

Table 42: Information table for common configuration settings

The Modem Configuration link at the bottom of the page is used for SIM pin code and SMS configuration. For more information, read the chapter 'Configuring mobile manager'.

#### 15.2.1.2 Mobile interface: advanced settings

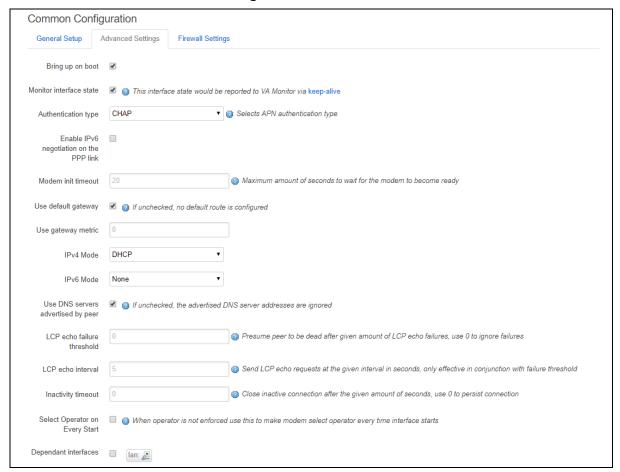


Figure 76: The advanced settings tab

Web Field/UCI/Package Option	Description		
Web: Bring up on boot UCI: network.3G.auto Opt: auto		erface to connect automatical matically when disconnected.	ly on boot up or
Web: Monitor interface state UCI: network.3G.monitored	Enabled if statuplatform.	us of interface is presented on	monitoring
Opt: monitored	0	Do not monitor interface.	
,	1	Monitor interface.	
Web: Authentication Type UCI: network.3G.auth	Enabled if status of interface is presented on monitoring platform.		
Opt: auth	Web	Description	UCI
	CHAP	CHAP authentication	2
	PAP	PAP authentication	1
Web: Enable IPv6 negotiation on the PPP	Enables IPv6 routing on the interface.		
link	0	Do not enable IPv6.	
UCI: network.3G.ipv6	1	Enable IPv6.	
Opt: ipv6		•	
Web: Modem int timeout UCI: network.3G.maxwait	Maximum amoready.	unt of seconds to wait for the	modem to become
Opt: maxwait	20	Seconds	
	Range		

Walan Has default actoriou	Enobles this int	orfoco os a default route	
Web: Use default gateway UCI: network.3G.defaultroute		nterface as a default route.	
Opt: defaultroute	0	Do not use as a default route.	
'		Use as a default route.	number metrics
Web: Use gateway metric UCI: network.3G.metric		ne metric for the default route. Lower number metrics first when route is up.	
Opt: metric	0		
Opt. Metric	Range		
Web: IPv4 Mode		4 address assignment approach	for mobile
UCI: network.3G.ipv4mode	interfaces in Eth		
Opt: ipv4mode	Note: by defau	lt, mobile interfaces are in Ether	net mode.
	Web	Description	UCI
	None	No dynamic assignment	none
	DHCP	DHCP address assignment	dhcp
Web: IPv6 Mode UCI: network.3G.ipv6mode	Defines the IPv	6 address assignment approach nernet Mode.	for mobile
Opt: ipv6mode	Note: by defau	It, mobile interfaces are in Ether	net mode.
- p	Web	Description	UCI
	None	No dynamic assignment	none
	DHCPv6	DHCP address assignment	dhcp
	RA	Router Advertisement (RA) assignment	ra
	DHCPv6 after RA	Wait for RA, then start DHCP	ra_then_dhcp
Web: Use DNS servers advertised by peer	If unchecked, the	ne advertised DNS server addres	sses are ignored.
UCI: network.3G.peerdns	0	Use static DNS.	
Opt: peerdns	1	Use advertised DNS.	
Web: Use custom DNS servers UCI: network.3G.dns Opt: dns	Specifies DNS server. Only available if <b>Use DNS servers advertised by peer</b> is unselected. When multiple DNS servers are required separate using space for UCI or option value. Example:  uci set network.3G.dns='1.1.1.1 2.2.2.2'		
Web: LCP echo failure threshold UCI: network.3G.keepalive	Presumes peer to be dead after a given amount of LCP echo failures, use <b>0</b> to ignore failures.		of LCP echo
Opt: keepalive	This command	is used in conjunction with the L s follows: uci network.3G.keepal	
	Example:		
	uci set netwo	rk.3G.keepalive='15 10'	
	5	PPP peer dead after 5 failures	
	Range		
Web: LCP echo interval UCI: network.3G.keepalive		requests at the given interval in junction with failure	seconds, only
Opt: keepalive	threshold. The	is used in conjunction with the L syntax is as follows: uci epalive= <echo failure="" threshold=""></echo>	
	•	rk.3G.keepalive='15 10'	
	1	LCP echo request every 1 seco	ond
	Range		
Web: Inactivity timeout UCI: network.3G.demand	,	ve connection after the given ar	nount of seconds.
Opt: demand	0 Do not disconnect on inactivity.		
Sp. Gornara	Range		

Web: Select Operator on Every Start Defines whether to force modem to run operator selection (with AT+COPS=0 command) on every interface restart. UCI: network.3G.operator\_reselect Operator selection will not happen on Opt: operator\_reselect interface restart 1 Force modem to run operator selection on every interface restart Web: Dependant Interfaces Lists interfaces that are dependent on this parent interface. Dependant interfaces will go down when the parent interface is UCI: network.3G.dependants down and will start or restart when the parent interface starts. Opt: dependants Separate multiple interfaces by a space when using UCI. Example: option dependants 'PPPADSL MOBILE' This replaces the following previous options in child interfaces. gre option local\_interface lt2p option src\_ipaddr iot option wan1 wan2 6in4 option ipaddr 6to4 option ipaddr Defines a static SNMP interface alias index for this interface that Web: SNMP Alias ifindex can be polled via the SNMP interface index. UCI: network.[..x..].snmp\_alias\_ifindex (snmp\_alias\_ifindex+1000). See 'Configuring SNMP' section for Opt: snmp\_alias\_ifindex more information Blank No SNMP interface alias index. 0 - 4294966295 Range Web: VRF Defines VRF for this interface. UCI: network.3G.vrf blank No VFR. Opt: vrf Range

Table 43: Information table for general set up page

#### 15.2.1.3 Mobile interface: firewall settings

Use this section to select the firewall zone you want to assign to the interface.

Select **unspecified** to remove the interface from the associated zone or fill out the create field to define a new zone and attach the interface to it.



Figure 77: Firewall settings page

Configuring a mobile connection using CLI

### 15.3.1 UCI

15.3

To establish a basic mobile connection, enter:

```
root@VA_router:~# uci show network
network.3G=interface
network.3G.proto=3g
network.3G.monitored=0
network.3G.sim=any
network.3G.auto=1
network.3G.defaultroute=1
network.3G.metric=1
network.3G.service_order=auto lte umts gprs
network.3G.apn=test.apn
network.3G.username=username
network.3G.password=password
network.3G.ipv4mode=dhcp
network.3G.ipv6mode=none
network.3G.keepalive='5 1'
network.3G.operator_reselect=0
network.3G.auth=2
```

#### 15.3.2 Package options

```
root@VA_router:~#
package network

config interface '3G'
    option proto '3g'
    option monitored '0'
    option auto '1'
    option sim 'any'
    option defaultroute '1'
    option service_order 'auto lte umts gprs'
    option username 'username'
```

```
option password 'password'

option ipv4mode 'dhcp'

option ipv6mode 'none'

option keepalive '15 10'

option operator_reselect '0'

option auth '2'
```

## 15.4 Diagnositcs

**Note**: the information presented on screen and data output using UCI depends on the actual mobile hardware being used. Therefore, the interfaces or output you see may differ from the samples shown here.

#### 15.4.1 Mobile status via the web

To view mobile connectivity information, in the top menu, select **Status -> Mobile Information**. The Mobile Information page appears. The information presented depends on the actual mobile hardware used; it might therefore differ from the samples shown here.

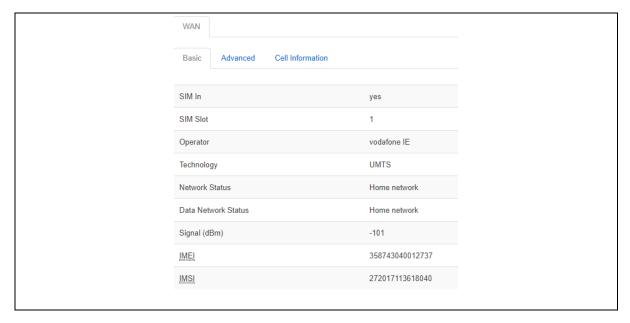


Figure 78: The mobile information page

WAN Basic Advanced Cell Information Network Status Home network Data Network Status Home network 358743040012737 IMEI 272017113618040 **IMSI** vodafone IE Operator Phone Number +353874512040 SIM In yes SIM Slot SIM1 ICCID 8935301140701270414 Signal (dBm) -101 Technology UMTS Temperature (C) 28 Hardware Revision R1C08

Figure 79: The advanced information page

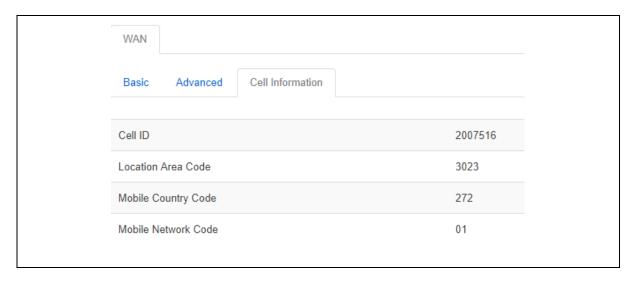


Figure 80: The cell information page

### 15.4.2 Mobile status using UCI

To display information and status of mobile interfaces such as 3G, 4G or CDMA, enter mobile\_status:

root@VA\_router:~# mobile\_status

Mobile Interface : WAN
Status : idle
SIM In : yes
SIM Slot : 1

Operator : vodafone IE

Technology : UMTS

CS Network Status : Home network

PS Network Status : Home network

Signal (dBm) : -107

IMEI : 358743040012737
IMSI : 272017113618040

For more advanced information, enter mobile\_status -a:

root@ VA\_router:~# mobile\_status -a

Mobile Interface : WAN
Status : idle

CS Network Status : Home network
PS Network Status : Home network

Operator : vodafone IE
Phone Number : +353874512040

SIM In : yes
SIM Slot : 1

SIM1 ICCID : 8935301140701270414

Signal (dBm) : -107
Technology : UMTS
Temperature (C) : 28
Hardware Revision : R1C0

# 16 Configuring mobile manager

The Mobile Manager feature allows you to configure SIM settings.

# 16.1 Configuration package used

Package	Sections
mobile	main
	callers
	roaming_template

# 16.2 Configuring mobile manager using the web interface

Select **Services -> Mobile Manager**. The Mobile Manager page appears.

There are four sections in the mobile manager page:

Section	Description
Basic	Enable SMS, configure SIM pin code and select roaming SIM.
Advanced	Configure advanced options such as collect ICCIDs and temperature polling interval.
CDMA*	CDMA configuration.
Callers	Configure callers that can use SMS.
Roaming Interface Template	Configure Preferred Roaming List options.
*Option available only	for CDMA modules.

### 16.2.1 Mobile manager: basic settings

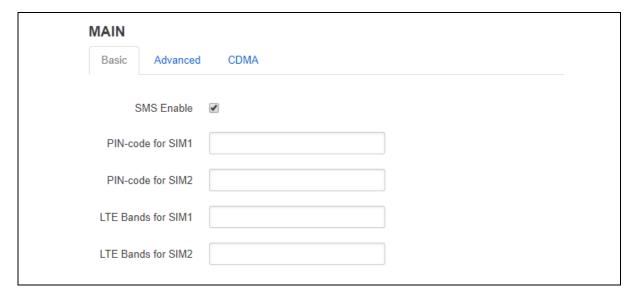


Figure 81: The mobile manager basic page

Web Field/UCI/Package Option	Description		
Web: SMS Enable	Enables or disables SMS functionality.		
UCI: mobile.main.sms	0	Disabled.	
Opt: sms	1	Enabled.	
Web: PIN code for SIM1	Depending on the SIM card specify the pin code for SIM 1.		
UCI: mobile.main.sim1pin	Blank		
Opt: sim1pin	Range	Depends on the SIM provider.	
Web: PIN code for SIM2	Depending on the SIM card specify the pin code for SIM 2.		
UCI: mobile.main.sim2pin	Blank		
Opt: sim2pin	Range	Depends on the SIM provider.	
Web: LTE bands for SIM1 UCI: mobile.main.sim1_lte_bands Opt: sim1_lte_bands	Depending on the SIM card, specify the LTE bands for SIM 1.  Comma delimiter. Example:  option sim1_lte_bands '3,20'  Limits LTE bands to 3 and 20.  Note: currently only supported by Hucom/Wetelcom,		
	SIMCom7100, Cellient MPL200 and Asiatel.		
	Blank		
	Range	LTE bands range from 1 to 70.	
Web: LTE bands for SIM2 UCI: mobile.main.sim2_Ite_bands	Depending on the SIM card, specify the LTE bands for SIM 2. Comma delimiter. Example:		
Opt:sim2_lte_bands	option siml_lte_bands `3,20' Limits LTE bands to 3 and 20.		
	<b>Note</b> : currently only supported by Hucom/Wetelcom, SIMCom7100, Cellient MPL200 and Asiatel.		
	Blank		
	Range	LTE bands range from 1 to 70.	

Table 44: Information table for mobile manager basic settings

# 16.2.2 Mobile manager: advanced settings

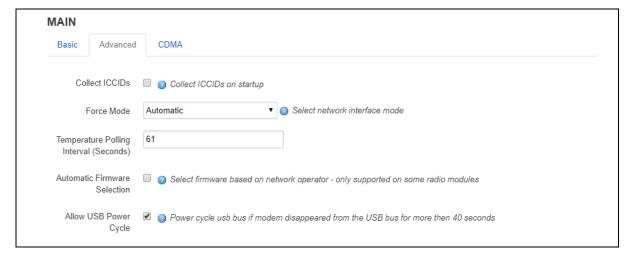


Figure 82: The mobile manager advanced page

Issue: 2.3 Page 142 of 463

Web Field/UCI/Package Option	Description		
Web: Collect ICCIDs UCI: mobile.main.init_get_iccids Opt: init_get_iccids	collection function functions to the collection function collection functions are collected as a second collection function funct	ables integrated circuit card identifier ICCIDs tionality. If enabled then both SIM 1 and SIM 2 collected otherwise it will default to SIM 1. This ed under mobile stats.	
	0	Disabled.	
	1	Enabled.	
Web: Force Mode UCI: mobile.main.force_mode	Defines whether to operate mobile modem in PPP or Ethernet mode. The mode will be dependent on the service provided by the mobile provider. In general, this is Ethernet mode (default).		
Opt: force_mode	Automatic	Ethernet mode (option not present).	
	PPP	Enable PPP mode.	
Web: Temperature Polling Interval UCI: mobile.main.temp_poll_interval_sec	Defines the time in seconds to poll the mobile module for temperature. Set to <b>0</b> to disable.		
Opt: temp_poll_interval_sec	61	61 seconds.	
	Range		
Web: Automatic Firmware Selection UCI: mobile.main.enable_firmware_autoselect Opt: enable_firmware_autoselect	Enables the selection of an operator-specific firmware in the radio module. The selection is based on the ICCID of the used SIM. At module initialisation the IMSI is checked and if necessary the correct firmware image in the module will be activated.		
	<b>Note:</b> activation of the firmware will lead to delayed startup of the network interface associated with the radio module.		
	Note: this feature is currently only supported for the Telit LE910NA V2 module. Here Verizon-specific firmware will be selected if the ICCID starts with "891480".		
	0	Disabled.	
	1	Enabled.	
Web: Allow USB Power Cycle UCI: mobile.main.allow_usb_powercycle	mandalla mandalla la madadada da		
Opt: allow_usb_powercycle	0	Disabled.	
	1	Enabled.	
Web: n/a UCI: mobile.main.disable_time	Defines whether to use time obtained from the mobile carrier to update the system clock when NTP is enabled.		
Opt: disable_time	0	Disabled.	
	1	Enabled.	

Table 45: Information table for mobile manager advanced settings

# 16.2.3 Mobile manager: CDMA settings

This configuration page is only supported for CDMA modules.

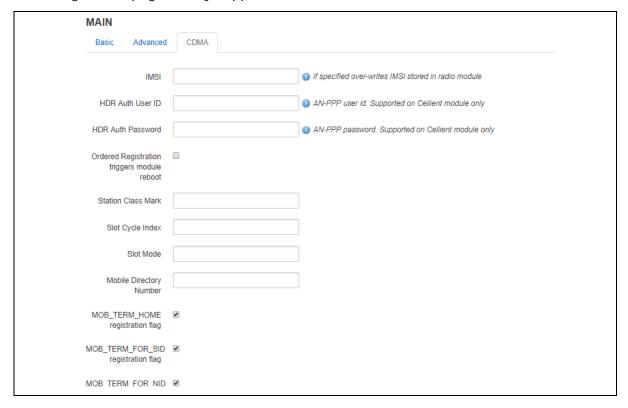


Figure 83: The mobile manager CDMA page

Web Field/UCI/Package Option	Description		
Web: IMSI UCI: mobile.main.imsi	Allows the IMSI (International Mobile Subscriber Identity) to be changed.		
Opt: imsi	Default	Programmed in module.	
'	Digits	Up to 15 digits.	
Web: HDR Auth User ID	AN-PPP user ID. Supported on Cellient CDMA modem only.		
UCI: mobile.main.hdr_userid	Blank		
Opt: hdr_userid	Range	Depends on the CDMA provider.	
Web: HDR Auth User Password UCI: mobile.main.hdr_password	AN-PPP password. Supported on Cellient CDMA modem only.		
Opt: hdr_password	Blank		
	Range	Depends on the CDMA provider.	
Web: Ordered Registration triggers module reboot	Enables or disables rebooting the module after the order registration command is received from a network.		
UCI: mobile.main.	0	Disabled.	
mobile.main.cdma_ordered_registration_reboot_ enabled	1	Enabled.	
Opt: cdma_ordered_registration_reboot_enabled			
Web: Station Class Mark	Allows the stat	ion class mark for the MS to be changed.	
UCI: mobile.main.cdma_station_class_mark	58		
Opt: cdma_station_class_mark	0-255		
Web: Slot Cycle Index	The desired slot cycle index if different from the default.		
UCI: mobile.main.cdma_slot_cycle_index	2		
Opt: cdma_slot_cycle_index	0-7		

Web: Slot Mode	Specifies the s	slot mode.	
UCI: mobile.main.cdma_slot_mode	0		
Opt: cdma_slot_mode			
Web: Mobile Directory Number	Allows the mo	bile directory number (MDN) to be changed.	
UCI:	Default	Programmed in module.	
mobile.main.cdma_mobile_directory_number	Digits	Up to 15 digits.	
Opt: cdma_mobile_directory_number			
Web: MOB_TERM_HOME registration flag	The MOB_TER	M_HOME registration flag.	i
UCI: mobile.main.	0	Disabled.	
cdma_mob_term_home_registration_flag	1	Enabled.	l
Opt: cdma_mob_term_home_registration_flag	The MOD TED	M FOR CIR assistantian flam	
Web: MOB_TERM_FOR_SID registration flag		M_FOR_SID registration flag.	
UCI: mobile.main. cdma_mob_term_for_sid_registration_flag	0	Disabled.	
Opt: cdma_mob_term_for_sid_registration_flag	1	Enabled.	
Web: MOB_TERM_FOR_NID registration flag	The MOB TER	M_FOR_NID registration flag.	
UCI: mobile.main.	0	Disabled.	l
cdma_mob_term_for_nid_registration_flag	1	Enabled.	
Opt: cdma_mob_term_for_nid_registration_flag		2.142.104.	
Web: Access Overload Control	Allows the acc	ess overload class to be changed.	
UCI: mobile.main.cdma_access_overload_control	Default	Programmed into module as part of	l
Opt: cdma_access_overload_control		IMSI.	l
	Range	0-7	
Web: Preferred Serving System		eferred Serving System(A/B).	ł
UCI:	5		I
mobile.main.cdma_preferred_serving_system Opt: cdma_preferred_serving_system			
Web: Digital Analog Mode Preference	Digital/Analog	Mode Preference.	
UCI: cdma_digital_analog_mode_preference	4	Wode Freierence.	l
Opt: cdma_digital_analog_mode_preference	_ <del>-</del>		
Web: Primary Channel A	Allows the prin	mary channel (A) to be changed.	
UCI: mobile.main.cdma_primary_channel_a	283		
Opt: cdma_primary_channel_a.	1-2016	Any band class 5 channel number.	l
Web: Primary Channel B	Allows the prir	mary channel (B) to be changed.	
UCI: mobile.main.cdma_primary_channel_b	384		l
Opt: cdma_primary_channel_b	1-2016	Any band class 5 channel number.	l
Web: Secondary Channel A	Allows the sec	condary channel (A) to be changed.	
UCI: mobile.main.cdma_secondary_channel_a	691		l
Opt: cdma_secondary_channel_a	1-2016	Any band class 5 channel number.	l
Web: Secondary Channel B	•	condary channel (B) to be changed.	
UCI: mobile.main.cdma_secondary_channel_b	777		l
Opt: cdma_secondary_channel_b	1-2016	Any band class 5 channel number.	l
Web: Preferred Forward & Reverse RC		Forward & Reverse RC value, this takes the	
UCI:		_rc,reverse_rc"	
mobile.main.cdma_preferred_forward_and_rever	0,0		
se_rc Opt:cdma preferred forward and reverse rc	Format	forward radio channel, reverse radio	l
,,	<u> </u>	channel	
Web: SID-NID pairs		cation of SID: NID pairs, this takes the form	
UCI: mobile.main.cdma_sid_nid_pairs	"SID1,NID1,S	ID2,NID2,	
Opt:cdma_sid_nid_pairs	0,0 Format	SID1 (0-65535) NID (0-65535)	
1	L L EOLHIAI	1 U-0000001.NHJ (U-00055)	

Table 46: Information table for mobile manager CDMA settings

### 16.2.4 Mobile manager: callers

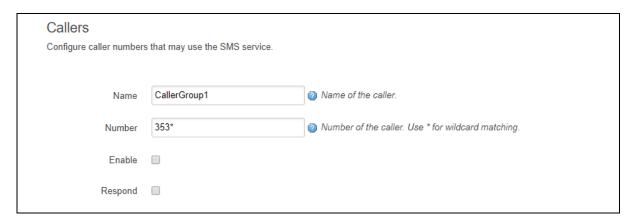


Figure 84: The mobile manager CDMA page

Web Field/UCI/Package Option	Description		
Web: Name	Name assigne	d to the caller.	
UCI: mobile.@caller[0].name	Blank		
Opt:name	Range	No limit.	
Web: Number UCI: mobile.@caller[0].number		Number of the caller allowed to SMS the router. Add in specific caller numbers, or use the * wildcard symbol.	
Opt: number	Blank		
	Range	No limit.	
	Characters	Global value (*) is accepted.	
		International value (+) is accepted.	
Web: Enable	Enables or dis	Enables or disables incoming caller ID.	
UCI: mobile.@caller[0].enabled	0	Disabled.	
Opt: enabled	1	Enabled.	
Web: Respond UCI: mobile.@caller[0].respond		If checked, the router will return an SMS. Select <b>Respond</b> if you want the router to reply.	
Opt: respond	0	Disabled.	
	1	Enabled.	

Table 47: Information table for mobile manager callers settings

### 16.2.5 Mobile manager: roaming interface template

For more information on Roaming Interface Template configuration, read the chapter, 'Automatic Operator Selection'.

# 16.3 Configuring mobile manager using command line

#### 16.3.1 Mobile manager using UCI

The configuration files for mobile manager are stored on /etc/config/mobile

The following example shows how to enable the SMS functionality to receive and respond from certain caller ID numbers.

```
root@VA_router:~# uci show mobile
uci set mobile.main=mobile
```

® Wishest Assess 2010

uci set mobile.main.sim1pin=0000 uci set mobile.main.sim2pin=0000 uci set mobile.main.sim1\_lte\_bands='3,20' uci set mobile.main.sim2\_lte\_bands='4,5' uci set mobile.main.temp\_poll\_interval\_sec=61 uci set mobile.main.enable\_firmware\_autoselect=0 uci set mobile.main.allow\_usb\_powercycle=1 uci set mobile.main.roaming\_sim=none uci set mobile.main.sms=1 uci set mobile.main.hdr\_password=5678 uci set mobile.main.hdr\_userid=1234 uci set mobile.main.init\_get\_iccids=1 uci set mobile.@caller[0]=caller uci set mobile.@caller[0].name=user1 uci set mobile.@caller[0].number=3538712345678 uci set mobile.@caller[0].enabled=1 uci set mobile.@caller[0].respond=1

### 16.3.2 Mobile manager using package options

uci set mobile.@caller[1]=caller

uci set mobile.@caller[1].name=user2

uci set mobile.@caller[1].enabled=1
uci set mobile.@caller[1].respond=1

uci set mobile.@caller[1].number=3538723456789

```
root@VA_router:~# uci export mobile

package mobile

config mobile 'main'

option sim1pin '0000'

option sim2pin '0000'

option roaming_sim 'none'

option sms '1'

option hdr_password '5678'

option hdr_userid '1234'

option init_get_iccids '1'

option sim1_lte_bands '3,20'

option sim2_lte_bands '4,5'
```

option temp\_poll\_interval\_sec '61'
 option enable\_firmware\_autoselect '0'
 option allow\_usb\_powercycle '1'

config caller
 option name 'vasupport'
 option number '353871234567'
 option enabled '1'
 option respond '1'

config caller
 option name 'vasupport1'
 option number '353872345678'
 option enabled '1'
 option respond '1'

## 16.4 Monitoring SMS

You can monitor inbound SMS messages using the router's web browser or via an SSH session.

To monitor SMS using the web browser, login and select **Status** >system log.

Scroll to the bottom of the log to view the SMS message.



Figure 85: Example of output from system log

To monitor using SSH, login and enter:

```
logread -f &
```

Or, when logging system messages to a flash file at /root/syslog.messages

```
tail -f /root/syslog.messages &
```

### 16.5 Sending SMS from the router

You can send an outgoing message via the command line using the following syntax:

```
sendsms 353879876543 'hello'
root@VirtualAccess:~# Aug 10 16:29:1 user.notice VirtualAccess
mobile[1737]: Queue sms to 353879876543 "hello"
```

# 16.6 Sending SMS to the router

The router can accept UCI show and set commands via SMS if the caller is enabled.

Note: commands are case sensitive.

An example would be to SMS the SIM card number by typing the following command on the phone and checking the SMS received from the router.

```
uci show mobile.@caller[0].number
```

Multiple commands can be sent in a single SMS using a semicolon (;) separator. For example, to set the router to factory config and then reboot.

vacmd set next config factconf; reboot

# 17 Configuring a GRE interface

General Routing Encapsulation (GRE) is a tunnelling protocol used for encapsulation of other communication protocols inside point to point links over IP.

## 17.1 Configuration packages used

Package	Sections
network	interface

# 17.2 Creating a GRE connection using the web interface

To create GRE interfaces through the web interface, in the top menu, select **Network - >Interfaces**.

There are three sections in the Interfaces page.

Section	Description
Interface Overview	Shows existing interfaces and their status. You can create new, and edit existing interfaces here.
Port Map	In this section you can map device ports to Ethernet interfaces. Ports are marked with capital letters starting with 'A'. Type in space separated port numbers in the port map fields.
ATM Bridges	ATM bridges expose encapsulated Ethernet in AAL5 connections as virtual Linux network interfaces, which can be used in conjunction with DHCP or PPP to dial into the provider network.

In the Interface Overview section, click **Add new interface**. The Create Interface page appears.

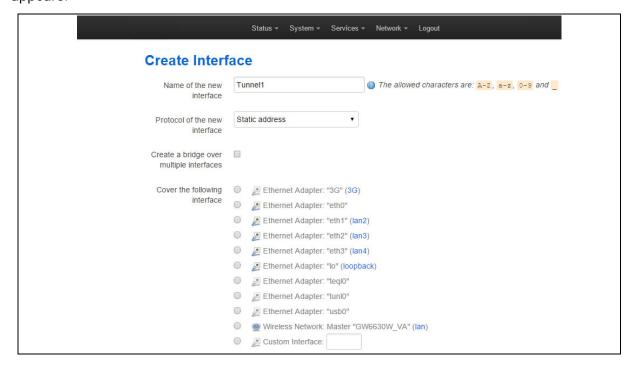


Figure 86: The create interface page

Web Field/UCI/Package Option	Description	Description			
Web: Name of the new interface UCI: network <if name=""> Opt: config interface</if>	section will be a Type the name Allowed charact	Assigns a logical name to the GRE tunnel, The network interface section will be assigned this name <if name="">.  Type the name of the new interface.  Allowed characters are A-Z, a-z, 0-9 and  Must be less than 11 characters.</if>			
Web: Protocol of the new interface		protocol the interface will operate on. Select <b>G</b>	RE.		
UCI: network. <if name="">.proto</if>	Option	Description			
Opt: proto	Static	Static configuration with fixed address and netmask.			
	DHCP Client	Address and netmask are assigned by DHCP.			
	Unmanaged	Unspecified			
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.			
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.			
	GRE	Generic Routing Encapsulation protocol			
	IOT				
	L2TP	Layer 2 Tunnelling Protocol			
	PPP	Point-to-Point protocol			
	PPPoE	PPP over Ethernet			
	PPPoATM	PPP over ATM			
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.			
Web: Create a bridge over multiple interfaces UCI: network. <if name=""> Opt: n/a</if>	Not applicable for	or GRE.			
Web: Cover the following interface UCI: network. <if name=""> Opt:n/a</if>	Not applicable for	Not applicable for GRE.			

Table 48: Information table for the create new interface page

Click **Submit**. The Common Configuration page appears. There are three sections in the Common Configurations page.

Section	Description
General Setup	Configure the basic interface settings such as protocol, IP address, mask length, local interface, remote IP address, TTL, tunnel key and MTU.
Advanced Settings	'Bring up on boot' and 'monitor interface state' settings.
Firewall settings	Assign a firewall zone to the connection.

### 17.2.1 GRE connection: common configuration - general setup

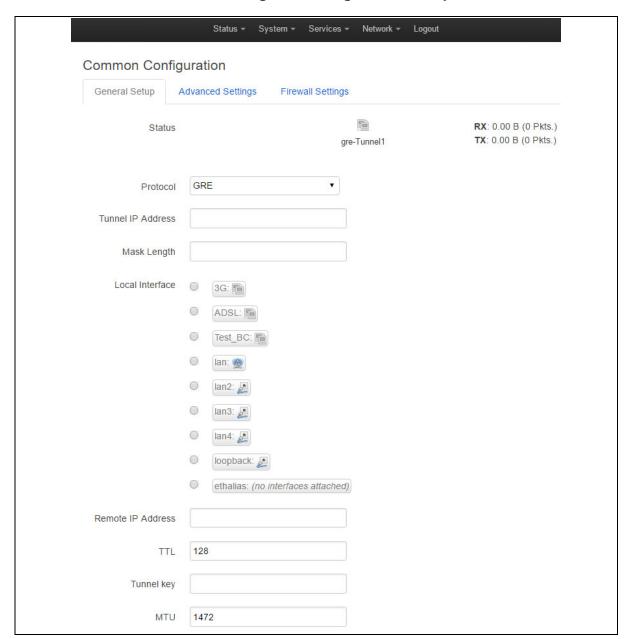


Figure 87: The GRE common configuration page

Web Field/UCI/Package Option	Description	
Web: Protocol of the new interface	Shows the protocol the interface will operate on. GRE should be	
UCI: network. <if name="">.proto</if>	currently selected.	
Opt: proto		
Web: Tunnel IP Address	Configures local IP address of the GRE interface.	
UCI: network. <if name="">.ipaddr</if>		
Opt: ipaddr		
Web: Mask Length	Subnet mask, in CIDR notation, to be applied to the tunnel.	
UCI: network. <if name="">.mask_length</if>	Typically '30' for point-to-point tunnels.	
Opt: mask_length	24	
	Range 0 - 30	

Web: Local Interface UCI: network. <if name="">.local_interface Opt: local_interface</if>	Specifies which interface is going to be linked with the GRE tunnel interface (optional).
Web: Remote IP address UCI: network. <if name="">.remote_ip Opt: remote_ip</if>	For point to point tunnels specifies Remote IP address.
Web: TTL UCI: network. <if name="">.ttl Opt: ttl Web: Tunnel key UCI: network.<if name="">.key</if></if>	Sets Time-To-Live value on the interface.  128 Range  Sets GRE tunnel ID key (optional). Usually an integer.
Opt: key  Web: MTU  UCI: network. <if name="">.mtu  Opt: mtu</if>	Configures MTU (maximum transmission unit) size of PDUs using this interface.  1472  Range

**Table 49: Information table for GRE** 

### 17.2.2 GRE connection: common configuration-advanced settings

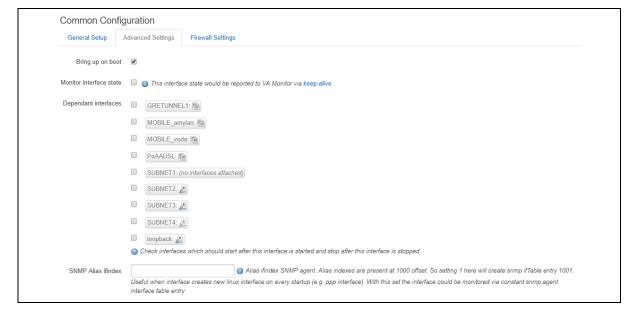


Figure 88: GRE advanced settings page

Web Field/UCI/Package Option	Description		
Web: Bring up on boot UCI: network. <if name="">.auto Opt: auto</if>	Enables the interface to connect automatically on boot up.  O Disabled.  1 Enabled.		
Web: Monitor interface state UCI: network. <if name="">.monitored Opt: monitored</if>	Enabled if status of interface is presented on Monitoring platform.  O Disabled.  1 Enabled.		
Web: Dependant Interfaces UCI: network.[x].dependants Opt: dependants	Lists interfaces that are dependent on this parent interface.  Dependant interfaces will go down when parent interface is down and will start or restart when parent interface starts.  Separate multiple interfaces by a space when using UCI.  Example: option dependants 'PPPADSL MOBILE'  This replaces the following previous options in child interfaces.  gre option local_interface  lt2p option src_ipaddr  iot option wan1 wan2  6in4 option ipaddr  6to4 option ipaddr		
Web: SNMP Alias ifindex UCI: network.[x].snmp_alias_ifindex Opt: snmp_alias_ifindex	Defines a static SNMP interface alias index for this interface, the can be polled via the SNMP interface index (snmp_alias_ifindex+1000). See 'Configuring SNMP' section for more information.    Blank		

Table 50: Information table for GRE advanced settings

## 17.2.3 GRE connection: firewall settings

Use this section to select the firewall zone you want to assign to this interface.

Select **unspecified** to remove the interface from the associated zone or fill out the create field to define a new zone and attach the interface to it.

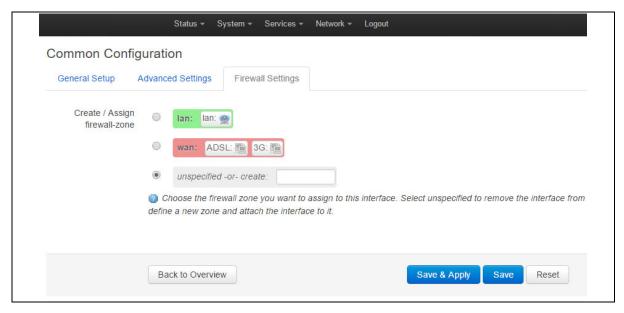


Figure 89: GRE firewall settings

Click **Save and Apply**. This will save the current settings and return you to the Interface Overview page. To configure further settings on the GRE interface select **EDIT** for the relevant GRE interface.

#### 17.2.4 GRE connection: adding a static route

After you have configured the GRE interface, you must configure a static route to route the desired traffic over the GRE tunnel. To do this, browse to **Network->Static Routes**. For more information, read the chapter 'Configuring Static Routes'.

## 17.3 GRE configuration using command line

The configuration file is stored on /etc/config/network

For the examples below tunnel1 is used as the interface logical name.

## 17.4 GRE configuration using UCI

```
root@VA_router:~# uci show network
network.tunnell=interface
network.tunnell.proto=gre
network.tunnell.monitored=0
network.tunnell.ipaddr=172.255.255.2
network.tunnell.mask_length=24
network.tunnell.local_interface=wan
network.tunnell.remote_ip=172.255.255.100
network.tunnell.ttl=128
network.tunnell.key=1234
network.tunnell.mtu=1472
network.tunnell.auto=1
```

# 17.5 GRE configuration using package options

```
root@VA_router:~# uci export network
config interface 'tunnell'
    option proto 'gre'
    option monitored '0'
    option ipaddr '172.255.255.2'
    option mask_length '24'
    option local_interface 'wan'
    option remote_ip '172.255.255.100'
    option ttl '128'
```

© Virtual Access 2018

```
option key '1234'
option mtu '1472'
option auto '1'
```

To change any of the above values use uci set command.

### 17.6 GRE diagnostics

#### 17.6.1 GRE interface status

To show the current running interfaces, enter:

```
root@VA_router:~# ifconfig
           Link encap:Ethernet HWaddr 00:00:00:01:01
base0
           inet6 addr: fe80::200:ff:fe00:101/64 Scope:Link
           UP BROADCAST RUNNING MULTICAST MTU:1504 Metric:1
           RX packets:39810 errors:0 dropped:0 overruns:0 frame:0
           TX packets:365 errors:0 dropped:0 overruns:0 carrier:0
           collisions:0 txqueuelen:1000
           RX bytes:10889090 (10.3 MiB) TX bytes:68820 (67.2 KiB)
eth4
           Link encap:Ethernet HWaddr 00:1E:10:1F:00:00
           inet addr:10.68.66.54 Bcast:10.68.66.55 Mask:255.255.255.252
            inet6 addr: fe80::21e:10ff:fe1f:0/64 Scope:Link
           UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
           RX packets:81 errors:0 dropped:0 overruns:0 frame:0
           TX packets:127 errors:0 dropped:0 overruns:0 carrier:0
           collisions:0 txqueuelen:1000
           RX bytes:8308 (8.1 KiB) TX bytes:12693 (12.3 KiB)
gre-Tunnel1 Link encap: UNSPEC HWaddr 0A-44-42-36-DB-B0-00-48-00-00-00-00-
00-00-00-00
            inet addr:13.13.13.2 Mask:255.255.255.248
            inet6 addr: fe80::5efe:a44:4236/64 Scope:Link
           UP RUNNING MULTICAST MTU:1472 Metric:1
           RX packets:7 errors:0 dropped:0 overruns:0 frame:0
           TX packets:7 errors:0 dropped:0 overruns:0 carrier:0
           collisions:0 txqueuelen:0
           RX bytes:912 (912.0 B) TX bytes:884 (884.0 B)
10
           Link encap:Local Loopback
            inet addr:127.0.0.1 Mask:255.0.0.0
            inet6 addr: ::1/128 Scope:Host
```

© Virtual Access 2018

```
UP LOOPBACK RUNNING MTU:16436 Metric:1

RX packets:1465 errors:0 dropped:0 overruns:0 frame:0

TX packets:1465 errors:0 dropped:0 overruns:0 carrier:0

collisions:0 txqueuelen:0

RX bytes:166202 (162.3 KiB) TX bytes:166202 (162.3 KiB)
```

To display a specific GRE interface, enter ifconfig gre-<if name>:

#### To show the current GRE route status, enter:

root@VA_router: Kernel IP routi						
Destination	Gateway	Genmask	Flags	Metric	Ref	Use
Iface						
0.0.0.0	10.68.66.53	0.0.0.0	UG	0	0	0 eth4
0.0.0.0	13.13.13.1	0.0.0.0	UG	1	0	0 gre-
Tunnel1						
10.68.66.52	0.0.0.0	255.255.255.252	U	0	0	0 eth4
13.13.13.0	0.0.0.0	255.255.255.248	U	0	0	0 gre-
Tunnel1						
172.19.101.3	13.13.13.1	255.255.255.255	UGH	0	0	0 gre-
Tunnel1						

Note: a GRE route will only be displayed in the routing table when the interface is up.

18 Configuring static routes

It is possible to define arbitrary IPv4 routes on specific interfaces using route sections. As for aliases, multiple sections can be attached to an interface. These types of routes are most commonly known as static routes.

You can add static routes to the routing table to forward traffic to specific subnets when dynamic routing protocols are not used or they are not configured for such subnets. They can be created based on outgoing interface or next hop IP address.

### 18.1 Configuration package used

Package	Sections
network	route

# 18.2 Configuring static routes using the web interface

In the top menu, select **Network -> Static Routes**. The Routes page appears.

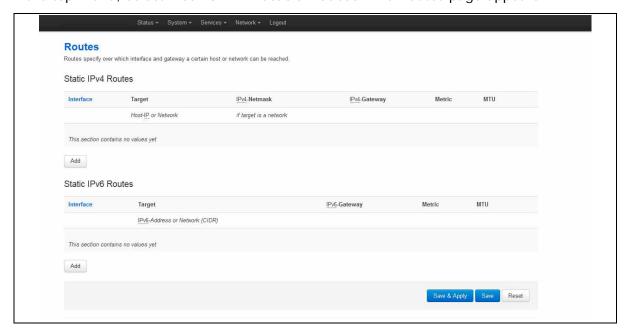


Figure 90: The routes page

In the IPv4 Routes section, click Add.

Web Field/UCI/Package Option	Description
Web: Interface UCI: network.@route[0].interface Opt: Interface	Specifies the logical interface name of the parent or master interface this route belongs to. It must refer to one of the defined interface sections.
Web: target UCI: network.@route[0].target Opt: target	Specifies the route network IP address.
Web: netmask UCI: network.@route[0].netmask Opt: netmask	Defines the route netmask. If omitted, 255.255.255.255 is assumed, which makes the target a host address.

Network gateway. If omitted, the gateway from the parent Web: Gateway

UCI: network.@route[0].gateway Opt: Gateway	interface is taken. If set to 0.0.0.0 no gateway will be specified for the route.		
Web: Metric UCI: network.@route[0].metric Opt: metric	Specifies the route metric to use.  O  Range		
Web: MTU UCI: network.@route[0].mtu Opt:mtu	Defines a specific MTU for this route. If omitted, the MTU from the parent interface will be taken.  Blank Range		

Table 51: Information table for IPv4 static routes section

#### Configuring IPv6 routes using the web interface 18.3

You can also specify IPv6 routes by defining one or more IPv6 routes. In the IPv6 routes section, click Add.

Web Field/UCI/Package Option	Description		
Web: Interface UCI: network.@route[1].interface Opt: interface	Specifies the logical interface name of the parent or master interface this route belongs to. It must refer to one of the defined interface sections.		
Web: target UCI: network.@route[1].target Opt: target	Specifies the route network IP address, or subnet in CIDR notation:  Eample: 2001:0DB8:100:F00:BA3::1/64		
Web: Gateway UCI: network.@route[1].gateway Opt: Gateway	Network gateway. If omitted, the gateway from the parent interface is taken. If set to 0.0.0.0 no gateway will be specified for the route.		
Web: Metric UCI: network.@route[1].metric Opt: metric	Specifies the route metric to use.  O  Range		
Web: MTU UCI: network.@route[1].mtu Opt:mtu	Defines a specific MTU for this route. If omitted the MTU from the parent interface will be taken.  Empty  Range		

Table 52: Information table for IPv6 routes

When you have made your changes, click Save & Apply.

#### 18.4 Configuring routes using command line

By default all routes are named 'route', it is identified by @route then the route's position in the package as a number. For example, for the first route in the package using UCI:

network.@route[0]=route network.@route[0].interface=lan

3 3

Or using package options:

```
config route

option 'interface' 'lan'
```

However, you can give a route a name if desired. For example, a route named 'myroute' will be network.myroute.

To define a named route using UCI, enter:

```
network.name_your_route=route
network.name_your_route.interface=lan
```

To define a named route using package options, enter:

```
config route 'name_your_route'

option 'interface' 'lan'
```

# 18.5 IPv4 routes using UCI

The command line example routes in the subsections below do not have a configured name.

```
root@VA_router:~# uci show network
network.@route[0]=route
network.@route[0].interface=lan
network.@route[0].target=3.3.3.10
network.@route[0].netmask=255.255.255
network.@route[0].gateway=10.1.1.2
network.@route[0].metric=3
network.@route[0].mtu=1400
```

© Virtual Access 2018

18.6 IPv4 routes using package options

```
root@VA_router:~# uci export network
package network
....
config route
    option interface 'lan'
    option target '2.2.2.2'
    option netmask '255.255.255'
    option gateway '192.168.100.1'
    option metric '1'
    option mtu '1500'
```

# 18.7 IPv6 routes using UCI

```
root@VA_router:~# uci show network
network.@route[1]=route
network.@route[1].interface=lan
network.@route[1].target=2001:0DB8:100:F00:BA3::1/64
network.@route[1].gateway=2001:0DB8:99::1
network.@route[1].metric=1
network.@route[1].mtu=1500
```

# 18.8 IPv6 routes using packages options

```
root@VA_router:~# uci export network
package network
....
config route
    option interface 'lan'
    option target '2001:0DB8:100:F00:BA3::1/64'
    option gateway '2001:0DB8:99::1'
    option metric '1'
    option mtu '1500'
```

Static routes diagnostics

# 18.9.1 Route status

18.9

To show the current routing status, enter:

**Note**: a route will only be displayed in the routing table when the interface is up.

# 19 Configuring BGP (Border Gateway Protocol)

BGP is a protocol for exchanging routing information between gateway hosts, each with its own router, in a network of autonomous systems. BGP is often the protocol used between gateway hosts on the internet. The routing table contains a list of known routers, the addresses they can reach, and a cost metric associated with the path to each router so that the best available route is chosen.

# 19.1 Configuration package used

Package	Sections
bgpd	routing
	peer
	routemap

## 19.2 Configuring BGP using the web interface

In the top menu, select **Network -> BGP**. BGP configuration page appears. The page has three sections: Global Settings, BGP Neighbours and BGP Route Map.

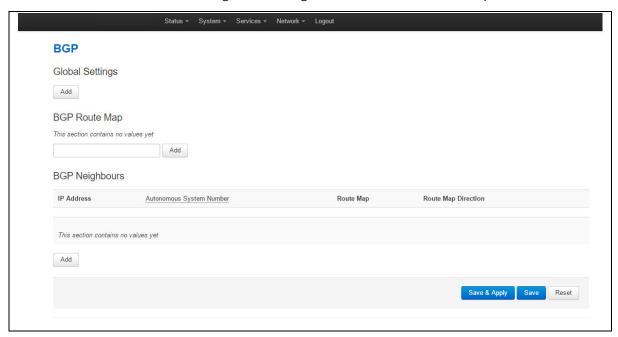


Figure 91: The BGP page

## 19.2.1 BGP global settings

To configure global BGP settings, click **Add**. The Global Settings page appears.

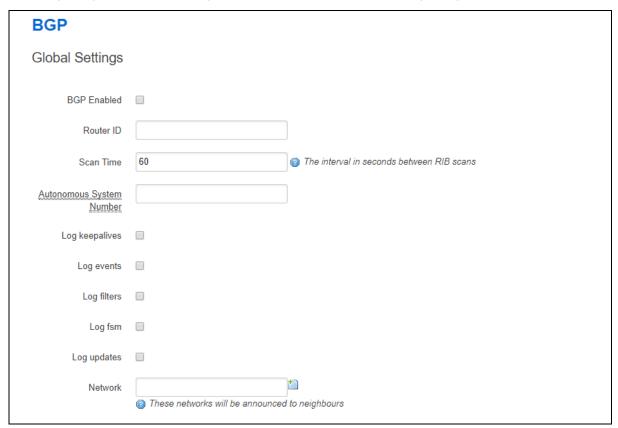


Figure 92: The BGP global settings page

Web Field/UCI/Package Option	Description		
Web: BGP Enabled	Enables or disables BGP protocol.		
UCI: bgpd.bgpd.enabled	1	Enabled.	
Opt: enabled	0	Disabled.	
Web: Router ID	Sets a Unique Roo	uter ID in 4 byte format 0.0.0.0.	
UCI: bgpd.bgpd.router_id			
Opt: router_id			
Web: Scan Time	Defines the interv	al in seconds between RIB scans.	
UCI: bgpd.bgpd.scan_time	60	60 seconds	
Opt: scan_time	Range		
Web: Autonomous System Number	Defines the ASN for the local router. Type in the ASN.		
UCI: bgpd.bgpd.asn	Blank		
Opt: asn	Range	1-4294967295	
Web: Log keepalives	Defines whether t	o enable BGP keepalives to the system log.	
UCI: bgpd.bgpd.debug_keepalive	1	Enabled.	
Opt: debug_keepalives	0	Disabled.	
Web: Log events	Defines whether t	o enable BGP event to the system log.	
UCI: bgpd.bgpd.debug_events	1	Enabled.	
Opt: debug_events	0	Disabled.	
Web: Log filters	Defines whether t	o enable BGP filter events to the system log.	
UCI: bgpd.bgpd.debug_filters	1	Enabled.	
Opt: debug_filters	0	Disabled.	

Web: Log fsm	Defines whet	her to enable BGP state changes to the system log.
UCI: bgpd.bgpd.debug_fsm	1	Enabled.
Opt: debug_fsm	0	Disabled.
Web: Log Updates	Defines whet	her to enable BGP updates to the system log.
UCI: bgpd.bgpd.debug_updates	1	Enabled.
Opt: debug_updates	0	Disabled.
Web: Network UCI: bgpd.bgpd.network Opt: list network	prefix format using UCI. Er	of networks that will be advertised to neighbours in 0.0.0.0/0. Separate multiple networks by a space asure the network prefix matches the one shown in able. For more information, read the 'Routes' section

Table 53: Information table for BGP global settings

### 19.2.2 Optionally configure a BGP route map

Route maps provide a means to both filter and/or apply actions to a route. This allows a policy to be applied to routes. Route maps are an ordered list of route map entries each with a set of criteria that must be matched before specific attributes of the route are modified.

Scroll down to the BGP Route Map section.

Type in a name for the BGP route map name and then click **Add**. The BGP Route Map configuration section appears. You can configure multiple route maps. The examples below are for a route map named ROUTEMAP.

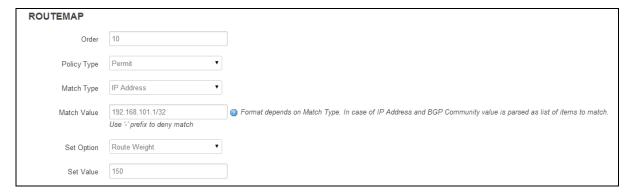


Figure 93: The routemap section

Web Field/UCI/Package Option	Description		
Web: Order	Defines the route map order number.		
UCI: bgpd.ROUTEMAP.order	Blank		
Opt: order	Range	1-65535	
Web: Policy Type	Defines the action	ns taken if the entry is matched.	
UCI: bgpd.ROUTEMAP.permit	Deny	Denies the route.	
Opt: permit	Permit	Permits the route so process the set actions for this entry.	
Web: Match Type	Defines match type. Available options are as follows:		
UCI: bgpd.ROUTEMAP.match_type	IP address	Matches IP address.	
Opt: match_type	IP Next Hop	Matches next hop IP address.	
	AS-Path	Matches AS-path.	
	Route Metric	Matches route metric.	
	BGP Community	Matches BGP community.	

Web: Match value UCI: bgpd.ROUTEMAP.match Opt: match	Defines the value of the match type. Format depends on the Match Type selected. In the case of IP address and BGP Community values, the match value is parsed as a list of items to match.  Enter '-' prefix to deny match.				
Web: Set Option UCI: bgpd.ROUTEMAP.set_type		Defines the set option to be processed on a match. Available options are shown below.			
Opt: set_type	None				
opt. oct_type	IP Next Hop	Setting option for IP next hop.			
	Local Preference	Setting option for Local Preference.			
	Route Weight	Setting option for Route Weight.			
	BGP MED	Setting option for BGP multi-exit discriminator (BGP metric).			
	AS Path to Prepend	Setting option to prepend AS to AS path.			
	BGP Community	Setting option for BGP community.			
	IPv6 Next Hop Global	Setting option for IPv6 Next Hop Global.			
	IPv6 Next Hop Local	Setting option for IPv6 Next Hop Local.			
Web: Value UCI: bgpd.ROUTEMAP.set Opt: set	Defines the set value when a match occurs. Value format depends on the set option you have selected.				

**Table 54: Information table for routemap** 

### 19.2.3 Configure BGP neighbours

To configure BGP neighbours, in the BGP neighbours section, click **Add**. The BGP Neighbours page appears. You can configure Multiple BGP neighbours.



Figure 94: The BGP neighbours section

Web Field/UCI/Package Option	Description	
Web: IP Address	Sets the IP addres	ss of the neighbour.
UCI: bgpd.@peer[0].ipaddr		
Opt: ipaddr		
Web: Autonomous System Number	Sets the ASN of the	ne remote peer.
UCI: bgpd.@peer[0].asn	Blank	
Opt: asn	Range	1-4294967295
Web: Route Map	Sets route map na	ame to use with this neighbour.
UCI: bgpd.@peer[0].route_map		
Opt: route_map		
Web: Route Map Direction	Defines what dire	ction to apply to the route map.
UCI: bgpd.@peer[0].route_map_in	1	In
Opt: route_map_in	0	Out

Web: IPv6 Defines whether the peer is connected over IPv6. UCI: bgpd.@peer[0].ipv6 1 Opt: ipv6 0 Web: Local Peer Defines an announced route's next hop as being equivalent to the address of the router if it is learned via eBGP UCI: bgpd.@peer[0].next\_hop\_self 1 Opt: next\_hop\_self Web: Holdtime Defines how long to wait for incoming BGP messages before assuming peer is dead. UCI: bgpd.@peer[0].holdtime\_sec The timer is reset every time a BGP message is received. Opt: holdtime\_sec 0 Range Web: Keepalive Interval Defines the interval in seconds for between two successive BGP keep alive messages. UCI: bgpd.@peer[0].keepalive\_sec 0 Opt: keepalive\_sec Range Web: Connect Timer Defines how long to wait after interface is up before retrying the connection on it. UCI: bgpd.@peer[0].connect\_sec 0 Opt: connect\_sec Range

Table 55: Information table for BGP neighbours

# 19.3 Configuring BGP using command line

### 19.3.1 Configuring BGP using UCI

You can also configure BGP using UCI. The configuration file is stored on /etc/config/bgpd

```
root@VA router:~# uci show bgpd
bgpd.bgpd=routing
bgpd.bgpd.enabled=yes
bgpd.bgpd.router_id=3.3.3.3
bgpd.bgpd.asn=1
bgpd.bgpd.network=11.11.11.0/29 192.168.103.1/32
bgpd.@peer[0]=peer
bgpd.@peer[0].route_map_in=yes
bgpd.@peer[0].ipaddr=11.11.11.1
bgpd.@peer[0].asn=1
bgpd.@peer[0].route_map=ROUTEMAP
bgpd.@peer[0].ipv6=0
bgpd.@peer[0].next_hop_self=0
bgpd.@peer[0].holdtime_sec=0
bgpd.@peer[0].keepalive_sec=0
bgpd.@peer[0].connect_sec=0
```

```
bgpd.ROUTEMAP=routemap
bgpd.ROUTEMAP.order=10
bgpd.ROUTEMAP.permit=yes
bgpd.ROUTEMAP.match_type=ip address
bgpd.ROUTEMAP.match=192.168.101.1/32
bgpd.ROUTEMAP.set_type=ip next-hop
bgpd.ROUTEMAP.set='192.168.101.2/32'
```

To change any of the above values use UCI set command.

### 19.3.2 Configuring BGP using packages options

```
root@VA_router:~# uci export bgpd
package bgpd
config routing 'bgpd'
        option enabled 'yes'
        option router_id '3.3.3.3'
        option asn '1'
        list network '11.11.11.0/29'
        list network '192.168.103.1/32'
config peer
        option route_map_in 'yes'
        option ipaddr '11.11.11.1'
        option asn '1'
        option route_map 'ROUTEMAP'
        option ipv6 '0'
        option next_hop_self '0'
        option holdtime_sec '0'
        option keepalive_sec '0'
        option connect_sec '0'
config routemap 'ROUTEMAP'
        option order '10'
        option permit 'yes'
```

© Virtual Access 2018

option match\_type 'ip address'

option match '192.168.101.1/32'

option set\_type 'ip next-hop'

option set '192.168.101.2/32'

### 19.4 View routes statistics

To view routes statistics, in the top menu click **Status -> Routes**. The routing table appears.

Routes The following rules are o	urrently active on this system.			
ARP				
IPv4-Address		MAC-Address		Interface
192.168.210.100		50:b7:c3:0c:1e:4b		br-lan
10.1.1.124		d4:se:52:od:61:21		eth1
10.1.10.83		00:13:60:51:39:56		eth1
Active IPv4-Route	S			
Network	Target		IPv4-Gateway	Metric
wan	0.0.0.0/0		10.64.64.64	0
wan	0.0.0.0/0		10.64.64.64	1
LAN2	10.1.0.0/18		0.0.0.0	0
wan	10.64.64.64		0.0.0.0	0
LAN2	192.168.101.1		10.1.10.83	0
lan	192.168.210.0/24		0.0.0.0	0
wan	217.67.129.143		10.64.64.64	0
Active <u>IPv6</u> -Route	S			
Network	Target		IPv8-Gateway	Metric
loopback	0:0:0:0:0:0:0:0/0		0:0:0:0:0:0:0:0/0	FFFFFFF
loopback	0:0:0:0:0:0:0:0/0		0:0:0:0:0:0:0:0/0	FFFFFFF
loopback	0:0:0:0:0:0:0:1		0:0:0:0:0:0:0/0	00000000
LAN2	FF02:0:0:0:0:0:0:FB		0:0:0:0:0:0:0:0/0	00000000
(base0)	FF00:0:0:0:0:0:0:0/8		0:0:0:0:0:0:0/0	00000100
lan	FF00:0:0:0:0:0:0:0/8		0:0:0:0:0:0:0:0/0	00000100
TO TO				
LAN2	FF00:0:0:0:0:0:0:0/8		0:0:0:0:0:0:0:0/0	00000100

Figure 95: The routing table

### To view routes via the command line, enter:

root@support:~#	route -n					
Kernel IP routi	ng table					
Destination	Gateway	Genmask	Flags	Metric	Ref	Use Iface
10.1.0.0	0.0.0.0	255.255.0.0	U	0	0	0 br-lan2

# 20 Configuring OSPF (Open Shortest Path First)

#### 20.1 Introduction

OSPF is a standardised Link State routing protocol, designed to scale efficiently to support larger networks. Link State protocols track the status and connection type of each link and produce a calculated metric based on these and other factors, including some set by the network administrator. Link State protocols will take a path which has more hops, but that uses a faster medium over a path using a slower medium with fewer hops.

OSPF adheres to the following Link State characteristics:

- OSPF employs a hierarchical network design using areas.
- OSPF will form neighbour relationships with adjacent routers in the same area.
- Instead of advertising the distance to connected networks, OSPF advertises the status of directly connected links using Link-State Advertisements (LSAs).
- OSPF sends updates (LSAs) when there is a change to one of its links, and will
  only send the change in the update. LSAs are additionally refreshed every 30
  minutes.
- OSPF traffic is multicast either to address 224.0.0.5 (all OSPF routers) or 224.0.0.6 (all designated routers).
- OSPF uses the Dijkstra Shortest Path First algorithm to determine the shortest path.
- OSPF is a classless protocol, and therefore supports variable Length Subnet Masks (VLSMs).

Other characteristics of OSPF include:

- OSPF supports only IP routing.
- OSPF routes have an administrative distance is 110.
- OSPF uses cost as its metric, which is computed based on the bandwidth of the link. OSPF has no hop-count limit.

The OSPF process builds and maintains three separate tables:

- A neighbour table containing a list of all neighbouring routers
- A topology table containing a list of all possible routes to all known networks within an area
- A routing table containing the best route for each known network

#### 20.1.1 OSPF areas

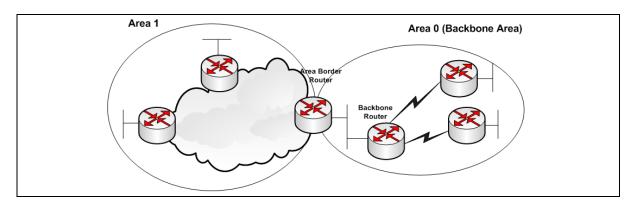


Figure 96: OSPF areas

OSPF has a number of features that allow it to scale well for larger networks. One of these features is OSPF areas. OSPF areas break up the topology so that routers in one area know less topology information about the subnets in the other area, and they do not know anything about the routers in the other area at all. With smaller topology databases, routers consume less memory and take less processing time to run SPF.

The Area Border Router (ABR) is the border between two areas. The ABR does not advertise full topology information about the part of the network in area 0 to routers in area 1. Instead the ABR advertises summary information about the subnets in area 0. Area 1 will just see a number of subnets reachable via area 0.

### 20.1.2 OSPF neighbours

OSPF forms neighbour relationships, called adjacencies, with other routers in the same Area by exchanging 'Hello' packets to multicast address 224.0.0.5. Only after an adjacency is formed can routers share routing information.

Each OSPF router is identified by a unique router ID. The router ID can be determined in one of three ways:

- The router ID can be manually specified.
- If not manually specified, the highest IP address configured on any Loopback interface on the router will become the router ID.
- If no loopback interface exists, the highest IP address configured on any physical interface will become the router ID.

By default, Hello packets are sent out OSPF-enabled interfaces every 10 seconds for broadcast and point-to-point interfaces, and 30 seconds for non-broadcast and point-to-multipoint interfaces.

OSPF also has a 'Dead Interval', which indicates how long a router will wait without hearing any hellos before announcing a neighbour as 'down'. The default setting for the Dead Interval is 40 seconds for broadcast and point-to-point interfaces, and 120 seconds for non-broadcast and point-to-multipoint interfaces. By default, the Dead Interval timer is four times the Hello interval.

OSPF routers will only become neighbours if the following parameters within a Hello packet are identical on each router:

- Area ID
- Area Type (stub, NSSA, etc.)
- Prefix
- Subnet Mask
- Hello Interval
- Dead Interval
- Network Type (broadcast, point-to-point, etc.)
- Authentication

The Hello packets also serve as keepalives to allow routers to quickly discover if a neighbour is down. Hello packets also contain a neighbour field that lists the router IDs of all neighbours the router is connected to. A neighbour table is constructed from the OSPF Hello packets, which includes the following information:

- The router ID of each neighbouring router
- The current 'state' of each neighbouring router
- The interface directly connecting to each neighbour
- The IP address of the remote interface of each neighbour

#### 20.1.3 OSPF designated routers

In multi-access networks such as Ethernet, there is the possibility of many neighbour relationships on the same physical segment. This leads to a considerable amount of unnecessary Link State Advertisement (LSA) traffic. If a link of a router were to fail, it would flood this information to all neighbours. Each neighbour, in turn, would then flood that same information to all other neighbours. This is a waste of bandwidth and processor load.

To prevent this, OSPF will elect a Designated Router (DR) for each multi-access networks, accessed via multicast address 224.0.0.6. For redundancy purposes, a Backup Designated Router (BDR) is also elected.

OSPF routers will form adjacencies with the DR and BDR. If a change occurs to a link, the update is forwarded only to the DR, which then forwards it to all other routers. This greatly reduces the flooding of LSAs. DR and BDR elections are determined by a router's OSPF priority, which is configured on a per-interface basis (a router can have interfaces in multiple multi-access networks). The router with the highest priority becomes the DR; second highest becomes the BDR. If there is a tie in priority, whichever router has the highest Router ID will become the DR.

# 20.1.4 OSPF neighbour states

Neighbour adjacencies will progress through several states, described in the table below.

State	Description	Description		
Down	Indicates that no	Indicates that no Hellos have been heard from the neighbouring router.		
Init		packet has been heard from the neighbour, but two-way has not yet been initialised.		
2-Way	Recall that Hello considered 2-Wa	Indicates that bidirectional communication has been established. Recall that Hello packets contain a neighbour field. Thus, communication is considered 2-Way once a router sees its own Router ID in its neighbour's Hello Packet. Designated and Backup Designated Routers are elected at this stage.		
ExStart	Master/slave rela	Indicates that the routers are preparing to share link state information.  Master/slave relationships are formed between routers to determine who will begin the exchange.		
Exchange	contain a descrip	Indicates that the routers are exchanging Database Descriptors (DBDs). DBDs contain a description of the router's Topology Database. A router will examine a neighbour's DBD to determine if it has information to share.		
Loading	containing inforn	Indicates the routers are finally exchanging Link State Advertisements, containing information about all links connected to each router. Essentially, routers are sharing their topology tables with each other.		
Full	routers in the are	Indicates that the routers are fully synchronised. The topology table of all routers in the area should now be identical. Depending on the role of the neighbour, the state may appear as:		
	Full/DR	Indicating that the neighbour is a Designated Router (DR).		
	Full/BDR	Indicating that the neighbour is a Backup Designated Router (BDR).		
		Indicating that the neighbour is neither the DR nor BDR. On a multi-access network, OSPF routers will only form Full adjacencies with DRs and BDRs. Non-DRs and non-BDRs will still form adjacencies, but will remain in a 2-Way State. This is normal OSPF behaviour.		

Table 56: Neighbour adjacency states

# 20.1.5 OSPF network types

OSPF's functionality is different across several different network topology types.

State	Description	
Broadcast Multi-Access	Indicates a topology where broadcast occurs. Examples include Ethernet, Token Ring and ATM. OSPF characteristics are:	
	OSPF will elect DRs and BDRs	
	Traffic to DRs and BDRs is multicast to 224.0.0.6. Traffic from DRs and BDRs to other routers is multicast to 224.0.0.5	
	Neighbours do not need to be manually specified.	
Point-to-Point	Indicates a topology where two routers are directly connected. An example would be a point-to-point T1. OSPF characteristics are:	
	OSPF will not elect DRs and BDRs	
	All OSPF traffic is multicast to 224.0.0.5	
	Neighbours do not need to be manually specified	
Point-to-Multipoint	Indicates a topology where one interface can connect to multiple destinations. Each connection between a source and destination is treated as a point-to-point link. For example, point to Point-to-Multipoint Frame Relay. OSPF characteristics are:	
	OSPF will not elect DRs and BDRs.	
	All OSPF traffic is multicast to 224.0.0.5.	
	Neighbours do not need to be manually specified.	

Non-broadcast Multi- access Network (NBMA)	Indicates a topology where one interface can connect to multiple destinations; however, broadcasts cannot be sent across a NBMA network. For example, Frame Relay. OSPF characteristics are:
	OSPF will elect DRs and BDRs.
	OSPF neighbours must be manually defined, so all OSPF traffic is unicast instead of multicast.
	<b>Note</b> : on non-broadcast networks, neighbours must be manually specified, as multicast Hello's are not allowed

Table 57: OSPF functionality over different topology types

#### 20.1.6 The OSPF hierarchy

OSPF is a hierarchical system that separates an autonomous system into individual areas. OSPF traffic can either be:

- intra-area (within one area),
- inter-area (between separate areas), or
- external (from another AS).

OSPF routers build a topology database of all links within their area, and all routers within an area will have an identical topology database. Routing updates between these routers will only contain information about links local to their area. Limiting the topology database to include only the local area conserves bandwidth and reduces CPU loads.

Area 0 is required for OSPF to function, and is considered the backbone area. As a rule, all other areas must have a connection into area 0, though this rule can be bypassed using virtual links. Area 0 is often referred to as the transit area to connect all other areas.

OSPF routers can belong to multiple areas, and therefore contain separate topology databases or each area. These routers are known as Area Border Routers (ABRs).

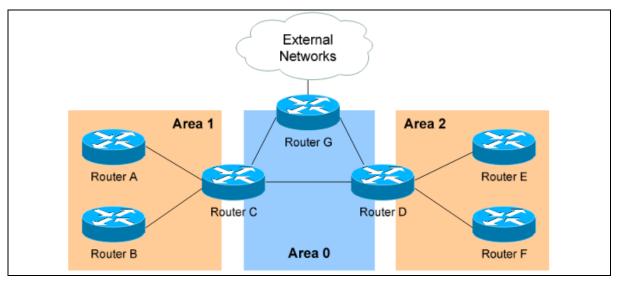


Figure 97: OSPF hierarchy

In the above example three areas exist: Area 0, Area 1, and Area 2.

Area 0 is the backbone area for this autonomous system.

\_\_\_\_\_

Both Area 1 and Area 2 must directly connect to Area 0. Routers A and B belong fully to Area 1, while Routers E and F belong fully to Area 2. These are known as Internal Routers.

Router C belongs to both Area 0 and Area 1; so it is an ABR. Because it has an interface in Area 0, it can also be considered a Backbone Router (BR). The same can be said for Router D, as it belongs to both Area 0 and Area 2.

Router G also belongs to Area 0 however it also has a connection to the internet, which is outside this autonomous system. This makes Router G an Autonomous System Border Router (ASBR).

A router can become an ASBR in one of two ways:

- By connecting to a separate Autonomous System, such as the internet
- By redistributing another routing protocol into the OSPF process.

ASBRs provide access to external networks. OSPF defines two types of external routes, as shown in the table below.

Type 2 (E2)	Includes only the external cost to the destination network. External cost is the metric being advertised from outside the OSPF domain. This is the default type assigned to external routes.
Type 1 (E1)	Includes both the external cost, and the internal cost to reach the ASBR, to determine the total metric to reach the destination network. Type 1 routes are always preferred over Type 2 routes to the same destination.

Table 58: Types of external routes

### 20.1.7 OSPF router types

The four separate OSPF router types are shown in the table below.

Route Type	Description	
Internal Router	All router interfaces belong to only one area.	
Area Border Router (ABR)	Have interfaces in at least two separate areas.	
Backbone Router	Have at least one interface in area 0.	
Autonomous System Border Router (ABR)	Have a connection to a separate autonomous system.	

# 20.2 Configuration package used

Package	Sections
ospfd	routing
	network
	interface

## 20.3 Configuring OSPF using the web interface

Select **Network -> OSPF**. The OSPF page appears.

There are three sections in the OSPF page:

Section	Description
Global Settings	Enables OSPF and configures the OSPF routing section containing global configuration parameters. The web automatically names the routing section ospfd
Topology Configuration	Configures the network sections.
Interfaces Configuration	Configures the interface sections. Defines interface configuration for OSPF and interface specific parameters

### 20.3.1 Global settings

The Global Settings section configures the ospfd routing section. The web automatically names the routing section 'ospfd'.



Figure 98: The OSPF global settings configuration page

Web Field/UCI/Package Option	Description	
Web: OSPF Enabled UCI: ospfd.ospfd.enabled	Enables OSPF advertisements on router.  0 Disabled.	
Opt: enabled	1 Enabled.	
Web: Router ID UCI: ospfd.ospfd.router_id Opt: router_id	This sets the Router ID of the OSPF process. The Router ID may be an IP address of the router, but need not be - it can be any arbitrary 32bit number. However it MUST be unique within the entire OSPF domain to the OSPF speaker. If one is not specified, then ospfd will obtain a router-ID automatically from the zebra daemon.  Empty  Range	
Web: Make Default Router UCI: ospfd.ospfd.default_info_originate Opt: default_info_originate	Defines whether to originate an AS-External (type-5) LSA describing a default route into all external-routing capable areas, of the specified metric and metric type.  O Disabled.  1 Enabled.	
Web: n/a UCI: ospfd.ospfd.vty_enabled Opt: vty_enabled	Enable vty for OSPFd (telnet to localhost: 2604)	

Table 59: Information table for OSPF global settings

Issue: 2.3 Page 177 of 463

20.3.2 Topology configuration

The Topology section configures the ospfd network section. This section specifies the OSPF enabled interface(s). The router can provide network information to the other OSPF routers via this interface.

**Note**: to advertise OSPF on an interface, the network mask prefix length for the topology configuration statement for the desired interface advertisement must be equal or smaller (IE. larger network) than the network mask prefix length for the interface.

For example, the topology configuration statement in the screenshot below does not enable OSPF on an interface with address 12.1.1.1/23, but it would on an interface with address 12.1.1.129/25.



Figure 99: The OSPF topology configuration page

Web Field/UCI/Package Option	Description		
Web: Network	Specify the IP address for OSPF enabled interface.		
UCI: ospfd.@network[0].ip_addr	Format: A.B.C.D		
Opt: ip_addr			
Web: Mask Length	Specify the mask length for OSPF enabled interface. The mask		
UCI: ospfd.@network[0].mask_length	length should be entered in CIDR notation.		
Opt: mask_length			
Web: Area	Specify the area number for OSPF enabled interface.		
UCI: ospfd.@network[0].area			
Opt: area			
Web: Stub Area	Only for non-backbone areas.		
UCI: ospfd.@network[0].stub_area	Configure the area to be a stub area. That is, an area where no		
Opt: stub_area	router originates routes external to OSPF and hence an area where all external routes are via the ABR(s).		
	ABRs for such an area do not need to pass AS-External LSAs (type-5s) or ASBR-Summary LSAs (type-4) into the area. They need only pass Network-Summary (type-3) LSAs into such an area, along with a default-route summary.		
	0 Disabled.		
	1 Enabled.		

Table 60: Information table for OSPF topology configuration

#### 20.3.3 Interfaces configuration

The Interfaces section contains settings to configure the OSPF interface. It defines interface configuration for OSPF and interface specific parameters.

OSPFv2 allows packets to be authenticated using either an insecure plain text password, included with the packet, or by a more secure MD5 based HMAC (keyed-Hashing for Message AuthentiCation). Enabling authentication prevents routes being updated by

3 3 · · ·

unauthenticated remote routers, but still can allow routes, that is, the entire OSPF routing table, to be queried remotely, potentially by anyone on the internet, via OSPFv1.

This section defines key\_chains to be used for MD5 authentication.

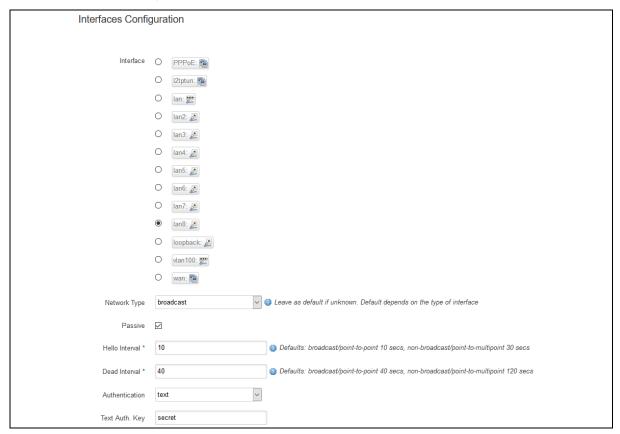


Figure 100: The OSPF interfaces configuration section

Web Field/UCI/Package Option	Description	on	
Web: Interface	Defines the interface i		ame.
UCI: ospfd.@interface[0].ospf_interface			
Opt: ospf_interface			
Web: Network Type	Defines ne	twork type f	or specified interface.
UCI: ospfd.@interface[0].network_type	Default		Autodetect: it will be broadcast. If
Opt: network_type			broadcast is not supported on that interface then use point-to-point.
	broadcast	t	
	non-broad	dcast	
	point-to-p	ooint	
	point-to-r	multipoint	
Web: Passive UCI: ospfd.@interface[0].passive	advertise t	he interface	ets on the given interface, but do as a stub link in the router-LSA (Link or this router.
Opt: passive	This allows you to advertise addresses on such connected interfaces without having to originate AS-External/Type-5 LSAs, which have global flooding scope, as would occur if connected addresses were redistributed into OSPF. This is the only way to advertise non-OSPF links into stub areas.		
	0	Disabled.	
	1	Enabled.	

Web: Hello Interval	Defines the number of seconds for the Hello Interval timer value.			
UCI: ospfd.@interface[0].hello_interval Opt: hello_interval	A Hello packet will be sent every x seconds, where x is the configured Hello Interval value on the specified interface. This value must be the same for all routers attached to a common network.			
	The default is every 10 seconds for broadcast and point-to-point interfaces, and 30 seconds for non-broadcast and point-to-multipoint interfaces.			
	10 10 seconds			
	Range			
Web: Dead Interval UCI: ospfd.@interface[0].dead_interval Opt: dead_interval	Defines the number of seconds for the Dead Interval timer valued for Wait Timer and Inactivity Timer. This value must be same for all routers attached to a common network.  The default is 40 seconds for broadcast and point-to-point interfaces, and 120 seconds for non-broadcast and point-to-			
	multipoint interfaces. By default, the Dead Interval timer is four times the Hello interval.			
	40 40 seconds			
	Range			
Web: Authentication UCI: ospfd.@interface[0].auth_mode Opt: auth_mode	OSPFv2 (only) allows packets to be authenticated via either a insecure plain text password, included with the packet, or via more secure MD5 based HMAC (keyed-Hashing for Message AuthentiCation). Enabling authentication prevents routes bein updated by unauthenticated remote routers, but still can allow routes, that is, the entire OSPF routing table to be queried remotely, potentially by anyone on the internet, via OSPFv1.			
	no Default value. No authentication.			
	md5 Set the interface with OSPF MD5 authentication.			
	text Set the interface with OSPF simple password authentication.			
Web: Text Auth. Key UCI: ospfd.@interface[0].text_auth_key Opt: text_auth_key	This command sets authentication string for text authentication. text_auth_key option can have length up to 8 characters.  Displayed only when Authentication is set to text.			
Web: Key ID	Specifies key ID. Must be unique and match at both ends.			
UCI: ospfd.@interface[0].key_id	Displayed only when Authentication is set to MD5.			
Opt: key_id				
Web: MD5 Auth. Key	Specify Keyed MD5 chain.			
UCI: ospfd.@interface[0].md5_auth_key	Displayed only when Authentication is set to MD5.			
Opt: md5_auth_key				

Table 61: Information table for OSPF interface commands

# 20.4 Configuring OSPF using the command line

OSPF is configured under the ospfd package /etc/config/ospfd.

There are three config sections: ospfd, interface and network.

You can configure multiple interface and network sections.

By default, all OSPF interface instances are named interface, instances are identified by @interface then the interface position in the package as a number. For example, for the first interface in the package using UCI:

```
ospfd.@interface[0]=interface
ospfd.@interface[0].ospf_interface=lan
```

Or using package options:

```
config interface

option ospf_interface 'lan'
```

By default, all OSPF network instances are named network, it is identified by @network then the interface position in the package as a number. For example, for the first network in the package using UCI:

```
ospfd.@network[0]=network
ospfd.@network[0].ip_addr=12.1.1.1
```

Or using package options:

```
config network option ip_addr '12.1.1.1'
```

## 20.5 OSPF using UCI

```
root@VA_router:~# uci show ospfd
ospfd.ospfd=routing
ospfd.ospfd.enabled=yes
ospfd.ospfd.default_info_originate=yes
ospfd.ospfd.router_id=1.2.3.4
ospfd.@network[0]=network
ospfd.@network[0].ip_addr=12.1.1.1
ospfd.@network[0].mask_length=24
ospfd.@network[0].area=0
ospfd.@network[0].stub_area=yes
ospfd.@interface[0]=interface
ospfd.@interface[0].ospf_interface=lan8
ospfd.@interface[0].hello interval=10
ospfd.@interface[0].dead_interval=40
ospfd.@interface[0].network_type=broadcast
ospfd.@interface[0].passive=yes
ospfd.@interface[0].auth_mode=text
ospfd.@interface[0].text_auth_key=secret
ospfd.@interface[1]=interface
ospfd.@interface[1].ospf_interface=lan7
ospfd.@interface[1].network_type=point-to-point
```

ospfd.@interface[1].passive=no
ospfd.@interface[1].hello\_interval=30
ospfd.@interface[1].dead\_interval=120
ospfd.@interface[1].auth\_mode=md5
ospfd.@interface[1].key\_id=1
ospfd.@interface[1].md5\_auth\_key=test

## 20.6 OSPF using package options

```
root@VA_router:~# uci export ospfd
package ospfd
config routing 'ospfd'
        option enabled 'yes'
        option default_info_originate 'yes'
        option router_id '1.2.3.4'
config network
        option ip_addr '12.1.1.1'
        option mask_length '24'
        option area '0'
        option stub_area 'yes'
config interface
        option ospf interface 'lan8'
        option hello_interval '10'
        option dead_interval '40'
        option network_type 'broadcast'
        option passive 'yes'
        option auth_mode 'text'
        option text_auth_key 'secret'
config interface
        option ospf_interface 'lan7'
        option network_type 'point-to-point'
        option passive 'no'
        option hello_interval '30'
```

option dead\_interval '120'

option auth\_mode 'md5'

option key\_id '1'

option md5\_auth\_key 'test'

## 20.7 OSPF diagnostics

#### 20.7.1 Route status

To show the current routing status, enter:

root@VA_router:~# route -n								
Kernel IP routing table								
Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface	
0.0.0.0	10.206.4.65	0.0.0.0	UG	1	0	0	usb0	
10.1.0.0	0.0.0.0	255.255.0.0	U	0	0	0	eth1	
10.206.4.64	0.0.0.0	255.255.255.252	U	0	0	0	usb0	
11.11.11.0	0.0.0.0	255.255.255.248	U	0	0	0	gre-	
GRE								
89.101.154.151	10.206.4.65	255.255.255.255	UGH	0	0	0	usb0	
192.168.100.0	0.0.0.0	255.255.255.0	U	0	0	0	eth0	
192.168.101.1	11.11.11.1	255.255.255.255	UGH	11	0	0	gre-	
GRE								
192.168.104.1	11.11.11.4	255.255.255.255	UGH	20	0	0	gre-	
GRE								

**Note**: a route will only be displayed in the routing table when the interface is up.

### 20.7.2 Tracing OSPF packets

Typically, OSPF uses IP as its transport protocol. The well-known IP protocol type for OSPF traffic is 0x59. To trace OSPF packets on any interface on the router, enter: tcpdump -i any -n proto ospf &

```
root@VA_router:~# tcpdump -i any -n proto ospf &
root@VA_router:~# tcpdump: verbose output suppressed, use -v or -vv for
full protocol decode
listening on any, link-type LINUX_SLL (Linux cooked), capture size 65535
bytes
```

To stop tracing enter fg to bring tracing task to foreground, and then **<CTRL-C>** to stop

```
root@VA_router:~# fg

tcpdump -i any -n proto ospf
^C
33 packets captured
33 packets received by filter
0 packets dropped by kernel
```

## 20.8 Quagga/Zebra console

the trace.

Quagga is the routing protocol suite embedded in the router firmware. Quagga is split into different daemons for implementation of each routing protocol. Zebra is a core daemon for Quagga, providing the communication layer to the underlying Linux kernel, and routing updates to the client daemons.

Quagga has a console interface to Zebra for advanced debugging of the routing protocols.

To access, enter:

```
root@VA_router:~# telnet localhost zebra

Entering character mode

Escape character is '^]'.

Hello, this is Quagga (version 0.99.21).

Copyright 1996-2005 Kunihiro Ishiguro, et al.

User Access Verification

Password:
```

To see OSPF routing from Zebra console, enter:

K>\* 0.0.0.0/0 via 10.206.4.65, usb0
0 10.1.0.0/16 [110/11] via 11.11.11.1, gre-GRE, 02:35:28
C>\* 10.1.0.0/16 is directly connected, eth1
C>\* 10.206.4.64/30 is directly connected, usb0
0 11.11.11.0/29 [110/10] is directly connected, gre-GRE, 02:35:29
C>\* 11.11.11.0/29 is directly connected, gre-GRE
K>\* 89.101.154.151/32 via 10.206.4.65, usb0
C>\* 127.0.0.0/8 is directly connected, lo
C>\* 192.168.100.0/24 is directly connected, eth0
0>\* 192.168.101.1/32 [110/11] via 11.11.11.1, gre-GRE, 02:35:28
0>\* 192.168.104.1/32 [110/20] via 11.11.11.4, gre-GRE, 02:30:45
0 192.168.105.1/32 [110/10] is directly connected, lo, 02:47:52
C>\* 192.168.105.1/32 is directly connected, lo

### 20.8.1 OSPF debug console

When option tty\_enabled (see Global settings section above) is enabled in the OSPF configuration, OSPF debug console can be accessed for advanced OSPF debugging.

To access OSPF debug console enter: telnet localhost ospfd (password zebra)

```
root@VA_router:~# telnet localhost ospfd

Entering character mode

Escape character is '^]'.

Hello, this is Quagga (version 0.99.21).

Copyright 1996-2005 Kunihiro Ishiguro, et al.

User Access Verification

Password:
```

To see OSPF routing from OSPF debug console, enter: sh ip ospf route

```
UUT> sh ip ospf route
======== OSPF network routing table ========
```

N 10.1.0.0/16 [11] area: 0.0.0.0 via 11.11.11.1, gre-GRE 11.11.11.0/29 [10] area: 0.0.0.0 Ν directly attached to gre-GRE 192.168.101.1/32 [11] area: 0.0.0.0 Ν via 11.11.11.1, gre-GRE 192.168.104.1/32 [20] area: 0.0.0.0 Ν via 11.11.11.4, gre-GRE 192.168.105.1/32 [10] area: 0.0.0.0 directly attached to lo ======= OSPF router routing table ========

To see OSPF neighbours from OSPF debug console, enter: sh ip ospf neighbour

======= OSPF external routing table ========

```
root@VA_router:~# sh ip ospf neighbor

Neighbor ID Pri State Dead Time Address Interface RXmtL RqstL
DBsmL
1.1.1.1 255 Full/DR 33.961s 11.11.11.1 gre-GRE:11.11.11.5
0 0 0
```

To see OSPF interface details from OSPF debug console, enter: sh ip ospf interface

```
root@VA_router:~# sh ip ospf interface
base0 is up
  ifindex 8, MTU 1518 bytes, BW 0 Kbit <UP,BROADCAST,RUNNING,MULTICAST>
  OSPF not enabled on this interface
eth0 is up
  ifindex 9, MTU 1500 bytes, BW 0 Kbit <UP,BROADCAST,RUNNING,MULTICAST>
  OSPF not enabled on this interface
eth1 is up
  ifindex 10, MTU 1500 bytes, BW 0 Kbit
<UP,BROADCAST,RUNNING,PROMISC,MULTICAST>
  OSPF not enabled on this interface
eth2 is down
```

```
ifindex 11, MTU 1500 bytes, BW 0 Kbit <BROADCAST, MULTICAST>
  OSPF not enabled on this interface
eth3 is down
 ifindex 12, MTU 1500 bytes, BW 0 Kbit <BROADCAST, MULTICAST>
 OSPF not enabled on this interface
eth4 is down
 ifindex 13, MTU 1500 bytes, BW 0 Kbit <BROADCAST, MULTICAST>
 OSPF not enabled on this interface
eth5 is down
 ifindex 14, MTU 1500 bytes, BW 0 Kbit <BROADCAST, MULTICAST>
 OSPF not enabled on this interface
eth6 is down
  ifindex 15, MTU 1500 bytes, BW 0 Kbit <BROADCAST, MULTICAST>
 OSPF not enabled on this interface
eth7 is down
  ifindex 16, MTU 1500 bytes, BW 0 Kbit <BROADCAST, MULTICAST>
 OSPF not enabled on this interface
gre-GRE is up
  ifindex 19, MTU 1472 bytes, BW 0 Kbit <UP, RUNNING, MULTICAST>
  Internet Address 11.11.11.5/29, Area 0.0.0.0
 MTU mismatch detection:enabled
  Router ID 192.168.105.1, Network Type BROADCAST, Cost: 10
 Transmit Delay is 1 sec, State Backup, Priority 1
  Designated Router (ID) 1.1.1.1, Interface Address 11.11.11.1
  Backup Designated Router (ID) 192.168.105.1, Interface Address 11.11.11.5
 Multicast group memberships: OSPFAllRouters OSPFDesignatedRouters
 Timer intervals configured, Hello 10s, Dead 40s, Wait 40s, Retransmit 5
   Hello due in 3.334s
 Neighbor Count is 1, Adjacent neighbor count is 1
gre0 is down
  ifindex 6, MTU 1476 bytes, BW 0 Kbit < NOARP>
  OSPF not enabled on this interface
ifb0 is down
  ifindex 2, MTU 1500 bytes, BW 0 Kbit <BROADCAST, NOARP>
 OSPF not enabled on this interface
ifb1 is down
  ifindex 3, MTU 1500 bytes, BW 0 Kbit <BROADCAST, NOARP>
```

OSPF not enabled on this interface lo is up ifindex 1, MTU 16436 bytes, BW 0 Kbit <UP, LOOPBACK, RUNNING> Internet Address 192.168.105.1/32, Broadcast 192.168.105.1, Area 0.0.0.0 MTU mismatch detection:enabled Router ID 192.168.105.1, Network Type LOOPBACK, Cost: 10 Transmit Delay is 1 sec, State Loopback, Priority 1 No designated router on this network No backup designated router on this network Multicast group memberships: <None> Timer intervals configured, Hello 10s, Dead 40s, Wait 40s, Retransmit 5 Hello due in inactive Neighbor Count is 0, Adjacent neighbor count is 0 sit0 is down ifindex 7, MTU 1480 bytes, BW 0 Kbit < NOARP> OSPF not enabled on this interface teq10 is down ifindex 4, MTU 1500 bytes, BW 0 Kbit < NOARP> OSPF not enabled on this interface tunl0 is down ifindex 5, MTU 1480 bytes, BW 0 Kbit < NOARP> OSPF not enabled on this interface usb0 is up ifindex 17, MTU 1500 bytes, BW 0 Kbit <UP, BROADCAST, RUNNING, MULTICAST> OSPF not enabled on this interface

To see OSPF database details from OSPF debug console, enter: sh ip ospf database

```
OSPF Router with ID (192.168.105.1)

Router Link States (Area 0.0.0.0)

Link ID ADV Router Age Seq# CkSum Link count
1.1.1.1 1.1.1.1 873 0x80006236 0xd591 3
192.168.104.1 192.168.104.1 596 0x8000000a 0x3a2d 2
```

1	92.168.105.1	192.	168.105.1	879	d0000008x0	0x4919 2
		Net	Link States	(Area	a 0.0.0.0)	
I	ink ID	ADV	Router	Age	Seq#	CkSum
1	1.11.11.1	1.1.	1.1	595	0x80000004	0x5712

NV: 14 2000

## 21 Configuring VRRP

#### 21.1 Overview

Virtual Router Redundancy Protocol (VRRP) is a networking protocol designed to eliminate the single point of failure inherent in the static default routed environment.

VRRP specifies an election protocol that dynamically assigns responsibility for a virtual router to one of the VRRP routers on a LAN. The VRRP router controlling the IP address(es) associated with a virtual router is called the Master, and forwards packets sent to these IP addresses. The election process provides dynamic failover in the forwarding responsibility from the Master to a backup router should the Master become unavailable. This process allows the virtual router IP address(es) on the LAN to be used as the default first hop router by end hosts. The advantage gained from using VRRP is a higher availability default path without requiring configuration of dynamic routing or router discovery protocols on every end host.

Two or more routers forming the redundancy cluster are configured with the same Router ID and Virtual IP address. A VRRP router group operates within the scope of the single LAN. Additionally, the VRRP routers are configured with its initial role (Master or Backup) and the router priority, which is a factor in the master router election process. You can also configure a password authentication to protect VRRP protocol messages against spoofing.

The VRRP protocol is implemented according to internet standard RFC2338.

# 21.2 Configuration package used

Package	Sections
vrrp	main
	vrrp group

## 21.3 Configuring VRRP using the web interface

To configure VRRP through the web interface, in the top menu, select **Network -> VRRP**. The VRRP page appears.

There are two sections in the VRRP page:

Section	Description
Global Settings	Enables VRRP
VRRP Group Configuration	Configures the VRRP group settings.

## 21.3.1 Global settings

The Global Settings section configures vrrp package main section.

To access configuration settings, click ADD.



Figure 101: The VRRP global settings configuration page

Web Field/UCI/Package Option	Description	on
Web: VRRP Enabled	Globally enables VRRP on the router.	
UCI: vrrp.main.enabled	0	Disabled.
Opt: Enabled	1	Enabled.

### 21.3.2 VRRP group configuration settings

The VRRP Group Configuration section configures vrrp package vrrp\_group section.

To access configuration settings, click ADD.

VRRP Group Configuration Group enabled Interface LAN1: (no interfaces attached) LAN2: 🚂 LAN3: 🚂 MOBILE1: PoAADSL: loopback: 🚂 Interface to serve Current State Track interfaces LAN1: (no interfaces attached) LAN2: 🚂 LAN3: 🚂 MOBILE1: 💼 PoAADSL: 💼 loopback: 🚂 Interfaces to monitor Track IPsec Tunnel ✓ IPsecTunnel1 ✓ IPsecTunnel2 IPsec connection(s) to monitor Track IPsec Fail Time 300 Consider IPsec tunnel failed if tunnel is down for that many seconds IPsec Connection ▼ ② IPsec connection to bring down/up when VRRP enters BACKUP/MASTER state BACKUP Start role 1 Router ID 100 Priority

Figure 102: The VRRP group configuration page

Web Field/UCI/Package Option	Description	Description		
Web: Group Enabled	Enables a	Enables a VRRP group on the router.		
UCI: vrrp.@vrrp_group[X].enabled	0	Disabled.		
Opt: Enabled	1	Enabled.		
Web: Interface UCI: vrrp.@vrrp_group[X].interface Opt: interface	operate. Fo	ocal LAN interface name in which the VRRP cluster is to or example, 'lan'. The interface name is taken from the ackage and all configured interfaces will be displayed		

Web: Track Interfaces UCI: vrrp.@vrrp_group[X].track_iface	Defines one or more WAN interfaces that VRRP should monitor. If a monitored interface goes down on the Master VRRP router, it			
Opt: list track_iface	goes into 'Fault' state and the Backup VRRP router becomes the Master.			
	Multiple interfaces are entered using uci set and uci add_list commands. Example:			
	uci set vrrp.@vrrp_group[0].track_iface=wan1			
	uci add_list vrrp.@vrrp_group[0].track_iface=wan2			
	or using a list of options via package options			
	list track_iface `wan1'			
	list track_iface 'wan2'			
	wan			
	Range			
Web: Track IPsec Tunnel UCI: vrrp.@vrrp_group[X].track_ipsec Opt: list track_ipsec	Defines one or more IPsec tunnels that VRRP should monitor. If a monitored tunnel goes down on the Master VRRP router for the configured Track IPsec Fail Time, it goes into 'Fault' state and the Backup VRRP router becomes the Master.			
	Multiple IPsec connections are entered using uci set and uci add_list commands. Example:			
	uci set vrrp.@vrrp_group[0].track_ipsec=Tunnel1			
	uci add_list vrrp.@vrrp_group[0].track_ipsec=Tunnel2			
	or using a list of options via package options			
	list track_ipsec `Tunnell'			
	list track_ipsec `Tunnel2'			
	Blank No IPSec connection to track.			
	Range			
Web: Track IPsec Fail Time	Defines duration in seconds to determine IPsec tunnel failure			
UCI: vrrp.@vrrp_group[X].	300 300 seconds			
track_ipsec_fail_sec	Range			
Opt: track_ipsec_fail_sec				
Web: IPSec connection UCI:	Sets which IPSec connection to bring up or down when VRRP enters 'Backup/Master' state.			
p.@vrrp_group[X].ipsec_connection t: ipsec_connection	Multiple IPSec connections are entered via the package option using a space separator. Example:			
	option ipsec_connection `IPSecTunnel1 IPSecTunnel2'			
	Blank No IPSec connection to toggle.			
	Range Range			
Web: Start role	Sets the initial role in which a VRRP router starts up. In a cluster			
UCI: vrrp.@vrrp_group[X].init_state	of VRRP routes, set one as a Master and the others as Backup.			
Opt: init_state	BACKUP			
Web. Pouter ID	MASTER  Sets the VDDD router ID (1 to 255) All so energting VDDD			
Web: Router ID UCI: vrrp.@vrrp_group[X].router_id	Sets the VRRP router ID (1 to 255). All co-operating VRRP routers serving the same LAN must be configured with the same router ID.			
Opt: router_id	1			
	Range 1-255			
Web: Priority	I Sate the VRRP router's priority. Higher values equal higher			
Web: Priority UCI: vrrp.@vrrp_group[X].priority	Sets the VRRP router's priority. Higher values equal higher priority. The VRRP routers must use priority values between 1-254. The Master router uses a higher priority.			
-	priority. The VRRP routers must use priority values between 1-			
UCI: vrrp.@vrrp_group[X].priority	priority. The VRRP routers must use priority values between 1-254. The Master router uses a higher priority.			
UCI: vrrp.@vrrp_group[X].priority Opt: priority  Web: Advert intvl	priority. The VRRP routers must use priority values between 1- 254. The Master router uses a higher priority.  100  Range 0-255  Sets the VRRP hello value in seconds. This value must match the			
UCI: vrrp.@vrrp_group[X].priority Opt: priority	priority. The VRRP routers must use priority values between 1-254. The Master router uses a higher priority.  100  Range 0-255			

\_\_\_\_

Web: Password UCI: vrrp.@vrrp_group[X].password Opt: password	Sets the password to use in the VRRP authentication (simple password authentication method). This field may be left blank if no authentication is required.		
Web: Virtual IP UCI: vrrp.@vrrp_group[X].virtual_ipaddr Opt: virtual_ipaddr	Sets the virtual IP address and mask in prefix format. For example, '11.1.1.99/24'. All co-operating VRRP routers serving the same LAN must be configured with the same virtual IP address.		
Web: GARP delay UCI: vrrp.@vrrp_group[X].garp_delay_sec Opt: garp_delay_sec	Sets the Gratuitous ARP message sending delay in seconds.  5		
Web: n/a UCI: vrrp.@vrrp_group[X].track_ipsec Opt: list track_ipsec	Sets one or more IPSec connection that VRRP should monitor. If a monitored IPSec connection goes down on the Master VRRP router, it goes into 'Fault' state and the Backup VRRP router becomes the Master.		
	Multiple IPsec connections are entered using uci set and uci add_list commands. Example: uci set vrrp.@vrrp_group[0].track_ipsec=Tunnel1 uci add_list vrrp.@vrrp_group[0].track_ipsec=Tunnel2 or using a list of options via package options list track_ipsec 'Tunnel1' list track_ipsec 'Tunnel2'  Blank No IPSec connection to track.  Range		

Table 62: Information table for VRRP group settings

## 21.4 Configuring VRRP using command line

The configuration file is stored on /etc/config/vrrp.

There are two config sections – **main** and **vrrp\_group**.

Multiple VRRP groups can be configured. By default, all VRRP group instances are named 'vrrp\_group'. It is identified by @vrrp\_group then the vrrp\_group position in the package as a number. For example, for the first vrrp\_group in the package using UCI:

```
vrrp.@vrrp_group[0]=vrrp_group
vrrp.@vrrp_group[0].enabled=1
```

Or using package options:

```
config vrrp_group
option enabled `1'
```

However, to better identify, it is recommended to give the vrrp\_group instance a name. For example, to define a vrrp\_group instance named 'g1' using UCI, enter:

```
vrrp.gl.vrrp_group
vrrp.gl.enabled=1
```

To define a named keepalive instance using package options, enter:

```
config vrrp_group 'gl'
option enabled '1'
```

#### 21.4.1 VRRP using UCI

To view the configuration in UCI format, enter:

```
root@VA_router:~# uci show vrrp
vrrp.main=vrrp
vrrp.main.enabled=yes
vrrp.gl=vrrp_group
vrrp.gl.enabled=yes
vrrp.gl.interface=lan
vrrp.gl.track_iface=WAN MOBILE
vrrp.gl.init_state=BACKUP
vrrp.gl.router_id=1
vrrp.gl.priority=100
vrrp.gl.advert_int_sec=120
vrrp.gl.password=secret
vrrp.gl.virtual_ipaddr=10.1.10.150/16
vrrp.g1.garp_delay_sec=5
vrrp.gl.ipsec_connection=Test
vrrp.gl.track_ipsec=conn1 conn2
```

#### 21.4.2 VRRP using package options

To view the configuration in package option format, enter:

```
root@VA_router:~# uci export vrrp
package vrrp

config vrrp 'main'
    option enabled 'yes'

config vrrp_group 'g1'
    option enabled 'yes'
    option interface 'lan'
    list track_iface 'WAN'
    list track_iface 'MOBILE'
```

```
option init_state 'BACKUP'

option router_id '1'

option priority '100'

option advert_int_sec '120'

option password 'secret'

option virtual_ipaddr '10.1.10.150/16'

option garp_delay_sec '5'

option ipsec_connection 'Test'

list track_ipsec 'conn1'

list track_ipsec 'conn2'
```

## 22 Configuring Routing Information Protocol (RIP)

#### 22.1 Introduction

RIP is a dynamic routing algorithm used on IP-based internet networks.

A distance-vector routing algorithm is used by RIP to assist in maintaining network convergence. It uses a metric or 'hop' count as the only routing criteria. Each route is advertised with the number of hops a datagram would take to reach the destination network. The maximum metric for RIP is 15. This limits the size of the network that RIP can support. Smaller metrics are more efficient-based on the cost associated with each metric.

RIP protocol is most useful as an Interior Gateway Protocol (IGP). An IGP refers to the routing protocol used within a single autonomous system. There may be a number of autonomous systems, using different routing protocols, combined together to form a large network.

In most networking environments, RIP is not the preferred choice for routing as its time to converge and scalability are poor compared to EIGRP or OSPF.

#### 22.1.1 RIP characteristics

RIP is a standardised distance vector protocol, designed for use on smaller networks. RIP was one of the first true distance vector routing protocols, and is supported on a wide variety of systems.

RIP adheres to the following distance vector characteristics:

- RIP sends out periodic routing updates, every 30 seconds
- RIP sends out the full routing table every periodic update
- RIP uses a form of distance as its metric, in this case, hopcount
- RIP uses the Bellman-Ford distance vector algorithm to determine the best path to a particular destination

Other characteristics of RIP include:

- RIP supports IP and IPX routing
- RIP utilizes UDP port 520
- RIP routes have an administrative distance of 120
- RIP has a maximum hopcount of 15 hops. Any network that is 16 hops away or more is considered unreachable to RIP, thus the maximum diameter of the network is 15 hops. A metric of 16 hops in RIP is considered a poison route or infinity metric.

If multiple paths exist to a particular destination, RIP will load balance between those paths, by default, up to 4, only if the metric (hopcount) is equal. RIP uses a round-robin system of load-balancing between equal metric routes, which can lead to pinhole congestion.

For example, two paths might exist to a particular destination, one going through a 9600 baud link, the other via a T1. If the metric (hopcount) is equal, RIP will load-balance, sending an equal amount of traffic down the 9600 baud link and the T1. This will cause the slower link to become congested.

#### 22.1.2 RIP versions

RIP has two versions, Version 1 (RIPv1) and Version2 (RIPv2).

RIPv1 (RFC 1058) is classful, and therefore does not include the subnet mask with its routing table updates. Because of this, RIPv1 does not support Variable Length Subnet Masks (VLSMs). When using RIPv1, networks must be contiguous, and subnets of a major network must be configured with identical subnet masks. Otherwise, route table inconsistencies or worse will occur.

RIPv1 sends updates as broadcasts to address 255.255.255.255.

RIPv2 (RFC 2453) is classless, and therefore does include the subnet mask with its routing table updates. RIPv2 fully supports VLSMs, allowing discontinuous networks and varying subnet masks to exist.

Other enhancements offered by RIPv2 include:

- Routing updates are sent via multicast, using address 224.0.0.9
- Encrypted authentication can be configured between RIPv2 routers
- Route tagging is supported

RIPv2 can interoperate with RIPv1. By default:

- RIPv1 routers will sent only Version 1 packets
- RIPv1 routers will receive both Version 1 and 2 updates
- RIPv2 routers will both send and receive only Version 2 updates

Virtual Access **ripd** package supports RIP version 2 as described in RFC2453 and RIP version 1 as described in RFC1058. It is part of Quagga suite of applications for routing.

## 22.2 Configuration package used

Package	Sections
ripd	routing interface key_chain
	offset

0.00

## 22.3 Configuring RIP using the web interface

To configure RIP using the web interface, select **Network->RIP**. The RIP page appears.

There are four sections in the RIP page.

Section	Description
Global Settings	Enables RIP and configures the RIP routing section containing global configuration parameters. The web automatically names the routing section ripd
Interfaces Configuration	Configures the interface sections. Defines interface configuration for RIP and interface specific parameters.
Offset Configuration	Configures the offset sections for metric manipulation.
MD5 Authentication Key Chains	Configures the key_chain sections. Defines MD5 authentication settings.

#### 22.3.1 Global settings

The web browser automatically names the routing section 'ripd'.

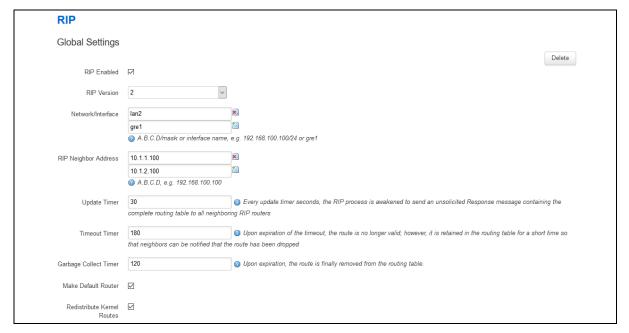


Figure 103: The RIP global settings configuration page

Web Field/UCI/Package Option	Description		
Web: RIP Enabled	Enables RIP advertisements on router.		
UCI: ripd.ripd.enabled	0 Disabled.		
Opt: enabled	1 Enabled.		
Web: RIP Version	Specifies the RIP version that will be used. Version 2 is		
UCI: ripd.ripd.version	recommended.  1 RIP version 1		
Opt: version	2 RIP version 2		
Web: Network/Interface UCI: ripd.ripd.network Opt: list network	Defines the list of the interfaces that will be used to advertise RIP packets.  Format: A.B.C.D/mask or interface name  Multiple RIP interfaces are entered using uci set and uci add_list commands. Example:  uci set ripd.ripd.network=lan1  uci add_list ripd.ripd.network=lan2  or using a list of options via package options  list network 'lan1'  list network 'lan2'		
Web: RIP Neighbor Address UCI: ripd.ripd.neighbor Opt: list neighbor	Specifies the list of RIP neighbours. When a neighbour doesn't understand multicast, this command is used to specify neighbours. In some cases, not all routers will be able to understand multicasting, where packets are sent to a network or a group of addresses. In a situation where a neighbour cannot process multicast packets, it is necessary to establish a direct link between routers. The neighbour command allows the network administrator to specify a router as a RIP neighbour. Multiple RIP neighbours are entered using uci set and uci add_list commands. Example: uci set ripd.ripd.neighbor=1.1.1.1 uci add_list ripd.ripd.neighbor=2.2.2.2 or using a list of options via package options list neighbor '1.1.1.1' list neighbor '2.2.2.2'		
Web: Update Timer UCI: ripd.ripd.tb_update_sec Opt: tb_update_sec	Every update timer seconds, the RIP process is awakened to send an unsolicited response message containing the complete routing table to all neighbouring RIP routers.  30  Range		
Web: Timeout Timer UCI: ripd.ripd.tb_timeout_sec Opt:tb_timeout_sec	Defines timeout in seconds. Upon expiration of the timeout, the route is no longer valid; however, it is retained in the routing table for a short time so that neighbours can be notified that the route has been dropped.  180  Range		
Web: Garbage Collect Timer UCI: ripd.ripd.tb_garbage_sec Opt: tb_garbage_sec	Upon expiration of the Garbage-Collection timer, the route is finally removed from the routing table. This timer starts when Timeout timer expires or when route is advertised as "unreachable".		
	The reason for using this two-stage removal method (marking-deleting) is to give the router that declared the route no longer reachable a chance to propagate this information to other routers. When the timer expires the route is deleted. If during the garbage collection period a new RIP Response for the route is received, then the deletion process is aborted: the Garbage-Collection timer is cleared, the route is marked as valid again, and a new Timeout timer starts.  120  Range		

Web: Make Default Router	Advertising a default route via RIP.			
UCI: ripd.ripd.default_info_originate	0	Disable.		
Opt: default_info_originate	1	Enable.		
Web: Redistribute Kernel Routes UCI: ripd.ripd.redistribute kernel routes		Redistributes routing information from kernel route entries into the RIP tables.		
Opt: redistribute_kernel_routes	0	Disable.		
	1	Enable.		
Web: n/a	Enable vt	y for RIPd (telnet to localhost: 2602).		
UCI: ripd.ripd.vty_enabled				
Opt: vty_enabled				

Table 63: Information table for RIP global settings

### 22.3.2 Offset configuration

This section is used for RIP metric manipulation. RIP metric is a value for distance in the network. Usually, ripd package increments the metric when the network information is received. Redistributed routes' metric is set to 1.

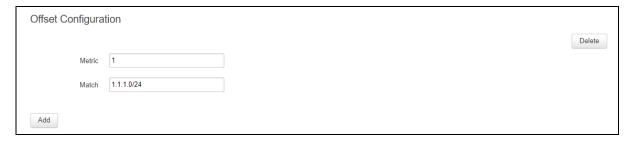


Figure 104: The RIP global settings configuration page

Web Field/UCI/Package Option	Description	
Web: Metric UCI: ripd.@offset[0].metric Opt: metric	Defines the metric offset value. This modifies the default metric value for redistributed and connected routes.  1 Range	
Web: Match UCI: ripd.@offset[0].match_network Opt: match_network	Defines the prefixes to match. Format: A.B.C.D/mask	

Table 64: Information table for RIP offset commands

### 22.3.3 Interfaces configuration

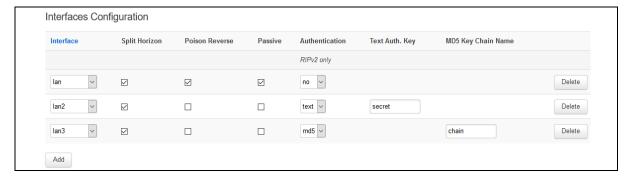


Figure 105: The RIP interfaces configuration page

Web Field/UCI/Package Option	Description	
Web: Interface UCI: ripd.@interface[0].rip_interface Opt: rip_interface	Specifies the interface name.	
Web: Split Horizon UCI: ripd.@interface[0].split_horizon Opt: split_horizon	Prohibits the router from advertising a route back onto the interface from which it was learned.  O Disable.  1 Enable.	
Web: Poison Reverse UCI: ripd.@interface[0].poison_reverse Opt: poison_reverse	Router tells its neighbour gateways that one of the gateways is no longer connected. Notifies the gateway, setting the hop count to the unconnected gateway to 16 which would mean "infinite".  O Disable.  1 Enable.	
Web: Passive UCI: ripd.@interface[0].passive Opt: passive	Sets the specified interface to passive mode. On passive mode interface, all receiving packets are processed as normal and ripodoes not send either multicast or unicast RIP packets except to RIP neighbour specified with a neighbour command.  O Disable  1 Enable	
Web: Authentication UCI: ripd.@interface[0].auth_mode Opt: auth_mode	RIPv2 (only) allows packets to be authenticated via either an insecure plain text password, included with the packet, or via a more secure MD5 based HMAC (keyed-Hashing for Message AuthentiCation). Enabling authentication prevents routes being updated by unauthenticated remote routers, but still can allow routes, that is, the entire RIP routing table, to be queried remotely, potentially by anyone on the internet, via RIPv1.    No	
	md5 Sets the interface with RIPv2 MD5 authentication.  text Sets the interface with RIPv2 simple password authentication.	
Web: Text Auth. Key UCI: ripd.@interface[0].auth_key Opt: auth_key	This command sets the authentication string for text authentication. The string must be shorter than 16 characters.	
Web: MD5 Key Chain Name UCI: ripd.@interface[0].key_chain Opt: key_chain	Specifiy Keyed MD5 chain.	

Table 65: Information table for RIP interface configuration

### 22.3.4 MD5 authentication key chains

RIPv2 (only) allows packets to be authenticated using either an insecure plain text password, included with the packet, or by a more secure MD5 based HMAC (keyed-Hashing for Message AuthentiCation). Enabling authentication prevents routes being updated by unauthenticated remote routers, but still can allow routes, that is, the entire RIP routing table, to be queried remotely, potentially by anyone on the internet, using RIPv1.

This section defines key\_chains to be used for MD5 authentication.

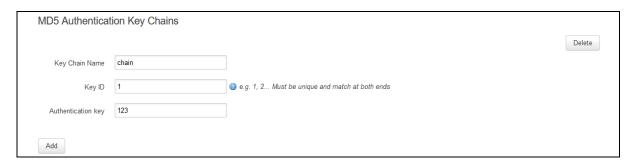


Figure 106: The MD5 authentication key chains configuration section

Web Field/UCI/Package Option	Description
Web: Key Chain Name	Specifies chain name
UCI: ripd.@key_chain[0].key_chain_name	
Opt: key_chain_name	
Web: Key ID	Specifies key ID. Must be unique and match at both ends.
UCI: ripd.@key_chain[0].key_id	
Opt: key_id	
Web: Authentication key	Specifiy Keyed MD5 chain.
UCI: ripd.@key_chain[0].auth_key	
Opt: auth_key	

Table 66: Information table for MD5 authentication key chains commands

## 22.4 Configuring RIP using command line

RIP is configured under the ripd package /etc/config/ripd.

There are four config sections ripd, interface, key\_chain and offset.

You can configure multiple interface, key\_chain and offset sections.

By default, all RIP interface instances are named interface, it is identified by @interface then the interface position in the package as a number. For example, for the first interface in the package using UCI:

```
ripd.@interface[0]=interface
ripd.@interface[0].rip_interface=lan
```

Or using package options:

```
config interface

option rip_interface 'lan'
```

By default, all RIP key\_chain instances are named key\_chain, it is identified by <code>@key\_chain</code> then the key\_chain position in the package as a number. For example, for the first key\_chain in the package using UCI:

```
ripd.@key_chain[0]=key_chain
ripd.@key_chain[0].key_chain_name=Keychain1
```

Or using package options:

```
config key_chain
option key_chain_name 'Keychain1'
```

By default, all RIP offset instances are named offset, it is identified by @offset then the offset position in the package as a number. For example, for the first offset in the package using UCI:

```
ripd.@offset[0]=offset
ripd.@offset[0].metric=1
```

Or using package options:

```
config offset
option metric '1'
```

#### 22.4.1 RIP using UCI

```
root@VA_router:~# uci show ripd
ripd.ripd=routing
ripd.ripd.version=2
ripd.ripd.enabled=yes
ripd.ripd.network=lan2 gre1
ripd.ripd.neighbor=10.1.1.100 10.1.2.100
ripd.ripd.tb_update_sec=30
ripd.ripd.tb_timeout_sec=180
ripd.ripd.tb_garbage_sec=120
ripd.ripd.default_info_originate=yes
ripd.ripd.redistribute_kernel_routes=yes
ripd.@interface[0]=interface
ripd.@interface[0].rip interface=lan
ripd.@interface[0].auth_mode=no
ripd.@interface[0].split_horizon=1
ripd.@interface[0].poison reverse=0
ripd.@interface[0].passive=0
ripd.@interface[1]=interface
ripd.@interface[1].rip_interface=lan2
ripd.@interface[1].split_horizon=1
ripd.@interface[1].poison_reverse=0
ripd.@interface[1].passive=0
```

ripd.@interface[1].auth\_mode=text
ripd.@interface[2]=interface
ripd.@interface[2].rip\_interface=lan3
ripd.@interface[2].split\_horizon=1
ripd.@interface[2].poison\_reverse=0
ripd.@interface[2].passive=0
ripd.@interface[2].auth\_mode=md5
ripd.@interface[2].key\_chain=Keychain1
ripd.@key\_chain[0]=key\_chain
ripd.@key\_chain[0].key\_id=1
ripd.@key\_chain[0].key\_id=1
ripd.@key\_chain[0].auth\_key=123
ripd.@offset[0]=offset

#### 22.4.2 RIP using package options

ripd.@offset[0].metric=1

ripd.@offset[0].match\_network=10.1.1.1/24

```
root@VA_router:~# uci export ripd
package ripd
config routing 'ripd'
        option version '2'
        option enabled 'yes'
        list network 'lan2'
        list network 'gre1'
        list neighbor '10.1.1.100'
        list neighbor '10.1.2.100'
        option tb_update_sec '30'
        option tb_timeout_sec '180'
        option tb_garbage_sec '120'
        option default_info_originate 'yes'
        option redistribute_kernel_routes 'yes'
config interface
        option rip_interface 'lan'
```

```
option auth_mode 'no'
        option split_horizon '1'
        option poison_reverse '0'
        option passive '0'
config interface
        option rip_interface 'lan2'
        option split_horizon '1'
        option poison_reverse '0'
        option passive '0'
        option auth_mode 'text'
        option auth_key 'textsecret'
config interface
        option rip_interface 'lan3'
        option split_horizon '1'
        option poison_reverse '0'
        option passive '0'
        option auth_mode 'md5'
        option key_chain 'keychain1'
config key_chain
        option key_chain_name 'Keychain1'
        option key_id '1'
        option auth_key '123'
config offset
      option metric '1'
      option match_network '10.1.1.1/24'
```

## 22.5 RIP diagnostics

#### 22.5.1 Route status

To show the current routing status, enter route -n:

root@VA_router:	~#					
route -n						
Kernel IP routin	ng table					
Destination	Gateway	Genmask	Flags	Metric	Ref	Use
Iface						
0.0.0.0	10.205.154.65	0.0.0.0	UG	1	0	0 usb0
10.1.0.0	0.0.0.0	255.255.0.0	U	0	0	0 eth1
10.205.154.64	0.0.0.0	255.255.255.252	U	0	0	0 usb0
11.11.11.0	0.0.0.0	255.255.255.248	U	0	0	0 gre-
GRE						
89.101.154.151	10.205.154.65	255.255.255.255	UGH	0	0	0 usb0
192.168.100.0	0.0.0.0	255.255.255.0	U	0	0	0 eth0
192.168.104.1	11.11.11.4	255.255.255.255	UGH	3	0	0 gre-
GRE						
192.168.154.154	11.11.11.1	255.255.255.255	UGH	2	0	0 gre-
GRE						

**Note**: a route will only be displayed in the routing table when the interface is up.

#### 22.5.2 Tracing RIP packets

RIP uses UDP port 520. To trace RIP packets on any interface on the router, enter: tcpdump -i any -n -p port 520 &

```
root@VA_router:~# tcpdump -i any -n -p port 520 &
tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on any, link-type LINUX_SLL (Linux cooked), capture size 65535
bytes
```

To stop tracing enter fg to bring tracing task to foreground, and then **<CTRL-C>** to stop the trace.

```
root@VA_router:~# fg
tcpdump -i any -n -p port 67
^C
33 packets captured
33 packets received by filter
0 packets dropped by kernel
```

0.00

#### 22.5.3 Quagga/zebra console

Quagga is the routing protocol suite embedded in the router firmware. Quagga is split into different daemons for implementation of each routing protocol. Zebra is a core daemon for Quagga, providing the communication layer to the underlying Linux kernel, and routing updates to the client daemons.

Quagga has a console interface to Zebra for advanced debugging of the routing protocols.

To access, enter: telnet localhost zebra (password: zebra)

```
root@VA_router:~# telnet localhost zebra
Entering character mode
Escape character is '^]'.

Hello, this is Quagga (version 0.99.21).
Copyright 1996-2005 Kunihiro Ishiguro, et al.

User Access Verification
Password:
```

To see RIP routing information from Zebra console, enter: sh ip route

```
C>* 192.168.105.1/32 is directly connected, lo
R>* 192.168.154.154/32 [120/2] via 11.11.11.1, gre-GRE, 16:09:51
```

#### 22.5.4 RIP debug console

When option **tty\_enabled** (see Global settings section above) is enabled in the RIP configuration, RIP debug console can be accessed for advanced RIP debugging.

To access RIP debug console enter: telnet localhost ripd (password zebra)

```
root@VA_router:~# telnet localhost ripd

Entering character mode

Escape character is '^]'.

Hello, this is Quagga (version 0.99.21).

Copyright 1996-2005 Kunihiro Ishiguro, et al.

User Access Verification

Password:
```

To see RIP status from RIP debug console, enter: sh ip rip

```
root@VA_router:~# show ip rip
Codes: R - RIP, C - connected, S - Static, O - OSPF, B - BGP
Sub-codes:
      (n) - normal, (s) - static, (d) - default, (r) - redistribute,
     (i) - interface
    Network
                      Next Hop
                                     Metric From
                                                            Tag Time
C(i) 11.11.11.0/29
                     0.0.0.0
                                            1 self
                                           3 11.11.11.1
R(n) 192.168.104.1/32 11.11.11.4
                                                             0 02:48
C(i) 192.168.105.1/32 0.0.0.0
                                           1 self
R(n) 192.168.154.154/32 11.11.11.1
                                            2 11.11.11.1
                                                               0 02:48
```

#### To see RIP status from RIP debug console, enter: sh ip rip status

```
root@VA_router:~# sh ip rip status
Routing Protocol is "rip"
 Sending updates every 30 seconds with \pm -50\%, next due in 17 seconds
 Timeout after 180 seconds, garbage collect after 120 seconds
 Outgoing update filter list for all interface is not set
  Incoming update filter list for all interface is not set
 Default redistribution metric is 1
 Redistributing:
 Default version control: send version 2, receive version 2
   Interface
                    Send Recv Key-chain
                           2
   gre-GRE
                     2
   10
 Routing for Networks:
   11.0.0.0/8
   192.168.105.1/32
 Routing Information Sources:
   Gateway
                    BadPackets BadRoutes Distance Last Update
                                       0
   11.11.11.1
                                              120
                                                     00:00:20
 Distance: (default is 120)
```

Wintered Access 2010

## 23 Configuring Multi-WAN

Multi-WAN is used for managing WAN interfaces on the router, for example, 3G interfaces to ensure high-availability. You can customise Multi-WAN for various needs, but its main use is to ensure WAN connectivity and provide a failover system in the event of failure or poor coverage.

Multi-WAN periodically does a health check on the interface. A health check comprises of a configurable combination of the following:

- · interface state
- pings to an ICMP target
- signal level checks using signal threshold, RSCP threshold and ECIO threshold option values

A fail for any of the above health checks, results in a fail. After a configurable number of health check failures, Multi-WAN will move to the next highest priority interface. Multi-WAN will optionally stop the failed interface and start the new interface, if required.

In some circumstances, particulary in mobile environments, it is desirable for a primary interface to be used whenever possible. In this instance Multi-WAN will perform a health check on the primary interface after a configurable period. If the health checks pass for the configured number of recovery health checks then the primary will be used.

## 23.1 Configuration package used

Package	Sections
multiwan	config
	wan

# 23.2 Configuring Multi-WAN using the web interface

In the top menu, select **Network -> Multi-Wan**. The Multi-WAN page appears.



Figure 107: The multi-WAN page

Web Field/UCI/Package Option	Description		
Web: Enable	Enables or disables Multi-WAN.		
UCI: multiwan.config.enabled	0 Disabled.		
Opt: enabled	1 Enabled.		
Web: Preempt UCI: multiwan.config.preempt Opt: preempt	Enables or disables pre-emption for Multi-WAN. If enabled the router will keep trying to connect to a higher priority interface depending on timer set by ifup_retry_sec  O Disabled.  1 Enabled.		
Web: Alternate Mode UCI: multiwan.config.alt_mode Opt: alt_mode	Enables or disables alternate mode for Multi-WAN. If enabled the router will use an alternate interface after reboot.  O Disabled.  1 Enabled.		

Table 67: Information table for multi-WAN page

When you have enabled Multi-WAN, you can add the interfaces that will be managed by Multi-WAN, for example 3G interfaces.

The name used for Multi-WAN must be identical, including upper and lowercases, to the actual interface name defined in your network configuration. To check the names and settings are correct, select **Network - > Interfaces** and view the Interfaces Overview page.

In the WAN interfaces section, enter the name of the WAN interface to configure, and then click **Add**. The new section for configuring specific parameters appears.

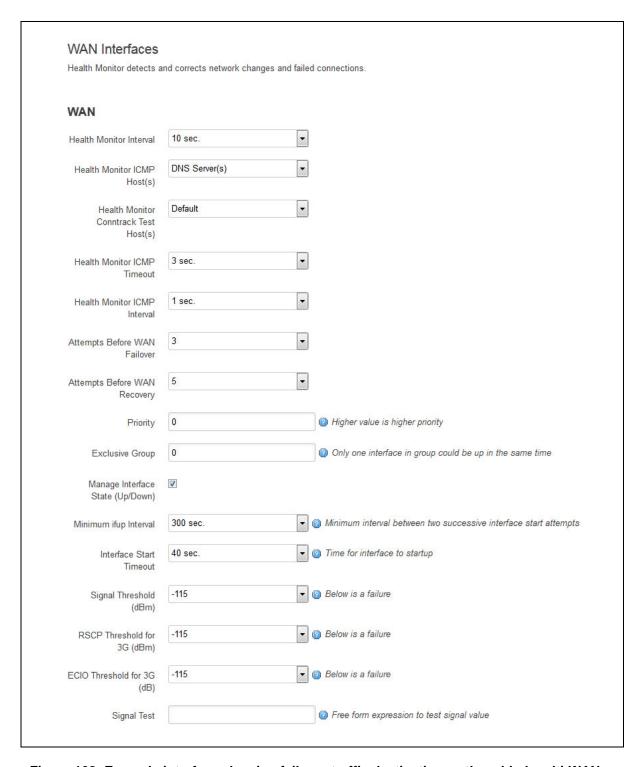


Figure 108: Example interface showing failover traffic destination as the added multi-WAN interface

Web Field/UCI/Package Option	Description			
Web: Health Monitor Interval UCI: multiwan.wan.health_interval	Sets the period to check the health status of the interfac Health Monitor interval will be used for:			
Opt: health_interval		e state checks		
	Į	Ping interval		
	Signal st	rength checks		
Web: Health Monitor ICMP Host(s) UCI: multiwan.wan.icmp_hosts	Sends health ICMPs to configured value DNS servers by default. Configure to any address.			
Opt: icmp_hosts	Disable	Disables the option.		
	DNS servers	DNS IP addresses will be used.		
	WAN Gateway	Gateway IP address will be used.		
	Custom	Ability to provide IP address. Multiple pings targets can be entered, comma separated. Pings to both must fail for health check to fail. Example: option icmp_hosts '1.1.1.1,2.2.2.2'		
Web: Health Monitor Conntrack Test Host(s)	Conntrack is the feature used to track if there is any traffic to and from an IP destination within the health interval.			
UCI: multiwan.wan.conntrack_hosts Opt: conntrack_hosts	The Conntrack_hosts option defines the IP for conntrack to track, usually the icmp_host IP is used.  If traffic to the conntrack_hosts IP is detected then multiwan does not send a ping health check to the icmp_host; otherwise a			
	ping is sent as normal to the icmp_host.  By default the conntrack_hosts is checked if the health interval is greater than 5 minutes. This time threshold currently cannot be manipulated.  Conntrack is generally used to limit the traffic sent on a GSM network.			
	Default Cor	nntrack checks for traffic from icmp_host IP en health_interval is greater than 5 minutes.		
	Disable Cor	nntrack disabled.		
	1 1 '	ecifies an IP other than the icmp_host for intrack to track.		
Web: Health Monitor ICMP Timeout UCI: multiwan.wan.timeout	Sets Ping timeout in seconds. Choose the time in seconds that the health monitor ICMP will timeout at.			
Opt: timeout	3 Wa	it 3 seconds for ping reply.		
	Range			
Web: Health Monitor ICMP Interval UCI: multiwan.wan.icmp_interval	Defines the interval between multiple pings sent at each health check			
Opt: icmp_interval	1			
	Range			
Web: Health Monitor ICMP Count UCI: multiwan.wan.icmp_count	Defines the number of pings to send at each health check.  1			
Opt: icmp_count	Range			
Web: Attempts Before WAN Failover UCI: multiwan.wan.health_fail_retries	Sets the amount of health monitor retries before interface is considered a failure.			
Opt: health_fail_retries	3			
Web: Attempts Before WAN Recovery	Range Sets the number	of health monitor checks before the interface is		
UCI:	considered health	y. Only relevent if pre-empt mode is enbled.		
multiwan.wan.health_recovery_retries	5			
Opt: health_recovery_retries	Range			
Web: Priority UCI: multiwan.wan.priority	higher the priority	rity of the interface. The higher the value, the		
Opt: priority	0			
	Range			

Web: Manage Interface State (Up/Down)	Defines whether multi-wan will start and stop the interface.	
UCI: multiwan.wan.manage_state	1 Enabled.	
Opt: manage_state	0 Disabled.	
Web: Exclusive Group	Defines the group to which the interface belongs; only one	
UCI: multiwan.wan.exclusive_group	interface can be active.	
Opt: exclusive_group	0	
	Range	
Web: Minimum ifup Interval UCI: multiwan.wan.ifup_retry_sec	Specifies the interval in seconds before retrying the primary interface when pre-empt mode is enabled.	
Opt: ifup_retry_sec	300 Retry primary interface every 300 seconds.	
	Range	
Web: Interface Start Timeout UCI: multiwan.wan.ifup_timeout	Specifies the time in seconds for interface to start up. If it is not up after this period, it will be considered a fail.	
Opt: ifup_timeout	40 40 seconds.	
ори пар_итова	Range	
Web: Signal Threshold (dBm) UCI: multiwan.wan.signal_threshold	Specifies the minimum signal strength in dBm before considering if the interface fails signal health check. Uses the value stored for sig_dbm in mobile diagnostics115.	
Opt: signal_threshold	Disabled	
	Range -46 to -115 dBm	
Web: RSCP Threshold (dBm) UCI: multiwan.wan.rscp_threshold	Specifies the minimum RSCP signal strength in dBm before considering if the interface fails signal health check. Uses the value stored for rscp_dbm in mobile diagnostics.	
Opt: rscp_threshold	-115 Disabled	
	Range -46 to -115 dBm	
Web: ECIO Threshold (dB) UCI: multiwan.wan.ecio_threshold	Specifies the minimum ECIO signal strength in dB before considering if the interface fails signal health check. Uses the value stored for ecio_db in mobile diagnostics.	
Opt: ecio_threshold	-115 Disabled	
	Range -46 to -115 dB	
Web: Signal Test UCI: multiwan.wan.signal_test	Defines a script to test various signal characteristics in multiwan signal test. For example:	
Opt: signal_test	option signal_test '(tech == 0) then (sig_dbm > -70) else (rscp_dbm > -105 and ecio_db > -15)'	
	This states that when technology is GSM, a health fail is determined when signal strength is less than -70dBm. When technology is not GSM a health fail occurs when either rscp_d falls below -105dBm or ecio_db falls below -15dB	
	Tech values are:	
	0 GSM	
	1 GSM Compact	
	2 UTRAN	
	3 GSM w/EGPRS	
	4 UTRAN w/HSPDA	
	5 UTRAN w/HSUPA	
	6 UTRAN w/HSUPA and HSDPA	
	7 E-UTRAN	

Table 68: Information table for multi-WAN interface page

# 23.3 Configuring Multi-WAN using UCI

Multi-WAN UCI configuration settings are stored on /etc/config/multiwan

Run UCI export or show commands to see multiwan UCI configuration settings. A sample is shown below.

```
root@VA_router:~# uci export multiwan
package multiwan
config multiwan 'config'
        option preempt 'yes'
        option alt_mode 'no'
        option enabled 'yes'
config interface 'wan'
        option disabled '0'
        option health_interval '10'
                                          option health_fail_retries '3'
        option health_recovery_retries '5'
        option priority '2'
        option manage_state 'yes'
        option exclusive_group '0'
        option ifup_retry_sec '40'
        option icmp_hosts 'disable'
        option icmp_interval '1'
        option timeout '3'
        option icmp_count '1'
        option conntrack_hosts 'disable'
                                               option signal_threshold '-
111'
        option rscp_threshold '-90'
        option ecio_threshold '-15'
        option ifup_timeout_sec '120'
root@VA_router:~# uci show multiwan
multiwan.config=multiwan
multiwan.config.preempt=yes
multiwan.config.alt_mode=no
multiwan.config.enabled=yes
multiwan.wan=interface
multiwan.wan.disabled=0
multiwan.wan.health_interval=10multiwan.wan.health_fail_retries=3
multiwan.wan.health_recovery_retries=5
multiwan.wan.priority=2
multiwan.wan.manage_state=yes
```

```
multiwan.wan.exclusive_group=0
multiwan.wan.ifup_retry_sec=36000
multiwan.wan.icmp_hosts=disable
multiwan.wan.timeout=3
multiwan.wan.icmp_interval '1'
multiwan.wan.timeout '3'
multiwan.wan.icmp_count '1'
multiwan.wan.conntrack_hosts 'disable'
multiwan.wan.signal_threshold=-111
multiwan.wan.rscp_threshold=-90
multiwan.wan.ecio_threshold=-15
```

# 23.4 Multi-WAN diagnostics

The multi-WAN package is linked to the network interfaces within /etc/config/network.

**Note**: multi-WAN will not work if the WAN connections are on the same subnet and share the same default gateway.

To view the multi-WAN package, enter:

```
root@VA_router:~# uci export multiwan
package multiwan
config multiwan 'config'
        option enabled 'yes'
        option preempt 'yes'
        option alt_mode 'no'
config interface 'ADSL'
        option health_interval '10'
        option icmp_hosts 'dns'
        option timeout '3'
        option health_fail_retries '3'
        option health_recovery_retries '5'
        option priority '1'
        option manage_state 'yes'
        option exclusive_group '0'
        option ifup_retry_sec '300'
        option ifup_timeout_sec '40'
```

```
config interface 'Ethernet'

option health_interval '10'

option icmp_hosts 'dns'

option timeout '3'

option health_fail_retries '3'

option health_recovery_retries '5'

option priority '2'

option manage_state 'yes'

option exclusive_group '0'

option ifup_retry_sec '300'

option ifup_timeout_sec '40'
```

The following output shows the multi-WAN standard stop/start commands for troubleshooting.

```
root@VA_router:~# /etc/init.d/multiwan
Syntax: /etc/init.d/multiwan [command]
```

#### Available commands:

```
start Start the service
stop Stop the service
restart Restart the service
reload Reload configuration files (or restart if that fails)
enable Enable service autostart
disable Disable service autostart
```

When troubleshooting, make sure that the routing table is correct using route -n.

Ensure all parameters in the multi-WAN package are correct. The name used for multi-WAN interfaces must be identical, including upper and lowercases, to the interface name defined in the network configuration.

To check the names and settings are correct, browse to **Network - > interfaces** (or alternatively, run: cat/etc/config/network through CLI).

Enter the name of the WAN interface to configure, and then click **Add**. The new section for configuring specific parameters will appear.

# 24 Automatic operator selection

This section describes how to configure and operate the Automatic Operator Selection feature of a Virtual Access router.

When the roaming SIM is connected, the radio module has the ability to scan available networks. The router, using mobile and multi-WAN packages, finds available networks to create and sort interfaces according to their signal strength. These interfaces are used for failover purposes.

## 24.1 Configuration package used

Package	Sections
Multiwan	General, interfaces
Mobile	Main, template interface
Network	2G/3G/4G interface

# 24.2 Configuring automatic operator selection via the web interface

While the router boots up it checks for mobile networks. Based on available networks, the router creates interfaces and the multiwan package is used to run failover between interfaces. Typically these auto-generated interfaces are sorted by signal strength.

Details for these interfaces are provided in the mobile package. When you have created the interfaces, Multi-WAN manages the operation of primary (predefined) and failover (auto created) interfaces.

Multi-WAN periodically does a health check on the active interface. A health check comprises of a configurable combination of the following:

- interface state
- pings to an ICMP target
- signal level checks using signal threshold, RSCP threshold and ECIO threshold option values

A fail for any of the above health checks results in an overall fail. After a configurable number of health check failures, multiwan will move to the next highest priority interface. Multi-WAN will optionally stop the failed interface and start the new interface, if required.

In some circumstances, particulary in mobile environments, it is desirable for a primary interface to be used whenever possible. In this instance, if the active interface is a not the primary interface, multiwan will perform a health check on the primary interface after a configurable period. If the health checks pass for the configured number of recovery health checks then the primary interface will be used.

There are typically three scenarios:

- Primary Mobile Provider (PMP) + roaming: pre-empt enabled
- PMP + roaming: pre-empt disabled
- No PMP + roaming

## 24.2.1 Scenario 1: PMP + roaming: pre-empt enabled

#### 24.2.1.1 Overview

In this scenario, the PMP interface is used whenever possible.

The PMP interface is attempted first. When the health checks fail on the PMP interface, and Multi-WAN moves to an autogenerated interface, a timer is started <code>multiwan</code> option <code>ifup\_retry\_sec</code>. On expiration of this timer, multiwan will disconnect the current interface and retry the PMP interface.

The PMP interface will then be used if the configurable number of health checks pass the checks.

#### 24.2.1.2 Software operation

- 1. Multiwan first attemts to bring up the PMP interface. If the PMP interface connects within the time set by multiwan option ifup\_timeout continue to step 2. Otherwise go to step 4.
- 2. A health check is periodically done on the PMP interface as determined by the multiwan option health\_interval. If the health check fails for the number of retries (multiwan option health\_fail\_retries), disconnect the PMP interface.
- 3. Connect the first auto-generated interface.
- 4. If the interface connects within the time set by multiwan option ifup\_timeout continue to step 5, otherwise multiwan moves to the next auto-generated interface.
- 5. Wait until the health check fails on the auto-generated interface, or until the PMP interface is available to connect after it was disconnected in step 2. (multiwan option ifup\_retry\_sec).
- 6. Disconnect auto-generated interface.
- 7. If the interface was disconnected due to health check failure then connect the next auto-generated interface and repeat step 4. If the interface was disconnected because ifup\_retry\_sec of PMP interface timed out, then go back to step 1 and repeat the process.

The PMP predefined interface is defined in the network package. Ensure the interface name matches the interface name defined in the multiwan package.

#### 24.2.1.3 Create a primary predefined interface

In the web interface top menu, go to **Network ->Interfaces**. The Interfaces page appears.

LAN **Interfaces** Interface Overview Network Status Actions **Uptime:** 6h 37m 34s LAN Stop Edit Connect Delete MAC Address: 00:E0:C8:10:0E:E6 eth0 RX: 431.31 MB (4672877 Pkts.) TX: 1.68 MB (21023 Pkts.) IPv4: 10 1 10 93/16 Uptime: 6h 37m 38s LOOPBACK Stop Edit Delete Connect MAC Address: 00:00:00:00:00:00 RX: 9.99 MB (109997 Pkts.) TX: 9.99 MB (109997 Pkts.) IPv4: 127.0.0.1/8 IPv6: 0:0:0:0:0:0:0:1/128 Add new interface.

Figure 109: The interface overview page

Click **Add new interface...** The Create Interface page appears.



Figure 110: The create interface page

Web Field/UCI/Package Option	Description	
Web: Name of the new interface	Type the name of the	ne new interface.
UCI: network.3g_s <sim-< th=""><td>Type the interface r</td><td>name in following format:</td></sim-<>	Type the interface r	name in following format:
number>_ <short-operator-name>.</short-operator-name>		- <short-operator-name>. Where <sim-< p=""></sim-<></short-operator-name>
Opt: 3g_s <sim-number>_<short-< th=""><td></td><td>r of roaming SIM (1 or 2) and <short-< td=""></short-<></td></short-<></sim-number>		r of roaming SIM (1 or 2) and <short-< td=""></short-<>
operator-name>.		first four alphanumeric characters of operator by 'AT+COPS=?' command).
	Type the short oper	rator name in lower case, for example:
	Operator name	First four alphanumeric numbers
	Vodafone UK	voda
	02 – UK	o2uk
	Orange	oran

Web: Protocol of the new interface	Protocol type. S	Select LTE/UMTS/GPRS/EV-DO.
UCI: network.[x].proto	Option	Description
Opt: proto	Static	Static configuration with fixed address and netmask.
	DHCP Client	Address and netmask are assigned by DHCP.
	Unmanaged	Unspecified
	IPv6-in-IPv4 (RFC4213)	IPv4 tunnels that carry IPv6.
	IPv6 over IPv4	IPv6 over IPv4 tunnel.
	GRE	Generic Routing Encapsulation.
	IOT	
	L2TP	Layer 2 Tunnelling Protocol.
	PPP	Point to Point Protocol.
	PPPoE	Point to Point Protocol over Ethernet.
	PPPoATM	Point to Point Protocol over ATM.
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.
Web: Create a bridge over multiple	Enables bridge	between two interfaces.
interfaces	0	Disabled.
UCI: network.[x].typeOpt: type	1	Enabled.
Web: Cover the following interface UCI: network.[x].ifname Opt: ifname	Selects interfac	es for bridge connection.

Table 69: Information table for the create interface page

Click **Submit**. The Common Configuration page appears.

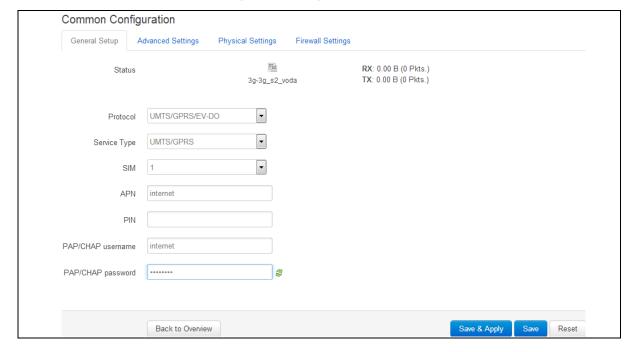


Figure 111: The common configuration page

Web Field/UCI/Package Option	Description	
Web: Protocol		Select LTE/UMTS/GPRS/EV-DO.
UCI: network.[x].proto	Option	Description
Opt: proto	Static	Static configuration with fixed address and netmask.
	DHCP Client	Address and netmask are assigned by DHCP.
	Unmanaged	Unspecified
	IPv6-in-IPv4 (RFC4213)	IPv4 tunnels that carry IPv6.
	IPv6 over IPv4	IPv6 over IPv4 tunnel.
	GRE	Generic Routing Encapsulation.
	IOT	
	L2TP	Layer 2 Tunnelling Protocol.
	PPP	Point to Point Protocol.
	PPPoE	Point to Point Protocol over Ethernet.
	PPPoATM	Point to Point Protocol over ATM.
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.
Web: Service Type	Service type that	at will be used to connect to the network.
UCI: network.[x].service Opt: service	gprs_only	Allows GSM module to only connect to GPRS network.
'	Ite_only	Allows GSM module to only connect to LTE network.
	cdma	Allows GSM module to only connect to CDMA network.
	auto	GSM module will automatically detect the best available technology code.
Web: SIM	Select SIM 1 or	SIM 2.
UCI: network.[x].sim Opt: sim	auto	Automatically detects which SIM slot is used.
	SIM 1	Selects SIM from slot 1.
	SIM 2	Selects SIM from slot 2.
Web: APN UCI: network.[x].apn Opt: apn	APN name of Me	obile Network Operator.
Web: APN username UCI: network.[x].username Opt: username	Username used	to connect to APN.
Web: APN password UCI: network.[x].password Opt: password	Password used	to connect to APN.
Web: Modem Configuration UCI: N/A Opt: N/A	Click the link if Mobile Manager	you need to configure additional options from :

Table 70: Information table for the general set up section

Click Save & Apply.

#### 24.2.1.4 Set multi-WAN options for primary predefined interface

On the web interface go to Network ->Multi-Wan. The Multi-WAN page appears.



Figure 112: The multi-WAN page

In the WAN Interfaces section, type in the name of the Multi-WAN interface.

Click Add. The Multi-WAN page appears.

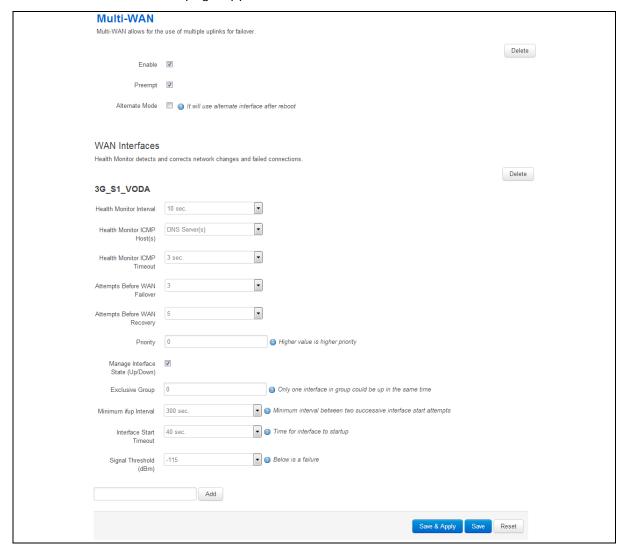


Figure 113: The multi-WAN page

Web Field/UCI/Package Option	Description		
Web: Enable	Enables multiv	van.	
UCI: multiwan.config.enabled	0	Disable	ed.
Opt: enabled		Enable	
Web: Preempt UCI: multiwan.config.preempt Opt: preempt		ep tryin	ore-emption for multiwan. If enabled, the g to connect to a higher priority interface set.
opti prosilipt	0	Disable	ed.
	1	Enable	d.
Web: Alternate Mode UCI: multiwan.config.alt	router will use	an alt	alternate mode for multiwan. If enabled, the ernate interface after reboot.
Opt: alt		Disable	
	· ·	Enable	
Web: WAN Interfaces UCI: multiwan.3g_s <sim- number="">_<short-operator-name> Opt: 3g_s<sim-number>_<short- operator-name=""></short-></sim-number></short-operator-name></sim->	Provide the sa below and clic		erface name as chosen in multiwan section
Web: Health Monitor Interval UCI: multiwan.[x].health_interval Opt: health_interval	Health Monito  Inter	r interv face sta	neck the health status of the interface. The val will be used for: ate checks
	_	interva	
Mak. Haalth Maritan ICMD Haat(a)			gth checks
Web: Health Monitor ICMP Host(s)	Disable	larget i	P address for ICMP packets.
UCI: multiwan.[x].icmp_hosts Opt: icmp_hosts			Disables the option.  DNS IP addresses will be used.
Opt. Idinp_nosts	DNS servers		
	custom		Gateway IP address will be used.  Ability to provide IP address.
Web: Health Monitor Conntrack Test Host(s)	Conntrack is t	he feat	ture used to track if there is any traffic to nation within the health interval.
UCI: multiwan.wan.conntrack_hosts Opt: conntrack_hosts	Conntrack_ho usually the icr		ion defines the IP for conntrack to track – st IP is used.
	does not send	a ping	rack_hosts IP is detected then multiwan health check to the icmp_host otherwise a late to the icmp_host.
			rack_hosts is checked if the health interval is tes. This time threshold currently cannot be
	Conntrack is g	general	ly used to limit the traffic sent on a GSM
		when h	rack checks for traffic from icmp_host IP nealth_interval is greater than 5 minutes.
			ack disabled.
		conntr	es an IP other than the icmp_host for ack to track.
Web: Health Monitor ICMP Timeout			seconds. Choose the time in seconds that CMP will timeout at.
UCI: multiwan.[x].timeout			seconds for ping reply.
Opt: timeout	Range	.vait J	seed to ping topij.
Web: Health Monitor ICMP Interval		terval k	petween multiple pings sent at each health
UCI: multiwan.wan.icmp_interval	check.		
Opt: icmp_interval	1		
, 	Range		
Web: Health Monitor ICMP Count	Defines the nu	umber (	of pings to send at each health check.
UCI: multiwan.wan.icmp_count	1		
Opt: icmp_count	Range		

Web: Attempts Before WAN Failover	Sets the amount of health monitor retries before interface is considered a failure.
UCI: multiwan. [x].health_fail_retries	3
Opt: health_fail_retries	
Wah, Attampta Dafara WAN Dagayary	Range Sets the number of health monitor checks before the interface is
Web: Attempts Before WAN Recovery UCI: multiwan.	considered healthy. Only relevent if pre-empt mode is enbled.
[x].health_recovery_retries	5
Opt: health_recovery_retries	Range
Web: Priority	Specifies the priority of the interface. The higher the value, the higher the priority.
UCI: multiwan.[x].priority Opt: priority	This multiwan interface priority must be higher than the one specified in the priority field in the 'Roaming Interface Template' page described in the following section.
	0
	Range
Web: Exclusive Group UCI: multiwan.[x].exclusive_group	Defines the group to which the interface belongs; only one interface can be active.
Opt: exclusive_group	0
	Range
Web: Manage Interface State (Up/Down) UCI: multiwan.[x].manage_state	Defines whether multi-WAN will start and stop the interface.  Select <b>Enabled</b> .
Opt: manage_state	0 Disabled.
- 1 - 3 - 2	1 Enabled.
Web: Minimum ifup Interval UCI: multiwan.[x].ifup_retry_sec	Specifies the interval in seconds before retrying the primary interface when pre-empt mode is enabled.
Opt: ifup_retry_sec	
Web: Interface Start Timeout	Specifies the time in seconds for interface to start up. If it is not up after this period, it will be considered a fail.
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout	
Web: Interface Start Timeout	up after this period, it will be considered a fail.
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40 40 seconds
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm)	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold Opt: signal_threshold  Web: RSCP Threshold (dBm) UCI: multiwan.[x].rscp_threshold	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold Opt: signal_threshold  Web: RSCP Threshold (dBm)	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold Opt: signal_threshold  Web: RSCP Threshold (dBm) UCI: multiwan.[x].rscp_threshold	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold Opt: signal_threshold  Web: RSCP Threshold (dBm) UCI: multiwan.[x].rscp_threshold Opt: rscp_threshold  Web: ECIO Threshold (dB) UCI: multiwan.[x].ecio_threshold	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40
Web: Interface Start Timeout UCI: multiwan.[x].ifup_timeout Opt: ifup_timeout  Web: Signal Threshold (dBm) UCI: multiwan.[x].signal_threshold Opt: signal_threshold  Web: RSCP Threshold (dBm) UCI: multiwan.[x].rscp_threshold Opt: rscp_threshold  Web: ECIO Threshold (dB)	up after this period, it will be considered a fail.  Choose timer greater than 120 seconds.  40

Web: Signal Test UCI: multiwan.[x].signal_test		nes script to test various signal characteristics in multiwan al test. For example:
Opt: signal_test		on signal_test '(tech == 0) then (sig_dbm > -70) else o_dbm > -105 and ecio_db > -15)'
	dete techi	states that when technology is GSM a health fail is rmined when signal strength is less than -70dBm. When nology is not GSM a health fail occurs when either rscp_dbm below -105dBm or ecio_db falls below -15dB.
	Tech	values are:
	0 GSM	
	1	GSM Compact
	2	UTRAN
	3	GSM w/EGPRS
	4	UTRAN w/HSPDA
	5	UTRAN w/HSUPA
	6	UTRAN w/HSUPA and HSDPA
	7	E-UTRAN

Table 71: Information table for Multi-WAN page

Click Save.

## 24.2.2 Set options for automatically created interfaces (failover)

From the top menu on the web interface page, select **Services -> Mobile Manager**. The Mobile Manager page appears.

There are four sections in the mobile manager page:

Section	Description
Basic settings	Enable SMS, configure SIM pin code, select roaming SIM, collect ICCCIDs and set IMSI.
Advanced	Configure advanced options such as collect ICCIDs and temperature polling interval.
CDMA*	CDMA configuration
Callers	Configure callers that can use SMS.
Roaming Interface Template	Configure Preferred Roaming List options.
*Option available onl	y for Telit CE910-SL module.

# 24.2.3 Mobile manager: basic settings

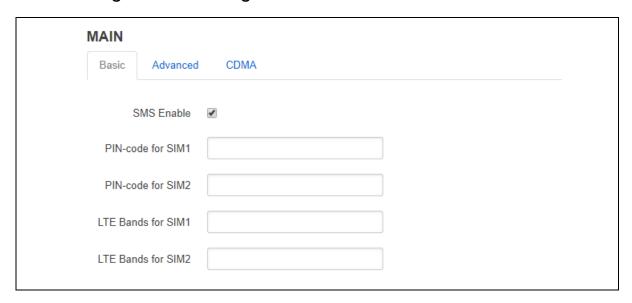


Figure 114: The mobile manager basic page

	1	
Web Field/UCI/Package Option	Description	
Web: SMS Enable	Enables or dis	ables SMS functionality.
UCI: mobile.main.sms	0	Disabled.
Opt: sms	1	Enabled.
Web: PIN code for SIM1	Depending on	the SIM card specify the pin code for SIM 1.
UCI: mobile.main.sim1pin	Blank	
Opt: sim1pin	Range	Depends on the SIM provider.
Web: PIN code for SIM2	Depending on	the SIM card specify the pin code for SIM 2.
UCI: mobile.main.sim2pin	Blank	
Opt: sim2pin	Range	Depends on the SIM provider.
Web: LTE bands for SIM1	Depending on	the SIM card specify the LTE bands for SIM 1.
UCI: mobile.main.sim1_lte_bands	Comma delim	iter. Example:
Opt: sim1_lte_bands		te_bands '3,20' nds to 3 and 20.
		ly only supported by Hucom/Wetelcom, Cellient MPL200 and Asiatel.
	Blank	
	Range	LTE bands range from 1 to 70.
Web: LTE bands for SIM2 UCI: mobile.main.sim2_Ite_bands Opt:sim2_Ite_bands	Comma delim option sim1_lt	the SIM card specify the LTE bands for SIM 2. iter. Example: te_bands '3,20' ands to 3 and 20.
	Note: current	ly only supported by Hucom/Wetelcom, Cellient MPL200 and Asiatel.
	Blank	
	Range	LTE bands range from 1 to 70.

Table 72: Information table for mobile manager basic settings

## 24.2.4 Mobile manager: advanced settings

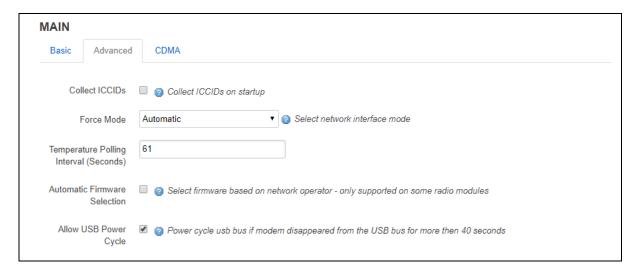


Figure 115: The mobile manager advanced page

Web Field/UCI/Package Option	Description	
Web: Collect ICCIDs UCI: mobile.main.init_get_iccids Opt: init_get_iccids	collection fund ICCIDs will be	ables integrated circuit card identifier ICCID's ctionality. If enabled then both SIM 1 and SIM 2 collected otherwise it will default to SIM 1. This ed under mobile stats.  Disabled.
	1	Enabled.
Web: Force Mode UCI: mobile.main.force_mode Opt: force_mode	mode. The mo	per to operate mobile modem in PPP or Ethernet by bounder. In general, this is Ethernet mode (default).  Ethernet mode (option not present).
	PPP	Enable PPP mode.
Web: Temperature Polling Interval UCI: mobile.main.temp_poll_interval_sec		me in seconds to poll the mobile module for Set to <b>0</b> to disable.
Opt: temp_poll_interval_sec	61	61 seconds.
	Range	
Web: Automatic Firmware Selection UCI:		er to use time obtained from the mobile carrier to stem clock when NTP is enabled.
mobile.main.enable_firmware_autoselect	0	Disabled.
Opt: enable_firmware_autoselect	1	Enabled.
Web: Allow USB Power Cycle UCI: mobile.main.allow_usb_powercycle Opt: allow_usb_powercycle	Enables the selection of an operator-specific firmware in the radio module. The selection is based on the ICCID of the used SIM. At module initialisation the IMSI is checked and if necessary the correct firmware image in the module will be activated.	
		on of the firmware will lead to delayed startup of nterface associated with the radio module.
	LE910NA V2 n	ture is currently only supported for the Telit nodule. Here a Verizon-specific firmware will be ICCID starts with "891480".
	0	Disabled.
	1	Enabled.
Web: n/a UCI: mobile.main.disable_time		er to use time obtained from the mobile carrier to stem clock when NTP is enabled.
Opt: disable_time	0	Disabled.
	1	Enabled.

Table 73: Information table for mobile manager advanced settings

## 24.2.5 Mobile manager: CDMA settings

This configuration page is only supported for the Telit CE910-SL CDMA module.

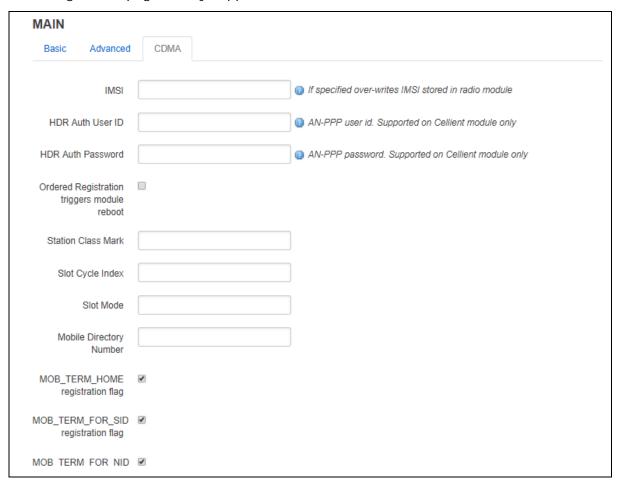


Figure 116: The mobile manager CDMA page

Web Field/UCI / Package Option	Description	
Web: IMSI UCI: mobile.main.imsi	Allows the IMSI be changed.	(International Mobile Subscriber Identity) to
Opt: imsi	Default P	Programmed in module.
·	Digits L	Jp to 15 digits.
Web: HDR Auth User ID	AN-PPP user ID.	Supported on Cellient (CDMA) modem only.
UCI: mobile.main.hdr_userid	Blank	
Opt: hdr_userid	Range D	Depends on the CDMA provider.
Web: HDR Auth User Password UCI: mobile.main.hdr_password	AN-PPP password only.	d. Supported on Cellient (CDMA) modem
Opt: hdr_password	Blank	
	Range D	Depends on the CDMA provider.
Web: Ordered Registration triggers module reboot		les rebooting the module after Order mand is received from a network.
UCI: mobile.main.	0 [	Disabled.
mobile.main.cdma_ordered_registration_rebo ot_enabled	1 E	Enabled.
Opt: cdma_ordered_registration_reboot_enabled		

	T
Web: Station Class Mark	Allows the station class mark for the MS to be changed.
UCI: mobile.main.cdma_station_class_mark	58
Opt: cdma_station_class_mark	0-255
Web: Slot Cycle Index	The desired slot cycle index if different from the default.
UCI: mobile.main.cdma_slot_cycle_index	2
Opt: cdma_slot_cycle_index	0-7
Web: Slot Mode	Specifies the slot mode.
UCI: mobile.main.cdma_slot_mode	0
Opt: cdma_slot_mode	
	Allows the good live the ground of (AADAI) to be about a
Web: Mobile Directory Number	Allows the mobile directory number (MDN) to be changed.
UCI: mobile.main.cdma_mobile_directory_number	Default Programmed in module.
Opt: cdma_mobile_directory_number	Digits Up to 15 digits.
Web: MOB_TERM_HOME registration flag	The MOR TERM HOME registration flog
	The MOB_TERM_HOME registration flag.
UCI: mobile.main. cdma_mob_term_home_registration_flag	0 Disabled.
Opt:	1 Enabled.
cdma_mob_term_home_registration_flag	
Web: MOB_TERM_FOR_SID registration flag	The MOB_TERM_FOR_SID registration flag.
UCI: mobile.main.	0 Disabled.
cdma_mob_term_for_sid_registration_flag	1 Enabled.
Opt:	I Enabled.
cdma_mob_term_for_sid_registration_flag	
Web: MOB_TERM_FOR_NID registration flag	The MOB_TERM_FOR_NID registration flag
UCI: mobile.main.	0 Disabled.
cdma_mob_term_for_nid_registration_flag	1 Enabled.
Opt:	
•	
cdma_mob_term_for_nid_registration_flag	Allows the goods averland class to be changed
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control	Allows the access overload class to be changed.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI:	Default Programmed into module as part of IMSI.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI:  mobile.main.cdma_access_overload_control	
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control	Default Programmed into module as part of IMSI.  Range 0-7
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System	Default Programmed into module as part of IMSI.  Range 0-7  The CDMA Preferred Serving System(A/B).
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI:	Default Programmed into module as part of IMSI.  Range 0-7
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system	Default Programmed into module as part of IMSI.  Range 0-7  The CDMA Preferred Serving System(A/B).
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B). 5
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system	Default Programmed into module as part of IMSI.  Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B). 5
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference. 4
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a	Default Programmed into module as part of IMSI.  Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  UCI: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference. 4  Allows the primary channel (A) to be changed. 283 1-2016 Any band class 5 channel number.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference. 4  Allows the primary channel (A) to be changed. 283 1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed. 384
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference. 4  Allows the primary channel (A) to be changed. 283 1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed. 384
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b  Opt: cdma_primary_channel_b  Secondary Channel A  UCI:	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  Digital/Analog Mode Preference.  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.  384  1-2016 Any band class 5 channel number
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b  Opt: cdma_primary_channel_b  Web: Secondary Channel A  UCI: mobile.main.cdma_secondary_channel_a	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.  384  1-2016 Any band class 5 channel number  Allows the secondary channel (A) to be changed.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b  Opt: cdma_primary_channel_b  Secondary Channel A  UCI:	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.  384  1-2016 Any band class 5 channel number  Allows the secondary channel (A) to be changed.  691  1-2016 Any band class 5 channel number.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b  Opt: cdma_primary_channel_b  Web: Secondary Channel A  UCI: mobile.main.cdma_secondary_channel_a	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.  384  1-2016 Any band class 5 channel number  Allows the secondary channel (A) to be changed.  691
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b  Opt: cdma_primary_channel_b  Web: Secondary Channel A  UCI: mobile.main.cdma_secondary_channel_a  Opt: cdma_secondary_channel_a  Web: Secondary Channel B  UCI:	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.  384  1-2016 Any band class 5 channel number  Allows the secondary channel (A) to be changed.  691  1-2016 Any band class 5 channel number.
cdma_mob_term_for_nid_registration_flag  Web: Access Overload Control  UCI: mobile.main.cdma_access_overload_control  Opt: cdma_access_overload_control  Web: Preferred Serving System  UCI: mobile.main.cdma_preferred_serving_system  Opt: cdma_preferred_serving_system  Web: Digital Analog Mode Preference  UCI: cdma_digital_analog_mode_preference  Opt: cdma_digital_analog_mode_preference  Web: Primary Channel A  UCI: mobile.main.cdma_primary_channel_a  Opt: cdma_primary_channel_a.  Web: Primary Channel B  UCI: mobile.main.cdma_primary_channel_b  Opt: cdma_primary_channel_b  Web: Secondary Channel A  UCI: mobile.main.cdma_secondary_channel_a  Opt: cdma_secondary_channel_a  Web: Secondary Channel B	Default Programmed into module as part of IMSI. Range 0-7  The CDMA Preferred Serving System(A/B).  5  Digital/Analog Mode Preference.  4  Allows the primary channel (A) to be changed.  283  1-2016 Any band class 5 channel number.  Allows the primary channel (B) to be changed.  384  1-2016 Any band class 5 channel number  Allows the secondary channel (A) to be changed.  691  1-2016 Any band class 5 channel number.  Allows the secondary channel (B) to be changed.

Web: Preferred Forward & Reverse RC UCI: mobile.main.cdma_preferred_forward_and_re verse_rc Opt:cdma_preferred_forward_and_reverse_rc	The Preferred Forward & Reverse RC value, this takes the form "forward_rc,reverse_rc"  Format: forward radio channel, reverse radio channel  Default: 0,0
Web: SID-NID pairs UCI: mobile.main.cdma_sid_nid_pairs Opt:cdma_sid_nid_pairs	Allows specification of SID:NID pairs, this takes the form "SID1,NID1,SID2,NID2, Format: SID1 (0-65535),NID (0-65535) Default: 0,65535

Table 74: Information table for mobile manager CDMA settings

# 24.2.6 Mobile manager: callers

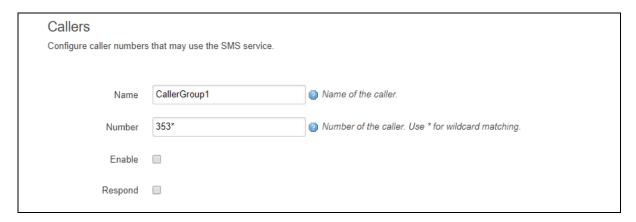


Figure 117: The mobile manager CDMA page

Web Field/UCI/Package Option	Description	
Web: Name	Name assigne	d to the caller.
UCI: mobile.@caller[0].name	Blank	
Opt: name	Range	No limit
Web: Number UCI: mobile.@caller[0].number	caller number	e caller allowed to SMS the router. Add in specific s, or use the * wildcard symbol.
Opt: number	Blank	No limit
	Range Characters	Global value (*) is accepted. International value (+) is accepted.
Web: Enable	Enables or dis	ables incoming caller ID.
UCI: mobile.@caller[0].enabled	0	Disabled.
Opt: enabled	1	Enabled.
Web: Respond UCI: mobile.@caller[0].respond	If checked, the want the route	e router will return an SMS. Select <b>Respond</b> if you er to reply.
Opt: respond	0	Disabled.
	1	Enabled.

Table 75: Information table for mobile manager callers settings

## 24.2.7 Roaming interface template

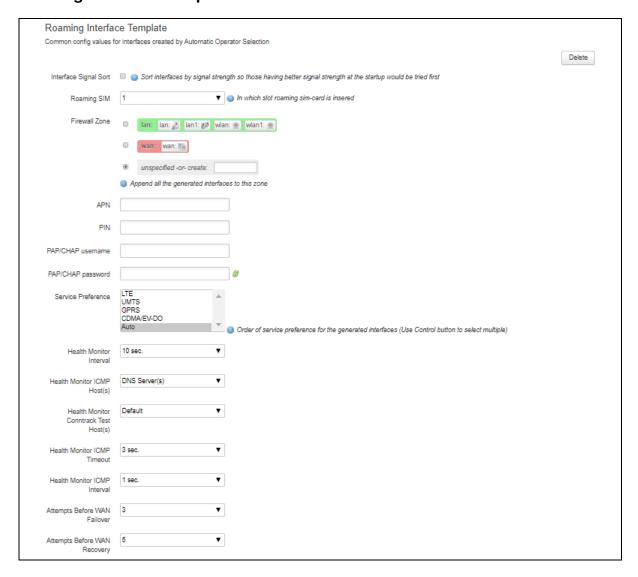


Figure 118: The roaming interface template page

Web Field/UCI/Package Option	Description
Web: Interface Signal Sort UCI:	Sorts interfaces by signal strength priority, so those that have a better signal strength will be tried first.
mobile.@roaming_template[0].sort_sig_st rength  Opt: sort_sig_strength	0 Disabled. 1 Enabled.
Web: Roaming SIM	Sets in which slot to insert roaming SIM card.
UCI: mobile.main.roaming_sim	1 SIM slot 1.
Opt: roaming_sim	2 SIM slot 2.
Web: Firewall Zone UCI: mobile.@roaming_template[0].firewall_zo ne	Adds all generated interfaces to this zone. Select existing zone or click <b>unspecified</b> or <b>create</b> to create new zone.
Opt: firewall_zone	
Web: APN UCI: mobile.@roaming_template[0].apn Opt: apn	APN name of Mobile Network Operator.

Web: PIN	SIM card's P	IN number.	
UCI:			
mobile.@roaming_template[0].pincode			
Opt: pincode			
Web: PAP/CHAP username	Username us	sed to connect to APN.	
UCI:			
mobile.@roaming_template[0].username			
Opt: username			
Web: PAP/CHAP password	Password us	ed to connect to APN.	
UCI:			
mobile.@roaming_template[0].password			
Opt: password	Define		
Web: Service Order		ace separated list of services, in preferre s are gprs, umts, lte, auto.	ea oraer.
UCI: mobile.@roaming_template[0].service_or	•	ervice order is defined, then the configur	red Service
der	Type is used		ed Sel vice
Opt: service_order		aming_template[0].service_order="g	ers umts
	lte auto"		
	Blank	Automatically detect best service,	
	Range	gprs umts Ite auto	
Web: Health Monitor Interval		iod, in seconds, to check the health statue e Health Monitor interval will be used for	
UCI: mobile.@roaming_template[0].health_int	Interface sta		
erval	Ping interval		
Opt: health_interval	Signal strend		
· -	10	health check every 10 seconds,	
		Health check every 10 seconds,	
Mah. Haalib Manitan ICMD Haat(a)	Range	est ID address for ICMD resilents	<u> </u>
Web: Health Monitor ICMP Host(s) UCI:	Web	get IP address for ICMP packets.	UCI
mobile.@roaming_template[0].icmp_host		Description  Disables the autism	
s	Disable	Disables the option.	disable
Opt: icmp_hosts	DNS servers	DNS IP addresses will be used.	dns
	WAN	Gateway IP address will be used.	gateway
	gateway	dateway ii address wiii be used.	gateway
	custom	Ability to provide IP address. Multiple	
		pings targets can be entered, comma	
		separated. Pings to both must fail for health check to fail. Example:	
		option icmp_hosts '1.1.1.1,2.2.2.2'	
	I I.	ορτίοι ιστιρ_ποστο   1.1.1.1,2.2.2.2	

Web: Health Monitor Conntrack Test	Conntrack is	the feature used to track if there is any	traffic to	
Host(s)	and from an	and from an IP destination within the health interval.		
UCI: mobile.@roaming_template[0].conntrack_		The Conntrack_hosts option defines the IP for conntrack to track, usually the icmp_host IP is used.		
hosts Opt: conntrack_hosts	does not ser	he conntrack_hosts IP is detected then n nd a ping health check to the icmp_host; as normal to the icmp_host.		
		ne conntrack_hosts is checked if the heal of 5 minutes. This time threshold currently l.		
	Conntrack is network.	generally used to limit the traffic sent of	n a GSM	
	Web	Description	UCI	
	Default	Conntrack checks for traffic from icmp_host IP when health_interval is greater than 5 minutes.		
	Disable	Conntrack checks for traffic from icmp_host IP when health_interval is greater than 5 minutes.	disable	
	custom	Specifies an IP other than the icmp_host for conntrack to track.		
Web: Health Monitor ICMP Timeout UCI:	Specifies the timeout at.	e time in seconds that Health Monitor ICN	/IP will	
mobile.@roaming_template[0].timeout Opt: timeout		meout in seconds. Choose the time in secononitor ICMP will timeout at.	onds that	
	3	Wait 3 seconds for ping reply.		
	Range			
Web: Health Monitor ICMP Interval		Defines the interval, in seconds, between multiple pings sent at each health check.		
UCI: mobile.@roaming_template[0].interval	1			
Opt: icmp_interval	Range			
Web: Attempts Before WAN Failover	Defines the i	number of health check failures before in	terface is	
UCI: mobile.@roaming_template[1].health_fail	3			
_retries	Range			
Opt: health_fail_retries	,			
Web: Attempts Before WAN Recovery		mber of health check passes before the in nealthy. This field is not used for a roamin		
UCI: mobile.@roaming_template[0].health_rec	5	leaning. This field is flot used for a realistic	ig template.	
overy_retries	Range			
Opt: health_recovery_retries				
Web: Priority UCI:	Type the price pri	ority number. The higher the value, the h	nigher the	
mobile.@roaming_template[0].priority		/AN interface priority must be lower than	the one	
Opt: priority		the priority field for the PMP interface.		
	Range			
Web: Minimum ifup interval		a roaming interface.		
UCI: multiwan.wan.ifup_retry_sec	300	Retry primary interface every 300 second	nds.	
Opt: ifup_retry_sec	Range			
Web: Interface Start Timeout		e time in seconds for interface to start up	. If it is not	
UCI:		period, it will be considered a fail.		
mobile.@roaming_template[0].ifup_timeo ut_sec	40 Range	40 seconds		

\_\_\_\_

Web: Signal Threshold (dBm)
UCI:
mobile.@roaming\_template[0].signal\_threshold

Opt: signal\_threshold

Specifies the minimum RSCP signal strength in dBm before considering if the interface fails signal health check. Uses the value stored for rscp\_dbm in mobile diagnostics.

Range -46 to -115 dBm

-115dBm

Table 76: Information table for roaming interface template

When you have configured your settings, click Save & Apply.

In the top menu, select **System -> Reboot**. The System page appears.

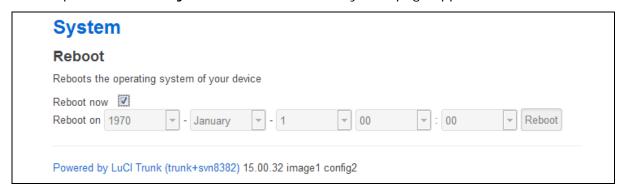


Figure 119: The reboot page

Check the **Reboot now** check box and then click **Reboot**.

## 24.2.8 Scenario 2: PMP + roaming: pre-empt disabled

As in the previous section, multi-WAN connects the PMP interface and uses auto created interfaces for failover.

However, in this scenario, the auto-created interface will not be disconnected as soon as the <code>ifup\_retry\_sec</code> expires for the PMP interface. The primary interface will be reconnected when the current auto-created interface fails multiwan health checks after expiration of the <code>ifup\_retry\_sec</code> timer.

Follow the instructions in the section above for creation of the PMP interface, multi-WAN and Mobile Manager roaming interfaces. The only change in configuration compared to the PMP + roaming: pre-empt enabled scenario is that you must disable the pre-empt option in the multi-WAN package.

#### 24.2.8.1 Set multi-WAN options for pre-empt disabled

To disable PMP + roaming pre-empt, in the top menu, select **Network -> Multi-Wan**.

In the Multi-WAN page, ensure Preempt is not selected.

Multi-WAN

Multi-WAN allows for the use of multiple uplinks for failover.

Enable

Preempt

Figure 120: The multi-wan page, pre-empt not selected

It will use alternate interface after reboot

Click Save & Apply.

In the top menu, select **System -> Reboot**. The System Reboot page appears.



Figure 121: The system reboot page

Check the **Reboot now** check box and then click **Reboot**.

Alternate Mode

## 24.2.9 Scenario 3: No PMP + roaming

In this scenario there is no PMP interface that can be used for a connection. The router scans the available mobile networks at boot and sorts the networks according to signal strength.

The network that offers the best signal strength will be the first to connect. Multi-WAN then controls the failover between the available networks.

·

Multiwan periodically does a health check on the interface. A health check comprises of a configurable combination of the following:

- Interface state
- Pings to an ICMP target
- Signal level checks using signal threshold, RSCP threshold and ECIO threshold option values

A fail for any of the above health checks results in a fail. After a configurable number of health check failures, Multi-WAN will disconnect the failed interface and attempt to connect to the next best roaming interface.

## 24.2.10 Set options for automatically created interfaces (failover)

In the top menu on the web interface page, select **Services -> Mobile Manager**. The Mobile Manager page appears.

There are three sections:

Basic settings	Configure SMS, select roaming SIM and collect ICCCIDs.
Callers	Configure callers that can use SMS.
Roaming Interface Template	Configure common values for interface created by Automatic Operator Selection.

## 24.2.10.1 Basic settings

Web Field/UCI/Package Option	Description	í .
Web: SMS Enable	Enables SMS	
UCI: mobile.main.sms	no	Disabled.
Opt: sms	yes	Enabled.
Web: Collect ICCIDs UCI: mobile.main.init_get_iccids Opt: init_get_iccids	Enables or disables integrated circuit card identifier ICCID's collection functionality. If enabled then both SIM 1 and SIM 2 ICCID's will be collected otherwise it will default to SIM 1. This will be display under mobile stats.	
	no	Disabled.
	yes	Enabled.
Web: PIN code for SIM1	Depending o	n the SIM card specify the pin code for SIM 1.
UCI: mobile.main.sim2pin	Blank	
Opt: sim2pin	range	
Web: PIN code for SIM2	Depending o	n the SIM card specify the pin code for SIM 2.
UCI: mobile.main.sim2pin	Blank	
Opt: sim2pin	Range	
Web: HDR Auto User ID	AN-PPP user	ID. Supported on Cellient (CDMA) modem only.
UCI: mobile.main.hdr_userid	Blank	
Opt: hdr_userid	Range	

Table 77: Information table for mobile manager basic settings

## 24.2.10.2 Caller settings

Web Field/UCI/Package Option	Description
Web: Name	Name assigned to the caller.
UCI: mobile.@caller[0].name	Blank
Opt: name	Range
Web: Number UCI: mobile.@caller[0].number	Number of the caller allowed to SMS the router. Add in specific caller numbers, or use the wildcard symbol.
Opt: number	Blank
·	Range
Web: Enable	Enables or disables incoming caller ID.
UCI: mobile.@caller[0].enabled	no Disabled.
Opt: enabled	yes Enabled.
Web: Respond UCI: mobile.@caller[0].respond	If checked, the router will return an SMS. Select <b>Respond</b> if you want the router to reply.
Opt: respond	0 Disabled.
and the second s	1 Enabled.

Table 78: Information table for mobile manager caller settings

## 24.2.11 Roaming interface template



Figure 122: The roaming interface template page

Web Field/UCI/Package Option	Description		
Web: Interface Signal Sort		ces by signal strength priority so those th	at have a
UCI:	better signal	strength will be tried first.	
mobile.@roaming_template[0].sort_sig_st rength			
Opt: sort_sig_strength			
Web: Roaming SIM	Sets which s	lot to insert roaming SIM card.	
UCI: mobile.main.roaming_sim	1	SIM slot 1.	
Opt: roaming_sim	2	SIM slot 2.	
Web: Firewall Zone	Adds all gene	erated interfaces to this zone.	
UCI:		ng zone or click unspecified or create	to create a
mobile.@roaming_template[0].firewall_zo ne	new zone.		
Opt: firewall_zone			
Web: APN	APN name of	Mobile Network Operator.	
UCI: mobile.@roaming_template[0].apn	A N Hame of	Wobile Network Operator.	
Opt: apn			
Web: PIN	SIM card's P	N number.	
UCI:	5 oai a 5 i		
mobile.@roaming_template[0].pincode			
Opt: pincode			
Web: PAP/CHAP username	Username us	sed to connect to APN.	
UCI:			
mobile.@roaming_template[0].username			
Opt: username			
Web: PAP/CHAP password	Password us	ed to connect to APN.	
UCI: mobile.@roaming_template[0].password			
Opt: password			
Web: Service Order		ace separated list of services, in preferred	l order.
UCI:	-	are gprs, umts, lte, auto.	
mobile.@roaming_template[0].service_or der	Type is used		
Opt: service_order	mobile.@roa	ming_template[0].service_order="gp: 	rs umts
	Blank	Automatically detect best service	
	Range	gprs umts Ite auto	
Web: Health Monitor Interval UCI:		od to check the health status of the inter or interval will be used for:	face. The
mobile.@roaming_template[0].health_int	• Inte	erface state checks	
erval	• Ping	ı interval	
Opt: health_interval	• Sigr	nal strength checks	
	10	health check every 10 seconds	
	Range		
Web: Health Monitor ICMP Host(s)	Specifies tar	get IP address for ICMP packets.	
UCI:	Web	Description	UCI
mobile.@roaming_template[0].icmp_host s	Disable	Disables the option.	disable
Opt: icmp_hosts	DNS servers	DNS IP addresses will be used.	dns
	WAN gateway	Gateway IP address will be used.	gateway
	custom	Ability to provide IP address. Multiple pings targets can be entered, comma separated. Pings to both must fail for health check to fail. Example:	
		option icmp_hosts '1.1.1.1,2.2.2.2'	

Web: Health Monitor Conntrack Test Conntrack is the feature used to track if there is any traffic to Host(s) and from an IP destination within the health interval. UCI: The Conntrack\_hosts option defines the IP for conntrack to track, mobile.@roaming\_template[0].conntrack\_ usually the icmp\_host IP is used. hosts If traffic to the conntrack\_hosts IP is detected then multiwan Opt: conntrack\_hosts does not send a ping health check to the icmp\_host; otherwise a ping is sent as normal to the icmp\_host. By default the conntrack\_hosts is checked if the health interval is greater than 5 minutes. This time threshold currently cannot be manipulated. Conntrack is generally used to limit the traffic sent on a GSM network Web Description UCI Default Conntrack checks for traffic from icmp\_host IP when health\_interval is greater than 5 minutes Disable Conntrack checks for traffic from disable icmp\_host IP when health\_interval is greater than 5 minutes custom Specifies an IP other than the icmp host for conntrack to track Web: Health Monitor ICMP Timeout Sets ping timeout in seconds. Choose the time in seconds that the health monitor ICMP will timeout at UCI: mobile.@roaming\_template[0].timeout Wait 3 seconds for ping reply. 3 Opt: timeout Range Web: Health Monitor ICMP Interval Defines the interval, in seconds, between multiple pings sent at each health check mobile.@roaming\_template[0].interval 1 Opt: icmp\_interval Web: Attempts Before WAN Failover Defines the number of health check failures before interface is disconnected 3 mobile.@roaming\_template[1].health\_fail retries Range Opt: health\_fail\_retries Web: Attempts Before WAN Recovery Sets the number of health check passes before the interface is considered healthy. This field is not used for a roaming template.  $mobile.@roaming\_template[0].health\_rec$ overy\_retries Opt: health\_recovery\_retries Web: Priority Type the priority number. The higher the value, the higher the priority. UCI: mobile.@roaming\_template[0].priority 0 Opt: priority Range Specifies the interval in seconds before retrying the primary Web: Minimum ifup interval interface when pre-empt mode is enabled. LICI: mobile.@roaming\_template[0].ifup\_retry\_ 300 Retry primary interface every 300 seconds sec Range Opt: ifup\_retry\_sec Web: Interface Start Timeout Specifies the time in seconds for interface to start up. If it is not up after this period, it will be considered a fail It is recommended to configure a value greater than 120 seconds. mobile.@roaming\_template[0].ifup\_timeo 40 ut sec Opt: ifup\_timeout Range Web: Signal Threshold (dBm) Specifies the minimum signal strength in dBm before considering if the interface fails signal health check. Uses the value stored for sig\_dbm in mobile diagnostics.-115 dBm. mobile.@roaming\_template[0].signal\_thre shold Disabled Opt: signal\_threshold -46 to -115 dBm Range

Table 79: Information table for roaming interface template

When you have configured your settings, click Save & Apply.

## 24.2.11.1 Set multi-WAN operation

From the top menu, select **Network -> Multi-Wan**. The Multi-WAN page appears.



Figure 123: The multi-WAN page

In the Multi-WAN section click Add.

Web Field/UCI/Package Option	Description	
Web: Enable	Enables multiwan.	
UCI: multiwan.config.enabled	Select this op	tion.
Opt: enabled	0	Disabled.
	1	Enabled.
Web: Preempt UCI: multiwan.config.preempt Opt: pre-empt	Enables or disables pre-emption for multiwan. If enabled the router will keep trying to connect to a higher priority interface depending on timer set by ifup_retry_sec.	
Opt. pre-empt	Leave this op	tion unselected.
	0	Disabled.
	1	Enabled.
Web: Alternate Mode UCI: multiwan.config.alt		ables alternate mode for multiwan. If enabled the e an alternate interface after reboot.
Opt: alt	Leave this option unselected.	
·	0	Disabled.
	1	Enabled.

Table 80: Information table for multi-WAN operation

# 24.3 Configuring via UCI

## 24.3.1 PMP + roaming: pre-empt enabled & disabled via UCI

## 24.3.1.1 PMP interface configuration

The PMP interface is configured in the network package /etc/config/network. To view the network configuration file, enter:

```
root@VA_router:~# uci export network
package network
config interface 'loopback'
```

```
option ifname 'lo'
        option proto 'static'
        option ipaddr '127.0.0.1'
        option netmask '255.0.0.0'
config interface 'lan'
        option ifname 'eth0'
        option proto 'static'
        option ipaddr '192.168.100.1'
        option netmask '255.255.255.0'
config interface '3g_s1_voda'
        option auto '0'
        option proto '3g'
        option service_order 'auto lte umts gprs'
        option apn 'testIE'
        option username 'test'
        option password 'test'
        option sim '1' option operator 'vodafone IE'
```

#### To view uci commands, enter:

```
root@VA_router:~# uci show network
network.loopback=interface
network.loopback.ifname=lo
network.loopback.proto=static
network.loopback.ipaddr=127.0.0.1
network.loopback.netmask=255.0.0.0
network.lan=interface
network.lan.ifname=eth0
network.lan.proto=static
network.lan.ipaddr=192.168.100.1
network.lan.netmask=255.255.255.0
network.3g_s1_voda=interface
network. 3g_s1_voda.auto=0
network. 3g_s1_voda.proto=3g
network. 3g_s1_voda.service_order='auto lte umts gprs'
network. 3g_s1_voda.apn=test IE
```

```
network. 3g_s1_voda.username=test
network. 3g_s1_voda.password=test
network. 3g_s1_voda.sim=1
network. 3g_s1_voda.operator=vodafone IE
```

#### 24.3.1.2 Roaming interface configuration

The roaming interface configurations are stored in the mobile package /etc/config/mobile.

To view the mobile configuration file, enter: root@VA\_router:~# uci export mobile

```
config mobile 'main'
        option sms 'yes'
        option roaming_sim '1'
        option init_get_iccids 'no'
config caller
        option name 'Test'
        option number '*'
        option enabled 'yes'
        option respond 'yes'
config roaming_template
        option roaming_sim '1'
        option firewall_zone 'wan'
        option apn 'test IE'
        option username 'test'
        option password 'test'
        option service 'umts'
        option health_interval '4'
        option icmp_hosts 'disable'
        option timeout 'disable'
        option health_fail_retries '3'
        option signal_threshold '-95'
        option priority '5'
        option ifup_retry_sec '120'
        option ifup_timeout_sec '180'
        option defaultroute 'yes'
        option sort_sig_strength 'yes'
```

To view the uci command of package mobile, enter:

```
root@VA_router:~#uci show mobile
mobile.main=mobile
mobile.main.sms=yes
mobile.main.roaming_sim=1
mobile.main.init_get_iccids=no
mobile.@caller[0]=caller
mobile.@caller[0].name=Test
mobile.@caller[0].number=*
mobile.@caller[0].enabled=yes
mobile.@caller[0].respond=yes
mobile.@roaming_template[0]=roaming_template
mobile.@roaming_template[0].roaming_sim=1
mobile.@roaming_template[0].firewall_zone=wan
mobile.@roaming_template[0].apn=test IE
mobile.@roaming_template[0].username=test
mobile.@roaming_template[0].password=test
mobile.@roaming_template[0].service=umts
mobile.@roaming_template[0].health_interval=4
mobile.@roaming_template[0].icmp_hosts=disable
mobile.@roaming_template[0].timeout=disable
mobile.@roaming template[0].health fail retries=3
mobile.@roaming_template[0].signal_threshold=-95
mobile.@roaming_template[0].priority=5
mobile.@roaming_template[0].ifup_retry_sec=120
mobile.@roaming_template[0].ifup_timeout_sec=180
mobile.@roaming_template[0].defaultroute=yes
mobile.@roaming_template[0].sort_sig_strength=yes
```

## 24.3.1.3 Multi-WAN configuration using UCI

The configuration file for package multiwan is stored on /etc/config/multiwan

To see configuration file of mobile package, enter:

·

```
config interface '3g_s1_voda'
    option health_fail_retries '3'
    option health_interval '3'
    option timeout '1'
    option icmp_hosts 'disable'
    option priority '10'
    option exclusive_group '3g'
    option signal_threshold '-95'
    option ifup_retry_sec '350'
    option ifup_timeout_sec '180'
    option manage_state '1'
```

To view the uci command of package multiwan, enter:

```
root@VA_router:~# uci show multiwan
multiwan.config=multiwan
multiwan.config.enabled=1
multiwan.config.preempt=1
multiwan.main_voda=interface
multiwan.main_voda.health_fail_retries=3
multiwan.main_voda.health_interval=3
multiwan.3g_s1_voda.timeout=1
multiwan.3g_s1_voda.icmp_hosts=disable
multiwan.3g_s1_woda.exclusive_group=3g
multiwan.3g_s1_voda.exclusive_group=3g
multiwan.3g_s1_voda.signal_threshold=-95
multiwan.3g_s1_voda.ifup_retry_sec=350
multiwan.3g_s1_voda.ifup_timeout_sec=180
multiwan.3g_s1_voda.manage_state=1
```

The difference between PMP + roaming: pre-empt enabled and disabled is setting one option parameter. To disable pre-empt, enter:

```
uci set multiwan.config.preempt=0
uci commit
```

Note: available values are:

0	Disabled
1	Enabled

24.4 Configuring no PMP + roaming using UCI

The roaming interface configuration file is stored in the mobile package **/etc/config/mobile**. To view the mobile package, enter:

```
root@VA_router:~# uci export mobile
package mobile
config mobile 'main'
        option sms 'yes'
        option roaming_sim '1'
        option debug '1'
config caller
        option name 'Eval'
        option number '*'
        option enabled 'yes'
        option respond 'yes'
config roaming_template
        option roaming_sim '1'
        option firewall_zone 'wan'
        option apn 'test IE'
        option username 'test'
        option password 'test'
        option service 'umts'
        option health_fail_retries '2'
        option signal_threshold '-100'
        option priority '5'
        option ifup_timeout_sec '180'
        option defaultroute 'yes'
        option sort_sig_strength 'yes'
        option ifup_retry_sec '200'
        option health_interval '120'
        option icmp_hosts '172.31.4.129'
        option timeout '3'
        option health_recovery_retries '3'
```

To view the mobile package via uci commands, enter:

```
root@VA_router:~# uci show mobile
mobile.main=mobile
mobile.main.sms=yes
mobile.main.roaming_sim=1
mobile.main.debug=1
mobile.@caller[0]=caller
mobile.@caller[0].name=Eval
mobile.@caller[0].number=*
mobile.@caller[0].enabled=yes
mobile.@caller[0].respond=yes
mobile.@roaming_template[0]=roaming_template
mobile.@roaming_template[0].roaming_sim=1
mobile.@roaming_template[0].firewall_zone=wan
mobile.@roaming_template[0].apn=stream.co.uk
mobile.@roaming_template[0].username=default
mobile.@roaming_template[0].password=void
mobile.@roaming_template[0].service=umts
mobile.@roaming_template[0].health_fail_retries=2
mobile.@roaming_template[0].signal_threshold=-100
mobile.@roaming_template[0].priority=5
mobile.@roaming_template[0].ifup_timeout_sec=180
mobile.@roaming_template[0].defaultroute=yes
mobile.@roaming_template[0].sort_sig_strength=yes
mobile.@roaming_template[0].ifup_retry_sec=200
mobile.@roaming_template[0].health_interval=120
mobile.@roaming_template[0].icmp_hosts=172.31.4.129
mobile.@roaming_template[0].timeout=3
mobile.@roaming template[0].health recovery retries=3
```

The multiwan package is stored on **/etc/config/multiwan**. To view the multiwan package, enter:

```
option preempt 'no'
    option alt_mode 'no'

To see multiwan package via uci, enter:
root@VA_router:~# uci show multiwan
multiwan.config=multiwan
multiwan.config.enabled=yes
multiwan.config.preempt=no
multiwan.config.alt_mode=no
```

## 24.5 Automatic operator selection diagnostics via the web interface

### 24.5.1 Checking the status of the Multi-WAN package

When interfaces are auto-created they are presented in the network and in the Multi-WAN package.

To check interfaces created in the Multi-WAN package, from the top menu, select **Network -> Multi-WAN**.

To check interfaces that have been created in the network package, from the top menu, select **Network -> Interfaces**.

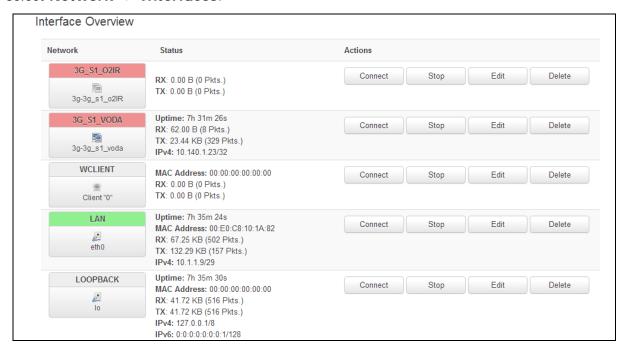


Figure 124: The interface overview page

To check the status of the interface you are currently using, in the top menu, click **Status**. The Interface Status page appears.

Scroll down to the bottom of the page to view Multi-WAN Stats.

There are no active leases.

Multi-WAN Status

[3g\_s1\_voda: Up]

[3g\_s1\_O2IR: Down(standby backup)]

Figure 125: The status page: multi-WAN status section page

## 24.6 Automatic operator selection diagnostics via UCI

## 24.6.1 Check roaming interfaces discovered

Roaming interfaces discovered during roaming search are stored at /var/const\_state/roaming. This file contains a section for each discovered operator/service combination, along with signal strength, if tested. Time taken to scan is also available along with the time of scan and number of services found.

To check roaming interfaces discovered, enter

```
root@VA_router:~# cat /var/const_state/roaming
roaming.main2_voda_lte=service
roaming.main2_voda_lte.name=vodafone IE
roaming.main2_voda_lte.shortname=voda IE
roaming.main2_voda_lte.opnum=27201
roaming.main2_voda_lte.interface=main2_voda
roaming.main2_voda_lte.servicetype=7
roaming.main2_voda_lte.sim=2
roaming.main2_voda_lte.tested=0
roaming.main2_voda_lte.signalstrength=0
roaming.main2_voda_umts=service
roaming.main2_voda_umts.name=vodafone IE
roaming.main2_voda_umts.shortname=voda IE
roaming.main2_voda_umts.opnum=27201
roaming.main2_voda_umts.interface=main2_voda
roaming.main2_voda_umts.servicetype=2
roaming.main2_voda_umts.sim=2
roaming.main2_voda_umts.tested=1
roaming.main2_voda_umts.signalstrength=-79
roaming.main2_voda_gprs=service
roaming.main2_voda_gprs.name=vodafone IE
roaming.main2_voda_gprs.shortname=voda IE
```

```
roaming.main2_voda_gprs.opnum=27201
roaming.main2_voda_gprs.interface=main2_voda
roaming.main2_voda_gprs.servicetype=0
roaming.main2_voda_gprs.sim=2
roaming.main2_voda_gprs.tested=0
roaming.main2_voda_gprs.signalstrength=0
roaming.main2_o2IR_umts=service
roaming.main2_o2IR_umts.name=o2 IRL
roaming.main2_o2IR_umts.shortname=o2 - IRL
roaming.main2_o2IR_umts.opnum=27202
roaming.main2_o2IR_umts.interface=main2_o2IR
roaming.main2_o2IR_umts.servicetype=2
roaming.main2_o2IR_umts.sim=2
roaming.main2_o2IR_umts.tested=1
roaming.main2_o2IR_umts.signalstrength=-85
roaming.main2_o2IR_gprs=service
roaming.main2_o2IR_gprs.name=o2 IRL
roaming.main2_o2IR_gprs.shortname=o2 - IRL
roaming.main2_o2IR_gprs.opnum=27202
roaming.main2_o2IR_gprs.interface=main2_o2IR
roaming.main2_o2IR_gprs.servicetype=0
roaming.main2_o2IR_gprs.sim=2
roaming.main2_o2IR_gprs.tested=0
roaming.main2_o2IR_gprs.signalstrength=0
roaming.status=status
roaming.status.num_services=5
roaming.status.scan_update_time=Thu Feb 22 05:02:38 2018
roaming.status.scan_duration=185
```

Roaming operators are also stored in MIB vaModemRoaming.mib.

#### 24.6.2 Check interfaces created in multiwan

To check interfaces created in the multi-WAN package, enter:

```
root@VA router:~# cat /var/const state/multiwan
multiwan.main2_3IRL=interface
multiwan.main2_3IRL.timeout=disable
multiwan.main2_3IRL.health_recovery_retries=5
multiwan.main2_3IRL.exclusive_group=3g
multiwan.main2_3IRL.manage_state=yes
multiwan.main2_3IRL.signal_threshold=-80
multiwan.main2_3IRL.ifup_timeout_sec=150
multiwan.main2_3IRL.icmp_hosts=disable
multiwan.main2_3IRL.health_interval=4
multiwan.main2_3IRL.priority=5
multiwan.main2_3IRL.ifup_retry_sec=120
multiwan.main2_3IRL.health_fail_retries=3
multiwan.main2_o2IR=interface
multiwan.main2_o2IR.timeout=disable
multiwan.main2_o2IR.health_recovery_retries=5
multiwan.main2_o2IR.exclusive_group=3g
multiwan.main2_o2IR.manage_state=yes
multiwan.main2_o2IR.signal_threshold=-80
multiwan.main2_o2IR.ifup_timeout_sec=150
multiwan.main2_o2IR.icmp_hosts=disable
multiwan.main2_o2IR.health_interval=4
multiwan.main2_o2IR.priority=5
multiwan.main2_o2IR.ifup_retry_sec=120
multiwan.main2_o2IR.health_fail_retries=3
```

#### 24.6.3 Check interfaces created in network

To check interfaces created in the network package, enter:

```
root@VA_router:~# cat /var/const_state/network
network.main2_3IRL=interface
network.main2_3IRL.snmp_alias_ifindex=3
network.main2_3IRL.sim=2
network.main2_3IRL.defaultroute=yes
network.main2_3IRL.username=campen1
```

```
network.main2_3IRL.apn=vpn.amylan.co.uk
network.main2_3IRL.opformat=2
network.main2_3IRL.phy=1-1
network.main2_3IRL.roaming_sim=2
network.main2_3IRL.operator=27205
network.main2_3IRL.password=campen1
network.main2_3IRL.auto=no
network.main2_3IRL.service_order=auto
network.main2_3IRL.proto=3g
network.main2_o2IR=interface
network.main2_o2IR.snmp_alias_ifindex=3
network.main2_o2IR.sim=2
network.main2_o2IR.defaultroute=yes
network.main2_o2IR.username=campen1
network.main2_o2IR.apn=vpn.amylan.co.uk
network.main2_o2IR.opformat=2
network.main2_o2IR.phy=1-1
network.main2_o2IR.roaming_sim=2
network.main2_o2IR.operator=27202
network.main2_o2IR.password=campen1
network.main2_o2IR.auto=no
network.main2_o2IR.service_order=auto
network.main2_o2IR.proto=3g
```

#### 24.6.4 Check current interface

To check the SIM status of the interface you are currently using, enter:

```
root@VA_router:~# cat /var/const_state/mobile
mobile.3g_1_1=status
mobile.3g_1_1.sim2_iccid=89314404000075920976
mobile.3g_1_1.imei=866802020194140
mobile.3g_1_1.hw_rev=4534B04SIM7100E
mobile.3g_1_1.sim_select=yes
```

#### To check mobile status of the interface you are currently using, enter

```
root@VA_router:~# cat /var/state/mobile
mobile.3g_1_1=status
mobile.3g_1_1.auto_info=/tmp/3g_1-1.auto
mobile.3g_1_1.scan_update_time=Thu Feb 22 05:02:38 2018
mobile.3g_1_1.imsi=204043726930595
mobile.3g_1_1.imsi2=204043726930595
mobile.3g_1_1.lte_band=3
mobile.3g_1_1.last_error=no network service
mobile.3g_1_1.mcc=272
mobile.3g_1_1.last_error_time=2018-02-22 10:41:27
mobile.3g_1_1.lac=11
mobile.3g_1_1.cell=46542698
mobile.3g_1_1.mnc=05
mobile.3g_1_1.operator_code=27205
mobile.3g_1_1.operator_name=3 IRL DATA ONLY
mobile.3g_1_1.rscp_dbm=-86
mobile.3g_1_1.ecio_db=-8.5
mobile.3g_1_1.sig_dbm=-51
mobile.3g_1_1.temperature=37
mobile.3g_1_1.vam_state=connecting
mobile.3g_1_1.sim_slot=2
mobile.3g_1_1.sim_in=yes
mobile.3g_1_1.technology=UMTS
mobile.3g_1_1.registered=Roaming
mobile.3g_1_1.reg_code=5
mobile.3g_1_1.registered_pkt=Searching
mobile.3g_1_1.reg_code_pkt=2
```

## 25 Configuring Connection Watch (cwatch)

Connection Watch is a recovery feature to enable dynamic recovery of an interface. You can configure multiple instances of Connection Watch.

Connection Watch consists of the following configurable instances:

- Interface(s) to be monitored
- · Failure periods
- Recovery actions

If no data is received over the monitored interface during the configured duration, then the recovery action is performed. If more than one interface is specified under a single Connection Watch, the recovery action will be performed only if no data is received on **both** of the interfaces for the defined period.

Currently three configurable periods and associated recovery actions can be defined.

## 25.1 Configuration package used

Package	Sections
cwatch	watch

## 25.2 Configuring Connection Watch using the web interface

To configure Connection Watch using the web interface, select **Services->Connection Watch**. The Connection Watch page appears.

If no Connection Watch configuration exists in the configuration file, first enter a name for the Connection Watch instance and select **Add**.

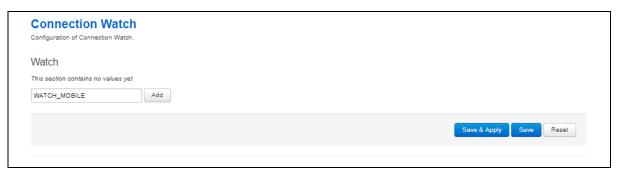


Figure 126: The add connection watch configuration page

**Connection Watch** Configuration of Connection Watch. Watch WATCH\_MOBILE Enabled Status Interfaces LAN2: 🚂 LAN3: 🚂 MOBILE1: PoAADSL: 💼 loopback: 🚂 Failure Time for 1h Action 1 Failure Action 1 ifup MOBILE1 Failure Time for Action 2 Failure Action 2 /etc/init.d/usb\_startup restart Failure Time for 24h Action 3

Figure 127: The connection watch configuration page

Failure Action 3

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables a cwatch instance.		
UCI: cwatch.@watch[0].enabled	0	Disabled.	
Opt: enabled	1	Enabled.	
Web: Interfaces UCI: cwatch.@watch[0].test_ifaces Opt: test_ifaces	Defines the interface name(s) to monitor. Multiple interfaces delimited by space separator. Example:  option test_ifaces 'WANADSL WANMOBILE'		e
	If multiple interfaces are defined the failure action will only be triggered if no traffic is received on all interfaces for the defined period.		
Web: Failure Time for Action 1 UCI: cwatch.@watch[0].failure_time_1	Defines a duration to monitor an interface for receive traffic.  Duration can be specified in seconds, minutes, hours, days.  1h		
Opt: failure_time_1	Range	s; m; h; d;	
Web: Failure Action 1 UCI: cwatch.@watch[0].failure_action_1 Opt: failure_action_1	Defines the failure action associated with failure_time_1.  Example to force up interface: option failure_action_1 'ifup wan'  blank		
	Range		

Web: Failure Time for Action 2 UCI: cwatch.@watch[0].failure_time_2 Opt: failure_time_2		d duration to monitor an interface for receive can be specified in seconds, minutes, hours,  s; m; h; d;	
Web: Failure Action 2 UCI: cwatch.@watch[0].failure_action_2 Opt: failure_action_2	Defines the failu Example to rese	re action associated with failure_time_2.	
Web: Failure Time for Action 3 UCI: cwatch.@watch[0].failure_time_3 Opt: failure_time_3		duration to monitor an interface for receive can be specified in seconds, minutes, hours, s; m; h; d;	
Web: Failure Action 3 UCI: cwatch.@watch[0].failure_action_3 Opt: failure_action_3	Defines the failure action associated with failure_time_3.  Example to reset usb:  option failure_action_3 'reboot'  blank  Range		

Table 81: Information table for cwatch section

## 25.3 Configuring cwatch using command line

By default, all cwatch instances are named 'watch', the cwatch instance is identified by <code>@watch</code> then the watch position in the package as a number. For example, for the first route in the package using UCI:

```
cwatch.@watch[0]=watch
cwatch.@watch[0].enabled=1
```

Or using package options:

```
config watch
option enabled `1'
```

However, to better identify it, we recommend giving the cwatch instance a name. For example, a watch named 'WATCH\_MOBILE' will be cwatch.WATCH\_MOBILE.

To define a named cwatch instance using UCI, enter:

```
cwatch.WATCH_MOBILE=watch
cwatch.WATCH_MOBILE.enabled=1
```

To define a named cwatch instance using package options, enter:

```
config watch 'WATCH_MOBILE'

option 'enabled' '1'
```

0.00

#### 25.3.1 cwatch using UCI

```
root@VA_router:~# uci show cwatch
cwatch.WATCH_MOBILE=watch
cwatch.WATCH_MOBILE.enabled=1
cwatch.WATCH_MOBILE.test_ifaces=wan
cwatch.WATCH_MOBILE.failure_time_1=1h
cwatch.WATCH_MOBILE.failure_action_1=ifup wan
cwatch.WATCH_MOBILE.failure_time_2=10h
cwatch.WATCH_MOBILE.failure_action_2=/etc/init.d/usb_startup restart
cwatch.WATCH_MOBILE.failure_time_3=24h
cwatch.WATCH_MOBILE.failure_action_3=reboot
```

#### 25.3.2 cwatch using package options

```
root@VA_router:~# uci export cwatch
package cwatch
config watch 'WATCH_MOBILE'
        option enabled '1'
        option test ifaces wan
        option failure_time_1 '1h'
        option failure_action_1 'ifup wan
        option failure_time_2 '10h'
        option failure_action_2 '/etc/init.d/usb_startup restart'
        option failure_time_3 '24h'
        option failure_action_3 'reboot'
```

#### 25.4 cwatch diagnostics

## 25.4.1 Syslog

A syslog message will be generated when cwatch starts:

```
cwatch[x]: cwatch configuration OK. Entering main loop...
```

Syslog messages will be generated when the failure action is triggered:

```
cwatch[x]: Watch WATCH_MOBILE executed action 1
cwatch[x]: Watch WATCH_MOBILE executed action 2
cwatch[x]: Watch WATCH_MOBILE executed action 3
```

© Virtual Access 2018 **GW1000 Series User Manual** 

Issue: 2.3

## 26 Configuring DHCP server and DNS (Dnsmasq)

Dynamic Host Configuration Protocol (DHCP) server is responsible for assigning IP addresses to hosts. IP addresses can be given out on different interfaces and different subnets. You can manually configure lease time as well as setting static IP to host mappings.

Domain Name Server (DNS) is responsible for resolution of IP addresses to domain names on the internet.

Dnsmasq is the application which controls DHCP and DNS services. Dnsmasq has two sections; one to specify general DHCP and DNS settings and one or more DHCP pools to define DHCP operation on the desired network interface.

## 26.1 Configuration package used

Package	Sections
dhcp	dnsmasq
	dhcp
	host

## 26.2 Configuring DHCP and DNS using the web interface

In the top menu, select **Network -> DHCP and DNS**. The DHCP and DNS page appears. There are three sections: Server Settings, Active Leases, and Static Leases.

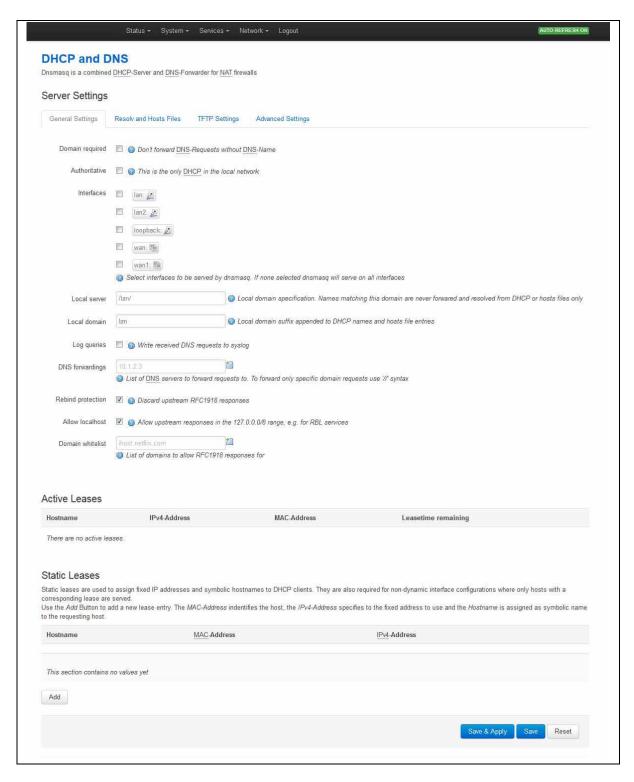


Figure 128: The DHCP and DNS page

Issue: 2.3

26.2.1 Dnsmasq: general settings

Web Field/UCI/Package Option	Description	
Web: Domain required UCI: dhcp.@dnsmasq[0].domainneeded Opt: domainneeded	Defines whether to forward DNS requests without a DNS name Dnsmasq will never forward queries for plain names, without dots or domain parts, to upstream nameservers. If the name is not known from /etc/hosts or DHCP then a "not found" answer is returned.	
	1	Enabled.
	0	Disabled.
Web: Authoritative UCI: dhcp.@dnsmasq[0]. authoritative Opt: authoritative		ve mode. This speeds up DHCP leasing. Used server in the network.  Enabled.  Disabled.
Web: Interfaces UCI: dhcp.@dnsmasq[0].interface Opt: list interface	do not select a sp	interfaces to be served by dnsmasq. If you ecific interface, dnsmasq will serve on all ured interfaces are shown via the web GUI.  Serve only on LAN interface.
Web: Local Server UCI: dhcp.@dnsmasq[0].local Opt: local		I domain. Names matching this domain are and are resolved from DHCP or host files only.
Web: Local Domain UCI: dhcp.@dnsmasq[0].domain Opt: domain	Specifies local doi hosts file entries.  lan  Range	main suffix appended to DHCP names and
Web: Log Queries	Writes received D	NS requests to syslog.
UCI: dhcp.@dnsmasq[0].logqueries	0	Disabled.
Opt: logqueries	1	Enabled.
Web: DNS Forwardings UCI: dhcp.@dnsmasq[0].server Opt: list server	List of DNS servers to forward requests to. To forward specific domain requests only, use // syntax. When using UCI, enter multiple servers with a space between them.	
Spt. list server		No DNS server configured.
	Range	
Web: Rebind Protection UCI:	Enables DNS rebit RFC1918 respons	nd attack protection by discarding upstream es.
dhcp.@dnsmasq[0].rebind_protection	0	Disabled.
Opt: rebind_protection	1	Enabled.
Web: Allow Localhost UCI: dhcp.@dnsmasq[0].rebind_localhost Opt: rebind_localhost	Defines whether to allow upstream responses in the 127.0.0.0/8 range. This is required for DNS-based blacklist services. Only takes effect if rebind protection is enabled.    O	
	1	Enabled.
Web: Domain Whitelist UCI: dhcp.@dnsmasq[0].rebind_domain Opt: list rebind_domain	Defines the list of domains to allow RFC1918 responses to. Only takes effect if rebind protection is enabled. When using UCI multiple servers, enter the domains with a space between them.	
		No list configured.
	Range	

Table 82: Information table for general server settings

Wirtual Access 2010

## 26.2.2 Dnsmasq: resolv and host files

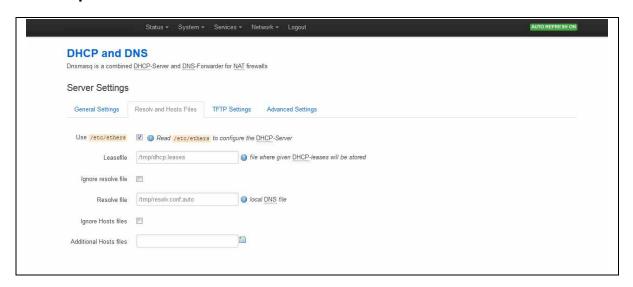


Figure 129: The resolv and host files section

Web Field/UCI/Package Option	Description	
Web: Use /etc/ethers	Defines whether static lease entries are read from /etc/ethers.	
UCI: dhcp.@dnsmasq[0].readethers	1	Enabled.
Opt: readethers	0	Disabled.
Web: Leasefile UCI: dhcp.@dnsmasq[0].leasefile	Defines the file where given DHCP leases will be stored. The DHCP lease file allows leases to be picked up again if dnsmasq is restarted.	
Opt: leasefile	/tmp/dhcp.leas es	Store DHCP leases in this file.
	Range	
Web: Ignore resolve file	Defines whether t	o use the local DNS file for resolving DNS.
UCI: dhcp.@dnsmasq[0].noresolv	0	Use local DNS file.
Opt: noresolv	1	Ignore local DNS file.
Web: Resolve file	Defines the local I	ONS file.
UCI: dhcp.@dnsmasq[0].resolvfile	/tmp/resolv.co	
Opt: resolvfile	nf.auto	
	Range	
Web: Ignore Hosts files	Defines whether to use local host's files for resolving DNS.	
UCI: dhcp.@dnsmasq[0].nohosts	0	Use local hosts file.
Opt: nohosts	1	Ignore local hosts file.
Web: Additional Hosts files UCI: dhcp.@dnsmasq[0].addnhosts Opt: list addnhosts	Defines local host's files. When using UCI multiple servers should be entered with a space between them.	

Table 83: Information table for resolv and host files section

# 26.2.3 Dnsmasq: TFTP settings

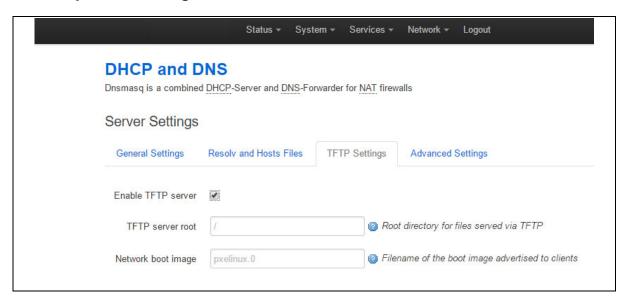


Figure 130: The TFTP settings section

Web Field/UCI/Package Option	Description	Description	
Web: Enable TFTP server	Enables the	Enables the TFTP server.	
UCI: dhcp.@dnsmasq[0].enable_tftp	0	Disabled.	
Opt: enable_tftp	1	Enabled.	
Web: TFTP server Root	Defines roo	Defines root directory for file served by TFTP.	
UCI: dhcp.@dnsmasq[0].tftp_root			
Opt: tftp_root			
Web: Network boot image		Defines the filename of the boot image advertised to clients. Th	
UCI: dhcp.@dnsmasq[0].dhcp_boot	specifies BC	specifies BOOTP options, in most cases just the file name.	
Opt: dhcp_boot			

**Table 84: Information table for TFTP settings** 

Issue: 2.3

## 26.2.4 Dnsmasq: advanced settings

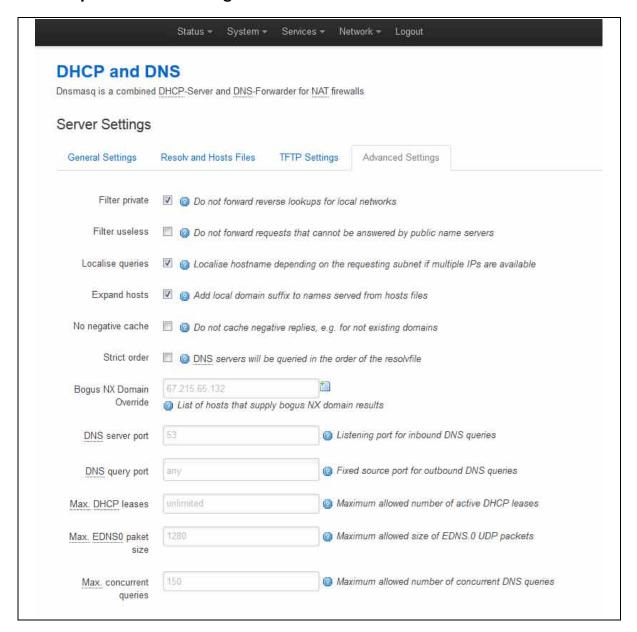


Figure 131: The advanced settings page

Web Field/UCI/Package Option	Description		
Web: Filter private UCI: dhcp.@dnsmasq[0]. Opt: boguspriv	Enables disallow option for forwarding reverse lookups for local networks. This rejects reverse lookups to private IP ranges who corresponding entry exists in /etc/hosts.  1		
Web: Filter useless UCI: dhcp.@dnsmasq[0].filterwin2k Opt: filterwin2k		option for forwarding requests that cannot be ic name servers. Normally enabled for dial	
	0	Disabled.	

·····

Web: Localise queries UCI: dhcp.@dnsmasq[0].localise_queries Opt: localise_queries	interface if multip /etc/hosts.	to use an IP address to match the incoming ole addresses are assigned to a host name in Enabled.
	0	Disabled.
Web: Expand hosts	Adds a local doma	ain suffix to names served from host files.
UCI: dhcp.@dnsmasq[0].expandhosts	1	Enabled.
Opt: expandhosts	0	Disabled.
Web: No negative cache UCI: dhcp.@dnsmasq[0].nonegcache	Enable this to sto existing domains.	p caching of negative replies. For example, non-
Opt: nonegcache	1	Enabled.
, ,	0	Disabled.
Web: Strict order	Enable this to que	ery DNS servers in the order of the resolve file.
UCI: dhcp.@dnsmasq[0].strictorder		Enabled.
Opt: strictorder	0	Disabled.
Web: Bogus NX Domain override UCI: dhcp.@dnsmasq[0].bogusnxdomain Opt: list bogusnxdomain	A list of hosts that supply bogus NX domain results. When using UCI multiple servers, enter the server names with a space between them.	
	Empty list	
Web DNC community	Range	inhanad DNC mania
Web: DNS server port		inbound DNS queries.
UCI: dhcp.@dnsmasq[0].port	53	Set to 0 to disable DNS functionality.
Opt: port	Range	0 - 65535
Web: DNS query port		rce port for outbound DNS queries.
UCI: dhcp.@dnsmasq[0].queryport	any	
Opt: queryport	Range	any; 0 - 65535
Web: Max DHCP leases	Defines the maxir	mum allowed number of active DHCP leases.
UCI: dhcp.@dnsmasq[0].dhcpleasemax	unlimited	
Opt: dhcpleasemax	Range	
Web: Max EDNS0 packet size	Defines the maximum allowed size of EDNS.0 UDP packets in	
UCI: dhcp.@dnsmasq[0].ednspacket_max		
Opt: ednspacket_max	1280	1280 bytes
	Range	
Web: Max concurrent queries	Maximum allowed	number of concurrent DNS queries.
UCI: dhcp.@dnsmasq[0].dnsforwardmax	150	1280 bytes
Opt: dnsforwardmax	Range	

Table 85: Information table for advanced settings

#### 26.2.5 Active leases

This section displays all currently active leases.

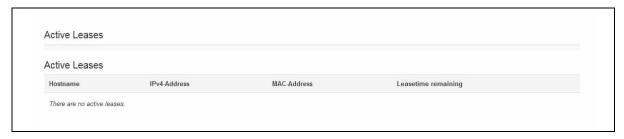


Figure 132: The active leases section

Web Field/UCI/Package Option	Description
Web: Hostname	Displays the hostname of the client.
UCI: n/a	
Opt: n/a	
Web: IPv4 Address	Displays the IP address of the client.
UCI: n/a	
Opt: n/a	
Web: MAC Address	Displays the MAC address of the client.
UCI: n/a	
Opt: n/a	
Web: Lease time remaining	Displays the remaining lease time.
UCI: n/a	
Opt: n/a	

Table 86: Information table for active leases section

#### 26.2.6 Static leases

Use static leases to assign fixed IP addresses and symbolic hostnames to DHCP clients. Static leases are also required for non-dynamic interface configurations where only hosts with a corresponding lease are served. Click **Add** to add a new lease entry.

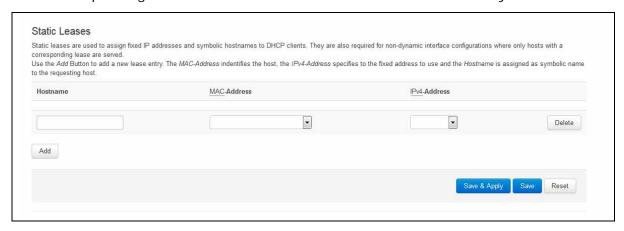


Figure 133: The static leases section

Web Field/UCI/Package Option	Description	
Web: Hostname UCI: dhcp.@host[0].name	Defines the optional symbolic name to assign to this static DHCP entry.	
Opt: name	1 Enabled.	
	0 Disabled.	
Web: MAC Address	Defines the hardware address that identifies the host.	
UCI: dhcp.@host[0].mac		
Opt: mac		
Web: IPv4 Address	The IPv4 address specifies the fixed address to use for this host.	
UCI: dhcp.@host[0].ip		
Opt: ip		

Table 87: Information table for static leases

## 26.2.7 Configuring DHCP pools using the web

DHCP pools are configured via the interface configuration.

Select **Network -> Interfaces**. Choose the interface you want to add the DHCP pool to and select **Edit**. Scroll to **DNCP Server** section.

Note: this section is only available for interfaces with a static IP address.

To assign a DHCP Server to the interface, click **Setup DHCP Server**.



Figure 134: The DHCP Server settings section

The DHCP Server configuration options will appear. The DHCP Server is divided into two sub sections: General Setup and Advanced Settings.

#### 26.2.7.1 DHCP server: general setup

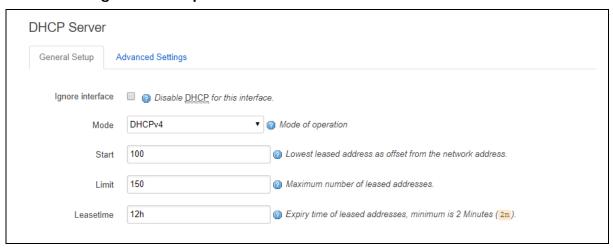


Figure 135: The DHCP server general setup section

Web Field/UCI / Package Option	Description	Description	
Web: Ignore interface		Defines whether the DHCP pool should be enabled for this	
UCI: dhcp.@dhcp[x].ignore		not specified for the DHCP pool then the default is	
Opt: ignore	disabled i.e. dhcp pool enabled.		
Opt. Ignore	0	Disabled.	
	1	Enabled.	

Web: Mode UCI: dhcp.@dhcp[x].mode	Defines whether the DHCP pool should be enabled for this interface. If not specified for the DHCP pool then the default is disabled i.e. dhcp pool enabled.					
Opt: mode	Web	Web Description				
	DHCPv4	DHCP for IPv4	ipv4			
	DHCPv6	DHCP for IPv6	ipv6_dhcp			
	IPv6 Router Advertisements	IPv6 RA	ipv6_ra			
	DHCPv6 Prefix Delegation	DHCPv6 prefix delegation	ipv6_pd			
Web: Start UCI: dhcp.@dhcp[x].start	Defines the offset of DHCP pool.	from the network address for the	ne start of the			
Opt: start		ork address 192.168.100.10/24 ool will start at 192.168.100.100				
	subnets. Alternativ wildcard '0' where	For subnets greater than /24, it may be greater than 255 to span subnets. Alternatively, specify in IP address notation using the wildcard '0' where the octet is required to inherit bits from the interface IP addess.				
		Example: to define a DHCP scope starting from 10.1.20.0 on an interface with 10.1.0.0/16 address, set start to <b>0.0.20.1</b>				
	100 Range					
Web: Limit	Defines the size of the address pool.					
UCI: dhcp.@dhcp[x].limit Opt: limit	Example: For network address 192.168.100.10/24, start=10 limit=150, DHCP allocation pool will be .100 to .249					
opti mini	Limits DHCP allocation pool to 150 available address.					
	Range	0 – 255				
Web: Leasetime UCI: dhcp.@dhcp[x].leasetime	Defines the lease time of addresses handed out to clients, for example 12h or 30m.					
Opt: leasetime	12h Range	12 hours				
Web: n/a UCI: dhcp.@dhcp[x].interface	Defines the interfa	Defines the interface that is served by this DHCP pool. This mus be one of the configured interfaces.				
Opt: interface	When configured the populated with the	nrough the web UI this will be a interface name.	automatically			

Table 88: Information table for DHCP server general setup page

#### 26.2.7.2 DHCP server: advanced settings

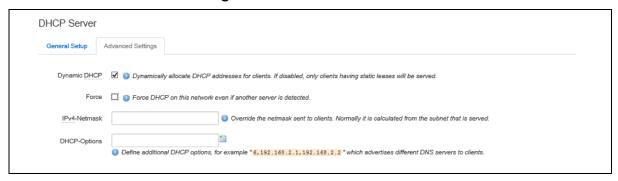


Figure 136: The DHCP server advanced settings section

GW1000 Series User Manual
Issue: 2.3 Page 268 of 463

Web Field/UCI/Package Option	Description		
Web: Dynamic DHCP	Defines whether to dynamically allocate DHCP leases.		
UCI: dhcp.@dhcp[x].dynamicdhcp	1 Dynamically allocate leases.		
Opt: dynamicdhcp	0 Use /etc/ethers file for serving DHCP leases.		
Web: Force UCI: dhcp.@dhcp[x].force	Forces DHCP serving on the specified interface even if another DHCP server is detected on the same network segment.		
Opt: force	0 Disabled.		
'	1 Enabled.		
Web: IPv4-Netmask UCI: dhcp.@dhcp[x].netmask	Defines a netmask sent to clients that overrides the netmask as calculated from the interface subnet.		
Opt: netmask	Use netmask from interface subnet.		
	Range		
Web: DHCP-Options	Defines additional options to be added for this dhcp pool.		
UCI: dhcp.@dhcp[x].dhcp_option Opt: list dhcp_option	For example, with 'list dhcp_option 26,1470' or 'list dhcp_option mtu, 1470' you can assign a specific MTU per DHCP pool. Your client must accept the MTU option for this to work. Options that contain multiple values should be separated by a comma.		
	Example: list dhcp_option 6,192.168.2.1,192.168.2.2		
	No options defined.		
	Syntax Option_number, option_value		
Web: n/a UCI: dhcp.@dhcp[x].networkid	Assigns a network-id to all clients that obtain an IP address from this pool.		
Opt: networkid	Use network from interface subnet.		
	Range		

Table 89: Information table for DHCP advanced settings page

## 26.3 Configuring DHCP and DNS using command line

Possible section types of the DHCP configuration file include Common Options (dnsmasq), DHCP Pools (dhcp) and Static Leases (host). Not all types may appear in the file and most of them are only needed for special configurations.

## 26.3.1 Dnsmasq using command line

The configuration section type **dnsmasq** determines values and options relevant to the overall operation of dnsmasq and the DHCP options on all interfaces served.

#### 26.3.1.1 Dnsmasq using UCI

```
root@VA_router:~# uci show dhcp
dhcp.@dnsmasq[0]=dnsmasq
dhcp.@dnsmasq[0].domainneeded=1
dhcp.@dnsmasq[0].boguspriv=1
dhcp.@dnsmasq[0].filterwin2k=0
dhcp.@dnsmasq[0].localise_queries=1
dhcp.@dnsmasq[0].logqueries=1
dhcp.@dnsmasq[0].rebind_protection=1
dhcp.@dnsmasq[0].rebind_localhost=1
```

dhcp.@dnsmasq[0].local=/lan/ dhcp.@dnsmasq[0].domain=lan dhcp.@dnsmasq[0].expandhosts=1 dhcp.@dnsmasq[0].nonegcache=0 dhcp.@dnsmasq[0].authoritative=1 dhcp.@dnsmasq[0].readethers=1 dhcp.@dnsmasq[0].leasefile=/tmp/dhcp.leases dhcp.@dnsmasq[0].noresolve=0 dhcp.@dnsmasq[0].resolvfile=/tmp/resolv.conf.auto dhcp.@dnsmasq[0].nohosts=0 dhcp.@dnsmasq[0].addnhosts=hostfile1 hostfile2 dhcp.@dnsmasq[0].interface=lan dhcp.@dnsmasq[0].server=1.1.1.1 2.2.2.2 dhcp.@dnsmasq[0].rebind domain=tes.domain dhcp.@dnsmasq[0].enable\_tftp=0 dhcp.@dnsmasq[0].tftp\_root=/tmp/tftp dhcp.@dnsmasq[0].dhcp\_boot=boot.image dhcp.@dnsmasq[0].nonegcache=0 dhcp.@dnsmasq[0].strictorder=0 dhcp.@dnsmasq[0].bogusnxdomain=1.1.1.1 2.2.2.2 dhcp.@dnsmasq[0].port=53 dhcp.@dnsmasq[0].dhcpleasemax=150 dhcp.@dnsmasq[0].ednspacket\_max=1280 dhcp.@dnsmasq[0].dnsforwardmax=150

#### 26.3.1.2 Dnsmasq using package options

```
root@VA_router:~# uci show dhcp
config 'dnsmasq'
    option domainneeded '1'
    option rebind_protection '1'
    option rebind_localhost '1'
    option local '/lan/'
    option domain 'lan'
    option authoritative '1'
    option readethers '1'
    option leasefile '/tmp/dhcp.leases'
    list interface 'lan'
```

```
list server '1.2.3.4'
list server '4.5.6.7'
list rebind_domain 'test1.domain'
list rebind_domain 'tes2.domain'
option logqueries '1'
option resolvfile '/tmp/resolv1.conf.auto'
list addnhosts 'hosts1'
list addnhosts 'hosts2'
option enable_tftp '1'
option tftp_root '/tmp/tftp'
option dhcp_boot 'boot.image'
option filterwin2k '1'
option nonegcache '1'
option strictorder '1'
list bogusnxdomain '1.1.1.1 '
list bogusnxdomain '2.2.2.2'
option port '53'
option dhcpleasemax '150'
option ednspacket_max '1280'
option dnsforwardmax '150'
```

Options local and domain enable dnsmasq to serve entries in /etc/hosts as well as the DHCP client's names as if they were entered into the LAN DNS domain.

For options domainneeded, boguspriv, localise\_queries, and expandhosts make sure that requests for these local host names (and the reverse lookup) never get forwarded to the upstream DNS servers.

#### 26.3.2 Configuring static leases using command line

Static leases are configured under the **dhcp** package, stored at **/etc/config/dhcp**.

By default, all static leases instances are named **host**. The static lease is identified by @host then the static lease position in the package as a number. For example, for the first static lease in the package using UCI:

```
dhcp.@host[0]=dhcp
dhcp.@host[0].name=mypc
```

Or using package options:

```
config host
option name 'mypc'
```

However, to better identify, it is recommended to give the static lease instance a name. For example, to create a static instance named mypc.

To define a named static lease instance using UCI, enter:

```
dhcp.mypc=host
dhcp.mypc.name=mypc
```

To define a named static lease instance using package options, enter:

```
config dhcp 'mypc'

option name 'mypc'
```

The following example adds the fixed IP address 192.168.1.2 and the name "mypc" for a machine with the (Ethernet) hardware address 00:11:22:33:44:55.

## 26.3.2.1 Static leases using UCI

```
root@VA_router:~# uci show dhcp.mypc
dhcp.mypc=host
dhcp.mypc.ip=192.168.1.2
dhcp.mypc.mac=00:11:22:33:44:55
dhcp.mypc.name=mypc
```

#### 26.3.2.2 Static leases using package options

```
root@VA_router:~# uci export dhcp
package dhcp
.....

config host 'mypc'

option ip '192.168.1.2'

option mac '00:11:22:33:44:55'

option name 'mypc'
```

#### 26.3.3 Configuring DHCP pools using command line

DHCP pools are configured under the dhcp package, stored at /etc/config/dhcp.

Sections of the type **dhcp** specify per interface lease pools and settings. Typically, there is at least one section of this type present in the /etc/config/dhcp file to cover the LAN interface.

You can disable a lease pool for a specific interface by specifying the ignore option in the corresponding section.

You can configure multiple dhcp pools.

\_\_\_\_

By default, all dhcp pool instances are named 'dhcp', it is identified by @dhcp then the dhcp pool position in the package as a number. For example, for the first dhcp pool in the package using UCI:

```
dhcp.@dhcp[0]=dhcp
dhcp.@dhcp[0].interface=LAN
```

Or using package options:

```
config dhcp
option interface 'LAN'
```

However, to better identify, it is recommended to give the dhcp pool instance a name. For example, to create a dhcp pool instance named LAN.

To define a named dhcp pool instance using UCI, enter:

```
dhcp.LAN=dhcp
dhcp.LAN.interface=LAN
```

To define a named dhcp pool instance using package options, enter:

```
config dhcp 'LAN'

option interface 'LAN'
```

#### 26.3.3.1 Configuring DHCP pools using UCI

```
root@VA_router:~# uci show dhcp.LAN
dhcp.LAN=dhcp
dhcp.LAN.interface=lan
dhcp.LAN.start=100
dhcp.LAN.limit=150
dhcp.LAN.leasetime=12h
dhcp.LAN.ignore=0
```

#### 26.3.3.2 Configuring DHCP pools using package options

```
root@VA_router:~# uci export dhcp

package dhcp
.....

config 'dhcp' 'LAN'

option 'interface' 'LAN'

option 'start' '100'

option 'limit' '150'

option 'leasetime' '12h'

option ignore 0
```

## 27 Configuring DHCP client

This section describes how to configure an interface as a DHCP client. This section will only detail the configuration for DHCP client. For information on how to configure other interface options such as firewall zone, mapping of switch ports, etc, refer to standard interface configuration document.

## 27.1 Configuration packages used

Package	Sections
network	interface

## 27.2 Configuring DHCP client using the web interface

DHCP client is configured under the interface configuration by setting the interface protocol to DHCP Client. To create and edit interfaces via the web interface, in the top menu, click **Network -> Interfaces**. The Interfaces overview page appears.

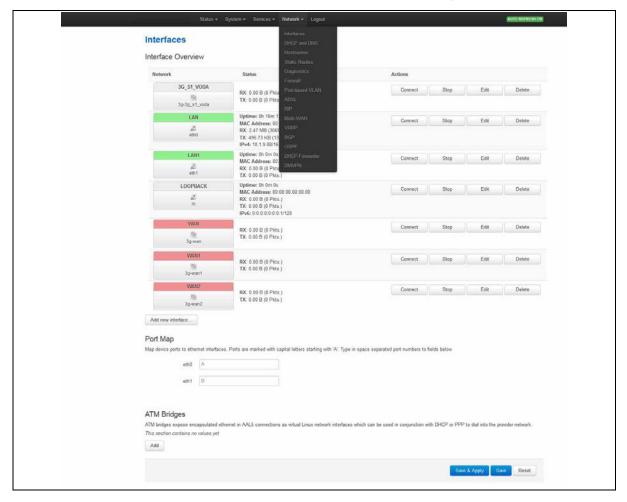


Figure 137: The interfaces overview page

There are three sections in the Interfaces page.

Section	Description
Interface Overview	Shows existing interfaces and their status. You can create new, and edit existing interfaces here.
Port Map	In this section you can map device ports to Ethernet interfaces. Ports are marked with capital letters starting with 'A'. Type in space-separated port character in the port map fields.
ATM Bridges	ATM bridges expose encapsulated Ethernet in AAL5 connections as virtual Linux network interfaces, which can be used in conjunction with DHCP or PPP to dial into the provider network.

#### 27.2.1 Editing an existing interface for DHCP client

To edit an existing interface, from the interface tabs at the top of the page, select the interface you wish to configure. Alternatively, click **Edit** in the interface's row.

#### 27.2.2 Creating a new interface for DHCP client

To create a new interface, in the Interface Overview section, click **Add new interface**. The Create Interface page appears.

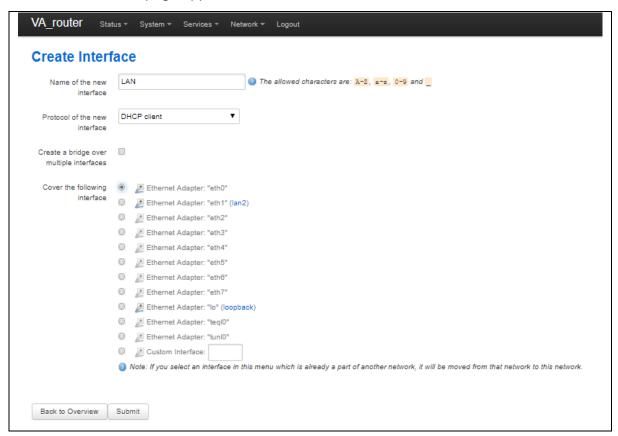


Figure 138: The create interface page

Web Field/UCI/Package Option	Description			
Web: Name of the new interface UCI: network. <if name=""></if>	Assigns a logical name to the interface. The network interface section will assign this name ( <if name="">).</if>			
Opt: config interface	Type the name of the new interface.			
ohm samid missings	Allowed characters are A-Z, a-z, 0-9 and _			
Web: Protocol of the new interface UCI: network. <if name="">.proto</if>	Specifies what p	protocol the interface will operate or	n. Select	
Opt: proto	Option	Description	UCI	
op. p. oto	Static	Static configuration with fixed address and netmask.	Static	
	DHCP Client	Address and netmask are assigned by DHCP.	dhcp	
	Unmanaged	Unspecified	Empty	
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.		
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.		
	GRE	Generic Routing Encapsulation protocol		
	IOT			
	L2TP	Layer 2 Tunnelling Protocol		
	PPP	Point to Point Protocol		
	PPPoE	PPP over Ethernet		
	PPPoATM	PPP over ATM		
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.		
Web: Create a bridge over multiple interfaces UCI: network. <if name="">.type</if>	If you select this option, then the new logical interface created will act as a bridging interface between the chosen existing physical interfaces.  Empty			
Opt: type				
	Bridge	Configures a bridge over multiple interfaces.		
Web: Cover the following interface UCI: network. <if name="">.ifname Opt: ifname</if>	Physical interface name to assign to this logical interface. If creating a bridge over multiple interfaces select two interfaces to bridge. When using UCI, the interface names should be separated by a space e.g. option ifname 'eth2 eth3'.			

#### Table 90: Information table for the create new interface page

Click **Submit**. The Interface configuration page appears. There are three sections:

Section	Description
Common Configuration	Configure the interface settings such as protocol, IP address, gateway, netmask, custom DNS servers, MTU and firewall configuration.
IP-Aliases	Assign multiple IP addresses to the interface.
DHCP Server	Configure DHCP server settings for this interface.

27.2.3 Common configuration

The common configuration section has four sub sections.

Section	Description
General Setup	Configure the basic interface settings such as protocol, IP address, gateway, netmask, custom DNS servers.
Advanced Settings	'Bring up on boot', 'Monitor interface state', Override MAC address, Override MTU and 'Use gateway metric'.
Physical Settings	Bridge interfaces, VLAN PCP to SKB priority mapping.
Firewall settings	Assign a firewall zone to the interface.

Only **General setup** and **Advanced Settings** have DHCP client option configuration options

#### 27.2.3.1 Common configuration – general setup

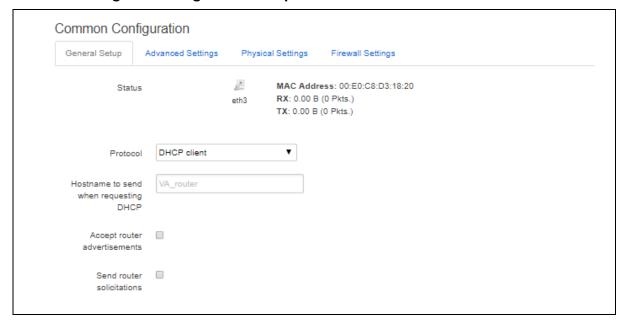


Figure 139: The interface general setup configuration page for DHCP client protocol

Web Field/UCI/Package Option	Description			
Web: Status	Shows the current status of the interface.			
Web: Protocol UCI: network. <if name="">.proto Opt: proto</if>	Protocol type. The interface protocol may be one of the options shown below. The protocol selected in the previous step will be displayed as default but can be changed if required.			
	Select DHCP Client.			
	Option	Description		
	Static	Static configuration with fixed address and netmask.		
	DHCP Client	Address and netmask are assigned by DHCP.		
	Unmanaged	Unspecified		
	IPv6-in-IPv4 (RFC4213)	Used with tunnel brokers.		
	IPv6-over- IPv4	Stateless IPv6 over IPv4 transport.		
	GRE	Generic Routing Encapsulation protocol		
	IOT			
	L2TP	Layer 2 Tunnelling Protocol.		
	PPP	Point-to-Point protocol		
	PPPoE	PPP over Ethernet		
	PPPoATM	PPP over ATM		
	LTE/UMTS/ GPRS/EV-DO	CDMA, UMTS or GPRS connection using an AT-style 3G modem.		
Web: Hostname to send when requesting DHCP	Defines the hostname to include in DHCP requests			
UCI: network. <if name="">.hostname</if>				
Opt: hostname				
Web: Accept router advertisements UCI: network. <if name="">.accept_ra</if>	Specifies whether to accept IPv6 Router Advertisements on this interface (optional).			
Opt: accept_ra	Note: default is defaults to 0.	s 1 if protocol is set to DHCP, otherwise the setting		
	0	Does not accept IPv6 router advertisements.		
	1	Accept IPv6 router advertisements.		
Web: Send router solicitations UCI: network. <if name="">.send_rs</if>	Specifies wheth (optional).	er to send router Solicitations on this interface		
Opt: send_rs	<b>Note</b> : defaults to <b>1</b> for Static protocol, otherwise the setting defaults to <b>0</b> .			
	0	Do not send router solicitations		
	1	Send router solicitations		

Table 91: Information table for general setup configuration settings for DHCP client protocol

3 3

#### 27.2.3.2 Common configuration: advanced settings

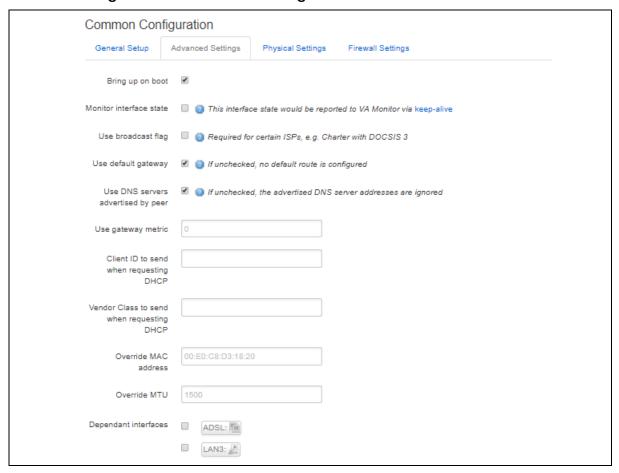


Figure 140: The interface advanced settings page for DHCP client protocol

Web Field/UCI/Package Option	Description			
Web: Bring up on boot	Enables the interface to connect automatically on boot up.			
UCI: network. <if name="">.auto</if>	0	Disabled.		
Opt: auto	1	Enabled.		
Web: Monitor interface state	Enabled if statu	s of interface is presented on Monitoring platform.		
UCI: network. <if name="">.monitored</if>	0	Disabled.		
Opt: monitored	1	Enabled.		
Web: Use broadcast flag UCI: network. <if name="">.broadcast</if>	Enables the bro ISPs).	ables the broadcast flag in DHCP requests (required for certain 2s).		
Opt: broadcast	0	Disabled.		
Spr. 2. daddact	1	Enabled.		
Web: Use default gateway UCI: network. <if name="">.gateway</if>		r to suppress the DHCP assigned default gateway.		
Opt: gateway	0	Disabled (option gateway set to 0.0.0.0)		
	1	Enabled.		
Web: Use DNS servers advertised by peer UCI: n/a Opt: n/a	Defines whether to override DHCP assigned DNS servers with configured list of DNS servers. When unchecked allows configuration of custom DNS servers via web. There is no uci option set when checking or unchecking this option.			

Web: Use custom DNS servers UCI: network. <if name="">.dns Opt: dns</if>	Defines whether to override DHCP assigned DNS servers with configured list of DNS servers.  Multiple DNS Servers are separated by a space if using UCI.  Example: option dns '1.1.1.1 2.2.2.2.'  Disabled (option gateway set to 0.0.0.0)			า
	1		Disabled (option gateway set to 0.0.0.0)  Enabled.	
Web: Use gateway metric	<u>                                   </u>	•	ult route metric to use for this interface.	
UCI: network. <if name="">.metric</if>	0		Disabled.	
Opt: metric	Range		Sisabled.	
Web: Client ID to send when requesting DHCP		whether to	o override the client identifier in DHCP	
UCI: network. <if name="">. clientid</if>	Blank		Do not override.	
Opt: clientid	Range	e (	Override.	
Web: Vendor Class to send when	Defines	whether to	o override the vendor class in DHCP reques	sts.
requesting DHCP	Blank		Do not override.	
UCI: network. <if name="">.vendorid</if>	Range	)	Override.	
Opt: vendorid				
Web: Override MAC address	Override the MAC address assigned to this interface. Must be in the form: hh:hh:hh:hh:hh, where h is a hexadecimal number.			
UCI: network. <if name="">.macaddr</if>	the for	11. 1111.1111.11	in. fin. fin. fin, where it is a nexadecimal fidir	ilbei .
Opt: macaddr				
Web: Override MTU	Defines the value to override the default MTU on this interface.			ce.
UCI: network. <if name="">.mtu Opt: mtu</if>				
Web: Dependant Interfaces UCI: network.[if_name].dependants Opt: dependants	Lists interfaces that are dependent on this parent interface.  Dependent interfaces will go down when parent interface is down and will start or restart when parent interface starts.  Separate multiple interfaces by a space when using UCI.			down
		•	dependents 'PPPADSL MOBILE'	
		_	following previous options in child interface	S.
	gre		cal_interface	
	It2p	option sro		
	iot option wan1 wan2 6in4 option ipaddr			
	6to4 option ipaddr			
Web: SNMP Alias ifIndex UCI: network.@interface[X].snmp_alias_ifindex	Defines a static SNMP interface alias index for this interface, that can be polled using via the SNMP interface index			that
Opt: snmp_alias_ifindex	Blank No SNMP interface alias index			
	Range 0 - 4294966295			

Table 92: Information table for advanced settings for DHCP client protocol

# 27.3 Configuring DHCP client using command line

The configuration files for DHCP client are stored on /etc/config/network

## 27.3.1 DHCP client using UCI

```
root@VA_router:~# uci show network
    ....
network.DHCPCLIENTLAN=interface
network.DHCPCLIENTLAN.proto=dhcp
```

```
network.DHCPCLIENTLAN.ifname=eth3
network.DHCPCLIENTLAN.monitored=0
network.DHCPCLIENTLAN.broadcast=0
network.DHCPCLIENTLAN.accept_ra=1
network.DHCPCLIENTLAN.send_rs=0
network.DHCPCLIENTLAN.metric=1
```

#### 27.3.2 DHCP client using package options

```
root@VA_router:~# uci export network
package network
......

config interface 'DHCPCLIENTLAN'
    option proto 'dhcp'
    option ifname 'eth3'
    option monitored '0'
    option broadcast '0'
    option accept_ra '1'
    option send_rs '0'
    option metric '1'
```

## 27.4 DHCP client diagnostics

#### 27.4.1 Interface status

To see IP address of DHCP client interface, enter **ifconfig**:

```
root@VA_router:~# ifconfig
3g-CDMA Link encap:Point-to-Point Protocol
    inet addr:10.33.152.100 P-t-P:178.72.0.237 Mask:255.255.255.255
    UP POINTOPOINT RUNNING NOARP MULTICAST MTU:1400 Metric:1
    RX packets:6 errors:0 dropped:0 overruns:0 frame:0
    TX packets:23 errors:0 dropped:0 overruns:0 carrier:0
    collisions:0 txqueuelen:3
    RX bytes:428 (428.0 B) TX bytes:2986 (2.9 KiB)

eth0 Link encap:Ethernet HWaddr 00:E0:C8:12:12:15
    inet addr:192.168.100.1 Bcast:192.168.100.255

Mask:255.255.255.0
    inet6 addr: fe80::2e0:c8ff:fe12:1215/64 Scope:Link
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3 UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1

RX packets:6645 errors:0 dropped:0 overruns:0 frame:0

TX packets:523 errors:0 dropped:0 overruns:0 carrier:0

collisions:0 txqueuelen:1000

RX bytes:569453 (556.1 KiB) TX bytes:77306 (75.4 KiB)

lo Link encap:Local Loopback

inet addr:127.0.0.1 Mask:255.0.0.0

inet6 addr: ::1/128 Scope:Host

UP LOOPBACK RUNNING MTU:16436 Metric:1

RX packets:385585 errors:0 dropped:0 overruns:0 frame:0

TX packets:385585 errors:0 dropped:0 overruns:0 carrier:0

collisions:0 txqueuelen:0

To display a specific interface, enter:

```
root@VA_router:~# ifconfig eth0

eth0 Link encap:Ethernet HWaddr 00:E0:C8:12:12:15
    inet addr:192.168.100.1 Bcast:192.168.100.255

Mask:255.255.255.0

inet6 addr: fe80::2e0:c8ff:fe12:1215/64 Scope:Link
    UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
    RX packets:7710 errors:0 dropped:0 overruns:0 frame:0
    TX packets:535 errors:0 dropped:0 overruns:0 carrier:0
    collisions:0 txqueuelen:1000
    RX bytes:647933 (632.7 KiB) TX bytes:80978 (79.0 KiB)
```

RX bytes:43205140 (41.2 MiB) TX bytes:43205140 (41.2 MiB)

#### 27.4.2 ARP table status

To show the current ARP table of the router, enter:

```
root@GW7314:~# arp
? (10.67.253.141) at 30:30:41:30:43:36 [ether] on eth8
? (10.47.48.1) at 0a:44:b2:06 [ether] on gre-gre1
```

#### 27.4.3 Route status

To show the current routing status, enter:

root@VA_router:	~# route -n					
Kernel IP routi	ng table					
Destination	Gateway	Genmask	Flags	Metric	Ref	Use Iface
192.168.100.0	*	255.255.255.0	U	0	0	0 eth0

**Note**: a route will only be displayed in the routing table when the interface is up.

28 Configuring DHCP forwarding

This section describes how to configure the router to forward DHCP requests from an interface to a network DHCP server.

#### 28.1 Configuration packages used

Package	Sections
dhcp_fwd	dhcpfwd

#### Configuring DHCP forwarding using the web interface 28.2

To configure DHCP forwarding using the web interface, in the top menu, click Network -> DHCP-Forwarder.

The DHCP forwarder page appears. The web GUI creates a dhcpfwd section called main so this will be used in the uci examples below.

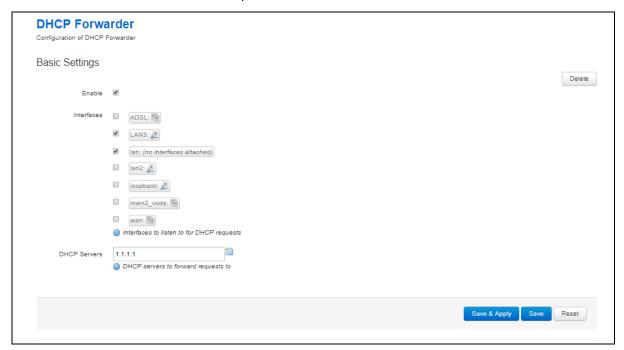


Figure 141: The DHCP forwarder configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled UCI: dhcp_fwd.main.enabled Opt: enabled	Defines whether DHCP forwarding is enabled or disabled.  0 Do not send router solicitations.		
	1 Send router solicitations.		
Web: Interfaces UCI: dhcp_fwd.main.listen_interface Opt: list listen_interface	Defines a list of the source interface name(s) to forward DHCP messages from. Multiple interface_name(s) are entered using uci set and uci add_list commands. Example: uci set dhcp_fwd.main.listen_interface=LAN1 uci add_list dhcp_fwd.main.listen_interface=LAN2 or using a list of options via package options list listen_interface 'LAN1' list listen_interface 'LAN2'		
Web: DHCP Servers UCI: dhcp_fwd.main.server Opt: list server	Defines a list of the network DHCP servers to forward DHCP messages to. Multiple interface_name(s) are entered using uci set and uci add_list commands. Example: uci set dhcp_fwd.main.server=1.1.1.1 uci add_list dhcp_fwd.main.main.server=2.2.2.2 or using a list of options via package options list server '1.1.1.1' list server '2.2.2.2'		

Table 93: Information table for the DHCP forwarder section

## 28.3 Configuring DHCP forwarding using command line

The configuration files for DHCP client are stored in /etc/config/dhcp\_fwd

## 28.3.1 DHCP forwarding using UCI

```
root@VA_router:~# uci show dhcp_fwd
dhcp_fwd.main=dhcpfwd
dhcp_fwd.main.enabled=1
dhcp_fwd.main.listen_interface=LAN3 lan2
dhcp_fwd.main.server=1.1.1.1
```

## 28.3.2 DHCP forwarding using package options

```
root@VA_router:~# uci export dhcp_fwd
package dhcp_fwd

config dhcpfwd 'main'
    option enabled '1'
    list listen_interface 'LAN3'
    list server '1.1.1.1'
```

## 28.4 DHCP forwarding over IPSec

DHCP messages are forwarded over the WAN interface using the IP address of the WAN interface as the source IP for the transmitted packet. This means that when forwarding over an IPSec tunnel a source NAT firewall rule is required to change the source IP to match an IPSec connection rule.

#### 28.4.1 Configuration packages used

Package	Sections
firewall	redirect

#### 28.4.2 Configuring source NAT for DHCP forwarding over IPsec

To enter a source NAT rule, browse to **Network -> Firewall**. Select **Traffic Rules** tab. The Firewall - Traffic Rules page appears. Configure a source NAT rule that changes the source IP for UDP destination port 67 from the required LAN.

For more information on configuring a source NAT rule, read the 'Configuring Firewall' section of the User Manual.

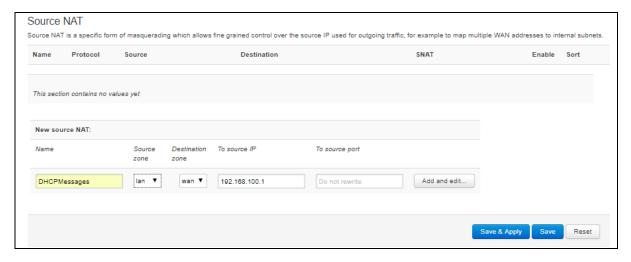


Figure 142: The firewall - traffic rules configuration page

Web Field/UCI/Package Option	Description		
Web: Name	Defines a name for the source NAT rule.		
UCI: firewall.@redirect[X].name			
Opt: name			
Web: Source Zone	Defines the source interface for the source NAT rule.		
UCI: firewall.@redirect[X].src	Select the interface where the DHCP requests are		
Opt: src	originating.		
Web: Destination Zone	Defines destination interface for the source NAT rule.		
UCI: firewall.@redirect[X].dest	Select the interface where the DHCP requests are intended		
Opt: dest	to be transmitted.		
Web: To source IP	Defines the IP address to rewrite matched traffic souce IP.		
UCI: firewall.@redirect[X].src_dip	Select the source IP address to match the required IPSec		
Opt: src_dip	rule.		
Web: To source port	Defines the port number to rewrite matched traffic souce port		
UCI: firewall.@redirect[X].src_dport	number.		
Opt: src_dport	Leave empty.		

Table 94: Information table for the souce NAT configuration

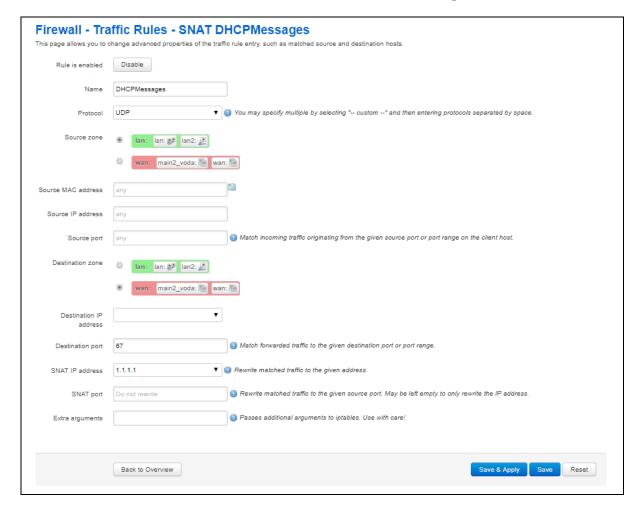


Figure 143: The firewall – traffic rules – SNAT configuration page

Page 287 of 463

Web Field/UCI/Package Option	Description	Description				
Web: Rule is enabled	Defines whether	Defines whether source NAT rule is enabled.				
UCI: firewall.@redirect[X].enabled	0	Disabled				
Opt: enabled	1	Enabled				
Web: Name	Defines a name	Defines a name for the source NAT rule.				
UCI: firewall.@redirect[X].name						
Opt: name						
Web: Protocol	Defines the pro	Defines the protocol for the souce NAT rule to match.				
UCI: firewall.@redirect[X].proto	Select UDP.	Select UDP.				
Opt: proto	Option	Description	UCI			
	All protocols	Match all protocols	all			
	TCP+UDP	Match TCP and UDP protocols	tcp upd			
	TCP	Match TCP protocol	tcp			
	UDP	Match UDP protocol	udp			
	ICMP	Match ICMP protocol	icmp			
	Custom	Enter custom protocol				
Web: Source Zone	Defines the sou	Defines the source interface for the source NAT rule.				
UCI: firewall.@redirect[X].src	Select the inte	Select the interface where the DHCP requests are				
Opt: src	originating.	originating.				
Web: Destination Zone	Defines destina	Defines destination interface for the source NAT rule.				
UCI: firewall.@redirect[X].dest		Select the interface where the DHCP requests are intended				
Opt: dest	to be transmi	to be transmitted.				
Web: Destination port	Defines the des	Defines the destination port number to match.				
UCI: firewall.@redirect[X].port	Select 67.	Select 67.				
Opt: port						
Web: SNAT IP address	Defines the IP	Defines the IP address to rewrite matched traffic.				
UCI: firewall.@redirect[X].src_dip Opt: src_dip	Select the sou rule.	Select the source IP address to match the required IPSec rule.				

Table 95: Information table for the advanced source NAT configuration

# 28.4.3 Configuring source NAT for DHCP forwarding over IPSec using command line

#### 28.4.3.1 Source NAT for DHCP forwarding over IPSec using UCI

```
root@VA_router:~# uci show firewall
.....
firewall.@redirect[0]=redirect
firewall.@redirect[0].target=SNAT
firewall.@redirect[0].src=lan
firewall.@redirect[0].dest=wan
firewall.@redirect[0].src_dip=192.168.100.1
firewall.@redirect[0].name=DHCPMessages
firewall.@redirect[0].proto=udp
firewall.@redirect[0].dest_port=67
```

### 28.4.3.2 Source NAT for DHCP forwarding over IPSec using package options

```
root@VA_router:~# uci export firewall
package firewall
.....

config redirect
    option target 'SNAT'
    option src 'lan'
    option dest 'wan'
    option src_dip '192.168.100.1'
    option name 'DHCPMessages'
    option proto 'udp'
    option dest_port '67'
```

# 28.5 DHCP forwarding diagnostics

# 28.5.1 Tracing DHCP packets

To trace DHCP packets on any interface on the router, enter **tcpdump -i any -n -p port** 67 &

```
root@VA_router:~# tcpdump -i any -n -p port 67 &
root@VA_router:~# tcpdump: verbose output suppressed, use -v or -vv for
full protocol decode
listening on any, link-type LINUX_SLL (Linux cooked), capture size 65535
bytes
16:39:20.666070 IP 0.0.0.0.68 > 255.255.255.255.67: BOOTP/DHCP, Request
from 00:e0:c8:13:02:3d, length 360
16:39:20.666166 IP 0.0.0.0.68 > 255.255.255.255.67: BOOTP/DHCP, Request
from 00:e0:c8:13:02:3d, length 360
```

To trace stop tracing enter **fg** (to bring tracing task to foregraound), and then **<CTRL- C>** to stop the trace.

```
root@VA_router:~# fg

tcpdump -i any -n -p port 67

^C

33 packets captured

33 packets received by filter

0 packets dropped by kernel
```

```
16:39:20.666166 IP 0.0.0.0.68 > 255.255.255.255.67: BOOTP/DHCP, Request from 00:e0:c8:13:02:3d, length 360
```

# 28.5.2 ARP table status

To show the current ARP table of the router, enter arp

```
root@VA_router:~# arp
? (10.67.253.141) at 30:30:41:30:43:36 [ether] on eth8
? (10.47.48.1) at 0a:44:b2:06 [ether] on gre-gre1
```

# 29 Configuring Dynamic DNS

## 29.1 Overview

Dynamic DNS (DDNS) functionality on a Virtual Access router will dynamically perform DDNS updates to a server so it can associate an IP address with a correctly associated DNS name. Users can then contact a machine, router, device and so on with a DNS name rather than a dynamic IP address.

An account is required with the provider, and one or more domain names are associated with that account. A dynamic DNS client on the router monitors the public IP address associated with an interface and whenever the IP address changes, the client notifies the DNS provider to update the corresponding domain name.

When the DNS provider responds to queries for the domain name, it sets a low lifetime, typically a minute or two at most, on the response so that it is not cached. Updates to the domain name are thus visible throughout the whole Internet with little delay.

**Note**: most providers impose restrictions on how updates are handled: updating when no change of address occurred is considered abusive and may result in an account being blocked. Sometimes, addresses must be refreshed periodically, for example, once a month, to show that they are still in active use.

# 29.2 Configuration packages used

Package	Sections
ddns	service

# 29.3 Configuring Dynamic DNS using the web interface

In the top menu, select **Services -> Dynamic DNS**. The Dynamic DNS Configuration page appears.

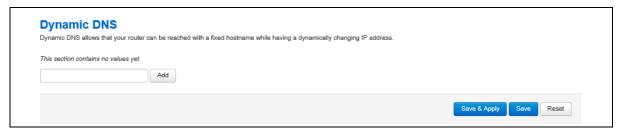


Figure 144: The Dynamic DNS configuration page

Enter a text name that will be used for the dynamic DNS section in the configuration. Select **Add**. The Dynamic DNS configuration options appear.

# 29.3.1 Dynamic DNS settings

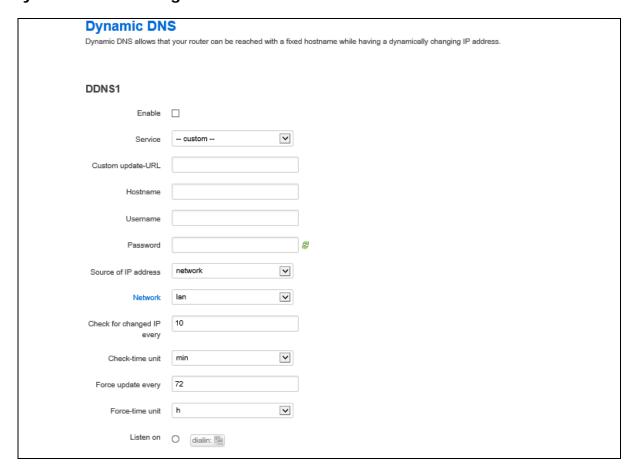


Figure 145: The dynamic DNS main settings page

Web Field/UCI/Package Option	Description	
Web: Enable UCI: ddns. <name>.enabled Opt: enabled</name>	Enables a Dynamic DNS entry on the router.  O Disabled.  1 Enabled	
Web: Service UCI: ddns. <name>.service_name Opt: service_name</name>	Defines the Dynamic DNS provider.	
Web: Customer update-URL UCI: ddns. <name>.update_url Opt: update_url</name>	Defines the customer DNS provider.  Displayed when the service is set to custom in the web interface.	
Web: Hostname UCI: ddns. <name>.domain Opt: domain</name>	Defines the fully qualified domain name associated with this entry. This is the name to update with the new IP address as needed.	
Web: Username UCI: ddns. <name>.username Opt: username</name>	Defines the user name to use for authenticating domain updates with the selected provider.	
Web: Password UCI: ddns. <name>.password Opt: password</name>	Defines the password to use for authenticating domain name updates with the selected provider.	
Web: Source of IP address UCI: ddns. <name>.ip_source</name>	Defines the type of interface whose IP needs to be updated.  network IP is a associated with a network configuration.	
Opt: ip_source	interface IP is associated with an interface. web IP is associated with a URL.	

0.00

	T
Web: Network	Defines the network whose IP needs to be updated.
UCI: ddns. <name>.ip_network Opt: ip_network</name>	Displayed when the Source of IP address option is set to network.
opp_nement	All the configured network interfaces will be shown.
Web: Inteface	Defines the interface whose IP needs to be updated.
UCI: ddns. <name>.ip_interface Opt: ip_interface</name>	Displayed when the Source of IP address option is set to interface.
	All the configured interfaces will be shown.
Web: URL	Defines the URL where the IP downloaded from.
UCI: ddns. <name>.ip_url</name>	Displayed when the Source of IP address option is set to URL.
Opt: ip_url	
Web: Check for changed IP every UCI: ddns. <name>.check_interval</name>	Defines how often to check for an IP change. Used in conjunction with check_unit.
Opt: check_interval	10
•	Range
Web: Check-time unit UCI: ddns. <name>.check_unit</name>	Defines the time unit to use for check for an IP change. Used in conjunction with check_interval.
Opt: check_unit	Minutes
	hours
Web: Force update every UCI: ddns. <name>.force interval</name>	Defines how often to force an IP update to the provider. Used in conjunction with force_unit.
Opt: force_interval	72 Disabled.
-	Range Enabled
Web: Force-time unit UCI: ddns. <name>.force_unit Opt: force_unit</name>	Defines the time unit to use for check for an IP change. Used in conjunction with force_interval.  Minutes  Hours
Web: Listen on UCI: ddns. <name>.interface Opt: interface</name>	Defines the interface for ddns monitoring. Typically this will be the same as the interface whose IP is being updated – as defined ip_network or ip_interface.  All configured interfaces will be displayed.

Table 96: Information table for dynamic DNS settings

# 29.4 Dynamic DNS using UCI

Dynamic DNS uses the ddns package /etc/config/ddns

#### 29.4.1 UCI commands for DDNS

```
root@VA_router:~# uci show ddns
ddns.ddns1=service
ddns.ddns1.enabled=1
ddns.ddns1.service_name=dyndns.org
ddns.ddns1.domain=fqdn_of_interface
ddns.ddns1.username=testusername
ddns.ddns1.password=testpassword
ddns.ddns1.ip_source=network
ddns.ddns1.ip_network=ds10
ddns.ddns1.check_interval=10
```

```
ddns.ddns1.check_unit=minutes
ddns.ddns1.force_interval=72
ddns.ddns1.force_unit=hours
ddns.ddns1.interface=ds10
Package options for DDNS
root@VA_router:~# uci export ddns
package ddns
config service 'ddns1'
        option enabled '1'
        option service_name 'dyndns.org'
        option domain 'fqdn_of_interface'
        option username 'test'
        option password 'test'
        option ip_source 'network'
        option ip_network 'dsl0'
        option check_interval '10'
        option check_unit 'minutes'
        option force_interval '72'
        option force_unit 'hours'
        option interface 'dsl0'
```

© Virtual Access 2018

# 30 Configuring hostnames

## 30.1 Overview

Hostnames are human-readable names that identify a device connected to a network. There are several different ways in which hostnames can be configured and used on the router.

- Local host file records
- PTR records
- Static DHCP leases

# 30.2 Local host file records

The hosts file is an operating system file that maps hostnames to IP addresses. It is used preferentially to other name resolution methods such as DNS.

The hosts file contains lines of text consisting of an IP address in the first text field followed by one or more host names. Each field is separated by white space – tabs are often preferred for historical reasons, but spaces are also used. Comment lines may be included; they are indicated by an octothorpe (#) in the first position of such lines. Entirely blank lines in the file are ignored.

By default, the routers local host file contains:

```
127.0.0.1 localhost
::1 ip6-localhost ip6-loopback
```

The local host file is stored at /etc/hosts

## 30.2.1 Configuration packages used

Package	Sections
network	host

#### 30.2.2 Configuring local host files entries using the web interface

In the top menu, select **Network -> Interfaces**. The Interfaces configuration page appears.

Browse to **Host Records** section at the bottom of the page.

Host Records

Hostname

IP-Address

This section contains no values yet

Add

Figure 146: The host records add page

Select Add. Enter a hostname and IP address and select Save & Apply.



Figure 147: The host records configuration page

Web Field/UCI/Package Option	Description
Web: Hostname	Defines the hostname.
UCI: network.host.hostname	
Opt: hostname	
Web: IP-Address	Defines the IP address associated with the hostname.
UCI: network.host.addr	
Opt: addr	

Table 97: Information table for host records settings

# 30.2.3 Local host records using command line

Local host records are configured in the host section of the network package **/etc/config/network**.

Multiple hosts can be configured.

By default, all host instances are named host and are identified by @host then the host position in the package as a number. For example, for the first host in the package using UCI:

```
network.@host[0]=host
network.@host[0].hostname=Device1
```

Or using package options:

```
config host
option hostname 'Devicel'
```

30.2.3.1 Local host records using uci

```
root@VA_router:~# uci show network
.....
network.@host[0]=host
network.@host[0].hostname=Device1
network.@host[0].addr=1.1.1.1
```

# 30.2.3.2 Local host records using package option

```
root@VA_router:~# uci export network
package network
.....
config host
    option hostname 'Device1'
    option addr '1.1.1.1'
```

### 30.2.4 Local host records diagnostics

#### 30.2.4.1 Hosts file

Local host records are written to the local hosts file stored at **/etc/hosts**. To view the local hosts file, enter:

```
root@VA_router:~# cat /etc/hosts
127.0.0.1 localhost
::1 ip6-localhost ip6-loopback
1.1.1.1 Device1
```

#### 30.3 PTR records

PTR records are used for reverse DNS.

The primary purpose for DNS is to map domains to IP addresses. A pointer record works in the opposite way; it associates an IP address with a domain name.

## 30.3.1 Configuration packages used

Package	Sections
dhcp	domain

## 30.3.2 Configuring PTR records using the web interface

In the top menu, select **Network -> Hostnames**. The Hostnames configuration page appears.

Host entries
Hostname IP address

This section contains no values yet

Add

Figure 148: The hostnames add page

Select **Add**. Enter a hostname and IP address for the PTR record and select **Save & Apply**.



Figure 149: The hostnames configuration page

Web Field/UCI/Package Option	Description
Web: Hostname	Defines the domain name for the PTR record.
UCI: dhcp.domain.name	
Opt: name	
Web: IP-Address	Defines the IP address associated with the domain name.
UCI: dhcp.domain.ip	
Opt: ip	

Table 98: Information table for hostnames settings

# 30.3.3 PTR records using command line

PTR records are configured in the **domain** section of the dhcp package. **/etc/config/dhcp**.

Multiple domains can be configured.

By default, all domain instances are named domain and are identified by @domain then the domain position in the package as a number. For example, for the first domain in the package using UCI:

```
dhcp.@domain[0]=domain
dhcp.@domain[0].name=Domain1
```

Or using package options:

```
config domain

option name 'Domain1'
```

....

30.3.3.1 PTR records using uci

```
root@VA_router:~# uci show dhcp
.....
dhcp.@domain[0]=domain
dhcp.@domain[0].name=Domain1
dhcp.@domain[0].ip=2.2.2.2
```

# 30.3.3.2 PTR records using package option

### 30.3.4 PTR records diagnostics

## 30.3.4.1 PTR records table

To view PTR records, enter:

```
root@VA_router:~# pgrep -fl dnsmasq
4724 /usr/sbin/dnsmasq -K -D -y -Z -b -E -s lan -S /lan/ -l
/tmp/dhcp.leases -r /tmp/resolv.conf.auto --stop-dns-rebind --rebind-
localhost-ok -A /Devicel.lan/1.1.1.1 --ptr-record=1.1.1.in-
addr.arpa,Devicel.lan -A /Device2.lan/2.2.2.2 --ptr-record=2.2.2.2.in-
addr.arpa,Device2.lan
```

## 30.4 Static leases

Static leases are used to assign fixed IP addresses and symbolic hostnames to DHCP clients based on their MAC (hardware) address.

They are also required for non-dynamic interface configurations where only hosts with a corresponding lease are served.

## 30.4.1 Configuration packages used

Package	Sections
dhcp	host

### 30.4.2 Configuring static leases using the web interface

In the top menu, select **Network -> DHCP and DNS**. The DHCP and DNS configuration page appears.

#### Browse to **Static leases** section.



Figure 150: The static leases add page

Select **Add**. Enter a hostname, MAC address and IP address for the static lease. Select **Save & Apply**.

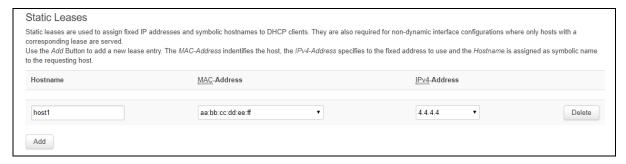


Figure 151: The static leases configuration page

Web Field/UCI/Package Option	Description
Web: Hostname	Defines the symbolic hostname to assign.
UCI: dhcp.host.name	
Opt: name	
Web: MAC-Address	Defines the MAC address for this host. MAC addresses should be
UCI: dhcp.host.mac	entered in the format aa:bb:cc:dd:ee:ff
Opt: mac	
Web: IPv4-Address	Defines the IP address to be used for this host.
UCI: dhcp.host.ip	
Opt: ip	

Table 99: Information table for static leases settings

# 30.4.3 Static leases using command line

Static leases are configured in the **host** section of the dhcp package **/etc/config/dhcp**.

Multiple **hosts** can be configured.

By default, all dhcp host instances are named host. It is identified by @host then the host position in the package as a number. For example, for the first host in the package using UCI:

```
dhcp.@host[0]=host
dhcp.@host[0].name=Host1
```

0.00

5 5

## Or using package options:

```
config host

option name 'Host1'
```

## 30.4.3.1 Static leases using uci

```
root@VA_router:~# uci show dhcp
......
dhcp.@host[0]=host
dhcp.@host[0].name=Host1
dhcp.@host[0].mac=aa:bb:cc:dd:ee:ff
dhcp.@host[0].ip=4.4.4.4
```

# 30.4.3.2 Static leases using package option

```
root@VA_router:~# uci export dhcp
package dhcp
.....
config host
    option name 'Host1'
    option mac 'aa:bb:cc:dd:ee:ff'
    option ip '4.4.4.4'
```

# 31 Configuring firewall

The firewall itself is not required. It is a set of scripts which configure Netfilter. If preferred, you can use Netfilter directly to achieve the desired firewall behaviour.

**Note**: the UCI firewall exists to simplify the configuration of Netfilter for many scenarios, without requiring the knowledge to deal with the complexity of Netfilter.

The firewall configuration consists of several zones covering one or more interfaces. Permitted traffic flow between the zones is controlled by forwardings. Each zone can include multiple rules and redirects (port forwarding rules).

The Netfilter system is a chained processing filter where packets pass through various rules. The first rule that matches is executed often leading to another rule-chain until a packet hits either ACCEPT or DROP/REJECT.

Accepted packets pass through the firewall. Dropped packets are prohibited from passing. Rejected packets are also prohibited but an ICMP message is returned to the source host.

A minimal firewall configuration for a router usually consists of one 'defaults' section, at least two 'zones' (LAN and WAN) and one forwarding to allow traffic from LAN to WAN. Other sections that exist are 'redirects', 'rules' and 'includes'.

# 31.1 Configuration package used

Package	Sections
firewall	

# 31.2 Configuring firewall using the web interface

In the top menu, select **Network -> Firewall**. The Firewall page appears. It is divided into four sections:

Section	Description
General Zone Settings	Defines the firewall zones, both global and specific.
Port Forwards	Port Forwards are also known as Redirects. This section creates the redirects using DNAT (Destination Network Address Translation) with Netfilter.
Traffic Rules	Defines rules to allow or restrict access to specific ports, hosts or protocols.

# 31.2.1 Firewall: zone settings

The Zone settings section is divided into two:

Section	Description
General Settings	Defines the global firewall settings that do not belong to any specific zones.
Zones	The zones section groups one or more interfaces and serves as a source or destination for forwardings, rules and redirects. Masquerading (NAT) of outgoing traffic is controlled on a per-zone basis.

\_\_\_\_

#### 31.2.1.1 Firewall general settings

The General Settings page, or defaults section declares global firewall settings that do not belong to any specific zones. These default rules take effect last and more specific rules take effect first.



Figure 152: The firewall zone general settings page

Web Field/UCI/Package Option	Description		
Web: Enable SYN-flood protection	Enables SYN f	lood protection.	
UCI: firewall.defaults.syn_flood	0	Disabled.	
Opt: syn_flood	1	Enabled.	
Web: Drop invalid packets	Drops packets	not matching any active connection.	
UCI: firewall.defaults.drop_invalid	0	Disabled.	
Opt: drop_invalid	1	Enabled.	
Web: Input	Default policy	for the Input chain.	
UCI: firewall.defaults.input	Accept	Accepted packets pass through the firewall.	
Opt: input	Reject	Rejected packets are blocked by the firewall and ICMP message is returned to the source host.	
	Drop	Dropped packets are blocked by the firewall.	
Web: Output	Default policy	for the Output chain.	
UCI: firewall.defaults.output	Accept	Accepted packets pass through the firewall.	
Opt: output	Reject	Rejected packets are blocked by the firewall and ICMP message is returned to the source host.	
	Drop	Dropped packets are blocked by the firewall.	
Web: Forward	Default policy	for the Forward chain.	
UCI: firewall.defaults.forward	Accept	Accepted packets pass through the firewall.	
Opt: forward	Reject	Rejected packets are blocked by the firewall and ICMP message is returned to the source host.	
	Drop	Dropped packets are blocked by the firewall.	

Table 100: Information table for general zone general settings page

#### 31.2.1.2 Firewall zones

The Zones section groups one or more interfaces and serves as a source or destination for forwardings, rules and redirects. Masquerading (NAT) of outgoing traffic is controlled on a per-zone basis. To view a zone's settings, click **Edit**.

The number of concurrent dynamic/static NAT entries of any kind (NAT/PAT/DNAT/SNAT) is not limited in any way by software; the only hardware limitation is the amount of RAM installed on the device.

#### 31.2.1.3 Firewall zone: general settings

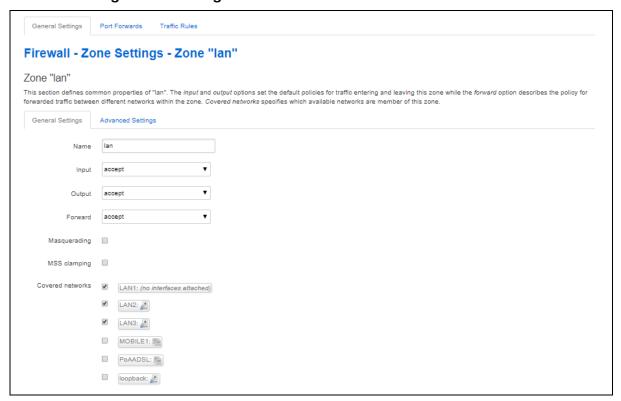


Figure 153: The firewall zone general settings

Web Field/UCI/Package Option	Description			
Web: name UCI: firewall. <zone label="">.name Opt: name</zone>	Sets the unique zone name. Maximum of 11 characters allowed. <b>Note</b> : the zone label is obtained by using the 'uci show firewall' command and is of the format '@zone[x]' where x is an integer starting at 0.		•	
Web: Input UCI: firewall. <zone label="">.input Opt: input</zone>	Default policy for incoming zone traffic. Incoming traffic entering the router through an interface selected in the 'Networks' option for this zone.			
Opt. Input	Accept	Accepted packets pass through the firewall.		
	Reject	Rejected packets are blocked by the firewall and ICMP message is returned to the source host.		
	Drop	Dropped packets are blocked by the firewall.		

Web: Output UCI: firewall. <zone label="">.output</zone>	Default policy for outgoing zone traffic. Outgoing traffic is traffic leaving the router through an interface selected in the 'Covered Networks' option for this zone.		
Opt: output	Accept	Accepted packets pass through the firewall.	
	Reject	Rejected packets are blocked by the firewall and ICMP message is returned to the source host.	
	Drop	Dropped packets are blocked by the firewall.	
Web: Forward UCI: firewall. <zone label="">.forward Opt: forward</zone>	Default policy for internal zone traffic between interfaces.  Forward rules for a zone describe what happens to traffic passing between different interfaces within that zone.		
Opt. Torward	Accept	Accepted packets pass through the firewall.	
	Reject	Rejected packets are blocked by the firewall and ICMP message is returned to the source host.	
	Drop	Dropped packets are blocked by the firewall.	
Web: Masquerading UCI: firewall. <zone label="">.masq Opt: masq</zone>	Specifies whether outgoing zone traffic should be masqueraded (NATTED). This is typically enabled on the wan zone.		
Web: MSS Clamping UCI: firewall. <zone label="">.mtu_fix</zone>	Enables MSS clamping for outgoing zone traffic. Subnets are allowed.		
Opt: mtu_fix	0	Disabled. Enabled.	
Web: Covered networks  UCI: firewall. <zone label="">.network  Opt: network</zone>	Defines a list of interfaces attached to this zone, if omitted, the value of name is used by default.  Note: use the uci list syntax to edit this setting through UCI.		

Table 101: Information table for firewall zone general settings

# 31.2.1.4 Firewall zone: advanced settings

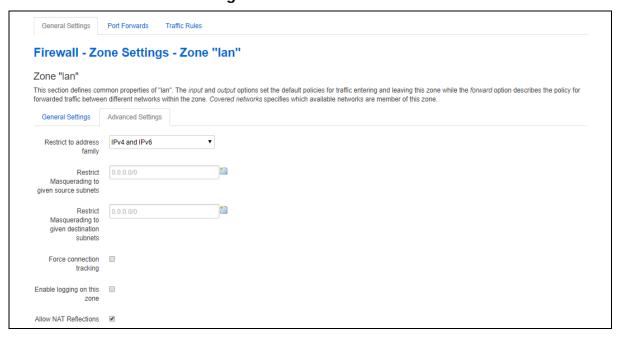


Figure 154: Firewall zone advanced settings

Web Field/UCI/Package Option	Description			
Web: Restrict to address family	Restricts zone to IPv4, IPv6 or both IPv4 and IPv6.			
UCI: firewall. <zone label="">.family</zone>	Option	Description	UCI	
Opt: family	IPv4 and IPv6	Any address family	any	
	IPv4 only	IPv4 only	ipv4	
	IPv6 only	IPv6 only	Ipv6	
Web: Restrict Masquerading to given source subnets.  UCI: firewall. <zone label="">.masq_src</zone>	•	ading to the given source subnets. ixing the subnet with '!'. Multiple so	J	
Opt: masq_src				
Web: Restrict Masquerading to given destination subnets.  UCI: firewall. <zone label="">.masq_dest  Opt: masq_dest</zone>	Limits masquerading to the given destination subnets. Negation is possible by prefixing the subnet with '!'. Multiple subnets are allowed. Multiple IP addresses/subnets should be separated by a space, for example: option masq_dest '1.1.1.1 2.2.2.0/24'.			e
Web: Force connection tracking	Forces connection	on tracking for this zone.		
UCI: firewall. <zone label="">.conntrack</zone>	0	Disabled.		
Opt: conntrack	1	If masquerading is used. Otherwidefault is 0.	se,	
Web: Enable logging on this zone UCI: firewall. <zone label="">.log Opt: log</zone>	Creates log rule	s for rejected and dropped traffic in	n this zone.	
Web: Allow NAT reflections	Enable/disable a	all NAT reflections for this zone.		
UCI: firewall. <zone label="">.reflection Opt: reflection</zone>	Note: For configs with a large number of firewall rules, disabling NAT reflection will speed up load of firewall rules on interface start.			ing
	0	Disable reflection.		
	1	Enable reflection.		

Web: n/a	Limits the amount of log messages per interval.
UCI: firewall. <zone label="">.log_limit</zone>	
Opt: log_limit	

Table 102: Information table for firewall zone advanced settings

## 31.2.1.5 Inter-zone forwarding

This section controls the traffic flow between zones. Selecting a source or destination zone generates a forwarding rule. Only one direction is covered by any forwarding rule. Hence for bidirectional traffic flow between two zones then two rules are required, with source and destination alternated.

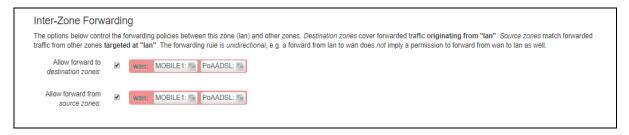


Figure 155: The inter-zone forwarding section

Web Field/UCI/Package Option	Description
Web: Allow forward to destination zones	Allows forward to other zones. Enter the current
UCI: firewall. <forwarding label="">.dest</forwarding>	zone as the source.
Opt: dest	Enabling this option puts two entries into the
UCI firewall. <forwarding label="">.src</forwarding>	firewall file: destination and source.
Opt: src	
Web: Allow forward from source zones	Allows forward from other zones. Enter the current
UCI: firewall. <forwarding label="">.dest</forwarding>	zone as the destination.
Opt: dest	Enabling this option puts two entries into the
UCI: firewall. <forwarding label="">.src</forwarding>	firewall file: destination and source.
Opt: src	

Table 103: Information table for inter-zone forwarding settings

**Note**: the rules generated for forwarding traffic between zones relay connection tracking to be enabled on at least one of the source or destination zones. This can be enabled through the conntrack option or through masq.

### 31.2.2 Firewall port forwards

Port forwards are also known as redirects. This section creates the redirects using DNAT (Destination Network Address Translation) with Netfilter. The redirects are from the firewall zone labelled as wan to the firewall zone labelled as lan. These zones can refer to multiple external and internal interfaces as defined in the Firewall Zone settings.

To edit an existing port forward select edit.

To add a new port forward select add.



Figure 156: The firewall port forward page

Web Field/UCI/Package Option	Description	Description			
Web: name	Sets the port f	Sets the port forwarding name. For Web UI generated redirects the			
UCI: firewall. <redirect label="">.name</redirect>	<pre><redirect label=""> takes the form of @redirect[x], where x is an integer</redirect></pre>			integer	
Opt: name	starting from 0.				
Web: Protocol	Defines layer 4	protocol to match incoming traffic.			
UCI: firewall. <redirect label="">.proto</redirect>	Option	Description	UCI		
Opt: proto	tcp+udp	Match either TCP or UDP packets.	tcp udp		
	tcp	Match TCP packets only.	tcp		
	udp	Match UDP packets only.	udp		
Web: External port  UCI: firewall. <redirect label="">.src_dport</redirect>	Specifies the incoming TCP/UDP port or port range to match. This is the incoming destination port specified by the external host. Port ranges specified as start:stop, for example, 2001:2020.				
Opt: src_dport	Blank	Match traffic to any port.			
	Range	1 - 65535			
Web: Internal IP address	Specifies the in	nternal (LAN) IP address for the traff	ic to be redi	rected	
UCI: firewall. <redirect label="">.dest_ip</redirect>	to.				
Opt: dest_ip					
Web: Internal port	Specifies the d	estination tcp/udp port for the redire	ect traffic.		
UCI: firewall. <redirect label="">.dest_port</redirect>					
Opt: dest_port					

Table 104: Information table for firewall port forward settings

The defined redirects can be sorted into a specific order to be applied. More specific rules should be placed first.

After the redirect is created and saved, to make changes, click **Edit**. This will provide further options to change the source/destination zones; specify source mac addresses and enable NAT loopback (reflection).

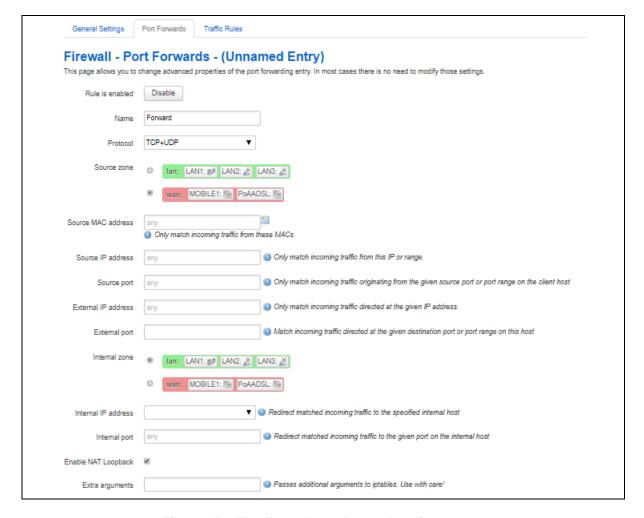


Figure 157: The firewall port forwards edits page

Web Field/UCI/Package Option	Description	Description		
Web: Rule is enabled	Specifies if this redirect should be enabled or disabled.			
UCI: firewall. <redirect label="">.enabled</redirect>	0 Disabled.			
Opt: enabled	1	Enabled.		
Web: name UCI: firewall. <redirect label="">.name Opt: name</redirect>	Sets the port forwarding name. For Web UI generated redirects the <redirect label=""> takes the form of @redirect[x], where x is an integer starting from 0.</redirect>			
Web: Protocol	Defines layer 4 protocol to match incoming traffic.			
UCI: firewall. <redirect label="">.proto</redirect>	Option Description UCI			
Opt: proto	tcp+udp Match either TCP or UDP packets. tcp udp			
	tcp	Match TCP packets only.	tcp	
	udp	Match UDP packets only.	udp	
Web: Source zone UCI: firewall. <redirect label="">.src Opt: src</redirect>	Specifies the traffic source zone. It must refer to one of the defined zone names. When using the web interface, this is set to WAN initially.			

Web: Source MAC address	Defines the list	of source MAC addresses that this redirect will			
UCI: firewall. <redirect label="">.src_mac</redirect>	Defines the list of source MAC addresses that this redirect will match.				
	Format: aa:bb:cc:dd:ee:ff				
Opt: list src_mac	· ·	Multiple RIP interfaces are entered using uci set and uci add_list commands. Example:			
		all.@redirect[0].src_mac=aa:bb:cc:dd:ee:f:	f		
	uci add_list				
	firewall.@red	irect[0].src_mac=12:34:56:78:90:12			
	or using a list o	f options via package options			
	list network	`aa:bb:cc:dd:ee:ff'			
	list network	`12:34:56:78:90:12'			
Web: Source IP address	Defines a source	e IP address that this redirect will match.			
UCI: firewall. <redirect label="">.src_ip</redirect>	Blank	Match traffic from any source IP.			
Opt: src_ip	Range	A.B.C.D/mask.			
Web: Source port UCI: firewall. <redirect label="">.src_port</redirect>		e IP port that this redirect will match. You can ports, using a space separator.			
Opt: src_port	For example: o	otion src_port '22 23'			
	*see note below	v on use with options src_dport and dest_port			
	Blank	Match traffic from any source port.			
	Range	1 - 65535			
Web: External port  UCI: firewall. <redirect label="">.src_dport  Opt: src_dport</redirect>	Specifies the incoming TCP/UDP port or port range to match. This is the incoming destination port specified by the external host.  Port ranges specified in format start:stop, for example, 2001:2020.  You can enter multiple ports, using a space separator.				
		otion src_dport '22 23'			
		v on use with options src_port and dest_port			
	Blank	Match traffic to any port.			
	-	1 – 65535			
Web, Internal repa	Range				
Web: Internal zone  UCI: firewall. <redirect label="">.dest  Opt: dest</redirect>	defined zone na	affic destination zone, must refer to one of the ames.			
Web: Internal IP address  UCI: firewall. <redirect label="">.dest_ip  Opt: dest_ip</redirect>	Specifies the interest redirected to.	ternal (LAN) IP address for the traffic to be			
Web: Internal port		estination tcp/udp port for the redirect traffic. You	1		
UCI: firewall. <redirect label="">.dest_port</redirect>		ole ports, using a space separator.			
Opt: dest_port	•	option dest_port '22 23'			
	*See note below src_dport.	w table on use with options src_port and			
Web: Enable NAT Loopback	Enable or disab	le NAT reflection for this redirect.	7		
UCI: firewall. <redirect label="">.reflection</redirect>	0	Reflection disabled.	4		
Opt: reflection	1	Reflection enabled.			
Web: Extra arguments UCI: firewall. <redirect label="">.extra Opt: extra</redirect>	additional matc	guments to IP tables. This is useful to specify h options, like -m policydir in for IPSec. The entered as text strings.			

Table 105: Information table for port forward edits fields

D Virtual Access 2018

\*Note: redirect rule options src\_port and src\_dport/dest\_port accept space-separated lists of ports. If src\_port is a list, then src\_dport/dst\_port cannot be, to avoid ambiguity.

If src\_dport/dest\_port are lists of different lengths, then the missing values of the shorter list default to the corresponding port in the other list. For example, if configuration file is:

```
option src_dport '21 22 23'
option dest_port '21 22 23 24'
```

then the firmware will interpret the values as:

```
option src_dport '21 22 23 24'
option dest_port '21 22 23 24'
```

#### 31.2.3 Firewall traffic rules

Rules can be defined to allow or restrict access to specific ports, hosts or protocols.

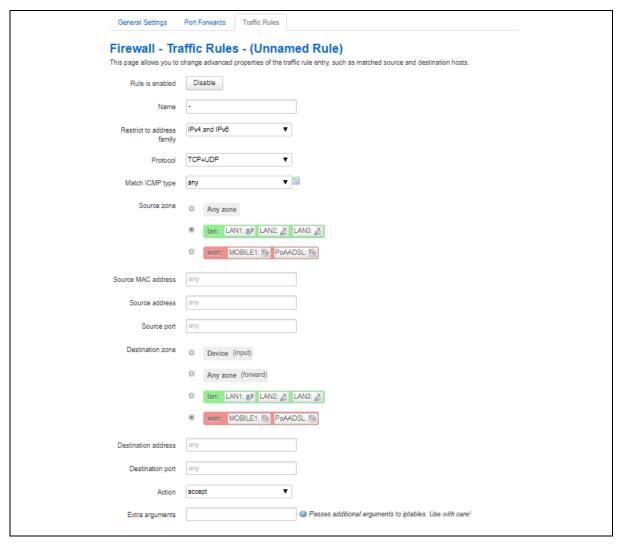


Figure 158: The firewall traffic rules page

Web Field/UCI/Package Option	Description		
Web: Rule is enabled	Enables or disables traffic rule.		
UCI: firewall. <rule label="">.enabled</rule>	0 Rule is disabled.		
Opt: enabled	1	Rule is enabled.	
•			-l NI-
Web: Name		ptive name limited to less than 11 owed in the naming convention.	cnaracters. No
UCI: firewall. <rule label="">.name</rule>	spaces are and	wed in the naming convention.	
Opt: name			
Web: Restrict to address family	Restrict to pro	1	-1
UCI: firewall. <rule label="">.family</rule>	Option	Description	UCI
Opt: family	IPv4 and IPv6	Traffic rule applies to any address family	any
	IPv4 only	IPv4 only	ipv4
	IPv6 only	IPv6 only	lpv6
Web: Protocol	Matches incom	ing traffic using the given protocol.	1
UCI: firewall. <rule label="">.proto</rule>	Option	Description	UCI
Opt: proto	TCP+UDP	Applies rule to TCP and UDP only	tcp udp
	TCP	Applies rule to TCP only	tcp
	UDP	Applies rule to UDP only	udp
	ICMP	Applies rule to ICMP only	icmp
	custom	Specify protocol from /etc/protocols	
Web: Match ICMP type	Match specific	icmp types.	
UCI: firewall. <rule label="">.icmp_type</rule>		only valid when ICMP is selected as	•
Opt: icmp_type		n be listed as either type names or	
	Note: for a full Options table to	I list of valid ICMP type names, see below.	the ICMP
Web: Source zone	Specifies the to	raffic source zone, must refer to one	e of the defined
UCI: firewall. <rule label="">.src</rule>	zone names. For typical port forwards, this is usually WAN.		
Opt: src			
Web: Source MAC address	Matches incom	ing traffic from the specified MAC a	ddress.
UCI: firewall. <rule label="">.src_mac</rule>	The MAC address must be entered in the following format:		
Opt: src_mac	aa:bb:cc:dd:	ee:ff:	
	/prefix to the	the first portion of the MAC address option value, where prefix define MAC to match on.	
	Example:		
	option src_ma	ac 00:E0:C8:12:34:56/24	
	will match on a	all packets with prefix 00:E0:C8.	
Web: Source address	Matches incom	ing traffic from the specified source	IP address.
UCI: firewall. <rule label="">.src_ip</rule>			
Opt: src_ip			
	i contract of the contract of	in a tractile animination from the alive	
Web: Source port		ing traffic originating from the give	n source port or
Web: Source port UCI: firewall. <rule label="">.src_port</rule>	Matches incomport range on		n source port or
			n source port or
UCI: firewall. <rule label="">.src_port</rule>	port range on		
UCI: firewall. <rule label="">.src_port Opt: src_port</rule>	port range on	the client host.	
UCI: firewall. <rule label="">.src_port Opt: src_port Web: Destination zone</rule>	port range on Specifies the ti	the client host.	
UCI: firewall. <rule label="">.src_port Opt: src_port Web: Destination zone UCI: firewall.<rule label="">.dest</rule></rule>	Specifies the to	the client host. Paffic destination zone. Must refer to ames.	o one of the
UCI: firewall. <rule label="">.src_port Opt: src_port Web: Destination zone UCI: firewall.<rule label="">.dest Opt: dest</rule></rule>	Specifies the to	the client host.	o one of the

Web: Destination port UCI: firewall. <rule label="">.dest_port Opt: dest_port</rule>	For DNAT, redirects matched incoming traffic to the given port on the internal host.  For SNAT, matches traffic directed at the given ports.			
Web: Action	Action to take	Action to take when rule is matched.		
UCI: firewall. <rule label="">.target</rule>	Option Description UCI			
Opt: target	drop	Drop matching traffic	DROP	
	accept	Allow matching traffic	ACCEPT	
	reject	Reject matching traffic	REJECT	
	don't track	Disable connection tracking for the rule. See the 'Connection tracking' section below for more information.	NOTRACK	
Web: Extra arguments	Passes extra ar	Passes extra arguments to IP tables. This is useful to specify		
UCI: firewall. <rule label="">.extra</rule>	additional match options, like -m policydir in for IPSec.			
Opt: extra				
Web: n/a	Disables NAT reflection for this redirect if set to 0. Applicable to DNAT targets.			
UCI: firewall. <rule label="">.reflection</rule>				
Opt: reflection				
Web: n/a	Sets maximum	average matching rate; specified as	a number,	
UCI: firewall. <rule label="">.limit</rule>		al /second, /minute, /hour or /day su	ıffix. Example:	
Opt: limit	3/hour.			
Web: n/a	Sets maximum initial number of packets to match. This number			
UCI: firewall. <rule label="">.limit_burst</rule>		by one every time the limit specified	d above is not	
Opt: limit_burst	reached, up to	reached, up to this number.		
Web: n/a	Sets number of	f allowed connections within specified	d time. This	
UCI: firewall. <rule label="">.recent</rule>		s two values e.g. recent=2 120 will a	allow 2	
Opt: recent	connections wi	thin 120 seconds.		

Table 106: Information table for firewall traffic rules

ICMP Options	ICMP Options	ICMP Options	ICMP Options
address-mask-reply	host-redirect	pong	time-exceeded
address-mask-request	host-unknown	port-unreachable	timestamp-reply
any	host-unreachable	precedence-cutoff	timestamp-request
communication- prohibited	ip-header-bad	protocol-unreachable	TOS-host-redirect
destination-unreachable	network-prohibited	redirect	TOS-host-unreachable
echo-reply	network-redirect	required-option-missing	TOS-network-redirect
echo-request	network-unknown	router-advertisement	TOS-network- unreachable
fragmentation-needed	network-unreachable	router-solicitation	ttl-exceeded
host-precedence- violation	parameter-problem	source-quench	ttl-zero-during- reassembly
host-prohibited	ping	source-route-failed	ttl-zero-during-transit

Table 107: Information table for match ICMP type drop-down menu

# 31.3 Configuring firewall using UCI

Firewall is configured under the firewall package /etc/config/firewall.

There are three config sections: defaults, zone, forwarding, redirect, rule and include.

You can configure multiple zone, forwarding and redirect sections.

## 31.3.1 Firewall general settings

To set general (default) settings, enter:

```
uci add firewall defaults
uci set firewall.@defaults[0].syn_flood=1
uci set firewall.@defaults[0].drop_invalid=1
uci set firewall.@defaults[0].input=ACCEPT
uci set firewall.@defaults[0].output=ACCEPT
uci set firewall.@defaults[0].forward=ACCEPT
```

**Note**: this command is only required if there is no defaults section.

# 31.3.2 Firewall zone settings

By default, all firewall zone instances are named zone, instances are identified by @zone then the zone position in the package as a number. For example, for the first zone in the package using UCI:

```
firewall.@zone[0]=zone
firewall.@zone[0].name=lan
```

Or using package options:

```
config zone
option name 'lan'
```

To set up a firewall zone, enter:

```
uci add firewall zone
uci set firewall.@zone[1].name=lan
uci set firewall.@zone[1].input=ACCEPT
uci set firewall.@zone[1].output=ACCEPT
uci set firewall.@zone[1].forward=ACCEPT
uci set firewall.@zone[1].network=lan1 wifi_client
uci set firewall.@zone[1].family=any
uci set firewall.@zone[1].masq_src=10.0.0.0/24
uci set firewall.@zone[1].masq_dest=20.0.0.0/24
uci set firewall.@zone[1].conntrack=1
```

uci set firewall.@zone[1].masq=1
uci set firewall.@zone[1].mtu\_fix=1
uci set firewall.@zone[1].log=1

# 31.3.3 Inter-zone forwarding

uci set firewall.@zone[1].log\_limit=5

By default, all inter-zone instances are named 'forwarding'; instances are identified by <code>@forwarding</code> then the forwarding position in the package as a number. For example, for the first forwarding in the package using UCI:

```
firewall.@forwarding[0]=forwarding
firewall.@forwarding[0].src=lan
```

Or using package options:

```
config forwarding
option src 'lan'
```

To enable forwarding of traffic from WAN to LAN, enter:

```
uci add firewall forwarding
uci set firewall.@forwarding[1].dest=wan
uci set firewall.@forwarding[1].src=lan
```

#### 31.3.4 Firewall port forwards

By default, all port forward instances are named 'redirect'; instances are identified by @redirect then the redirect position in the package as a number. For example, for the first redirect in the package using UCI:

```
firewall.@redirect[0]=redirect
firewall.@redirect[0].name=Forward
```

Or using package options:

```
config redirect
option name 'Forward'
```

To set port forwarding rules, enter:

```
uci add firewall redirect
uci set firewall.@redirect[1].name=Forward
uci set firewall.@redirect[1].proto=tcp
uci set firewall.@redirect[1].src=wan # <- zone names</pre>
```

```
uci set firewall.@redirect[1].dest=lan # <- zone names
uci set firewall.@redirect[1].src_dport=2001
uci set firewall.@redirect[1].dest_ip=192.168.0.100
uci set firewall.@redirect[1].dest_port=2005
uci set firewall.@redirect[1].enabled=1</pre>
```

#### 31.3.5 Firewall traffic rules

By default, all traffic rule instances are named rule, instances are identified by @rule then the rule position in the package as a number. For example, for the first rule in the package using UCI:

```
firewall.@rule[0]=rule
firewall.@rule[0].enabled=1
```

Or using package options:

```
config rule
option enabled '1'
```

To set traffic rules, enter:

```
uci add firewall rule
uci set firewall.@rule[1].enabled=1
uci set firewall.@rule[1].name=Allow ICMP
uci set firewall.@rule[1].family=any
uci set firewall.@rule[1].proto=ICMP
uci set firewall.@rule[1].icmp_type=any
uci set firewall.@rule[1].src=wan
uci set firewall.@rule[1].src_mac=ff:ff:ff:ff:ff
uci set firewall.@rule[1].src_port=
uci set firewall.@rule[1].dest=lan
uci set firewall.@rule[1].dest_port=
uci set firewall.@rule[1].dest_ip=192.168.100.1
uci set firewall.@rule[1].target=ACCEPT
uci set firewall.@rule[1].extra=
uci set firewall.@rule[1].src_ip=8.8.8.8
uci set firewall.@rule[1].src_dip=9.9.9.9
uci set firewall.@rule[1].src_dport=68
uci set firewall.@rule[1].reflection=1
uci set firewall.@rule[1].limit=3/second
uci set firewall.@rule[1].limit_burst=30
```

31.3.5.1 Custom firewall scripts: includes

It is possible to include custom firewall scripts by specifying one or more include sections in the firewall configuration.

There is only one possible parameter for includes:

Parameter	Description	
path	Specifies a shell script to execute on boot or firewall restarts.	

Custom scripts are executed as shell scripts and are expected to contain iptables commands.

#### 31.4 IPv6 notes

As described above, the option family is used for distinguishing between IPv4, IPv6 and both protocols. However, the family is inferred automatically if a specific IP address family is used. For example; if IPv6 addresses are used then the rule is automatically treated as IPv6 only rule.

```
config rule

option src wan

option src_ip fdca:f00:ba3::/64

option target ACCEPT
```

Similarly, the following rule is automatically treated as IPv4 only.

```
config rule

option src wan

option dest_ip 88.77.66.55

option target REJECT
```

Rules without IP addresses are automatically added to iptables and ip6tables, unless overridden by the family option. Redirect rules (port forwards) are always IPv4 since there is no IPv6 DNAT support at present.

# 31.5 Implications of DROP vs. REJECT

The decision whether to drop or to reject traffic should be done on a case-by-case basis. Many people see dropping traffic as a security advantage over rejecting it because it exposes less information to a hypothetical attacker. While dropping slightly increases security, it can also complicate the debugging of network issues or cause unwanted side-effects on client programs.

If traffic is rejected, the router will respond with an icmp error message ("destination port unreachable") causing the connection attempt to fail immediately. This also means that for each connection attempt a certain amount of response traffic is generated. This can actually harm if the firewall is attacked with many simultaneous connection attempts, the resulting backfire of icmp responses can clog up all available upload and make the connection unusable (DoS).

When connection attempts are dropped the client is not aware of the blocking and will continue to re-transmit its packets until the connection eventually times out. Depending on the way the client software is implemented, this could result in frozen or hanging programs that need to wait until a timeout occurs before they're able to continue.

#### **DROP**

- less information is exposed
- · less attack surface
- client software may not cope well with it (hangs until connection times out)
- may complicate network debugging (where was traffic dropped and why)

#### **REJECT**

- may expose information (like the IP at which traffic was actually blocked)
- client software can recover faster from rejected connection attempts
- network debugging easier (routing and firewall issues clearly distinguishable)

# 31.6 Connection tracking

By default, the firewall will disable connection tracking for a zone if no masquerading is enabled. This is achieved by generating NOTRACK firewall rules matching all traffic passing via interfaces referenced by the firewall zone. The purpose of NOTRACK is to speed up routing and save memory by circumventing resource intensive connection tracking in cases where it is not needed. You can check if connection tracking is disabled by issuing iptables -t raw -S, it will list all rules, check for NOTRACK target.

NOTRACK will render certain iptables extensions unusable, for example the MASQUERADE target or the state match will not work.

If connection tracking is required, for example by custom rules in /etc/firewall.user, the conntrack option must be enabled in the corresponding zone to disable NOTRACK. It should appear as option 'conntrack' '1' in the right zone in /etc/config/firewall.

# 31.7 Firewall examples

### 31.7.1 Opening ports

The default configuration accepts all LAN traffic, but blocks all incoming WAN traffic on ports not currently used for connections or NAT. To open a port for a service, add a rule section:

```
config rule

option src wan

option dest_port 22

option target ACCEPT

option proto tcp
```

This example enables machines on the internet to use SSH to access your router.

© Virtual Access 2018 GW1000 Series User Manual 31.7.2 Forwarding ports (destination NAT/DNAT)

This example forwards http, but not HTTPS, traffic to the web server running on 192.168.1.10:

```
config redirect
    option src wan
    option src_dport 80
    option proto tcp
    option dest_ip 192.168.1.10
```

The next example forwards one arbitrary port that you define to a box running SSH behind the firewall in a more secure manner because it is not using default port 22.

```
config 'redirect'

option 'name' 'ssh'

option 'src' 'wan'

option 'proto' 'tcpudp'

option 'src_dport' '5555'

option 'dest_ip' '192.168.1.100'

option 'dest_port' '22'

option 'target' 'DNAT'

option 'dest' 'lan'
```

# 31.7.3 Source NAT (SNAT)

Source NAT changes an outgoing packet destined for the system so that is looks as though the system is the source of the packet.

Define source NAT for UDP and TCP traffic directed to port 123 originating from the host with the IP address 10.55.34.85. The source address is rewritten to 63.240.161.99.

```
config redirect

option src lan

option dest wan

option src_ip 10.55.34.85

option src_dip 63.240.161.99

option dest_port 123

option target SNAT
```

When used alone, Source NAT is used to restrict a computer's access to the internet, but allows it to access a few services by manually forwarding what appear to be a few local

\_\_\_\_

services; for example, NTP to the Internet. While DNAT hides the local network from the Internet, SNAT hides the Internet from the local network.

Source NAT and destination NAT are combined and used dynamically in IP masquerading to make computers with private (192.168.x.x, etc.) IP addresses appear on the internet with the system's public WAN IP address.

# 31.7.4 True destination port forwarding

This usage is similar to SNAT, but as the destination IP address is not changed, machines on the destination network need to be aware that they'll receive and answer requests from a public IP address that is not necessarily theirs. Port forwarding in this fashion is typically used for load balancing.

```
config redirect

option src wan

option src_dport 80

option dest lan

option dest_port 80

option proto tcp
```

# 31.7.5 Block access to a specific host

The following rule blocks all connection attempts to the specified host address.

```
config rule

option src lan

option dest wan

option dest_ip 123.45.67.89

option target REJECT
```

# 31.7.6 Block access to the internet using MAC

The following rule blocks all connection attempts from the client to the internet.

onfig rule		
option	src	lan
option	dest	wan
option	src_mac	00:00:00:00:00
option	target	REJECT

31.7.7 Block access to the internet for specific IP on certain times

The following rule blocks all connection attempts to the internet from 192.168.1.27 on weekdays between 21:00pm and 09:00am.

```
config rule

option src lan

option dest wan

option src_ip 192.168.1.27

option extra '-m time --weekdays Mon, Tue, Wed, Thu, Fri --

timestart 21:00 --timestop 09:00'

option target REJECT
```

# 31.7.8 Restricted forwarding rule

The example below creates a forward rule rejecting traffic from LAN to WAN on the ports 1000-1100.

```
config rule

option src lan

option dest wan

option dest_port 1000-1100

option proto tcpudp

option target REJECT
```

# 31.7.9 Denial of service protection rule

The example below shows a sample configuration of SSH DoS attack where if more than two SSH connections are attempted within 120 seconds, every further connection will be dropped. You can configure this for any port number.

```
config rule 'sshattack'

option src 'lan'

option dest_port '22'

option proto 'tcp'

option recent '2 120'

option target 'DROP'
```

#### 31.7.10 IP spoofing prevention mechnism

Configure IP spoofing protection on a per interface basis in the /etc/config/network configuration file. The example below shows the ipv4\_rp\_filter option enabled on the Vlan12 interface in the network file. When reverse path filtering mechanism is enabled, the router will check whether a receiving packet source address is routable.

If it is routable through the interface from which it came, then the machine will accept the packet

If it is not routable through the interface from which it came, then the machine will drop that packet.

# 31.7.11 Simple DMZ rule

The following rule redirects all WAN ports for all protocols to the internal host 192.168.1.2.

```
config redirect
option src wan
option proto all
option dest_ip 192.168.1.2
```

## 31.7.12 Transparent proxy rule (external)

The following rule redirects all outgoing HTTP traffic from LAN through an external proxy at 192.168.1.100 listening on port 3128. It assumes the router LAN address to be 192.168.1.1 - this is needed to masquerade redirected traffic towards the proxy.

```
config redirect
        option src
                                 lan
        option proto
                                 tcp
        option src_ip
                                 !192.168.1.100
        option src_dport
                                 80
        option dest_ip
                                 192.168.1.100
        option dest_port
                                 3128
        option target
                                 DNAT
config redirect
        option dest
                                 lan
        option proto
                                 tcp
```

option src_dip	192.168.1.1
option dest_ip	192.168.1.100
option dest_port	3128
option target	SNAT

# 31.7.13 Transparent proxy rule (same host)

The rule below redirects all outgoing HTTP traffic from LAN through a proxy server listening at port 3128 on the router itself.

```
config redirect
option src lan
option proto tcp
option src_dport 80
option dest_port 3128
```

# 31.7.14 IPSec passthrough

This example enables proper forwarding of IPSec traffic through the WAN.

```
# AH protocol
config rule
        option src
                                 wan
        option dest
                                 lan
        option proto
        option target
                                 ACCEPT
# ESP protocol
config rule
        option src
                                 wan
        option dest
                                 lan
        option proto
                                 esp
                                 ACCEPT
        option target
```

For some configurations you also have to open port 500/UDP.

```
# ISAKMP protocol

config rule

option src wan

option dest lan

option proto udp

option src_port 500
```

option dest_port	500
option target	ACCEPT

31.7.15 Manual iptables rules

You can specify traditional iptables rules, in the standard iptables UNIX command form, in an external file and included in the firewall config file. It is possible to use this process to include multiple files.

```
config include
   option path /etc/firewall.user

config include
   option path /etc/firewall.vpn
```

The syntax for the includes is Linux standard and therefore different from UCIs.

# 31.7.16 Firewall management

After a configuration change, to rebuild firewall rules, enter:

```
root@VA_router:/# /etc/init.d/firewall restart
```

Executing the following command will flush all rules and set the policies to ACCEPT on all standard chains:

```
root@VA_router:/# /etc/init.d/firewall stop
```

To manually start the firewall, enter:

```
root@VA_router:/# /etc/init.d/firewall start
```

To permanently disable the firewall, enter:

```
root@VA_router:/# /etc/init.d/firewall disable
```

**Note**: disable does not flush the rules, so you might be required to issue a stop before.

To enable the firewall again, enter:

```
root@VA_router:/# /etc/init.d/firewall enable
```

# 31.7.17 Debug generated rule set

It is possible to observe the iptables commands generated by the firewall programme. This is useful to track down iptables errors during firewall restarts or to verify the outcome of certain UCI rules.

To see the rules as they are executed, run the fw command with the FW\_TRACE environment variable set to 1:

root@VA\_router:/# FW\_TRACE=1 fw reload

To direct the output to a file for later inspection, enter:

root@VA\_router:/# FW\_TRACE=1 fw reload 2>/tmp/iptables.lo

32 Configuring IPSec

Internet Protocol Security (IPSec) is a protocol suite used to secure communications at IP level. Use IPSec to secure communications between two hosts or between two networks. Virtual Access routers implement IPSec using strongSwan software.

If you need to create an IPSec template for DMVPN, read the chapter 'Dynamic Multipoint Virtual Private Network (DMVPN)'.

The number of IPSec tunnels supported by Virtual Access' routers is not limited in any way by software; the only hardware limitation is the amount of RAM installed on the device.

## 32.1 Configuration package used

Package	Sections
strongswan	general
	connection
	secret

## 32.2 Configuring IPSec using the web interface

To configure IPSec using the web interface, in the top menu, select **Services -> IPSec**. The strongSwan IPSec VPN page appears. There are three sections:

Common Settings	Control the overall behaviour of strongSwan. This behaviour is common across all tunnels.
Connection Settings	Together, these sections define the required parameters for a two-way IKEv1 tunnel.
Secret Settings	

## 32.2.1 Configure common settings

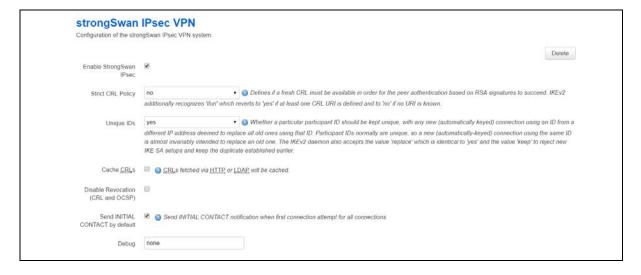


Figure 159: The common settings section

\_\_\_\_\_

Web Field/UCI/Package Option	Description			
Web: Enable strongswan	Enables or disables IPSec.			
UCI: strongswan.general.enable	0	Disabled.		
Opt: enabled	1	Enabled.		
Web: Strict CRL Policy UCI: strongswan.general.strictcrlpolicy		Defines if a fresh CRL must be available for the peer authentication based on RSA signatures to succeed.		
Opt: strictcrlpolicy	0	Disabled.		
	1	Enabled.		
	ifuri	The IKEv2 application additionally recognizes the "ifuri" option which reverts to 'yes' if at least one CRL URI is defined and to 'no' if no URI is known.		
Web: Unique IDs UCI: strongswan.general.uniqueids Opt: uniqueids	unique, with ID from a d using that I Participant I keyed) conr	Defines whether a particular participant ID should be kept unique, with any new (automatically keyed) connection using an ID from a different IP address deemed to replace all old ones using that ID.  Participant IDs normally are unique, so a new (automatically-keyed) connection using the same ID is almost invariably intended to replace an old one.		
	0	Disabled.		
	1	Enabled.		
	replace	Identical to Yes.		
	keep	Rejects new IKE SA and keep the duplicate established earlier		
Web: Cache CRLs UCI: strongswan.general.cachecrls	Certificate Revocation Lists (CRLs) fetched via HTTP or LDAP will be cached in /etc/ipsec.d/crls/ under a unique file name derived from the certification authority's public key.			
Opt: cachecrls	0	Disabled.		
	1	Enabled.		
Web: Disable Revocation UCI:	Defines whe	ether disable CRL and OCSP checking for revoked		
strongswan.general.revocation_disabled	0	Disabled.		
Opt: revocation_disabled	1	Enabled.		
Web: Send INITIAL CONTACT by default UCI: strongswan.general.initial_contact Opt: initial_contact	Defines whether the first attempt to contact a remote peer by this strongswan instance sets the initial_contact flag, which should cause compliant peers to automatically bring down any previous sessions. This can also be enabled/disabled per connection.			
	0	Does not set initial contact flag.		
	1	Sets initial contact flag on first attempt.		
Web: Debug UCI: strongswan.general.debug		ougging. This option is used for trouble shooting not suitable for a production environment.		
Opt: debug	None	Debug disabled.		
. •	Control	Debug enabled. Shows generic control flow with errors and very basic auditing logs.		
	All	Debug enabled. Most verbose logging also includes sensitive information such as keys.		

Table 108: Information table for IPSec common settings

## 32.2.2 Common settings: configure connection



Figure 160: The configuring IPSec settings

Web Field/UCI/Package Option	Description	
Web: Enabled UCI: strongswan.@connection[X].enabled Opt: enable	Enables or dis	ables IPSec connection.  Disabled.  Enabled.
Web: Aggressive UCI: strongswan.@connection[X].aggressive Opt: aggressive	Enables or disables IKE aggressive mode.  Note: using aggressive mode along with PSK authentication is less secure method than main mode and should be avoided.  Disabled.	
Web: Name UCI: strongswan.@connection[X].name Opt: name	Specifies a name for the tunnel.	
Web: Autostart Action	Specifies when the tunnel is initiated.	
UCI: strongswan.@connection[X].auto	start	On start up.
Opt: auto	route	When traffic routes this way.
	add	Loads a connection without starting it.
	ignore	Ignores the connection.
	always	Actively retries to establish the tunnel if it went down.
Web: Connection Type	Defines the type of IPSec connection.	
UCI: strongswan.@connection[X].type	tunnel	Connection uses tunnel mode.
Opt: type	transport	Connection uses transport mode.
	pass	Connection does not perform any IPSec processing.
	drop	Connection drops all the packets.

Table 109: Information table for connection settings

5 5

### 32.2.3 Common settings: IP addressing

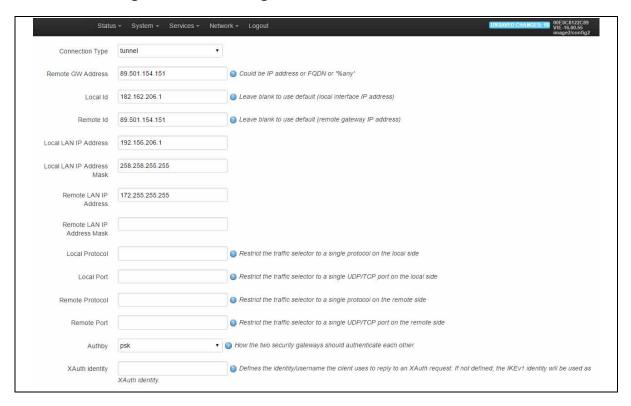


Figure 161: The IP addressing settings

Web Field/UCI/Package Option	Description
Web: Remote GW Address	Sets the public IP address of the remote peer.
UCI: strongswan.@connection[X]. remoteaddress	
Opt: remoteaddress	
Web: Local ID	Defines the local peer identifier.
UCI: strongswan.@connection[X].localid	
Opt: localid	
Web: Remote ID	Defines the remote peer identifier.
UCI: strongswan.@connection[X].remoteid	
Opt:remoteid	
Web: Local LAN IP Address	Defines the local IP of LAN.
UCI: strongswan.@connection[X]. locallan	
Opt: locallan	
Web: Local LAN IP Address Mask	Defines the subnet of local LAN.
UCI: strongswan.@connection[X]. locallanmask	
Opt: locallanmask	
Web: Remote LAN IP Address	Defines the IP address of LAN serviced by remote peer.
UCI: strongswan.@connection[X]. remotelan	
Opt:remotelan	
Web: Remote LAN IP Address Mask	Defines the Subnet of remote LAN.
UCI: strongswan.@connection[X]. remotelanmask	
Opt:remotelanmask	

0.00

Web: Local Protocol UCI: strongswan.@connection[X].localproto Opt: localproto	Restricts the connection to a single protocol on the local side.	
Web: Local Port UCI: strongswan.@connection[X].localport Opt: localport	Restricts the connection to a single port on the local side.	
Web: Remote Protocol UCI: strongswan.@connection[X].remoteproto Opt:remoteproto	Restricts the connection to a single protocol on the remote side.	
Web: Remote Port UCI: strongswan.@connection[X].remoteport Opt: remoteport	Restricts the connection to a single port on the remote side.	
Web: Authby UCI: strongswan.@connection[X].authby Opt: authby	Defines how the two secure gateways should authenticate.  Note: using aggressive mode along with PSK authentication is unsecure and should be avoided.	
Opt. autility	Pubkey	For public key signatures.
	Rsasig	For RSA digital signatures.
	ecdsasig	For Elliptic Curve DSA signatures.
	Psk	Using a preshared key.
	xauthrsasig	Enables eXtended Authentication (XAuth) with addition to RSA signatures.
	xauthpsk	Using extended authentication and preshared key.
	never	Can be used if negotiation is never to be attempted or accepted (shunt connections).

Table 110: Information table for IP addressing settings

\_\_\_\_\_

### 32.2.4 Common settings: IPSec settings

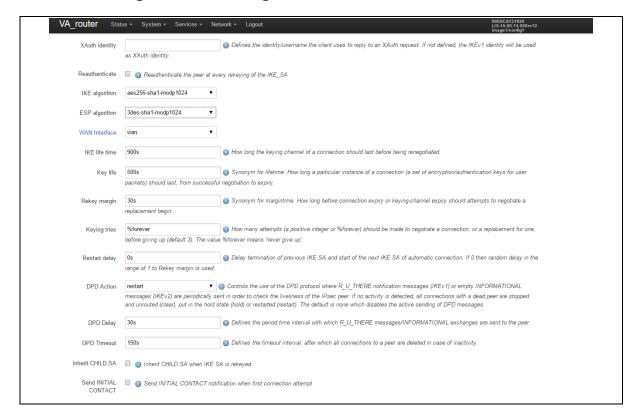


Figure 162: The IPSec connections settings

Web Field/UCI / Package Option	Description
Web: XAuth Identity	Defines Xauth ID.
UCI:	
strongswan.@connection[X].xauth_identity  Opt: xauth_identity	
	Charifica the IVE almosithms to use
Web: IKE Algorithm	Specifies the IKE algorithm to use.
UCI: strongswan.@connection[X].ike	The format is: encAlgo   authAlgo   DHGroup
Opt: ike	encAlgo:
	3des
	aes128
	aes256
	serpent
	twofish
	blowfish
	authAlgo:
	md5
	sha
	sha2
	DHGroup:
	modp1024
	modp1536
	modp2048
	modp3072
	modp4096
	modp6144
	modp8192
	For example, a valid IKE algorithm is aes128-sha-modp1536.

© Virtual Access 2018 GW1000 Series User Manual

Issue: 2.3 Page 331 of 463

\_\_\_\_\_

Web: ESP algorithm	Specifies the esp algorithm to use		
UCI: strongswan.@connection[X].esp	Specifies the esp algorithm to use.  The format is: encAlgo   authAlgo   DHGroup		
Opt: esp	encAlgo:		
Opt. esp	3des		
	aes128		
	aes256		
	serpent		
	twofish		
	blowfish		
	authAlgo:		
	md5		
	sha		
	sha2		
	DHGroup:		
	modp1024		
	modp1536		
	modp2048		
	modp3072		
	modp4096		
	modp6144		
	modp8192		
	For example, a valid encryption algorithm is: aes128-sha-modp1536.		
	If no DH group is defined then PFS is disabled.		
Web: WAN Interface UCI: strongswan.@connection[X].waniface	This is a space-separated list of the WAN interfaces the router will use to establish a tunnel with the secure gateway.		
Opt: waniface	On the web, a list of the interface names is automatically generated. If you want to specify more than one interface use the "custom" value.		
	Example: if you have a 3G WAN interface called 'wan and a WAN ADSL interface called 'dsl' and wanted to use one of these interfaces for this IPSec connection, you would use: 'wan adsl'.		
Web: IKE Life Time	Specifies how long the keyring channel of a connection		
UCI: strongswan.@connection[X].ikelifetime	(ISAKMP or IKE SA) should last before being renegotiated.		
Opt:ikelifetime	3h		
	Timespec 1d, 3h, 25m, 10s.		
Web: Key Life UCI: strongswan.@connection[X].keylife	Specifies how long a particular instance of a connection (a set of encryption/authentication keys for user packets) should last, from successful negotiation to expiry.		
Opt: keylife	Normally, the connection is renegotiated (via the keying channel) before it expires (see rekeymargin).		
	1h		
	Timespec 1d, 1h, 25m, 10s.		
Web: Rekey Margin UCI:	Specifies how long before connection expiry or keying- channel expiry should attempt to negotiate a replacement		
strongswan.@connection[X].rekeymargin	begin.		
Opt: rekeymargin	Relevant only locally, other end need not agree on it.  9m		
	Timespec 1d, 2h, 9m, 10s.		
	Timespec Tu, Zii, 7iii, Tus.		

\_\_\_\_

Web: Restart Delay UCI: strongswan.@connection[X].restartdelay Opt: restartdelay	Defines specific delay when re-establishing a connection. Previously if close_action=restart, then new option restartdelay controls how many seconds it waits before attempting to re-establish the tunnel (to allow head-end some time to tidy up). If not set, it defaults to zero, which means that the previous behaviour of choosing a random time interval in the range ORekeyMargin seconds takes effect.		
	Relevant only locally, other end need not agree on it.  0		
	Timespec 1d, 2h, 9m, 10s.		
Web: Keying Tries UCI: strongswan.@connection[X].keyringtries Opt: keyringtries	Specifies how many attempts (a positive integer or %forever) should be made to negotiate a connection, or a replacement for one, before giving up. The value %forever means 'never give up'. Relevant only locally, other end need not agree on it.		
Web: DPD Action	Defines DPD (Dead Peer Detection) action.		
UCI: strongswan.@connection[X].dpdaction	None Disables DPD.		
Opt: dpdaction	Clear down the tunnel if peer does not respond. Reconnect when traffic brings the tunnel up.		
	Hold Clear down the tunnel and bring up as soon as the peer is available.		
	Restart Restarts DPD when no activity is detected.		
Web: DPD Delay UCI: strongswan.@connection[X].dpddelay Opt: dpddelay	Defines the period time interval with which R_U_THERE messages and INFORMATIONAL exchanges are sent to the peer.  These are only sent if no other traffic is received.		
W. L. DDD T:	Timespec 1d, 2h, 25m, 10s.		
Web: DPD Timeout	Defines the timeout interval, after which all connections to a peer are deleted in case of inactivity.		
UCI: strongswan.@connection[X].dpdtimeout Opt: dpdtimeout	150s		
Opt. apatimeout	Timespec 1d, 2h, 25m, 10s.		
Web: Inherit CHILD SA UCI: strongswan.@connection[X].inherit_child Opt: inherit_child	Defines whether the existing phase two IPSEC SA is maintained through IKE rekey for this tunnel. This is normally set to match the behaviour on the IPSEC headend.  O Delete the existing IPSEC SA on IKE rekey		
	1 Maintain the existing IPSEC SA on IKE rekey		
Web: Send INITIAL CONTACT UCI: strongswan.@connection[X].initial_contact Opt: initial_contact	Defines whether the first attempt to contact a remote peer by this strongswan instance sets the initial_contact flag which should cause compliant peers to automatically bring down any previous sessions.		
Opt. Illitial_contact	0 Do not set initial contact flag		
	1 Set initial contact flag on first attempt		

Table 111: Information table for IPSec connections settings

5 5

## 32.2.5 Configure secret settings

Each tunnel requires settings to configure how the local end point of the tunnel proves its identity to the remote end point.

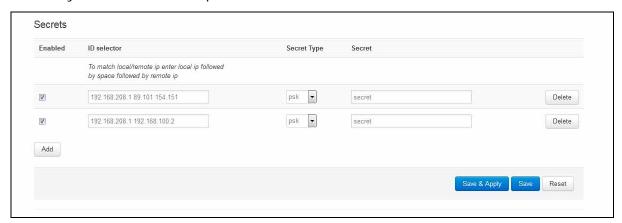


Figure 163: IPSec secrets settings

Web Field/UCI/Package Option	Description	
Web: Enabled	Defines whe	ther this set of credentials is to be used or not.
UCI: strongswan.@secret[X].enabled	0	Disabled.
Opt: enabled	1	Enabled.
Web: ID selector	Defines whether IP address or userfqdn is used.	
UCI: strongswan.@secret[X].idtype		
Opt: idtype		
Web: ID selector	Defines the I	ocal address this secret applies to.
UCI: strongswan.@secret[X].localaddress		
Opt: localaddress		
Web: ID selector	Defines the remote address this secret applies to.	
UCI: strongswan.@secret[X]. remoteaddress		
Opt: remoteaddress		
Web: N/A	FQDN or Xauth name used of Extended Authentication. This must	
UCI: strongswan.@secret[X].userfqnd	match xauth_identity from the configuration connection section.	
Opt: userfqnd		
Web: Secret Type	Specifies the authentication mechanism to be used by the two	
UCI: strongswan.@secret[X].secrettype	peers.	
Opt: secrettype	Psk	Preshared secret
	Pubkey	Public key signatures
	Rsasig	RSA digital signatures
	Ecdsasig	Elliptic Curve DSA signatures
	Xauth	Extended authentication
Web: Secret	Defines the secret.	
UCI: strongswan.@secret[X].secret		
Opt: secret		

Table 112: Information table for IPSec secrets settings

32.3 Configuring IPSec using UCI

#### 32.3.1 Common settings

```
# Commands

touch /etc/config/strongswan

uci set strongswan.general=general

uci set strongswan.general.enabled=yes

uci set strongswan.general.strictcrlpolicy=no

uci set strongswan.general.uniqueids=yes

uci set strongswan.general.cachecrls=no

uci set strongswan.general.debug=none

uci set strongswan.general.initial_contact=0

uci commit
```

#### This will create the following output:

```
config general 'general'

option enabled 'yes'

option strictcrlpolicy 'no'

option uniqueids 'yes'

option cachecrls 'no'

option debug 'none'

option initial_contact '0'
```

### 32.3.2 Connection settings

```
touch /etc/config/strongswan

uci add strongswan connection

uci set strongswan.@connection[0].ikelifetime=3h

uci set strongswan.@connection[0].keylife=1h

uci set strongswan.@connection[0].rekeymargin=9m

uci set strongswan.@connection[0].keyingtries=3

uci set strongswan.@connection[0].restartdelay=0

uci set strongswan.@connection[0].dpdaction=none

uci set strongswan.@connection[0].dpddelay=30s

uci set strongswan.@connection[0].dpdtimeout=150s

uci set strongswan.@connection[0].enabled=yes

uci set strongswan.@connection[0].name=3G_Backup
```

```
uci set strongswan.@connection[0].auto=start
uci set strongswan.@connection[0].type=tunnel
uci set strongswan.@connection[0].remoteaddress=100.100.100.100
uci set strongswan.@connection[0].localid=192.168.209.1
uci set strongswan.@connection[0].remoteid=100.100.100.100
uci set strongswan.@connection[0].locallan=192.168.209.1
uci set strongswan.@connection[0].locallanmask=255.255.255.255
uci set strongswan.@connection[0].remotelan=172.19.101.3
uci set strongswan.@connection[0].remotelanmask=255.255.255.255
uci set strongswan.@connection[0].authby=xauthpsk
uci set strongswan.@connection[0].xauth_identity=testxauth
uci set strongswan.@connection[0].ike=3des-md5-modp1024
uci set strongswan.@connection[0].esp=3des-md5
uci set strongswan.@connection[0].waniface=wan
uci set strongswan.@connection[0].inherit_child=0
uci set strongswan.@connection[0].initial_contact=0
uci commit
```

#### This will create the following output:

```
config connection
        option ikelifetime '3h'
        option keylife '1h'
        option rekeymargin '9m'
        option keyingtries '3'
        option restartdelay '0'
        option dpdaction 'none'
        option dpddelay '30s'
        option dpdtimeout '150s'
        option enabled 'yes'
        option name '3G_Backup'
        option auto 'start'
        option type 'tunnel'
        option remoteaddress '100.100.100.100 '
        option localid '192.168.209.1'
        option remoteid '100.100.100.100 '
        option locallan '192.168.209.1'
        option locallanmask '255.255.255'
```

```
option remotelan '172.19.101.3'

option remotelanmask '255.255.255'

option authby 'xauthpsk'

option xauth_identity 'testxauth'

option ike '3des-md5-modp1024'

option esp '3des-md5'

option waniface 'wan'

option inherit_child '0'

option initial_contact '0'
```

#### 32.3.3 Shunt connection

If the remote LAN network is 0.0.0.0/0 then all traffic generated on the local LAN will be sent via the IPSec tunnel. This includes the traffic destined to the router's IP address. To avoid this situation you must include an additional config connection section.

```
# Commands

touch /etc/config/strongswan

uci add strongswan connection

uci set strongswan.@connection[1].name=local

uci set strongswan.@connection[1].enabled=yes

uci set strongswan.@connection[1].locallan=10.1.1.1

uci set strongswan.@connection[1].locallanmask=255.255.255.255

uci set strongswan.@connection[1].remotelan=10.1.1.0

uci set strongswan.@connection[1].remotelanmask=255.255.255.0

uci set strongswan.@connection[1].type=pass

uci set strongswan.@connection[1].type=pass

uci set strongswan.@connection[1].auto=route

uci commit
```

This will create the following output:

```
config connection

option name 'local'

option enabled 'yes'

option locallan '10.1.1.1'

option locallanmask '255.255.255'

option remotelan '10.1.1.0'

option remotelanmask '255.255.255.0'

option type 'pass'

option auto 'route'
```

out to migating it est

Traffic originated on remotelan and destined to locallan address is excluded from VPN IPSec policy.

### 32.3.4 Secret settings

Each tunnel also requires settings for how the local end point of the tunnel proves its identity to the remote end point.

A sample secret section, which could be used with the connection section in 'Connection Settings', is shown below.

```
# Commands to add a secret for psk auth
touch /etc/config/strongswan
uci add strongswan secret
uci set strongswan.@secret[0].enabled=yes
uci set strongswan.@secret[0].localaddress=192.168.209.1
uci set strongswan.@secret[0].remoteaddress= 100.100.100.100
uci set strongswan.@secret[0].secrettype=psk
uci set strongswan.@secret[0].secret=secret
uci commit
```

This will create the following output:

```
config secret

option enabled 'yes'

option localaddress '192.168.209.1'

option remoteaddress '100.100.100.100 '

option secrettype 'psk'

option secret 'secret'
```

If xauth is defined as the authentication method then you must include an additional config secret section, as shown in the example below.

```
# Commands to add a secret for xauth auth
touch /etc/config/strongswan
uci add strongswan secret
uci set strongswan.@secret[1].enabled=yes
uci set strongswan.@secret[1].idtype=userfqdn
uci set strongswan.@secret[1].userfqdn=testxauth
uci set strongswan.@secret[1].remoteaddress=100.100.100.100
uci set strongswan.@secret[1].secret=xauth
uci set strongswan.@secret[1].secret=xauth
uci commit
```

\_\_\_\_\_

This will create the following output:

```
config secret

option enabled 'yes'

option idtype 'userfqdn'

option userfqdn 'testxauth'

option remoteaddress '100.100.100.100'

option secret 'xauth'

option secrettype 'XAUTH'
```

## 32.4 Configuring an IPSec template for DMVPN via the web interface

To configure IPSec using the web interface, in the top menu, select **Services -> IPSec**. The strongSwan IPSec VPN page appears. There are three sections:

Common Settings	Control the overall behaviour of strongSwan. This behaviour is common across all tunnels.
Connection Settings	Together, these sections define the required parameters for a two-way IKEv1 tunnel.
Secret Settings	

### 32.4.1 Configure common settings



Figure 164: The common settings section

Web Field/UCI/Package Option	Description			
Web: Enable strongswan	Enables or disables IPSec.			
UCI: strongswan.general.enable	0	Disabled.		
Opt: enabled	1	Enabled.		
Web: Strict CRL Policy UCI: strongswan.general.strictcrlpolicy		Defines if a fresh CRL must be available for the peer authentication based on RSA signatures to succeed.		
Opt: strictcrlpolicy	0	Disabled.		
Specification specifical	1	Enabled.		
	ifuri	The IKEv2 application additionally recognizes the "ifuri" option which reverts to 'yes' if at least one CRL URI is defined and to 'no' if no URI is known.		
Web: Unique IDs UCI: strongswan.general.uniqueids Opt: uniqueids	Defines whether a particular participant ID should be kept unique, with any new (automatically keyed) connection using an ID from a different IP address deemed to replace all old ones using that ID.			
	Participant IDs normally are unique, so a new (automatically-keyed) connection using the same ID is almost invariably intended to replace an old one.			
	0	Disabled.		
	1	Enabled.		
	replace	Identical to Yes		
	keep	Rejects new IKE SA and keep the duplicate established earlier		
Web: Cache CRLs UCI: strongswan.general.cachecrls	Certificate Revocation Lists (CRLs) fetched via HTTP or LDAP will be cached in /etc/ipsec.d/crls/ under a unique file name derived from the certification authority's public key.			
Opt: cachecrls	0	Disabled.		
	1	Enabled.		
Web: Debug UCI: strongswan.general.debug	Enable debugging. This option is used for trouble shooting issues. It is not suitable for a production environment.			
Opt: debug	None	Debug disabled.		
Opt. debug	Control	Debug enabled. Shows generic control flow with errors and very basic auditing logs.		
	AII	Debug enabled. Most verbose logging also includes sensitive information such as keys.		

Table 113: Information table for IPSec common settings

## 32.4.2 Configure connection settings

Scroll down to view the connection settings section.

If you want to create a DMVPN, you do not need to configure all settings as the DMVPN will automatically create them using the template. Leave the following sections blank:

- Remote GW Address
- Local ID
- Remote Id
- Local LAN IP Address
- Local LAN IP Address Mask
- Remote LAN IP Address
- Remote LAN IP Address Mask

Enabled Aggressive Mode DMVPN\_VDF Name - @ Operation on startup.add loads a connection without starting it. route loads a connection and installs kernel traps. If traffic Autostart Action is detected between locallan and remotelan, a connection is established, start loads a connection and brings it up immediately. Ignore do nothing Connection Type Remote GW Address @ Could be IP address or FQDN or '%any' (a) Leave blank to use default (local interface IP address) Local Id Remote Id Leave blank to use default (remote gateway IP address) Local LAN IP Address Local LAN IP Address Mask Remote LAN IP Remote LAN IP Address Mask Local Protocol Restrict the traffic selector to a single protocol on the local side Local Port Restrict the traffic selector to a single UDP/TCP port on the local side Remote Protocol @ Restrict the traffic selector to a single protocol on the remote side Remote Port @ Restrict the traffic selector to a single UDP/TCP port on the remote side Mow the two security gateways should authenticate each other. Authby Defines the identity/username the client uses to reply to an XAuth request. If not defined, the IKEv1 identity will be used XAuth identity as XAuth identity. IKE algorithm aes128-sha1-modp1024 3des-md5 ESP algorithm WAN Interface 3GVDF 3h IKE life time Mow long the keying channel of a connection should last before being renegotiated. Synonym for lifetime. How long a particular instance of a connection (a set of encryption/authentication keys for user Key life packets) should last, from successful negotiation to expiry. Rekey margin 9m Synonym for margintime. How long before connection expiry or keying-channel expiry should attempts to negotiate a How many attempts (a positive integer or %forever) should be made to negotiate a connection, or a replacement for one Keyring tries before giving up (default 3). The value %forever means 'never give up'. none ▼ @ Controls the use of the DPD protocol where R\_U\_THERE notification messages (IKEv1) or empty INFORMATIONAL DPD Action messages (IKEv2) are periodically sent in order to check the liveliness of the IPsec peer. If no activity is detected, all connections with a dead peer are stopped and unrouted (clear), put in the hold state (hold) or restarted (restart). The default is none which disables the active sending of DPD messages. DPD Delay 30s Defines the period time interval with which R\_U\_THERE messages/INFORMATIONAL exchanges are sent to the peer. DPD Timeout 30s Defines the timeout interval, after which all connections to a peer are deleted in case of inactivity.

Figure 165: The connections settings section

Web Field/UCI/Package Option	Description	
Web: Enabled	Enables or disables IPSec connection.	
UCI: strongswan.@connection[X].enabled	0 Disabled.	
Opt: enable	1 Enabled.	
Web: Aggressive	Enables or disables IKE aggressive mode.	
UCI: strongswan.@connection[X].aggressive	<b>Note</b> : using aggressive mode along with PSK authentication is less secure method than main mode and should be avoided.	
Opt: aggressive	0 Disabled.	
	1 Enabled.	
Web: Name UCI: strongswan.@connection[X].name Opt: name	Specifies a name for the tunnel.	
Web: Autostart Action	Specifies when the tunnel is initiated.	
UCI: strongswan.@connection[X].auto	start On start up.	
Opt: auto	route When traffic routes this way.	
	add Loads a connection without starting it.	
	ignore Ignores the connection.	
	always Actively retries to establish the tunnel if it went down.	
Web: Connection Type	Defines the type of IPSec connection.	
UCI: strongswan.@connection[X].type	tunnel Connection uses tunnel mode.	
Opt: type	transport Connection uses transport mode.	
	pass Connection does not perform any IPSec processing.	
	drop Connection drops all the packets.	
Web: Remote GW Address	Sets the public IP address of the remote peer.	
UCI: strongswan.@connection[X]. remoteaddress	Leave blank for DMVPN.	
Opt: remoteaddress		
Web: Local ID	Defines the local peer identifier.	
UCI: strongswan.@connection[X].localid Opt: localid	Leave blank for DMVPN.	
Web: Remote ID	Defines the remote peer identifier.	
UCI: strongswan.@connection[X].remoteid Opt:remoteid	Leave blank for DMVPN.	
Web: Local LAN IP Address	Defines the local IP of LAN.	
UCI: strongswan.@connection[X]. locallan Opt: locallan	Leave blank for DMVPN.	
Web: Local LAN IP Address Mask	Defines the subnet of local LAN.	
UCI: strongswan.@connection[X].	Leave blank for DMVPN.	
Opt: locallanmask		
Web: Remote LAN IP Address	Defines the IP address of LAN serviced by remote peer.	
UCI: strongswan.@connection[X]. remotelan	Leave blank for DMVPN.	
Opt:remotelan		
Web: Remote LAN IP Address Mask	Defines the Subnet of remote LAN.	
UCI: strongswan.@connection[X]. remotelanmask	Leave blank for DMVPN.	
Opt: remotelanmask		
Web: Local Protocol	Restricts the connection to a single protocol on the local side.	
UCI: strongswan.@connection[X].localproto Opt: localproto		

Web: Local Port	Destricts the s	onnection to a single port on the local side
UCI: strongswan.@connection[X].localport	Restricts the connection to a single port on the local side.	
Opt: localport		
Web: Remote Protocol	Restricts the connection to a single protocol on the remote side	
UCI:		•
strongswan.@connection[X].remoteproto		
Opt:remoteproto		
Web: Remote Port	Restricts the o	connection to a single port on the remote side.
UCI: strongswan.@connection[X].remoteport		
Opt: remoteport		
Web: Authby	Defines how the	ne two secure gateways should authenticate.
UCI: strongswan.@connection[X].authby Opt: authby	Note: using a	ggressive mode along with PSK authentication is should be avoided.
Opt. author	Pubkey	For public key signatures.
	Rsasig	For RSA digital signatures.
	ecdsasig	For Elliptic Curve DSA signatures.
	Psk	Using a preshared key.
	xauthrsasig	Enables eXtended Authentication (XAuth) with addition to RSA signatures.
	xauthpsk	Using extended authentication and preshared key.
	never	Can be used if negotiation is never to be attempted or accepted (shunt connections).
Web: XAuth Identity	Defines Xauth ID.	
UCI:		
strongswan.@connection[X].xauth_identity		
Opt: xauth_identity	Charifica tha I	KE algorithm to use
Web: IKE Algorithm UCI: strongswan.@connection[X].ike	Specifies the IKE algorithm to use.	
Opt: ike	The format is: encAlgo   authAlgo   DHGroup: encAlgo:	
Opt. Inc	3des	
	aes128	
	aes256	
	serpent	
	twofish	
	blowfish	
	authAlgo:	
	md5	
	sha	
	sha2	
	DHGroup:	
	modp1024	
	modp1536	
	modp2048 modp3072	
	modp4096	
	modp6144	
	modp8192	
	=	a valid IKE algorithm is: aes128-sha-modp1536.

\_\_\_\_\_

Web: ESP algorithm	Specifies the esp algorithm to use	
UCI: strongswan.@connection[X].esp	Specifies the esp algorithm to use.  The format is: encAlgo   authAlgo   DHGroup	
Opt: esp	encAlgo:	
ορι. σορ	3des	
	aes128	
	aes256	
	serpent	
	twofish	
	blowfish	
	authAlgo:	
	md5	
	sha	
	sha2	
	DHGroup:	
	modp1024	
	modp1536	
	modp2048	
	modp3072	
	modp4096	
	modp6144	
	modp8192	
	For example, a valid encryption algorithm is:	
	aes128-sha-modp1536.	
	If no DH group is defined then PFS is disabled.	
Web: WAN Interface	This is a space separated list of the WAN interfaces the router will use to establish a tunnel with the secure gateway.	
UCI: strongswan.@connection[X].waniface	On the web, a list of the interface names is automatically	
Opt: waniface	generated. If you want to specify more than one interface use the "custom" value.	
	Example: If you have a 3G WAN interface called 'wan and a	
	WAN ADSL interface called 'dsl' and wanted to use one of these	
NA LUCELIC TO	interfaces for this IPSec connection, you would use: 'wan adsl'.	
Web: IKE Life Time UCI: strongswan.@connection[X].ikelifetime	Specifies how long the keyring channel of a connection (ISAKMP or IKE SA) should last before being renegotiated.	
Opt: ikelifetime	3h	
	Timespec 1d, 3h, 25m, 10s.	
Web: Key Life UCI: strongswan.@connection[X].keylife	Specifies how long a particular instance of a connection (a set of encryption/authentication keys for user packets) should last,	
Opt: keylife	from successful negotiation to expiry.	
	Normally, the connection is renegotiated (via the keying channel) before it expires (see rekeymargin).	
	1h	
	Timespec 1d, 1h, 25m, 10s.	
Web: Rekey Margin	Specifies how long before connection expiry or keying-channel	
UCI: strongswan.@connection[X].rekeymargin Opt: rekeymargin	expiry should attempt to negotiate a replacement begin.	
	Relevant only locally, other end need not agree on it.	
	9m	
	Timespec 1d, 2h, 9m, 10s.	
Web: Keyring Tries UCI: strongswan.@connection[X].keyringtries	Specifies how many attempts (a positive integer or %forever) should be made to negotiate a connection, or a replacement for one, before giving up. The value %forever means 'never give	
Opt: keyringtries	up'. Relevant only locally, other end need not agree on it.	

Web: DPD Action	Defines DPD (	Dead Peer Detection) action.
UCI: strongswan.@connection[X].dpdaction	None	Disables DPD.
Opt: dpdaction	Clear	Clear down the tunnel if peer does not respond. Reconnect when traffic brings the tunnel up.
	Hold	Clear down the tunnel and bring up as soon as the peer is available.
	Restart	Restarts DPD when no activity is detected.
Web: DPD Delay UCI: strongswan.@connection[X].dpddelay	1	
Opt: dpddelay	30s	y sent if no other traffic is received.
	Timespec	1d, 2h, 25m, 10s.
Web: DPD Timeout UCI: strongswan.@connection[X].dpdtimeout		meout interval, after which all connections to a ed in case of inactivity.
Opt: dpdtimeout	Timespec	1d, 2h, 25m, 10s.

Table 114: Information table for IPSec connections settings

## 32.4.3 Configure secrect settings

Each tunnel requires settings to configure how the local end point of the tunnel proves its identity to the remote end point.

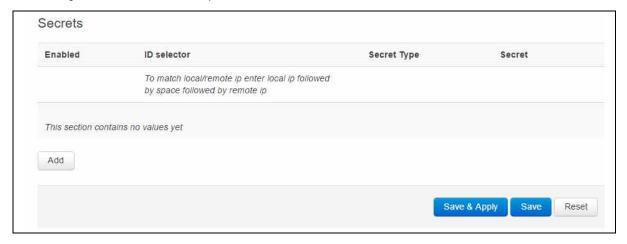


Figure 166: IPSec secrets settings

Web Field/UCI/Package Option	Description	
Web: Enabled	Defines whether this set of credentials is to be used or not.	
UCI: strongswan.@secret[X].enabled	0 Disabled.	
Opt: enabled	1 Enabled.	
Web: ID selector	Defines whether IP address or userfqdn is used.	
UCI: strongswan.@secret[X].idtype		
Opt: idtype		
Web: ID selector	Defines the local address this secret applies to.	
UCI: strongswan.@secret[X].localaddress		
Opt: localaddress		
Web: ID selector	Defines the remote address this secret applies to.	
UCI: strongswan.@secret[X]. remoteaddress		
Opt: remoteaddress		

Web: N/A FQDN or Xauth name used of Extended Authentication. This must match xauth\_identity from the configuration connection section. UCI: strongswan.@secret[X].userfqnd Opt: userfand Web: Secret Type Specifies the authentication mechanism to be used by the two peers. UCI: strongswan.@secret[X].secrettype Psk Preshared secret Opt: secrettype Public key signatures Pubkey Rsasig RSA digital signatures Ecdsasig Elliptic Curve DSA signatures Extended authentication Xauth Web: Secret Defines the secret. UCI: strongswan.@secret[X].secret

Table 115: Information table for IPSec secret settings

## 32.5 Configuring an IPSec template to use with DMVPN

The following example shows how to configure an IPSec connection template to use with DMVPN.

```
# Commands
touch /etc/config/strongswan
uci set strongswan.general=general
uci set strongswan.general.enabled=yes
uci set strongswan.general.strictcrlpolicy=no
uci set strongswan.general.uniqueids=yes
uci set strongswan.general.cachecrls=yes
uci set strongswan.general.nattraversal=yes
uci add strongswan connection
uci set strongswan.@connection[0].enabled=yes
uci set strongswan.@connection[0].name=dmvpn
uci set strongswan.@connection[0].type=transport
uci set strongswan.@connection[0].localproto=gre
uci set strongswan.@connection[0].remoteproto=gre
uci set strongswan.@connection[0].ike=aes-shal-modp1024
uci set strongswan.@connection[0].esp=aes128-sha1
uci set strongswan.@connection[0].waniface=lan4
uci set strongswan.@connection[0].auto=ignore
uci set strongswan.@connection[0].ikelifetime=28800s
uci set strongswan.@connection[0].keylife=300s
uci set strongswan.@connection[0].rekeymargin=30s
uci set strongswan.@connection[0].keyingtries=%forever
uci set strongswan.@connection[0].dpdaction=hold
```

Opt: secret

```
uci set strongswan.@connection[0].dpddelay=30s
uci set strongswan.@connection[0].dpdtimeout=150s
uci add strongswan secret
uci set strongswan.@secret[0].enabled=yes
uci set strongswan.@secret[0].secrettype=psk
uci set strongswan.@secret[0].secret=secret
```

#### This will create package strongswan.

```
config general 'general'
option enabled 'yes'
option strictcrlpolicy 'no'
option uniqueids 'yes'
option cachecrls 'yes'
option nattraversal 'yes'
config connection
option enabled 'yes'
option name 'dmvpn'
option type 'transport'
option localproto 'gre'
option remoteproto 'gre'
option ike 'aes-shal-modp1024'
option esp 'aes128-sha1'
option waniface 'lan4'
option auto 'ignore'
option ikelifetime '28800s'
option keylife '300s'
option rekeymargin '30s'
option keyingtries '%forever'
option dpdaction 'hold'
option dpddelay '30s'
option dpdtimeout '150s'
config secret
option enabled 'yes'
option secrettype 'psk'
option secret 'secret'
```

IPSec diagnostics using the web interface

### 32.6.1 IPSec status

32.6

In the top menu, click **Status -> IPSec**. The IPSec Connections page appears.



Figure 167: The IPSec connections page

In the Name column, the syntax contains the IPSec Name defined in package dmvpn and the remote IP address of the hub, or the spoke separated by an underscore; for example, dmvpn\_213.233.148.2.

## 32.7 IPSec diagnostics using UCI

### 32.7.1 IPSec configuration

To view IPSec configuration via UCI, enter:

```
root@VA_router:~# uci export strongswan
```

To restart strongSwan, enter:

```
root@VA_router:~# /etc/init.d/strongswan restart
```

#### 32.7.2 IPSec status

#### 32.7.3 To view IPSec status, enter:

```
root@VA_router:~# ipsec statusall
Security Associations (1 up, 0 connecting):
dmvpn_89_101_154_151[1]: ESTABLISHED 2 hours ago,
10.68.234.133[10.68.234.133]...89.101.154.151[89.101.154.151]
dmvpn_89_101_154_151{1}: REKEYING, TRANSPORT, expires in 55 seconds
dmvpn_89_101_154_151{1}: 10.68.234.133/32[gre] === 192.168./32[gre]
dmvpn_89_101_154_151{1}: INSTALLED, TRANSPORT, ESP in UDP SPIs: cca7b970_i
d874dc90_o
dmvpn_89_101_154_151{1}: 10.68.234.133/32[gre] === 89.101.154.151/32[gre]
```

To view a list of IPSec commands, enter:

```
root@VA_router:~# ipsec -help
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3

# 33 Dynamic Multipoint Virtual Private Network (DMVPN)

Dynamic Multipoint Virtual Private Network (DMVPN) is a scalable method of creating VPN IPSec Networks. DMVPN is a suite of three protocols: NHRP, GRE and IPSec, used to dynamically create VPN tunnels between different endpoints in the network without having to pre-configure each device with VPN details of the rest of endpoints in the network.

### 33.1 Prerequisites for configuring DMVPN

Before configuring DMVPN, you must first configure:

- A GRE interface; the previous chapter,' Configuring GRE interfaces'
- An IPSec connection to use as a template; read the chapter, 'Configuring IPSec'.

### 33.2 Advantages of using DMVPN

Using DMVPN eliminates the need of IPSec configuration to the physical interface. This reduces the number of lines of configuration required for a VPN development. For example, for a 1000-site deployment, DMVPN reduces the configuration effort at the hub from 3900 lines to 13.

- Adding new peers (spokes) to the VPN requires no changes at the hub.
- Better scalability of the network.
- Dynamic IP addresses can be used at the peers' site.
- Spokes can be connected in private or public network.
- NHRP NAT extension allows spoke-to-spoke tunnels to be built, even if one or more spokes is behind a Network Address Translation (NAT) device.
- New hubs can be added to the network to improve the performances and reliability.
- Ability to carry multicast and main routing protocols traffic (RIP, OSPF, BGP).
- DMVPN can be deployed using Activator, the Virtual Access automated provisioning system.
- Simplifies branch communications by enabling direct branch to branch connectivity.
- Simplifies configuration on the spoke routers. The same IPSec template configuration is used to create spoke-to-hub and spoke-to-spoke VPN IPSec tunnel.
- Improves business resiliency by preventing disruption of business-critical applications and services by incorporating routing with standards-based IPsec technology.

33.3 DMVPN scenarios

#### 33.3.1 Scenario 1

Spoke1, spoke2 and a hub are in the same public or private network.

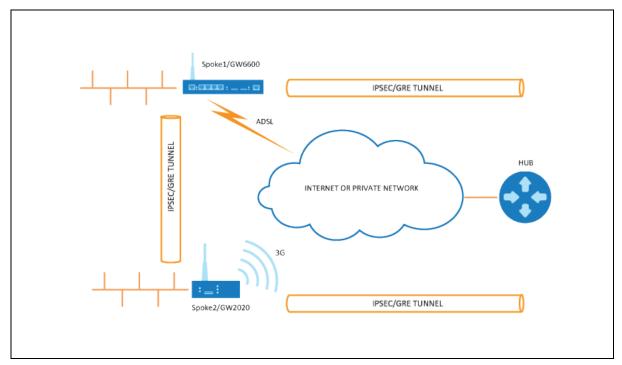


Figure 168: Network diagram for DMVPN spoke to spoke

- Spoke1 and spoke2 connect on their WAN interface: ADSL, 3G and initiate main mode IPSec in transport mode to the hub.
- After an IPSec tunnel is established, spokes register their NHRP membership with the hub.
- GRE tunnels come up.
- Hub caches the GRE tunnel and real IP addresses of each spoke.
- When spoke1 wants to talk to spoke2, it sends an NHRP resolution request to the hub.
- The hub checks its cache table and forwards that request to spoke2.
- Spoke2 caches spoke1's GRE and real IP address and sends an NHRP resolution reply via the hub.
- Spoke1 receives an NHRP resolution reply and updates its NHRP table with spoke2 information. Then it initiates VPN IPSec connection to spoke2.
- When an IPSec tunnel is established, spoke1 and spoke2 can send traffic directly to each other.

\_\_\_\_\_

#### 33.3.2 Scenario 2

Spoke1 is in a private (NAT-ed) network, spoke2 and hub are in public network.

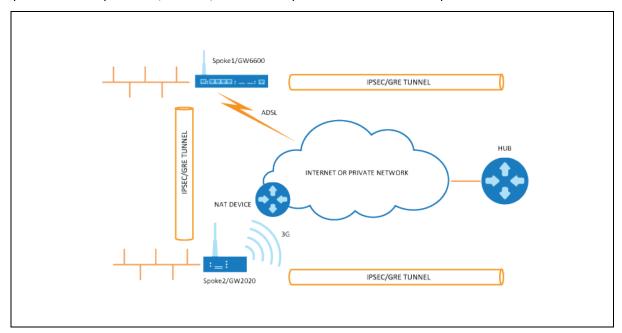


Figure 169: Network diagram for DMVPN spoke behind NAT

- Spoke1 sends an NHRP registration request to the hub.
- Hub receives this request and compares the source tunnel address of the spoke with the source of the packet.
- Hub sends an NHRP registration reply with a NAT extension to spoke1.
- The NAT extension informs spoke1 that it is behind the NAT-ed device.
- Spoke1 registers its pre- and post-NAT address.
- When spoke1 wants to talk to spoke2, it sends an NHRP resolution request to the hub.
- Hub checks its cache table and forwards that request to spoke2.
- Spoke2 caches spoke1's GRE pre- and post-NAT IP address and sends an NHRP resolution reply via the hub.
- Spoke1 receives the NHRP resolution reply and updates its NHRP table with spoke2 information. It initiates a VPN IPSec connection to spoke2.
- When the IPSec tunnel is established, spoke1 and spoke2 can send traffic directly to each other.

**Note**: if an IPSec tunnel fails to be established between the spokes then packets between the spokes are sent via the hub.

## 33.4 Configuration packages used

Package	Sections
network	For configuring the GRE tunnels.
strongswan	For enabling and configuring the IPSec connection template
dmvpn	

## 33.5 Configuring DMVPN using the web interface

The DMVPN section contains fields required to configure the parameters relative to the DMVPN Hub. These are used for DMVPN tunnels, such as GRE tunnels, GRE tunnel remote IP, DMVPN Hub IP and password.

### 33.5.1 DMVPN general settings

In the top menu, select **Network -> DMVPN**. The DMVPN page appears. There are two sections: General and DMVPN Hub Settings.



Figure 170: The DMVPN general section

Web Field/UCI/Package Option	Description		
Web: Enable DMVPN	Enables DMVF	PN.	
UCI: dmvpn.common.enabled	0	Disabled.	
Opt: enable	1	Enabled.	
Web: IPSec template connection UCI: dmvpn.common.ipsec_template_name Opt: ipsec template name	Selects the IP as a template	Sec connection, defined in strongSwan, to be u	used

Table 116: Information table for DMVPN general settings

### 33.5.2 DMVPN hub settings



Figure 171: The DMVPN hub settings

Web Field/UCI/Package Option	Description	
Web: GRE Interface UCI: dmvpn.@interface[X].gre_interface Opt: gre_interface	Specifies which GRE interface will be used with this DMVPN configuration.	
Web: GRE Remote Endpoint IP Address UCI: dmvpn.@interface[X].gre_endpoint_ip Opt: gre_endpoint_ip	Configures the GRE IP address of the hub.	
Web: GRE Remote Endpoint Mask Length UCI: dmvpn.@interface[X].gre_endpoint_mask _length Opt: gre_endpoint_mask_length	Configures the length of the mask of the GRE interface on the hub. For example if the mask is 255.255.0.0 the length will be 16.	
Web: DMVPN Hub IP Address UCI: dmvpn.@interface[X].nhs_ip Opt: nhs_ip	Configures the physical IP address for the DMVPN hub.	
Web: NHRP Authentication UCI: dmvpn.@interface[X].cisco_auth Opt: cisco_auth	Enables authentication on NHRP. The password will be applied in plaintext to the outgoing NHRP packets. Maximum length is 8 characters.	
Web: NHRP Holding Time UCI: dmvpn.@interface[X].holding_time Opt: holding_time	Timeout for cached NHRP requests.	
Web: Use As Default Route UCI: dmvpn.@interface[X].defaultroute Opt: defaultroute	Adds a default route into tunnel interface.  O Disabled.  1 Enabled.	
Web: Default Route Metric UCI: dmvpn.@interface[X].defaultroutemetric Opt: defaultroutemetric	Metric to use for the default route.	
Web: LED state indication UCI: dmvpn.@interface[X].led Opt: led	LED to use for indicating if the VPN is up.	

Table 117: Information table for DMVPN hub settings

### 33.5.3 Configuring an IPSec template for DMVPN using the web interface

Configuring an IPSec template is covered in the chapter 'Configuring IPSec'.

## 33.6 DMVPN diagnostics

In the top menu, click **Status -> IPSec**. The IPSec Connections page appears.



Figure 172: The IPSec connections page

In the Name column, the syntax contains the IPSec name defined in package dmvpn and the remote IP address of the hub, or the spoke separated by an underscore; for example, dmvpn\_213.233.148.2.

To check the status of DMVPN, in the top menu, click **Status -> DMVPN**.



Figure 173: The NBMA peers page

To check DMVPN status, enter:

:~# opennhrpctl show

Status: ok

Interface: gre-GRE

Type: local

Protocol-Address: 11.11.11.7/32

Alias-Address: 11.11.11.3

Flags: up

Interface: gre-GRE

Type: local

Protocol-Address: 11.11.11.3/32

Flags: up

Interface: gre-GRE

Type: cached

Protocol-Address: 11.11.11.2/32 NBMA-Address: 178.237.115.129

NBMA-NAT-OA-Address: 172.20.38.129

Flags: used up
Expires-In: 0:18

Interface: gre-GRE

Type: static

Protocol-Address: 11.11.11.1/29 NBMA-Address: 89.101.154.151

Flags: up

Interface	Description			
Туре	incomplete	Resolution request sent.		
	negative	Negative cached.		
	cached	Received/relayed resolution reply.		
	shortcut_route	Received/relayed resolution for route.		
	dynamic	NHC resolution.		
	dynamic_nhs	Dynamic NHS from dns-map.		
	static	Static mapping from config file.		
	dynamic_map	Static dns-map from config file.		
	local_route	Non-local destination, with local route.		
	local_addr	Local destination (IP or off-NBMA subnet).		
Protocol Address	Tunnel IP address	Tunnel IP address		
NBMA-Address	Pre-NAT IP address if NBMA-NAT-OA-Address is present or real address if NAT is not present.			
NBMA-NAT-OA-Address	Post NAT IP address. This field is present when Address is translated in the network.			
Flags	up	Can send all packets (registration ok).		
	unique	Peer is unique.		
	used	Peer is kernel ARP table.		
	lower-up	openhrp script executed successfully.		
Expires-In	Expiration time.			

Table 118: Information table for DMVPN status

You can check IPSec status using UCI commands.

```
root@VA-router:~# ipsec status
Security Associations (1 up, 0 connecting):
dmvpn_89_101_154_151[1]: ESTABLISHED 2 hours ago,
10.68.234.133[10.68.234.133]...89.101.154.151[89.101.154.151]
dmvpn_89_101_154_151{1}: REKEYING, TRANSPORT, expires in 55 seconds
dmvpn_89_101_154_151{1}: 10.68.234.133/32[gre] === 192.168./32[gre]
dmvpn_89_101_154_151{1}: INSTALLED, TRANSPORT, ESP in UDP SPIs: cca7b970_i
d874dc90_o
dmvpn_89_101_154_151{1}: 10.68.234.133/32[gre] === 89.101.154.151/32[gre]
```

### You can check DMVPN status using UCI commands.

:~# opennhrpctl show

Status: ok

Interface: gre-GRE

Type: local

Protocol-Address: 11.11.11.7/32

Alias-Address: 11.11.11.3

Flags: up

Interface: gre-GRE

Type: local

Protocol-Address: 11.11.11.3/32

Flags: up

Interface: gre-GRE

Type: cached

Protocol-Address: 11.11.11.2/32 NBMA-Address: 178.237.115.129

NBMA-NAT-OA-Address: 172.20.38.129

Flags: used up
Expires-In: 0:18
Interface: gre-GRE

Type: static

Protocol-Address: 11.11.11.1/29

NBMA-Address: 89.101.154.151

Flags: up

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3

# 34 Configuring multicasting using PIM and IGMP interfaces

### 34.1 Overview

IP multicast is a bandwidth-conserving technology that reduces traffic by simultaneously delivering a single stream of information to potentially thousands of corporate recipients. Applications that take advantage of multicast include video conferencing and corporate communications.

IP multicast delivers application source traffic to multiple receivers without burdening the source or the receivers while using a minimum of network bandwidth.

PIM (Protocol Independent Multicast) and IGMP (Internet Group Management Protocol) are protocols used to create multicasting networks within a regular IP network.

A multicast group is an arbitrary group of receivers that expresses an interest in receiving a particular data stream. The receivers (the designated multicast group) are interested in receiving a data stream from the source. They indicate this by sending an Internet Group Management Protocol (IGMP) host report to their closest router in the network. The routers are then responsible for delivering the data from the source to the receivers. The routers use Protocol Independent Multicast (PIM) between themselves to dynamically create a multicast distribution tree. The data stream will then be delivered only to the network segments that are in the path between the source and the receivers.

To summarize: PIM is used between routers while IGMP is used between a receiver and its router only. As a result, PIM must be enabled on all the interfaces on the route from the multicast source to the multicast client while IGMP must be enabled on the interface to the multicast client only.

# 34.2 Configuration package used

Package	Sections
pimd	pimd
	interface

# 34.3 Configuring PIM and IGMP using the web interface

To configure PIM through the web interface, in the top menu, select **Network -> PIM**. The PIM page appears. To access the Global settings, click **Add**.

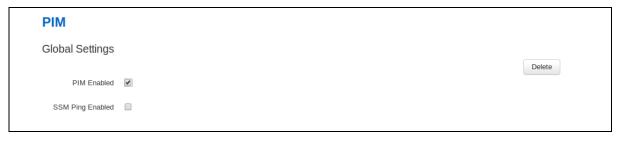


Figure 174: The global settings interface

## 34.3.1 Global settings

Web Field/UCI/Package Option	Description	
Web: PIM Enabled	Globally enables PIM on the router.	
UCI: pimd.pimd.enabled	0	Disabled.
Opt: enabled	1	Enabled.
Web: SSM Ping Enabled	Enables answers to SSM pings.	
UCI: pimd.pimd.ssmpingd	0	Disabled.
Opt: ssmpingd	1	Enabled.

Table 119: Information table for PIM global settings

## 34.3.2 Interfaces configuration



Figure 175: The interfaces configuration section

Web Field/UCI/Package Option	Description		
Web: Enabled UCI: pimd.interface[x].enabled	Enables multicast management of the given interface by the PIM application.		
Opt: enabled	0	Disabled.	
	1	Enabled.	
Web: Interface	Selects the	e interface to apply PIM settings to.	
UCI: pimd.interface[x].interface			
Opt: interface			
Web: Enable IGMP	Enable IGMP on given interface.		
UCI: pimd.interface[x].igmp	0 Disabled.		
Opt: igmp	1 Enabled.		
	Note: you must enable PIM SSM and/or IGMP depending on your requirements.		
	ICMP must be enabled on the interface to the multicast client only.		
Web: Enable SSM	Enable SSM on given interface.		
UCI: pimd.interface[x].ssm	0	Disabled.	
Opt: ssm	1	Enabled.	

Table 120: Information table for interface settings

To save your configuration updates, click **Save & Apply**.

## 34.4 Configuring PIM and IGMP using UCI

You can configure PIM and IGMP through CLI using UCI.

The configuration file is stored on /etc/config/pimd

To view the configuration file, enter:

```
uci export pimd
root@VA_router:/etc/config1# uci export pimd
package pimd
config routing 'pimd'
        option enabled 'yes'
config interface
        option enabled 'yes'
        option interface 'lan'
        option ssm 'yes'
        option igmp 'yes'
config interface
        option enabled 'yes'
        option interface 'wan'
        option ssm 'yes'
        option igmp 'no'
Alternatively, enter:
uci show pimd
root@VA_router:/etc/config1# uci show pimd
pimd.pimd=routing
pimd.pimd.enabled=yes
pimd.@interface[0]=interface
pimd.@interface[0].enabled=yes
pimd.@interface[0].interface=lan
pimd.@interface[0].ssm=yes
pimd.@interface[0].igmp=yes
pimd.@interface[1]=interface
pimd.@interface[1].enabled=yes
pimd.@interface[1].interface=wan
```

a Without Assess 2010

pimd.@interface[1].ssm=yes
pimd.@interface[1].igmp=no

To change any of the above values use uci set command.

# 35 QoS: VLAN 802.1Q PCP tagging

# 35.1 Configuring VLAN PCP tagging

Virtual Access routers have the capability to respect and set PCP priority values inside 802.1Q VLAN tagged frames. The following partial export of network configuration shows how to configure VLAN priorities for specific interfaces (VLANs).

```
root@VA_router:~# uci export network package network
config va_switch
        option eth0 'A E'
        option eth1 'B F'
        option eth2 'C G'
        option eth3 'D'
        option eth4 'H'
config interface 'VLAN_1'
        option type 'bridge'
        option proto 'static'
        option ipaddr '10.1.28.99'
        option netmask '255.255.0.0'
        option ifname 'eth0 eth4'
config interface 'VLAN_2'
        option type 'bridge'
        option proto 'static'
        option ipaddr '192.168.2.1'
        option netmask '255.255.255.0'
        option ifname 'eth1 eth4.2'
        option vlan_qos_map_ingress '1:1'
        option vlan_qos_map_egress '0:1'
config interface 'VLAN_3'
        option ifname 'eth2 eth4.3'
        option type 'bridge'
        option proto 'static'
        option ipaddr '192.168.3.1'
        option netmask '255.255.255.0'
```

a Without Assess 2010

```
option vlan_qos_map_ingress '3:3'

option vlan_qos_map_egress '0:3'

config interface 'VLAN_4'

option ifname 'eth3 eth4.4'

option type 'bridge'

option proto 'static'

option ipaddr '192.168.3.1'

option netmask '255.255.255.0'

option vlan_qos_map_ingress '5:5'

option vlan_qos_map_egress '0:5'
```

UCI/Package Option	Description
UCI: network. <if< td=""><td>VLAN priority code point to socket buffer mapping.</td></if<>	VLAN priority code point to socket buffer mapping.
name>.vlan_qos_map_ingress	Example: network. <if name="">. vlan_qos_map_ingress =1:1</if>
Opt: list vlan_qos_map_ingress	
UCI: network. <if< td=""><td>Socket buffer to VLAN priority code point mapping.</td></if<>	Socket buffer to VLAN priority code point mapping.
name>.vlan_qos_map_egress	Example: network. <if name="">. vlan_qos_map_egress =0:1</if>
Opt: list vlan_qos_map_egress	

The above sample configuration specifies that any frames on VLAN2, VLAN3 and VLAN4 will be processed or have their PCP value adjusted according to QoS values set.

#### VLAN1

• VLAN1 is an untagged VLAN so there are no 802.1Q tags on the frames.

#### VLAN2

- Any frames received on VLAN2 destined to VLAN2 with PCP priority of 1 will be forwarded without altering the priority; it will be still set to 1.
- Any frames received on VLAN2 destined to VLAN2 with a PCP priority set to 0 will have a priority of 1 set as they leave the router on VLAN2.

#### VLAN3

- Any frames received on VLAN3 destined to VLAN3 with a PCP priority of 3 will be forwarded without altering the priority; it will be still set to 3.
- Any frames received on VLAN3 destined to VLAN2 with PCP priority set to 0 will have a priority of 3 set as they leave the router on VLAN3.

#### VLAN4

- Any frames received on VLAN4 destined to VLAN2 with PCP priority of 5 will be forwarded without altering the priority; it will be still set to 5.
- Any frames received on VLAN4 destined to VLAN2 with PCP priority set to 0 will have a priority of 5 set as they leave the router on VLAN4.

Four queues are supported and are structured as follows:

- Queue 1: PCP values 0 and 1 Default
- Queue 2: PCP values 2 and 3 Normal
- Queue 3: PCP values 4 and 5 High
- Queue 4: PCP values 6 and 7 Express

Value 7 is the highest priority and 0 is the lowest. These queues prioritise 802.1Q tagged frames as they are received on the port, these are hardware defined.

When 802.1Q frames are received on the port they are processed according to the above queues on arrival (even if not defined in the configuration). Then if value 'vlan\_qos\_map\_ingress' is configured you can modify the PCP priority for egress if the frame was to be forwarded on another tagged interface.

When frames are received on an untagged VLAN interface configured with 'vlan\_qos\_map\_egress' and are destined to tagged interface, 802.1Q tag will be created with a default priority of 0 and then the priority will be set according to the PCP value specified as the frames leave port.

# 36 QoS: type of service

Virtual Access routers are capable of implementing quality of service configurations on a per interface basis, which allows traffic prioritisation based on type of service criteria parameters.

## 36.1 QoS configuration overview

A minimal QoS configuration usually consists of:

- One interface section
- Some rules allocating packets to at least two buckets
- Configuration of the buckets

# 36.2 Configuration packages used

Package	Sections
qos	interface
	classgroup
	class
	classify

# 36.3 Configuring QoS using the web interface

Browse to the router's IP address and login.

Select **Network tab -> QoS**. The QoS page appears. From this page you can configure interfaces that QoS is applied to as well as classification rules.

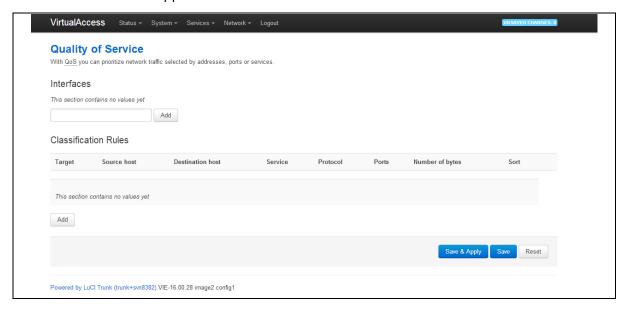


Figure 176: The quality of service page

To configure an interface, enter a relevant interface name and click **Add**. The Quality of Service page for that interface appears.

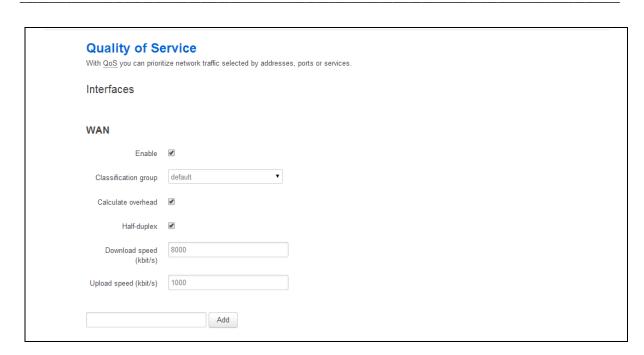


Figure 177: The quality of service page for WAN interface

The following parameters can be configured for the interface you have chosen. The name of the interfaces should match with the logical name given to the interface in the network configuration.

Web Field/UCI/Package Option	Description	
Web: Enabled	Enables or disables QoS interface.	
UCI: qos.[interface].enabled	1	Enabled.
Opt: enabled	0	Disabled.
Web: Classification group UCI: qos. [interface].classgroup Opt: classgroup		g before previously created classgroup and it should be assigned to.
Web: Calculate overhead UCI: qos. [interface].overhead Opt: overhead	Decreases upload	and download ratio to prevent link saturation.
Web: Half-duplex	Enables or disable	es half-duplex operation.
UCI: qos [interface].halfduplex	1	Enabled.
Opt: halfduplex	0	Disabled.
Web: Download speed UCI: qos.[interface].download Opt: download	Download speed I	imit in kbits/sec.
Web: Upload speed UCI: qos.[interface].upload=2000 Opt:upload	Upload speed limi	t in kbits/sec.

Table 121: Information table for QoS page

To add classification rules, click **Add**. The Classification Rules section appears.

Configure each classification rule with the following parameters.

---- yp- -----



Figure 178: Parameters for classification rules

Web Field/UCI/Package Option	Description
Web: Target UCI: Opt:	Creates and configures selected target bucket.  Normal  Priority  Low  Express
Web: Source host UCI: Opt:	Source host.
Web: Destination host UCI: Opt:	Destination host.
Web: Service UCI: Opt:	Selectable service.
Web: Protocol UCI: Opt:	Protocol to classify.
Web: Ports UCI: Opt:	Upload speed kbits/sec.
Web: Number of bytes UCI: Opt:	Number of bytes for bucket.

Table 122: Information table for classification rules

# 36.4 Configuring QoS using UCI

You can also configure QoS using UCI. The configuration file is stored on:

#### /etc/config/qos

#### 36.4.1 Interface

Defines the interface on which configured QoS settings will take place.

Each interface can have its own buffer. The interface section declares global characteristics of the connection on which the specified interface is communicating. The following options are defined within this section:

```
config interface 'ADSL'

option classgroup 'Default'

option enabled '1'

option overhead '1'

option halfduplex '0'

option download '900'

option upload '245'
```

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables or disables QoS interface.		
UCI: qos.[interface].enabled	1	Enabled.	
Opt: enabled	0	Disabled.	
Web: Classification group UCI: qos. [interface].classgroup Opt: classgroup		Creates a mapping before previously created classgroup and interface to which it should be assigned to.	
Web: Calculate overhead UCI: qos. [interface].overhead Opt: overhead	Decrease upload	and download ratio to prevent link saturation.	
Web: Half-duplex	Enables or disables half-duplex operation.		
UCI: qos [interface].halfduplex	1	Enabled.	
Opt: halfduplex	0	Disabled.	
Web: Download speed UCI: qos.[interface].download Opt: download	Download speed	limit in kbits/sec.	
Web: Upload speed	Upload speed limit in kbits/sec.		
UCI: qos.[interface].upload=2000			
Opt:upload			

# 36.4.2 Classgroup

As there is more than one interface you can have more than one classgroup.

```
config classgroup 'Default'
option classes 'Express Normal'
option default 'Normal'
```

UCI/Package Option	Description
UCI: qos.Default=classgroup	Specifies name of classgroup.
Opt: Default	
UCI: qos.Default.classes=Express Normal	Specifies the list of names of classes which should be part of
Opt: classes	classgroup.
qos.Default.default=Normal	Defines which class is considered default.
Opt: default	

#### **36.4.3 Classes**

Each bucket has its own configuration.

```
config class 'Normal'

option packetsize '1500'

option avgrate '30'

option priority '5'

config class 'Express'

option packetsize '1000'

option maxsize '800'

option avgrate '50'

option priority '10'

option limitrate '10'
```

UCI/Package Option	Description
UCI: qos.Normal=class	Specifies class name.
Opt: Normal	
UCI: qos.Normal.packetsize=1500	Specifies packet size for the class in bytes.
Opt: packetsize	
UCI: qos.Normal.avgrate=30	Average rate for this class, value in % of bandwidth in %.
Opt: avgrate	
UCI: qos.Normal.priority=5	Specifies priority for the class in %.
Opt: priority	
UCI: qos.Express=class	Specifies class name.
Opt: Express	
UCI: qos.Express.packetsize=1000	Specifies packet size for the class in bytes.
Opt: packetsize	
UCI: qos.Express.maxsize=800	Specify max packet size in bytes.
Opt: maxsize	
UCI: qos.Express.avgrate=50	Average rate for this class, value in % of bandwidth in %.
Opt: avgrate	
UCI: qos.Express.priority=10	Specifies priority for the class in %.
Opt: priority	
UCI: qos.Express.limitrate=10	Defines to how many % of the available bandwidth this class is
Opt: limitrate	capped to.

# **36.4.4 Classify**

Classifiers match the traffic for desired class.

```
config classify
option target 'Express'
option proto 'udp'
```

UCI/Package Option	Description
UCI: qos.@classify[0]=classify	Part of classify rule.
Opt: classify	
UCI: qos.@classify[0].target=Express	Specifies target class.
Opt: target	
UCI: qos.@classify[0].proto=udp	Specifies protocol.
Opt: proto	

# 36.5 Example QoS configurations

```
config interface 'ADSL'
      option classgroup 'Default'
      option enabled '1'
      option overhead '1'
      option download '900'
      option upload '245'
config classgroup 'Default'
     option classes 'Express Normal'
     option default 'Normal'
config class 'Normal'
     option packetsize '1500'
     option avgrate '30'
     option priority '5'
config class 'Express'
     option packetsize '1000'
     option maxsize '800'
     option avgrate '50'
     option priority '10'
     option limitrate '10'
config classify
     option target 'Express'
     option proto 'udp'
```

# 37 Management configuration settings

This chapter contains the configuration sections and parameters required to manage and monitor your device using Activator and Monitor.

### 37.1 Activator

Activator is a Virtual Access proprietary provisioning system, where specific router configurations and firmware can be stored to allow central management and provisioning. Activator has two distinct roles in provisioning firmware and configuration files to a router.

- Autoload activation of firmware and configuration files on router boot up:
  - O Autoload is generally used for router installation. In this scenario the router will initiate the request for firmware and configuration files when it boots up. The router is installed with a factory config that will allow it to contact Activator. The autoload feature controls the behaviour of the router in requesting firmware and configuration files; this includes when to start the Activation process and the specific files requested. The HTTP Client (uhttpd) contains information about the Activator server and the protocol used for activation.
- Deployment of firmware to routers after installation:
  - o In this scenario, Activator initiates the process. This process, known as Active Updates, allows for central automatic deployment of firmware and configuration files. It is used when configuration or firmware changes need to be pushed to live routers.

### 37.2 Monitor

Monitor is a Virtual Access proprietary tool, based on SNMP protocol, to monitor wide networks of deployed routers. The router will be configured to send information to Monitor, which is then stored and viewed centrally via the Monitor application. This includes features such as traffic light availability status, syslog and SLA monitoring.

# 37.3 Configuration packages used

Package	Sections
autoload	main
httpclient	default
management_users	user

# 37.4 Autoload: boot up activation

Autoload configurations specify how the device should behave with respect to activation when it boots up. Autoload entries contain information about the specific files to be downloaded and the destination for the downloaded file. Standard autoload entry configurations to download are:

- A firmware file (\$\$.img)
- A configuration file (\$\$.ini)
- A .vas file (\$\$.vas). This file signals the end of the autolaod sequence to Activator

Activator identifies the device using the serial number of the router. \$\$ syntax is used to denote the serial number of the router when requesting a file. The requested files are written to the alternate image or config segment.

You can change the settings either directly in the configuration file or via appropriate UCI set commands. It is normal procedure for autoload to be enabled in the router's factory settings and disabled in running configurations (config 1 and 2).

Autoload may already have been set at factory config level. If you wish to enable autoload services, proceed through the following steps.

# 37.5 Autoload packages

Package	Sections
autoload	main

#### 37.5.1 Create a configuration file

In the top menu, select **Services ->Autoload**. The Autoload page has two sections: Basic Settings and Entries. Click **Add** to access configuration settings for each section.

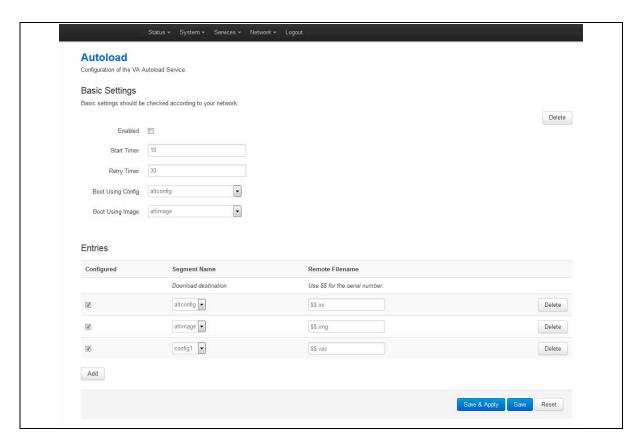


Figure 179: The autoload settings page

Web Field/UCI/Package Option	Description		
Basic settings			
Web: Enabled	Enables activa	Enables activation at system boot.	
UCI: autoload.main.enabled	1	Enabled.	
Opt: Enabled	0	Disabled.	
Web: Start Timer UCI: autoload.main.StartTimer		Defines how long to wait after the boot up completes before starting activation.	
Opt: StartTimer	10		
	Range	0-300 secs	
Web: Retry Timer UCI: autoload.main.RetryTimer Opt: RetryTimer		nany seconds to wait between retries if a download autoload entry fails.  0-300 secs	
Web: N/A UCI: autoload.main.NumberOfRetries Opt: Numberofretries	activation seq		
Web: N/A UCI: autoload.main.BackoffTimer Opt: Backofftimer	Defines how many minutes to back off for if a download and all retires fail. After the backoff period, the entire autoload sequence will start again.  15  Range		

Web: Boot Using Config UCI: autoload.main.BootUsingConfig	Specifies which configuration to boot up with after the activation sequence.	
Opt: BootUsingConfig	Altconfig	Alternative configuration
opt. Bootosingosinig	Config1	Configuration 1
	Config2	Configuration 2
	Factconf	Factory configuration
Web: Boot Using Image UCI: autoload.main.BootUsingImage	Specifies which image to boot up with after the activation sequence completes successfully.	
Opt: BootUsingImage	Altimage	Alternative image
	Image 1	image 1
	Image 2	image 2
Entries		
Web: Configured	Enables the autoload sequence to process this entry.	
UCI: autoload.@entry[x].Configured	1	Enabled.
Opt: Configured	0	Disabled.
Web: Segment Name	Defines where the downloaded file should be stored:	
UCI: autoload.@entry[x].SegmentName Opt: SegmentName	(config1   config2   altconfig   image1   image2   altimage). Typically only altconfig and altimage are used.	
Web: RemoteFilename	Defines the name of the file to be downloaded from Activator.	
UCI: autoload.@entry[x].RemoteFilename	\$\$.vas	Notifies activator sequence is complete.
Opt: RemoteFilename	\$\$ ini	Request configuration
	\$\$ img	Request firmware
	Note: \$\$.vas	should always be requested last.

Table 123: Information table for autoload

# 37.6 Autoload using UCI

```
root@VA_router:/# uci show autoload
autoload.main=core
autoload.main.Enabled=yes
autoload.main.StartTimer=10
autoload.main.RetryTimer=30
autoload.main.NumberOfRetries=5
autoload.main.BackoffTimer=15
autoload.main.BootUsingConfig=altconfig
autoload.main.BootUsingImage=altimage
autoload.@entry[0]=entry
autoload.@entry[0].Configured=yes
autoload.@entry[0].SegmentName=altconfig
autoload.@entry[0].RemoteFilename=$$.ini
autoload.@entry[1]=entry
autoload.@entry[1].Configured=yes
autoload.@entry[1].SegmentName=altimage
autoload.@entry[1].RemoteFilename=$$.img
```

autoload.@entry[2]=entry autoload.@entry[2].Configured=yes autoload.@entry[2].SegmentName=config1 autoload.@entry[2].RemoteFilename=\$\$.vas Autoload using package options root@VA\_router:/# uci export autoload package 'autoload' config 'core' 'main' option 'Enabled' "yes" option 'StartTimer' "10" option 'RetryTimer' "30" option 'NumberOfRetries' "5" option 'BackoffTimer' "15" option 'BootUsingConfig' "altconfig" option 'BootUsingImage' "altimage" config 'entry' option 'Configured' "yes" option 'SegmentName' "altconfig" option 'RemoteFilename' "\\$\\$.ini" config 'entry' option 'Configured' "yes" option 'SegmentName' "altimage" option 'RemoteFilename' "\\$\\$.img" config 'entry'

# 37.7 HTTP Client: configuring activation using the web interface

option 'Configured' "yes"

option 'SegmentName' "config1"

option 'RemoteFilename' "\\$\\$.vas"

This section contains the settings for the HTTP Client used during activation and active updates of the device.

The httpclient core section configures the basic functionality of the module used for retrieving files from Activator during the activation process.

## 37.7.1 HTTP Client configuration packages

Package	Sections
Httpclient	default

## 37.7.2 Web configuration

To configure HTTP Client for Activator, in the top menu, click **Services -> HTTP Client**. The HTTP Client page has two sections: Basic Settings and Advanced Settings.

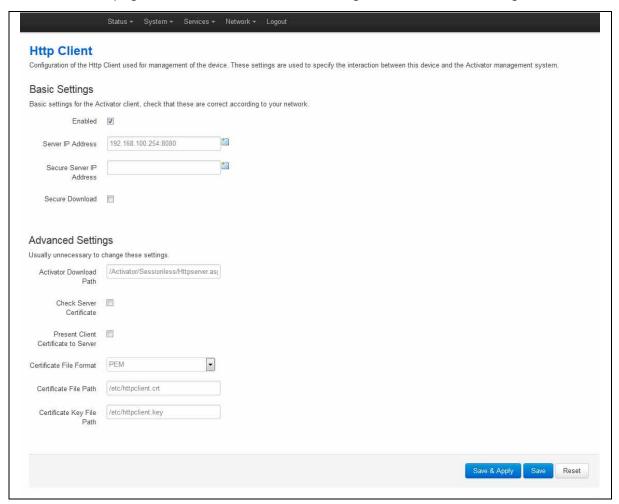


Figure 180: The HTTP client page

Web Field/UCI/Package Option	Description		
Basic settings			
Web: Enabled	Enables the HTTP clien	t.	_
UCI: httpclient.default.enabled	1	Enabled.	
Opt: Enabled	0	Disabled.	
Web: Server IP Address UCI: httpclient.default.Fileserver Opt: list Fileserver	be an IP address or FQ	of Activator that uses http port 80. Th IDN. The syntax should be x.x.x.x:80 vers should be separated by a space u	or
Web: Secure Server IP Address UCI: httpclient.default.SecureFileServer Opt: list SecureFileServer	Specifies the address of Secure Activator that uses port 443. This can be an IP address or FQDN. The syntax should be x.x.x.x:443 or FQDN:443. Multiple servers should be separated by a space using UCI.		

0.00

Web: Secure Download	Enables Secure Download (port 443).		_
UCI: httpclient.default.SecureDownload	1	Enabled.	
Opt: SecureDownload	0	Disabled.	
Advanced settings			
Web: ActivatorDownloadPath		ctivator to which the client should se	nd
UCI:	requests.	T	1
httpclient.default.ActivatorDownloadPath	/Activator/Sessionle		
Opt: ActivatorDownloadPath	ss/Httpserver.asp		
Web: Check Server Certificate	Range Checks for the certifica	tes presence and validity.	
UCI:	1	Enabled.	1
httpclient.default.ValidateServerCertificate	0	Disabled.	
Enabled	U	Disabled.	J
Opt: ValidateServerCertificateEnabled			
Web: Present Client Certificate to Server		resents its certificate to the server to	
UCI: httpclient.default. PresentCertificateEnabled	identify itself.	Chablad	1
	1	Enabled.	
Opt: PresentCertificateEnabled	0	Disabled.	
Web: CertificateFile Format	Specifies the value the in the server certificate	client expects to see in the specified	field
UCI: httpclient.default.CertificateFormat	PEM		1
Opt: CertificateFormat	DER		1
Web: Certificate File Path	_ <u>_</u>	ocation of the certificate.	
UCI: httpclient.default.CertificateFile			1
Opt: CertificateFile	/etc/httpclient.crt		-
'	Range		
Web: Certificate Key File Path		location of the certificate key.	1
UCI: httpclient.default.CertificateKey	/etc/httpclient.key		-
Opt: CertificateKey	Range		
Web: N/A	·	ad activations and active updates.	
UCI: httpclient.default.ActivatorChunkyDownlo	The default value is		
adPath	httpclient.default.ActivatorChunkyDownloadPath=/activator/parti al/download		
Opt: ActivatorChunkyDownloadPath		o which the client should send reque	sts for
	chunky image downloa		
Web: N/A	Specifies the size of ea	ch packet payload	1
UCI: httpclient.default.ChunkSize	100k	100K Bytes	
Opt: ChunkSize	1-infinite	Available values	
Web: N/A		ve updates traffic received by device	to
UCI: httpclient.default.RateLimit	specified limit	T	1
Opt: RateLimit	None	By default there is no limit	-
	1-infinite	Available values in kbps	
Web: N/A	Defines path to the cer	tificate authority file stored on the ro	uter
UCI: httpclient.default.CAFile			
Opt: CAFile			
Web: N/A	Defines whether to skip certificate.	the status check on the server	
UCI: httpclient.default.IgnoreServerCertificateS		Enabled	]
tatus	1	Enabled.	1
Ont: IgnoreServerCertificateStatus	0	Disabled.	1

Table 124: Information table for HTTP client

37.8 Httpclient: Activator configuration using UCI

```
root@VA_router:~# uci show httpclient
httpclient.default=core
httpclient.default.Enabled=yes
httpclient.default.FileServer=10.1.83.36:80 10.1.83.37:80
httpclient.default.SecureFileServer=10.1.83.36:443 10.1.83.37:443
httpclient.default.ActivatorDownloadPath=/Activator/Sessionless/Httpserver.
httpclient.default.SecureDownload=no
httpclient.default.PresentCertificateEnabled=no
httpclient.default.ValidateServerCertificateEnabled=no
httpclient.default.CertificateFile=/etc/httpclient.crt
httpclient.default.CertificateFormat=PEM
httpclient.default.CertificateKey=/etc/httpclient.key
httpclient.default.ActivatorChunkyDownloadPath=/activator/partial/download
httpclient.default.ChunkSize=100k
httpclient.default.RateLimit=2
httpclient.default.CAFile='/'
httpclient.default.IgnoreServerCertificateStatus=0
```

# 37.9 Httpclient: Activator configuration using package options

```
root@VA_router:~# uci export httpclient

package httpclient

config core 'default'

option Enabled 'yes'

list FileServer '1.1.1.1:80'

list FileServer '1.1.1.2:80'

listSecureFileServer '1.1.1.2:443'

option ActivatorDownloadPath '/Activator/Sessionless/Httpserver.asp'

option SecureDownload 'no'

option PresentCertificateEnabled 'no'

option ValidateServerCertificateEnabled 'no'

option CertificateFile '/etc/httpclient.crt'

option CertificateFormat 'PEM'
```

® Wishest Assess 2010

```
option CertificateKey '/etc/httpclient.key'
option ActivatorChunkyDownloadPath '/activator/partial/download'
option ChunkSize '100k'
option RateLimit '2'
option CAFile '\'
option IgnoreServerCertificateStatus '0'
```

# 37.10 User management using UCI

User management is not currently available using the web interface. You can configure the feature using UCI or Activator.

## 37.10.1 User management packages

Package	Sections
management_users	Users

### 37.10.2 Configuring user management

You can create different users on the system by defining them in the user management configuration file. This gives users access to different services.

Web Field/UCI/Package Option	Description
General settings	
Web: n/a UCI: management_users.@user[x].enabled Opt: enable	Enables/creates the user.  0
Web: n/a UCI: management_users.@user[x].username Opt: username	Specifies the user's username.
Web: n/a UCI: management_users.@user[x].password Opt: password	Specifies the user's password. When entering the user password enter in plain text using the password option. After reboot the password is displayed encrypted via the CLI using the hashpassword option.  UCI: management_users.@user[x].hashpassword  Opt: hashpassword. Note: a SRP user password will be
Web: n/a UCI: management_users.@user[x].webuser Opt: webuser	displayed using the srphash option  Specifies web access permissions for the user. Note: webuser will only work if linuxuser is set to Enabled.  O Disabled.  1 Enabled.
Web: n/a UCI: management_users.@user[x].chapuser Opt: chapuser	Specifies CHAP access permissions for the PPP connection.  Note: chapuser will only work if linux user is set to Enabled.  Disabled.  1 Enabled.
Web: n/a UCI: management_users.@user[x].papuser Opt: papuser	Specifies PAP access permissions for the PPP connection.  O Disabled.  1 Enabled.

Web: n/a Specifies SRP access permissions for the PPP connection. UCI: management\_users.@user[x].srpuser 0 Disabled Opt: srpuser Enabled. Web: n/a Specifies SMS access permissions for the user. UCI: management\_users.@user[x].smsuser Disabled. Opt: smsuser 1 Enabled. Web: n/a Specifies linuxuser access permissions for the user UCI: linuxuser 0 Disabled. Opt: linuxuser 1 Enabled. Web: n/a Specifies which pages the user can view. Multiple pages should be entered using a space to separate if using UCI. UCI: List allowed\_pages

Table 125: Information table for config user commands

#### Note:

Opt: list allowed\_pages

- webuser will only work if linuxuser is set to yes
- chapuser will only work if linuxuser is set to no

When a new user is created on the system and given web access, you will no longer be able to login to the router web interface with the default root user details. The user must use their new user login details.

# 37.11 Configuring the management user password using UCI

The user password is displayed encrypted via the CLI using the hashpassword option.

```
root@VA_router:~# uci show management_users
management_users.@user[0].username=test
management_users.@user[0].hashpassword=$1$XVzDHHPQ$SKK4geFonctihuffMjS4U0
```

If you are changing the password via the UCI, enter the new password in plain text using the password option.

```
root@VA_router:~# uci set management_users.@user[0].username=newpassword root@VA_router:~# uci commit
```

The new password will take effect after reboot and will now be displayed in encrypted format through the hashpassword option.

# 37.12 Configuring management user password using package options

The root password is displayed encrypted via CLI using the hashpassword option.

```
root@VA_router:~# uci export management_users
package management_users

config user
    option hashpassword '$1$wRYYiJOz$EeHN.GQcxXhRgNPVbqxVw
```

If you are changing the password using UCI, enter the new password in plain text using the password option.

```
package management_users

config user
    option hashpassword '$1$wRYYiJOz$EeHN.GQcxXhRgNPVbqxVw
    option password 'newpassword'
```

The new password will take effect after reboot and will now be displayed in encrypted format via the hashpassword option.

# 37.13 User management using UCI

```
root@VA_router:~# uci show management_users
management_users.@user[0]=user
management_users.@user[0].enabled=1
management_users.@user[0].username=test
management_users.@user[0].hashpassword=$1$XVzDHHPQ$SKK4geFonctihuffMjS4U0
management_users.@user[0].webuser=1
management_users.@user[0].linuxuser=1
management_users.@user[0].papuser=0
management_users.@user[0].srpuser=0
management_users.@user[0].srpuser=0
management_users.@user[0].srpuser=0
management_users.@user[0].srpuser=0
management_users.@user[0].smsuser=0
```

# 37.14 User management using package options

```
root@VA_router:~# uci export management_users

package management_users

config user
```

@ W. L. L. 2000

```
option enabled '1'
option username 'test'
option hashpassword '$1$XVzDHHPQ$SKK4geFonctihuffMjS4U0'

option webuser '1'
option linuxuser '1'
option papuser '0'
option chapuser '0'
option srpuser '0'
options smsuser '0'
```

# 37.15 Configuring user access to specific web pages

To specify particular pages a user can view, add the list allowed\_pages. Examples are:

```
listallowed_pages '/admin/status'
```

The user can view admin status page only.

```
listallowed_pages 'admin/system/flashops'
```

The user can view flash operation page only.

To specify monitor widgets only, enter:

```
listallowed_pages 'monitor/<widgetname>'
```

Example widget names are: dhcp, arp, 3gstats, interfaces, memory, multiwan, network, openvpn, routes, system, ipsec, dmvpn, tservd.

# **38 Configuring Monitor**

### 38.1 Introduction

Virtual Access monitoring system (Monitor) is a secure portal that provides:

- Centralised monitoring of devices
- Device status
- GPS location
- Syslog reporting
- Real time diagnostics
- Email notification
- Advanced statistics
- Dashboard graph reporting

You must configure each router in the network to send the required information to Monitor. This chapter explains how to configure the different information that can be sent to Monitor, including the required router configuration for:

- · Reporting device status to Monitor
- Reporting GPS location to Monitor
- Reporting syslog to Monitor
- Configuration of interface statistics collection (ISAD)

For detailed information on operating Monitor, read the Monitor User Manual.

# 38.2 Reporting device status to Monitor

To allow Monitor to track the IP address and ongoing presence of a device, a keepalive heartbeat SNMP trap is sent from the router. The router is capable of sending SNMP in version 1, 2c and 3.

The SNMP keepalive heartbeat sends basic information on interface status but can also be configured to contain more detailed information such as GPS location.

The basic heartbeat configuration consists of two parts:

- · enabling the heartbeat keepalive
- enabling the interface(s) to be monitored

### 38.2.1 Configuration package used

Package	Sections
monitor	keepalive
network	interface

## 38.2.2 Configuring keepalive heartbeat using the web interface

Select **Services -> Monitor**. The Monitor Keepalive & ISAD page appears.

The keepalive heartbeat is configured under the **Basic Settings** section.

A single instance keepalive can be configured to multiple monitor address using the same reference, heartbeat interval and other options. Or alternatively multiple keepalive instances can be configured with unique options.

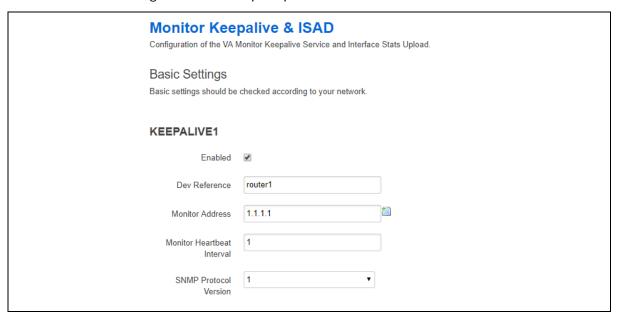


Figure 181: The Monitor & ISAD keepalive page

#### 38.2.2.1 Basic settings

Web Field/UCI/Package Option	Description	
Web: Enabled UCI: monitor.@keepalive[0].enabled	Enables Mo	nitor to send heartbeats to the router.  Disabled.
Opt: Enabled	1	Enabled.
Web: Dev Reference UCI: monitor.@keepalive[0].dev_reference Opt: dev_reference	Sets a uniq	ue identification for this device known to Monitor.
Web: Monitor Address UCI: monitor.@keepalive[0].monitor_ip Opt: list monitor_ip	Defines the IP address of Monitor. It is possible to specify multiple addresses to which SNMP heartbeat traps will be sent. To configure via UCI use a space separator. Example: monitor.@keepalive[0].monitor_ip=1.1.1.1 2.2.2.2	
Web: Monitor Heartbeat Interval UCI: monitor.@keepalive[0].interval_min Opt: interval_min	Specifies the 1 Range	ne interval, in minutes, at which traps are sent.  Trap set every 1 minute.
Web: SNMP Protcol Version UCI: monitor.@keepalive[0].snmp_version Opt: snmp_version	Specifies w  1  2c  3	shat SNMP version is sent to remote Manager. snmp version 1 SNMP version 2c SNMP version 3

Table 126: Information table for Monitor & ISAD basic configuration

N. Watsul Access 2020

The figure below shows options that are relevant only if you have selected SNMP version 3.

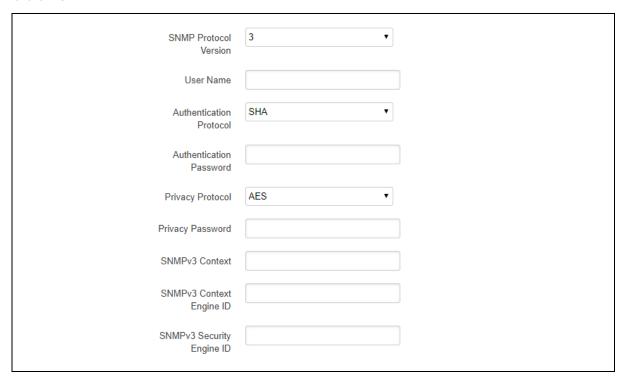


Figure 182: The Monitor & ISAD keepalive page for SNMP v3

Web Field/UCI/Package Option	Descriptio	n
Web: User Name	Specifies us	ser name.
UCI: monitor.@keepalive[0].snmp_uname	Blank	Default value
Opt: snmp_uname	String	
Web: Authentication Password	Specifies sr	nmpv3 authentication password.
UCI:		
monitor.@keepalive[0].snmp_auth_pass		
Opt: snmp_auth_pass		
Web: Authentication Protocol		nmpv3 authentication protocol.
UCI: monitor.@keepalive[0].snmp_auth_proto	Blank	Default value
	MD5	MD5 as authentication protocol
Opt: snmp_auth_proto	SHA	SHA as authentication protocol
Web: Privacy Protocol	Specifies sr	nmpv3 privacy protocol
UCI:	Blank	Default value
monitor.@keepalive[0].snmp_priv_proto	AES	AES as privacy protocol
Opt: snmp_priv_proto	DES	MD5 as privacy protocol
Web: Privacy Password	Specifies sr	nmpv3 privacy password.
UCI:		
monitor.@keepalive[0].snmp_priv_pass		
Opt: snmp_priv_pass		
Web: SNMPv3 Context	Specifies snmpv3 context name.	
UCI: monitor.@keepalive[0].snmp_context		
Opt: snmp_context		
	Charifica communica contact anning ID	
Web: SNMPv3 Context Engine ID UCI:	Specifies snmpv3 context engine ID.	
UCI:   monitor.@keepalive[0].snmp_context_eid		
Opt: snmp_context_eid		

Issue: 2.3 Page 384 of 463

Web: SNMPv3 Security Engine ID	Specifies snmpv3 security engine ID.
UCI: monitor.@keepalive[0].snmp_sec_eid	
Opt: snmp sec eid	

Table 127: Information table for SNMP v3 reporting device commands

### 38.2.3 Configuring keepalive heartbeat using command line

Keepalive is configured under the monitor package.

By default, all keepalive instances are named 'keepalive', instances are identified by @keepalive then the keepalive position in the package as a number. For example, for the first keepalive in the package using UCI:

```
monitor.@keepalive[0]=keepalive
monitor.@ keepalive[0].enabled=1
```

Or using package options:

```
config keepalive
option enabled '1'
```

However, to better identify, it is recommended to give the keepalive instance a name. For example, to create a keepalive instance named keepalivev1.

To define a named keepalive instance using UCI, enter:

```
monitor.keepalivev1=keepalive
monitor.keepalivev1.enable=1
```

To define a named keepalive instance using package options, enter:

```
config keepalive 'keepalivev1'

option enabled '1'
```

## 38.2.4 Keepalive using UCI

```
root@VA_router:~# uci show monitor
monitor.keepalivev1=keepalive
monitor.keepalivev1enabled=1
monitor.keepalivev1.interval_min=1
monitor.keepalivev1.dev_reference=router1
monitor.keepalivev1.monitor_ip=10.1.83.36
monitor.keepalivev1.snmp_version=1
monitor.keepalivev2=keepalive
```

```
monitor.keepalivev2.enable=1
monitor.keepalivev2.interval_min=1
monitor.keepalivev2.monitor_ip=172.16.250.100
monitor.keepalivev2.dev_reference=TEST
monitor.keepalivev2.snmp_version=2c
monitor.keepalivev3=keepalive
monitor.keepalivev3.enable=1
monitor.keepalivev3.interval_min=1
monitor.keepalivev3.monitor_ip=172.16.250.101
monitor.keepalivev3.dev_reference=TEST
monitor.keepalivev3.snmp_version=3
monitor.keepalivev3.snmp_uname=TEST
monitor.keepalivev3.snmp_auth_pass=vasecret
monitor.keepalivev3.snmp_auth_proto=MD5
monitor.keepalivev3.snmp_priv_pass=vasecret
monitor.keepalivev3.snmp_priv_proto=DES
```

### 38.2.5 Keepalive using package options

```
option enable '1'

option interval_min '1'

list monitor_ip '172.16.250.101'

option dev_reference 'TEST'

option snmp_version '3'

option snmp_uname 'TEST'

option snmp_auth_pass 'vasecret'

option snmp_auth_proto 'MD5'

option snmp_priv_pass 'vasecret'

option snmp_priv_pass 'vasecret'
```

### 38.2.6 Enabling interface status in keepalive heartbeat via web interface

The keepalive heartbeat can send information on multiple interfaces. To send an interface status to Monitor, select **Network -> Interfaces**, then under the required interface select **Edit**. Under **Advanced Settings** enable the Monitor interface state option.



Figure 183: The interface common configuration page

Web Field/UCI/Package Option	Descripti	Description	
Web: Monitor interface state	Enables in	terface status to be sent in the heartbeat trap to	
UCI: network.@interface[0].monitored	Monitor.		
Opt: monitored	0	Disabled.	
	1 1	Enabled.	

Table 128: Information table for enabling interface status command

### 38.2.7 Enabling interface status using command line

Interface status is configured under the network package.

#### 38.2.7.1 Enable interface status using UCI

```
root@VA_router:~# uci show network
network.@interface[0]=interface
.....
```

0.00

network.@interface[0].monitored=1

#### 38.2.7.2 Enable interface status using package option

```
root@VA_router:~# uci export network

package network

config interface 'WAN'

.....

option monitored '1'

.....
```

# 38.3 Reporting GPS location to Monitor

To allow Monitor to display a router GPS location, you can configure the GPS coordinates to be sent in the heartbeat keepalive from the router.

GPS location is only available in supported hardware models.

Ensure monitor keepalive heartbeat is correctly configured as in section 38.2 above.

### 38.3.1 Configuration package used

Package	Sections
gpsd	gpsd

### 38.3.2 Configuring GPS location via the web interface

Select **Services -> GPS**. The GPS configuration page appears.

The web interface configures a gpsd section named core.

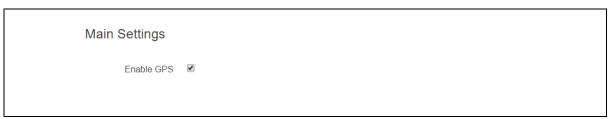


Figure 184: The GPS configuration page

Web Field/UCI/Package Option	Description	
Web: Enable GPS UCI: monitor.core.enabled	Enables GF Monitor.	PS coordinates to be sent in the heartbeat keepalive to
Opt: enabled	0	Disabled.
	1	Enabled.

Table 129: Information table for reporting GPS commands

## 38.3.3 Configuring GPS using command line

GPS location is configured under the gpsd package.

#### 38.3.3.1 GPS using UCI

```
root@VA_router:~# uci show gpsd
gpsd.core=gpsd
gpsd.core.enabled=1
```

### 38.3.3.2 GPS using package options

```
root@VA_router:~# uci export gpsd
package gpsd
config gpsd 'core'
    option enabled '1'
```

## 38.3.4 GPS diagnostics

To view information on GPS coordinates via the web interface, select **Status -> GPS Information**.

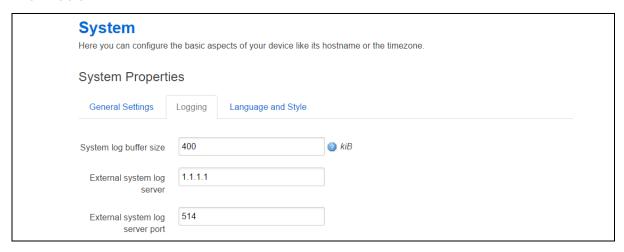


Figure 185: The GPS status page

To view GPS coordinates via command line, enter gpspeek:

```
root@VA_router:~# gpspeek
Fix: 3D,1495467700,53.342529,-
6.241236,27.700000,202.6000000,0.0000000
```

# 38.4 Reporting syslog to Monitor

### 38.4.1 Configuration package used

Package	Sections
system	main

© Virtual Access 2010

## 38.4.2 Configuring syslog to Monitor via the web interface

Monitor can display syslog events sent from the router. To configure the router to send syslog events, select **System -> System -> Logging** and set **External system log server** to the Monitor IP. You can also configure the syslog server port if required.

All syslog events are sent to the syslog server.

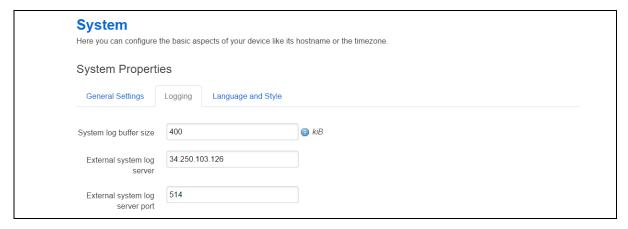


Figure 186: The system properties page

Web Field/UCI/Package Option	Description
Web: External system log server UCI: system.main.log_ip Opt: log_ip	Defines the external syslog server IP address.
Web: External system log server UCI: system.main.log_port Opt: log_port	Defines the external syslog server destination port number for syslog messages.  514  Range

Table 130: Information table for syslog properties commands

### 38.4.3 Configuring syslog events to Monitor using command line

Syslog is configured under the system package.

#### 38.4.3.1 Syslog events to Monitor using UCI

```
root@VA_router:~# uci show system
system.main=system
.....
system.main.log_ip=1.1.1.1
system.main.log_port=514
.....
```

#### 38.4.3.2 Syslog events to Monitor using package options

```
root@VA_router:~# uci export system
package system
```

```
config system 'main'
.....

option log_ip '1.1.1.1'

option log_port '514'
.....
```

# 38.5 Configuring ISAD

ISAD is a system for collecting interface stats to be displayed on Monitor.

The following section explains how to configure interface statistics collection (iSAD). Statistical data is collected in bins with each bin containing interface transmit and receive packets/bytes/errors for a period. Signal strength and also temperature parameters are also stored in the bins. Bins are uploaded to Monitor periodically.

**Note**: ensure monitor keepalive heartbeat and interface status is correctly configured as in section 38.2 above. Interfaces should have option monitored enabled as part of the collection.

ISAD replaces the deprecated SLA feature.

### 38.5.1 Configuration package used

Package	Sections
monitor	interface_stats

### 38.5.2 Configuring ISAD using the web interface

Select **Services -> Monitor**. The Monitor Keepalive & ISAD page appears. ISAD is configured under the **Interface Stats** section.

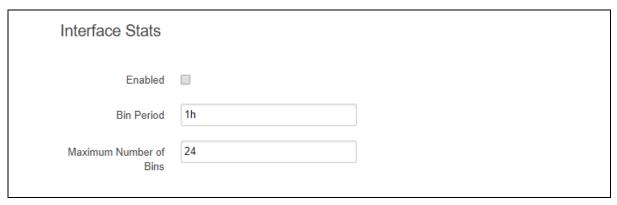


Figure 187: The Monitor Keepalive & ISAD Interface Stats page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables ISAD.		
UCI: monitor.stats.enabled=1	0	Disabled.	
Opt: enabled	1	Enabled.	

Web: Bin Period	Specifies how long to collect data for one bin.	
UCI: monitor.stats.bin_period	Specifies the interval, in minutes, at which traps are sent.	
Opt: time	1h Bin collected for 1 hour	
	Range	
Web: Maximum Number of Bins	Specifies the maximum number of bins to store.	
UCI: monitor.stats.bin_cache_size	Empty 24	
Opt: bin_cache_size	Range	

Table 131: Information table for ISAD Monitor keepalive & ISAD interface stats section

## 38.5.3 Configuring ISAD using the command line

ISAD is configured under the Monitor package.

### 38.5.3.1 ISAD using UCI

```
root@VA_router:~# uci show monitor
monitor.keepalivev1=keepalive
monitor.keepalivevlenabled=1
monitor.keepalivev1.interval_min=1
monitor.keepalivev1.dev_reference=router1
monitor.keepalivev1.monitor_ip=10.1.83.36
monitor.keepalivev1.snmp_version=1
monitor.stats=interface_stats
monitor.stats.enabled=1
monitor.stats.bin_period=1h
monitor.stats.bin_cache_size=24
```

#### 38.5.3.2 ISAD using package options

### 38.5.4 ISAD diagnostics

#### 38.5.4.1 Checking process

To check to see if ISAD is running, enter pgrep -fl isad:

```
root@VA_router:~# pgrep -fl isad
5303 /usr/sbin/isad -b 60 -s 10 -c 200 -u /var/state /var/const_state
```

#### 38.5.4.2 Checking bin statistics

To check if stats are being collected, enter cat /var/state/monitor:

```
root@VA_router:~# cat /var/state/monitor
monitor.bin_0=isad
monitor.bin_0.end_ts=85020
monitor.bin_0.start_ts=84960
monitor.bin_1=isad
monitor.bin_1:end_ts=85080
monitor.bin_1.start_ts=85020
monitor.bin_2=isad
monitor.bin_2=isad
monitor.bin_2.end_ts=85140
monitor.bin_2.start_ts=85080
```

## 38.5.5 ISAD operation

The bin statistics stored on the router must be periodically pushed statistics to Monitor.

This is normally done centrally when statistics are enabled on Monitor. Monitor contacts each router and auto-generates a script that will automatically schedule the upload of the bin statistics.

However, if Monitor cannot access the router WAN IP, you must do this manually on each router using a UDS script. An example is shown below where the bins are uploaded every hour to a Monitor server IP 89.101.154.154 using TFTP.

```
package uds

config script 'isb_upload_scr'
    option enabled '1'
    option exec_type 'periodic'
    option period '1h'
    list text '/usr/sbin/isb_upload.lua 89.101.154.154:69'
```

**39 Configuring SNMP** 

SNMP (Simple Network Management Protocol) is an internet-standard protocol for managing devices on IP networks. SNMP exposes management data in the form of a hierarchy of variables in a MIB (Management Information Base). These variables can be queried individually, or in groups using their OIDs (Object Identifiers) defined in MIBs. In addition, information from the router can be pushed to a network management station in the form of SNMP traps.

# 39.1 Configuration package used

Package	Sections				
snmpd	access	exec	inventory	monitor_load	system
	agent	group	inventory_iftable	monitor_memory	trapreceiver
	com2sec	heartbeat	monitor_disk	monitor_process	usm_user
	constant	informreceiver	monitor_ioerror	pass	view

The SNMP application has several configuration sections:

System and Agent	Configures the SNMP agent.	
Com2Sec	Maps SNMP community names into an arbitrary security name.	
Group	Assigns community names and SNMP protocols to groups.	
View and Access	Creates views and sub views of the whole available SNMP tree and grants specific access to those views on a group by group basis.	
usm_user	Define a user for SNMPv3 USM.	
Trap receiver	Address of a notification receiver that should be sent SNMPv1 TRAPs and SNMPv2c TRAP2s.	
Inform receiver	Address of a notification receiver that should be sent SNMPv2 INFORM notifications respectively.	

# 39.2 Configuring SMNP using the web interface

In the top menu, select **Services -> SNMP**. The SNMP Service page appears.

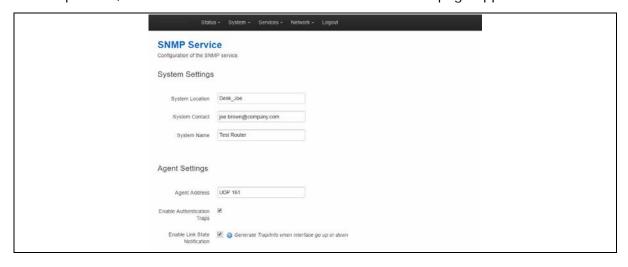


Figure 188: The SNMP service page

## 39.2.1 System and agent settings

Web Field/UCI/Package Option	Description			
System settings				
Web: System Location UCI: snmpd.system[0].sysLocation Opt: sysLocation Web: System Contact UCI: snmpd.system[0].sysContact	Sets the system location, system contact or system name for the agent. This information is reported in the 'system' group in the mibII tree.			
Opt: sysContact				
Web: System Name				
UCI: snmpd.system[0].sysName				
Opt: sysName				
Agent Settings				
Web: Agent Address UCI: snmpd.agent[0].agentaddress	Specifies the address(es) and port(s) on which the agent should listen.  [(udp tcp):]port[@address][,]			
Opt: agentaddress  Web: Enable Authentication Traps				
UCI: snmpd.agent[0].authtrapenabled Opt: authtrapenabled	Enables or disables SNMP authentication trap.  0 Disabled.  1 Enabled.			
opt. damiraponablea	Note: this is the SNMP poll authentication trap to be set when there is a community mismatch.			
Web: Enable Link State Notification UCI: snmpd.agent[0].link_updown_notify	Generates trap/info when interface goes up or down. When enabled, the router sends a trap notification link up or down.			
Opt: link_updown_notify	0	Disabled.		
•	1	Enabled.		

Table 132: Information table for system and agent settings

#### 39.2.2 Com2Sec settings

To access Com2Sec settings, scroll down the SNMP Services page.

Use the COM2Sec section to map SNMP community names into an arbitrary security name. Map community names into security names based on the community name and the source subnet. Use the first source/community combination that matches the incoming packet.

A community string is a password that is applied to a device to restrict both read-only and read-write access to the SNMP data on the device. These community strings should be chosen carefully to ensure they are not trivial. They should also be changed at regular intervals and in accordance with network security policies.

COM2SEC Settings

Security Name
Source
Community

public

ro

localhost

Add

Figure 189: The COM2Sec settings section

Web Field/UCI/Package Option	Description
Web: Security Name	Specifies an arbitrary security name for the user.
UCI: snmpd.com2sec[x].secname	
Opt: secname	
Web: Source	A hostname, localhost or a subnet specified as a.b.c.d/mask or
UCI: snmpd.com2sec[x].source	a.b.c.d/bits or 'default' for no restrictions.
Opt: source	
Web: Community	Specifies the community string being presented in the request.
UCI: snmpd.com2sec[x].community	
Opt: community	

Table 133: Information table for Com2Sec settings

## 39.2.3 Group settings

Group settings assign community names and SNMP protocols to groups.

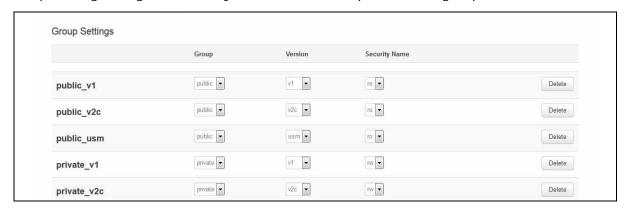


Figure 190: The group settings section

Web Field/UCI/Package Option	Description	n	
Web: Group	Specifies an arbitrary group name.		
UCI: snmpd.group[x].group			
Opt: group			
Web: Version	Specifies the	Specifies the SNMP version number being used in the request:	
UCI: snmpd.group[x].version	v1, v2c and usm (User-based Security Module) are supported.		
Opt: version	v1	SNMP v1	
	v2v	SNMP v2	
	usm	SNMP v3	
	any	Any SNMP version	
Web: Security Name	An already of	defined security name that is being included in this	
UCI: snmpd.group[x].secname	group.		
Opt: secname			

Table 134: Information table for group settings

## 39.2.4 View settings

View settings define a named "view", which is a subset of the overall OID tree. This is most commonly a single subtree, but several view directives can be given with the same view name, to build up a more complex collection of OIDs.



Figure 191: The view settings section

Web Field/UCI/Package Option	Description	
Web: Name	Specifies an arbitrary view name. Typically it describes what the	
UCI: snmpd.view[x].viewname	view shows.	
Opt: viewname		
Web: Type UCI: snmpd.view[x].type Opt: type	or lists oids to b	er the view lists oids that are included in the view e excluded from the view (in which case all other apart from those ones listed).
	included excluded	
Web: OID UCI: snmpd.view[x].oid Opt: oid	OID to be included representation is Example	led in or excluded from the view. Only numerical s supported.
opi. did	1.3.6.1.2.1.2	Everything Interfaces table

Table 135: Information table for view settings

## 39.2.5 Access settings

Access settings map from a group of users/communities, in a specific context and with a particular SNMP version and minimum security level, to one of three views, depending on the request being processed.

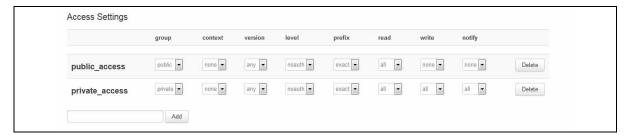


Figure 192: The access settings section

Web Field/UCI/Package Option	Description
Web: Group	Specifies the group to which access is being granted.
UCI: snmpd.access[x].group	
Opt: group	
Web: Context UCI: snmpd.access[x].context Opt: context	SNMPv3 request context is matched against the value according to the prefix below. For SNMP v1 and SNMP v2c, the context must be <b>none</b> .  none all
Web: Version UCI: snmpd.access[x].version	Specifies the SNMP version number being used in the request: any, v1, v2c and usm are supported.  v1 SNMP v1
Opt: version	v2v SNMP v2
	usm SNMP v3
	any Any SNMP version
Web: Level UCI: snmpd.access[x].level Opt: level	Specifies the security level. For SNMP v1 and SNMP v2c level must be noauth.  noauth  auth  priv
Web: Prefix UCI: snmpd.access[x].prefix Opt: prefix	Prefix specifies how context (above) should be matched against the context of the incoming pdu.  exact any
	all
Web: Read UCI: snmpd.access[x].read Opt: read	Specifies the view to be used for read access.
Web: Write UCI: snmpd.access[x].write Opt: write	Specifies the view to be used for write access.
Web: Notify UCI: snmpd.access[x].notify Opt: notify	Specifies the view to be used for notify access.

Table 136: Information table for access settings

## 39.2.6 Trap receiver

Trap receiver settings define a notification receiver that should be sent SNMPv1 TRAPs and SNMPv2c TRAP2.



Figure 193: The trap receiver settings page

Web Field/UCI/Package Option	Description
Web: Host	Host address. Can be either an IP address or an FQDN.
UCI: snmpd.trapreceiver[x].host	
Opt: host	
Web: Port	UDP port to be used for sending traps.
UCI: snmpd.trapreceiver[x].port	Range
Opt: port	162
Web: Version	SNMP version.
UCI: snmpd.trapreceiver[x].version	v1
Opt: version	V2
Web: Community	Community to use in trap messages for this host.
UCI: snmpd.trapreceiver[x].community	
Opt: community	

Table 137: Information table for trap receiver settings

### 39.2.7 Inform receiver

Inform receiver settings define a notification receiver that should be sent SNMPv2c INFORM notifications.



Figure 194: The inform receiver settings page

Web Field/UCI/Package Option	Description
Web: Host	Host address. Can be either an IP address or an FQDN.
UCI: snmpd.informreceiver[x].host	
Opt: host	
Web: Port	UDP port to be used for sending traps.
UCI: snmpd.informreceiver[x].port	Range
Opt: port	162
Web: Community	Community to use in inform messages for this host.
UCI: snmpd.informreceiver[x].community	
Opt: community	

Table 138: Information table for trap receiver settings

### 39.2.8 USM user

Configure a user for SNMPv3 USM (User Based Security Model).



Figure 195: The USM user settings page

Web Field/UCI/Package Option	Description	
Web: Username	Defines a USM username.	
UCI: snmpd.@usm_user[0].name		
Opt: name		
Web: Auth Protocol	Defines the authentication protocol to use.	
UCI: snmpd.@usm_user[0].auth_protocol	Note: if omitted the user will be defined as noauth user.	
Opt: auth_protocol	MD5	
	SHA	
Web: Auth Password	Defines the authentication password.	
UCI:	Note: password must be at least 8 characters long.	
snmpd.@usm_user[0].auth_password		
Opt: auth_password		
Web: Priv Protocol	Defines the privacy protocol to use.	
UCI: snmpd.@usm_user[0].priv_protocol	Note: if omitted the user will be defined as authNoPriv user.	
Opt: priv_protocol	MD5	
	SHA	
Web: Priv Password	Defines the privacy password.	
UCI:	Note: password must be at least 8 characters long.	
snmpd.@usm_user[0].priv_password		
Opt: priv_password		
Web: OID	Defines the OID branch to restrict this user to. Similar to view	
UCI: snmpd.@usm_user[0].oid	restrictions in v1 and v2c	
Opt: oid		

Table 139: Information table for USM user settings

## 39.3 Configuring SNMP using command line

SNMP is configured under the snmpd package. The configuration files are stored on **/etc/config/snmpd**.

## 39.3.1 System settings using UCI

```
root@VA_router:~# uci show snmpd
snmpd.system=system
snmpd.system.sysLocation=Office 123
snmpd.system.sysContact=Mr White
snmpd.system.sysName=Backup Access 4
snmpd.agent=agent
snmpd.agent.agentaddress=UDP:161
snmpd.agent.authtrapenabled=yes
snmpd.agent.link_updown_notify=yes
```

## 39.3.2 System settings using package options

```
root@VA_router:~# uci export snmpd
package snmpd
config 'system'
    option sysLocation 'Office 123'
    option sysContact 'Mr White'
    option sysName 'Backup Access 4'

config 'agent'
    option agentaddress 'UDP:161'
    option authtrapenabled '1'
    option link_updown_notify '1'
```

Another sample agent configuration shown below causes the agent to listen on UDP port 161, TCP port 161 and UDP port 9161 on only the interface associated with the localhost address.

```
config 'agent'
    option agentaddress 'UDP:161,tcp:161,9161@localhost'
```

### 39.3.3 com2sec settings

The following sample specifies that a request from any source using "public" as the community string will be dealt with using the security name "ro". However, any request

\_\_\_\_

from the localhost itself using "private" as the community string will be dealt with using the security name "rw".

**Note**: the security names of "ro" and "rw" here are simply names – the fact of a security name having read only or read-write permissions is handled in the access section and dealt with at a group granularity.

### 39.3.3.1 Com2sec using UCI

```
snmpd.c2s_1=com2sec
snmpd.c2s_1.source=default
snmpd.c2s_1.community=public
snmpd.c2s_1.secname=rw
snmpd.c2s_2=com2sec
snmpd.c2s_2.source=localhost
snmpd.c2s_2.community=private
snmpd.c2s_2.secname=ro
```

## 39.3.3.2 Com2sec using package options

```
config 'com2sec' 'public'

option secname 'ro'

option source 'default'

option community 'public'

config 'com2sec' 'private'

option secname 'rw'

option source 'localhost'

option community 'private'
```

### 39.3.4 Group settings

The following example specifies that a request from the security name "ro" using snmp v1, v2c or USM (User Based Security Model for SNMPv3) are all mapped to the "public" group. Similarly, requests from the security name "rw" in all protocols are mapped to the "private" group.

### 39.3.4.1 Group settings using UCI

```
snmpd.grp_1_v1=group
snmpd.grp_1_v1.version=v1
snmpd.grp_1_v1.group=public
snmpd.grp_1_v1.secname=ro
snmpd.grp_1_v2c=group
snmpd.grp_1_v2c.version=v2c
```

\_\_\_\_

```
snmpd.grp_1_v2c.group=public
snmpd.grp_1_v2c.secname=ro
snmpd.grp_1_usm=group
snmpd.grp_1_usm.version=usm
snmpd.grp_1_usm.group=public
snmpd.grp_1_usm.secname=ro
snmpd.grp_1_access=access
snmpd.grp_1_access.context=none
snmpd.grp_1_access.version=any
snmpd.grp_1_access.level=noauth
snmpd.grp_1_access.prefix=exact
snmpd.grp_1_access.read=all
snmpd.grp_1_access.write=none
snmpd.grp_1_access.notify=none
snmpd.grp_1_access.group=public
snmpd.grp_2_v1=group
snmpd.grp_2_v1.version=v1
snmpd.grp_2_v1.group=public
snmpd.grp_2_v1.secname=ro
snmpd.grp_2_v2c=group
snmpd.grp_2_v2c.version=v2c
snmpd.grp_2_v2c.group=public
snmpd.grp_2_v2c.secname=ro
snmpd.grp_2_usm=group
snmpd.grp_2_usm.version=usm
snmpd.grp_2_usm.group=public
snmpd.grp_2_usm.secname=ro
snmpd.grp_2_access=access
snmpd.grp_2_access.context=none
snmpd.grp_2_access.version=any
snmpd.grp_2_access.level=noauth
snmpd.grp_2_access.prefix=exact
snmpd.grp_2_access.read=all
snmpd.grp_2_access.write=all
snmpd.grp_2_access.notify=all
snmpd.grp_2_access.group=public
```

### 39.3.4.2 Group settings using package options

```
config 'group' 'public_v1'
      option group 'public'
      option version 'v1'
      option secname 'ro'
config 'group' 'public_v2c'
      option group 'public'
      option version 'v2c'
      option secname 'ro'
config 'group' 'public_usm'
      option group 'public'
      option version 'usm'
      option secname 'ro'
config 'group' 'private_v1'
      option group 'private'
      option version 'v1'
      option secname 'rw'
config 'group' 'private_v2c'
      option group 'private'
      option version 'v2c'
      option secname 'rw'
config 'group' 'private_usm'
      option group 'private'
      option version 'usm'
      option secname 'rw'
```

## 39.3.5 View settings

The following example defines two views, one for the entire system and another for only mib2.

### 39.3.5.1 View settings using UCI

```
snmpd.all=view
snmpd.all.viewname=all
snmpd.all.oid=.1
snmpd.mib2=view
snmpd.mib2.viewname=mib2
snmpd.mib2.type=included
snmpd.mib2.oid=.iso.org.dod.Internet.mgmt.mib-2
```

### 39.3.5.2 View settings using package options

```
config 'view' 'all'
    option viewname 'all'
    option type 'included'
    option oid '.1'

config 'view' 'mib2'
    option viewname 'mib2'
    option type 'included'
    option oid '.iso.org.dod.Internet.mgmt.mib-2'
```

### 39.3.6 Access settings

The following example shows the "public" group being granted read access on the "all" view and the "private" group being granted read and write access on the "all" view. Although it is possible to write some settings using SNMP write permission, it is not recommended, as any changes to the configuration made through an snmpset command may conflict with the UCI configuration. In this instance the changes will be overwritten by other processes and will not persist after a reboot.

#### 39.3.6.1 Access using package options

```
config 'access' 'public_access'

option group 'public'

option context 'none'

option version 'any'

option level 'noauth'

option prefix 'exact'

option read 'all'
```

© Virtual Access 2018

option write 'none'

option notify 'none'

config 'access' 'private\_access'

option group 'private'

option context 'none'

option version 'any'

option level 'noauth'

option prefix 'exact'

option read 'all'

## 39.3.7 SNMP traps settings

By default, all SNMP trap instances are named 'trapreceiver, it is identified by @trapreceiver then the trap receiver position in the package as a number. For example, for the first trap receiver in the package using UCI:

```
snmpd.@trapreceiver[0]=trapreceiver
snmpd.@trapreceiver[0].host=1.1.1:161
```

Or using package options:

option write 'all'
option notify 'all'

```
config trapreceiver

option host `1.1.1:161'
```

However, to better identify, it is recommended to give the trap receiver instance a name. For example, to create a trap receiver instance named TrapRecv1.

To define a named trap receiver instance using UCI, enter:

```
snmpd.TrapRecv1=TrapRecv1
snmpd.TrapRecv1.host=1.1.1:161
```

To define a named trap receiver instance using package options, enter:

```
config trapreceiver TrapRecv1

option host '1.1.1:161'
```

### 39.3.7.1 SNMP trap using UCI

```
snmpd.@trapreceiver[0]=trapreceiver
snmpd.@trapreceiver[0].host=1.1.1.1:161
snmpd.@trapreceiver[0].version=v1
snmpd.@trapreceiver[0].community=public
```

### 39.3.7.2 SNMP trap using package options

```
# for SNMPv1 or v2c trap receivers
config trapreceiver
  option host 'IPADDR[:PORT]'
  option version 'v1|v2c'
  option community 'COMMUNITY STRING'
```

## 39.3.8 SNMP inform receiver settings

By default, all SNMP inform receiver instances are named 'informreceiver', it is identified by @informreceiver then the inform receiver position in the package as a number. For example, for the first inform receiver in the package using UCI:

```
snmpd.@informreceiver [0]=informreceiver
snmpd.@informreceiver [0].host=1.1.1.1
```

Or using package options:

```
config informreceiver option host `1.1.1.1'
```

However, to better identify, it is recommended to give the inform receiver instance a name. For example, to create a inform receiver instance named InformRecv1.

To define a named trap receiver instance using UCI, enter:

```
snmpd.InformRecv1=InformRecv1
snmpd.InformRecv1.host=1.1.1.1
```

To define a named trap receiver instance using package options, enter:

```
config informreceiver InformRecv1
option host '1.1.1.1'
```

39.3.8.1 SNMP inform receiver using UCI

```
snmpd.@informreceiver[0]=informreceiver
snmpd.@informreceiver[0].host=1.1.1.1
snmpd.@informreceiver[0].port=67
snmpd.@informreceiver[0].community=private
```

#### 39.3.8.2 SNMP inform receiver using package options

```
config informreceiver

option host '1.1.1.1'

option port '67'

option community 'private'
```

### 39.3.9 SNMP USM user settings

By default, all USM User instances are named 'usm\_user', it is identified by @usm\_user then the USM user position in the package as a number. For example, for the first USM User in the package using UCI:

```
snmpd.@usm_user[0]=usm_user
snmpd.@usm_user[0].name=username
```

Or using package options:

```
config usm_user

option name 'username'
```

However, to better identify, it is recommended to give the usm\_user instance a name. For example, to create a usm\_user instance named User1.

To define a named usm\_user instance using UCI, enter:

```
snmpd.User1=User1
snmpd.User1.name=username
```

To define a named usm\_user instance using package options, enter:

```
config usm_user 'Userl'
option name 'username'
```

#### 39.3.9.1 SNMP USM user using UCI

```
snmpd.@usm_user[0]=usm_user
snmpd.@usm_user[0].name=username
snmpd.@usm_user[0].auth_protocol=SHA
```

snmpd.@usm\_user[0].auth\_password=password
snmpd.@usm\_user[0].priv\_protocol=AES
snmpd.@usm\_user[0].priv\_password=password

## 39.3.9.2 SNMP USM user using package options

snmpd.@usm\_user[0].oid=1.2.3.4

```
config usm_user

option name 'username'

option auth_protocol 'SHA'

option auth_password 'password'

option priv_protocol 'AES'

option priv_password 'aespassword'

option oid '1.2.3.4'
```

## 39.4 Configuring SNMP interface alias with static SNMP index

A Linux interface index changes dynamically. This is not ideal for SNMP managers that require static interface indexes to be defined.

The network package interface section allows defining a static SNMP interface alias index for this interface.

An alias entry is created in the SNMP ifEntry table at index (snmp\_alias\_ifindex + 1000). This entry is a shadow of the real underlying Linux interface corresponding to the UCI definition. You may use any numbering scheme you wish; the alias values do not need to be consecutive.

### 39.4.1 Configuration package used

Package	Sections
network	interface

### 39.4.2 Configuring SNMP interface alias

To enter and SNMP alias for an interface, select **Network->Interfaces->Edit->Common Configuration->Advanced Settings**.

Enter a small index value for **SNMP Alias ifindex** that is unique to this interface. To retrieve SNMP statistics for this interface, the SNMP manager should be configured to poll (**snmp\_alias\_ifindex + 1000**). For example, if an interface is configured with an **snmp\_alias\_ifindex** of 11, then the SNMP manager should poll **ifIndex=1011**. The ifIndex will remain fixed regardless of how many times the underlying interface is added or removed.

If the Linux interface associated with the UCI entry is active when the alias index is polled, the normal ifEntry information for that interface is reported. Otherwise, a dummy entry is created with the same ifDescr, and its ifOper field set to **DOWN**.

\_\_\_\_

ů ů

**Note**: if you are using SIM roaming, where mobile interfaces are created dynamically, you need to specify a fixed **snmp\_alias\_ifindex** value and a fixed **ifName** value in the roaming template. All roaming entries will then map to the same Linux interface name and underlying device.

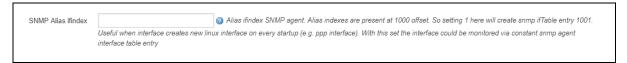


Figure 196: The interface SNMP Alias ifindex field advanced settings page

UCI/Package Option	Description	
Web: SNMP Alias ifindex UCI: network.@interface[X].snmp_alias_ifindex		NMP interface alias index for this interface, that g via the SNMP interface index ndex+1000)
Opt: snmp_alias_ifindex	Blank	No SNMP interface alias index
	Range	0 - 4294966295
Web: n/a UCI: network.@interface[X].snmp_alias_ifdescr Opt: snmp_alias_ifdescr	Defines an alias name to be reported for the UCI name in the enterprise MIB for UCI interfaces, and in alias entries in the ifIndex table. If present, this option supercedes the default ifDescr value (usually the UCI interface name, or configured ifName)	
	Blank	No SNMP interface alias name
	Range	

Table 140: Information table for static SNMP alias interface

## 39.4.3 Configuring SNMP interface alias using the command line

SNMP interface alias is configured under the network package **/etc/config/network**The following examples use an interface section named MOBILE.

### 39.4.3.1 SNMP interface alias using UCI

```
root@VA_router:~# uci show network
network.MOBILE=interface
.....
network.MOBILE.snmp_alias_ifindex=11
network.MOBILE.snmp_alias_ifdescr=primary_mobile
.....
```

#### 39.4.3.2 SNMP interface alias using package options

```
root@VA_router:~# uci show network
config interface 'MOBILE'
.....
    option snmp_alias_ifindex '11'
    option snmp_alias_ifdescr 'primary_mobile'
.....
```

#### 39.4.4 SNMP interface alias MIBS

OID Name	OID
interface alias table	.1.3.6.1.2.1.2.2.1.1.
snmp_alias_ifindex	.1.3.6.1.2.1.2.2.1.1. <snmp_alias_ifindex+1000></snmp_alias_ifindex+1000>
snmp_alias_ifdescr	1.3.6.1.4.1.2078.3.2.66.1.1. <index>.{5,6}</index>

## 39.5 SNMP diagnostics

### 39.5.1 SNMP process

To check the SNMP process is running correctly, enter pgrep -fl snmpd.

```
root@VA_router:~# pgrep -fl snmpd
6970 /usr/sbin/snmpd -Lsd0-6 -p /var/run/snmpd.pid -m -c
/var/conf/snmpd.conf
```

## **39.5.2 SNMP port**

To check that SNMP service is listening on the configured port, enter netstat -pantu | grep snmp

```
root@VA_router:~# netstat -pantu | grep snmp
udp 0 0 0.0.0:161 0.0.0.0:* 6970/snmpd
```

### 39.5.3 Retrieving SNMP values

SNMP values can be queried by an snmpwalk or snmpget either locally or remotely.

#### 39.5.3.1 snmpwalk

To do an snmpwalk locally, enter snmpwalk. An example snmpwalk is shown below:

```
root@VA_router:~# snmpwalk -c public -v 1 localhost .1.3.6.1.2.1.1
iso.3.6.1.2.1.1.1.0 = STRING: "Virtual Access GWXXXX, SN# 00E0C812D1A0,
EDG-21.00.07.008"
iso.3.6.1.2.1.1.2.0 = OID: iso.3.6.1.4.1.2078
iso.3.6.1.2.1.1.3.0 = Timeticks: (71816) 0:11:58.16
iso.3.6.1.2.1.1.4.0 = STRING: "info@virtualaccess.com"
iso.3.6.1.2.1.1.5.0 = STRING: "GWXXXX"
iso.3.6.1.2.1.1.6.0 = STRING: "UK"
iso.3.6.1.2.1.1.7.0 = INTEGER: 79
iso.3.6.1.2.1.1.8.0 = Timeticks: (60) 0:00:00.60
iso.3.6.1.2.1.1.9.1.2.1 = OID: iso.3.6.1.2.1.4
iso.3.6.1.2.1.1.9.1.2.2 = OID: iso.3.6.1.6.3.1
```

© Virtual Access 2018 GW1000 Series User Manual

```
iso.3.6.1.2.1.1.9.1.2.3 = OID: iso.3.6.1.2.1.49
iso.3.6.1.2.1.1.9.1.2.4 = OID: iso.3.6.1.2.1.50
iso.3.6.1.2.1.1.9.1.2.5 = OID: iso.3.6.1.6.3.16.2.2.1
iso.3.6.1.2.1.1.9.1.2.6 = OID: iso.3.6.1.6.3.10.3.1.1
iso.3.6.1.2.1.1.9.1.2.7 = OID: iso.3.6.1.6.3.11.3.1.1
iso.3.6.1.2.1.1.9.1.2.8 = OID: iso.3.6.1.6.3.15.2.1.1
iso.3.6.1.2.1.1.9.1.2.9 = OID: iso.3.6.1.2.1.10.131
iso.3.6.1.2.1.1.9.1.4.4 = Timeticks: (35) 0:00:00.35
iso.3.6.1.2.1.1.9.1.4.5 = Timeticks: (38) 0:00:00.38
iso.3.6.1.2.1.1.9.1.4.6 = Timeticks: (38) 0:00:00.38
iso.3.6.1.2.1.1.9.1.4.7 = Timeticks: (38) 0:00:00.38
iso.3.6.1.2.1.1.9.1.4.8 = Timeticks: (38) 0:00:00.38
iso.3.6.1.2.1.1.9.1.4.9 = Timeticks: (38) 0:00:00.38
```

#### 39.5.3.2 snmpget

To do an snmpget locally, use snmpget. An example snmpget is shown below.

```
root@VA_router:~# snmpget -c public -v 1 localhost .1.3.6.1.4.1.2078.3.14.2 iso.3.6.1.4.1.2078.3.14.2 = STRING: "EDG-21.00.07.008"
```

#### 39.5.4 SNMP status

To view an overview including tx/rx packets and uptime of the SNMP process, enter snmpstatus.

```
root@VA_router:~# snmpstatus -c public -v 2c localhost

[UDP: [0.0.0.0]->[127.0.0.1]:161]=>[Virtual Access GWXXXX, SN#

00E0C812D1A0, EDG-21.00.07.008] Up: 0:17:05.87

Interfaces: 21, Recv/Trans packets: 47632/9130 | IP: 15045/8256

15 interfaces are down!
```

# 40 Event system

Virtual Access routers feature an event system. It allows you to forward Virtual Access specific router events to predefined targets for efficient control and management of devices.

This chapter explains how the event system works and how to configure it using UCI commands.

## 40.1 Configuration package used

Package	Section
va_eventd	main
	forwarding
	target
	conn tester

## 40.2 Event system overview

## 40.2.1 Implementation of the event system

The event system is implemented by the **va\_eventd** application.

The va\_eventd application defines three types of object:

Forwardings	Rules that define what kind of events should be generated. For example, you might want an event to be created when an IPSec tunnel comes up or down.
Targets	Define the targets to send the event to. The event may be sent to a target via a syslog message, a snmp trap or email.
Connection testers	Define methods to test the target is reachable. IP connectivity to a server and link state may be checked prior to sending events.

For example, if you want to configure an SNMP trap to be sent when an IPSec tunnel comes up, you will need to:

- Define a forwarding rule for IPSec tunnel up events.
- Set an SNMP manager as the target.
- Optionally use a connection tester to ensure the SNMP manager is reachable.

### 40.2.2 Supported events

Events have a class, ID, name and a severity. These properties are used to fine tune which events to report.

**Note**: only VA events can be forwarded using the event system. A comprehensive table of events is available from the CLI by entering 'vae\_cli -d'.

•

## 40.2.3 Supported targets

The table below describes the targets currently supported.

Target	Description
Syslog	Event sent to syslog server.
Email	Event sent via email.
SNMP	Event sent via SNMP trap.
Exec	Command executed when event occurs.
SMS	Event sent via SMS.
File	Events written to a file

Table 141: Targets currently supported

The attributes of a target vary significantly depending on its type.

## 40.2.4 Supported connection testers

The table below describes the methods to test a connection that are currently supported.

Туре	Description
link	Checks if the interface used to reach the target is up.
ping	Pings the target. And then assumes there is connectivity during a configurable amount of time.

Table 142: Event system - supported connection tester methods

## 40.3 Configuring the event system using the web interface

To configure the event system, select **Services->VA Event System**. The VA Event System page appears.

There are four sections in the VA Event System page.

Section	Description
Basic Settings	Configures basic global event system parameters.
Connection Tester	Configures the connection testers.
Events Destination	Configures the event targets.
Event Filters	Configures the forwarding rules.

## 40.3.1 Basic settings

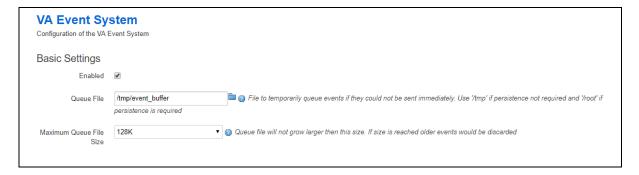


Figure 197: The VA event system basic settings configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables VA Event System.		
UCI: va_eventd.main.enabled	0	Disabled.	
Opt: enabled	1	Enabled.	
Web: Enabled UCI: va eventd.main.event queue file	Defines the file to temporarily queue events when they cannot be sent immediately.		
Opt: event_queue_file	<b>Note</b> : Use /tmp path if persistence is not required and /root if persistence is required.		
	/tmp/event_buffer	Disabled.	
	1	Enabled.	
Web: Enabled UCI: va eventd.main.event queue size	Defines the file size for discarded once file size	or the temporary queue. Older events are ze is reached.	
Opt: event_queue_size	128K	128 Kilobytes.	
	Range		

Table 143: Information table for event system basic settings

#### 40.3.2 Connection tester

A connection tester is used to verify the event destination before forwarding the event. Connection testers configure the uci conn\_tester section rules. Multiple connection testers can be configured. There are two types of connection tester:

Туре	Description
link	Checks if the interface used to reach the target is up.
ping	Pings the target. And then assumes there is connectivity during a configurable amount of time.

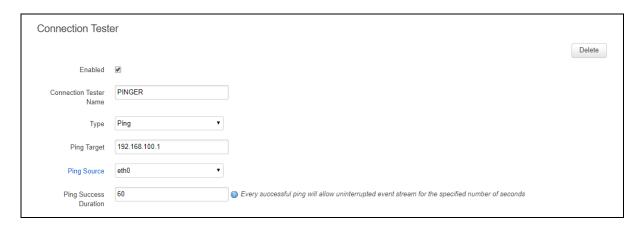


Figure 198: The VA event system connection tester configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables a cor	nnection tester.	
UCI: va_eventd.@conn_tester[0].enabled	0 Disabled.		
Opt: enabled	1 Enabled.		
Web: Connection Tester Name	Defines the connection tester name.		
UCI: va_eventd.@conn_tester[0].name	This is used when configuring a connection tester for an event		
Opt: name	destination.		
Web: Type	Defines the connection tester type.		
UCI: va_eventd.@conn_tester[0].type	Web Value	Description	UCI
Opt: type	Ping Verifies target by ping. ping		
	Link	Verifies target by checking routed interface is up.	link

Issue: 2.3 Page 415 of 463

Web: Ping Target Defines the IP address for the target ping. Note: only displayed if connection tester type is set to 'Ping'. va\_eventd.@conn\_tester[0].ping\_dest\_ad Range Opt: ping\_dest\_addr Web: Ping Source Defines an interface or IP address to source the pings from. Note: only displayed if connection tester type is set to 'Ping'. va\_eventd.@conn\_tester[0].ping\_source eth0 Use etho IP for ping source. Opt: ping\_source Range Web: Ping Success Duration Defines the duration, in seconds, for which a successful ping defines a connection tester as up. UCI: va\_eventd.@conn\_tester[0].ping\_success Note: only displayed if connection tester type is set to 'Ping'. \_duration\_sec 60 Opt: ping\_success\_duration\_sec Range Web: Link Interface Defines the interface to monitor when the connection tester type is set to 'link'. Configured interfaces are listed.  $va\_eventd.@conn\_tester[0].link\_iface$ Note: only displayed if connection tester type is set to 'Link'. Opt: link\_iface

Table 144: Information table for event system connection tester settings

Range

#### 40.3.3 Event destination

An event destination is the target for the event. Event destinations configure the uci target section rules. Multiple event destinations can be configured. There are currently six configurable event destinations.

Target Type	Description
Syslog	Event sent to syslog server.
Email	Event sent via email.
SNMP	Event sent via SNMP trap.
Execute	Command executed when event occurs.
SMS	Event sent via SMS.
File	Event written to a file

The available configuration options differ depending on the event destination type.

### 40.3.3.1 Syslog target

When a syslog target receives an event, it sends it to the configured syslog server.



Figure 199: The VA event system syslog event destination configuration page

Web Field/UCI/Package Option	Description			
Web: Enabled UCI: va_eventd.@target[0].enabled	Enables an event destination. This is used in the event filters section.			
Opt: enabled	0	0 Disabled.		
•	1	Enabled.		
Web: Destination name UCI: va_eventd.@target[0].name		me for the event desti	nation.	
Opt: name  Web: Type  UCI: va_eventd.@target[0].type	Defines the e	event destination type.	For syslog server choose	
Opt: type	Web Value	Description	UCI	
	Syslog		syslog	
	SNMP Trap		snmptrap	
	Email		email	
	Execute		exec	
	SMS		sms	
	File	File target	file	
Web: Connection Tester Name UCI: va_eventd.@target[0]. conn_tester	Defines the o	connection tester (if ar	ny) to use to verify the syslog	
Opt: conn_tester	None	No connection tester. UCI option not present.		
· –	Range			
Web: Destination Address	Defines the s	yslog target IP/FQDN	and port.	
UCI: va_eventd.@target[0]. target_addr				
Opt: target_addr	Range a.b.c.d:port or fqdn:port		port	
Web: Syslog Over TCP	Defines whether to use TCP for delivery of the syslog event.			
UCI: va_eventd.@target[0].tcp_syslog	0 Use UDP			
Opt: tcp_syslog	1	Use TCP		
Web: Message Template UCI: va_eventd.@target[0].template	Defines the message template to use for the event. In general, this should be left empty.			
Opt: template	See the secti	on on message templa	ates below.	
	Range			

Table 145: Information table for event system syslog event destination settings

.or \_cont of other

## 40.3.3.2 Email target

When an email target receives an event, it sends it to the configured email address.

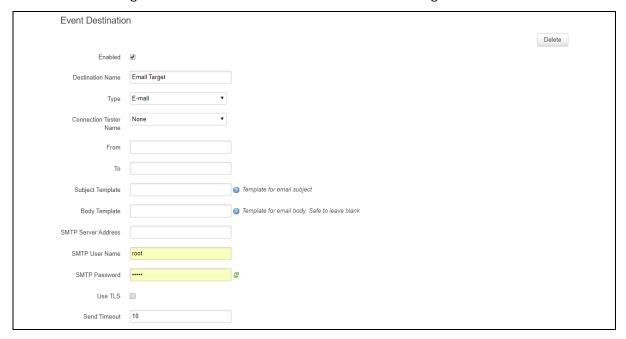


Figure 200: The VA event system email event destination configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables an event destination.		
UCI: va_eventd.@target[0].enabled	0 [	Disabled.	
Opt: enabled	1 E	nabled.	
Web: Destination name	Defines a name	e for the event destination	n.
UCI: va_eventd.@target[0].name			
Opt: name	Range		
Web: Type UCI: va_eventd.@target[0].type	Defines the event destination type. For an email server choose <b>Email</b> .		
Opt: type	Web Value	Description	UCI
	Syslog	Syslog target	syslog
	SNMP Trap	SNMP target	snmptrap
	Email	Email target	email
	Execute	Execure target	exec
	SMS	SMS target	sms
	File	File target	file
Web: Connection Tester Name	Defines the cortarget.	nnection tester (if any) to	use to verify the email
UCI: va_eventd.@target[0]. conn_tester Opt: conn_tester		lo connection tester. UCI	option not present.
Opt. com_tester	Range		
Web: From	Defines the from address for the email.		
UCI: va_eventd.@target[0].from			
Opt: from	Range		
Web: To	Defines to add	ess for the email.	
UCI: va_eventd.@target[0].to			
Opt: to	Range		

Web: Subject Template UCI:	Defines subject template for the email. In general, this should be left empty. Example:		
va_eventd.@target[0].subject_template  Opt: subject_template	<pre>va_eventd.@target[0].subject_template="%{severityName} %{eventName}!!!"</pre>		
opt. subject_template	See the section on message templates below.		
W. D. J. T. J.	Range		
Web: Body Template UCI:	Defines the email body template. In general, this should be left blank. Example:		
va_eventd.@target[0].body_template Opt: body_template	<pre>va_eventd.@target[0].body_template="%{eventName} (%{class}.%{subclass}) happened!"</pre>		
	See the section on message templates below.		
	Range		
Web: SMTP Server Address	Defines the email server address and port.		
UCI: va_eventd.@target[0].smtp_addr Opt: smtp.addr	Range a.b.c.d:port or fqdn:port		
Web: SMTP User Name	Defines user name for SMTP authentication.		
UCI: va_eventd.@target[0].smtp_user	Serines assi name to simil additionalisation.		
Opt: smtp_user	Range name@site.com		
Web: SMTP Password	Defines the password for SMTP authentication.		
UCI:			
va_eventd.@target[0].smtp_password  Opt: smtp_password	Range		
Web: Use TLS	Enables TLS (Transport Layer Security) support.		
UCI: va_eventd.@target[0].use_tls	0		
Opt: use_tls	1		
Web: Send Timeout	Defines the email send timeout in seconds.		
UCI: va_eventd.@target[0].timeout_sec	10		
Opt: timeout_sec	Range		
Web: Use StartTLS	Enables StartTLS support for TLS.		
UCI: va_eventd.@target[0]. tls_starttls	(Only displayed when TLS is enabled)		
Opt: tls_starttls	0		
Web: Force SSLv3	Enables force SSLv3 for TLS.		
UCI: va_eventd.@target[0].tls_forcessl3	(Only displayed when TLS is enabled)		
Opt: tls_forcessl3	0		
	1		

Table 146: Information table for event system email event destination settings

## 40.3.3.3 SNMP target

When a SNMP target receives an event, it sends it in a trap to the configured SNMP manager.

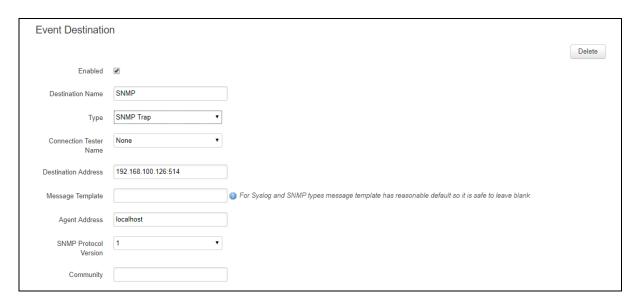


Figure 201: The VA event system SNMP event destination configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables an event destination.		
UCI: va_eventd.@target[0].enabled	0 Disabled.		
Opt: enabled	1 E	nabled.	
Web: Destination name	Defines a name for the event destination.		
UCI: va_eventd.@target[0].name			
Opt: name	Range		
Web: Type UCI: va_eventd.@target[0].type	Defines the event destination type. For SNMP server choose SNMP Trap.		
Opt: type	Web Value	Description	UCI
Spr. Spr.	Syslog	Syslog target	syslog
	SNMP Trap	SNMP target	snmptrap
	Email	Email target	email
	Execute	Execure target	exec
	SMS	SMS target	sms
	File	File target	file
Web: Connection Tester Name UCI: va_eventd.@target[0]. conn_tester Opt: conn_tester	target.	lo connection tester. UCI of	
Web: Destination Address		MP target IP/FQDN and po	rt.
UCI: va_eventd.@target[0]. target_addr		g p	
Opt: target_addr	Range a	.b.c.d:port or fqdn:port	
Web: Message Template UCI: va_eventd.@target[0].template Opt: template	this should be	ssage template to use for eft empty. Example: .rget[0].template="%{ev icTemplate}"	· ·
	, –	on message templates be	elow.
	Range		
Web: Agent Address	Defines the IP	address to source the SNM	IP trap. (optional)
UCI: va_eventd.@target[0]. agent_addr	localhost		
Opt: agent_addr	Range		

UCI: va_eventd.@target[0].snmp_version Opt: snmp_version  Meb: Community UCI: va_eventd.@target[0].community Opt: community Web: Username UCI: va_eventd.@target[0].snmp_uname Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Opt: snmp_auth_pass  Opt: snmp_auth_pass
Web: Community UCI: va_eventd.@target[0].community Opt: community Web: Username UCI: va_eventd.@target[0].snmp_uname Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass  Opt: snmp_auth_pass  MD5  MD5  MD5  MD5  MD5  MD5
Web: Community UCI: va_eventd.@target[0].community Opt: community Web: Username UCI: va_eventd.@target[0].snmp_uname Opt: snmp_uname Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Opt: snmp_auth_pass  Opt: snmp_auth_pass
UCI: va_eventd.@target[0].community  Web: Username UCI: va_eventd.@target[0].snmp_uname Opt: snmp_uname Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Op
Opt: community       Range         Web: Username       Defines the username for SNMPv3.         UCI: va_eventd.@target[0].snmp_uname       (Only displayed when SNMP protocol version is SNMPv3)         Opt: snmp_uname       Range         Web: Authentication Protocol       Defines the SNMPv3 authentication protocol         UCI: va_eventd.@target[0].snmp_auth_proto       (Only displayed when SNMP protocol version is SNMPv3.)         Opt: snmp_auth_proto       MD5         SHA       Defines the SNMPv3 authentication password         (Only displayed when SNMPv3 authentication protocol is configured.)         MD5       MD5         MD5       MD5
Web: Username UCI: va_eventd.@target[0].snmp_uname Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Defines the username for SNMPv3.  (Only displayed when SNMP protocol version is SNMPv3)  Defines the SNMPv3 authentication protocol version is SNMPv3.)  Opt: snmp_auth_pass  MD5  MD5  MD5  MD5
UCI: va_eventd.@target[0].snmp_uname Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass
Opt: snmp_uname  Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass  Opt: snmp_auth_pass
Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Opt: snmp_auth_pass  MD5  MD5  MD5  MD5  MD5  MD5  MD5
Web: Authentication Protocol UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_proto  MD5 SHA  Defines the SNMPv3 authentication protocol version is SNMPv3.)  MD5 SHA  Defines the SNMPv3 authentication protocol version is SNMPv3.)  MD5 SHA  UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Opt: snmp_auth_pass
UCI: va_eventd.@target[0].snmp_auth_proto Opt: snmp_auth_proto  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass
va_eventd.@target[0].snmp_auth_proto       MD5         SHA       SHA         Web: Authentication Password       Defines the SNMPv3 authentication password         UCI:       (Only displayed when SNMPv3 authentication protocol is configured.)         Opt: snmp_auth_pass       MD5         MD5       MD5
Opt: snmp_auth_proto  MD5 SHA  Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass Opt: snmp_auth_pass
Web: Authentication Password UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass  MD5  SHA  Defines the SNMPv3 authentication password (Only displayed when SNMPv3 authentication protocol is configured.)  MD5  MD5
Web: Authentication Password  UCI: va_eventd.@target[0].snmp_auth_pass  Opt: snmp_auth_pass  MD5  Defines the SNMPv3 authentication password  (Only displayed when SNMPv3 authentication protocol is configured.)
UCI: va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass  MD5  (Only displayed when SNMPv3 authentication protocol is configured.)
va_eventd.@target[0].snmp_auth_pass Opt: snmp_auth_pass  MD5
Opt: snmp_auth_pass MD5
MD5
Web: Privacy Protocol Defines the SNMPv3 privacy protocol.
UCI: (Only displayed when SNMP authentication protocol is
va_eventd.@target[0].snmp_priv_proto configured.)
Opt: snmp_priv_proto
DES
AES
Web: Privacy Password Defines SNMPv3 privacy password.
UCI: (Only displayed when SNMP privacy protocol is configured.)
va_eventd.@target[0].snmp_priv_pass
Opt: snmp_priv_pass Range
Web: SNMPv3 Context Defines the SNMPv3 context.
UCI: va_eventd.@target[0].snmp_context (Only displayed when SNMP authentication protocol is
Opt: snmp_context configured.)
Range
Web: SNMPv3 Context Engine ID  Defines the SNMPv3 context engine ID.
UCI: (Only displayed when SNMP authentication protocol is
va_eventd.@target[0].snmp_context_eid
Opt: snmp_context_eid
Opt: snmp_context_eid
Opt: snmp_context_eid  Range  Web: SNMPv3 Security Engine ID  UCI: va_eventd.@target[0].snmp_sec_eid  Conly displayed when SNMP authentication protocol is
Opt: snmp_context_eid  Range  Web: SNMPv3 Security Engine ID  Defines the SNMPv3 security engine ID.

Table 147: Information table for event system SNMP event destination settings

.or \_cont of other

## 40.3.3.4 Exec target

When an Execute target receives an event, it executes a shell command.



Figure 202: The VA event system exec event destination configuration page

Web Field/UCI/Package Option	Description			
Web: Enabled	Enables an event destination.			
UCI: va_eventd.@target[0].enabled	0	Disabled.		
Opt: enabled	1	Enabled.		
Web: Destination name	Defines a nar	ne for the event destination	on.	
UCI: va_eventd.@target[0].name				
Opt: name	Range			
Web: Type	Defines the event destination type. For shell command execution, choose <b>Execute</b> .		shell command	
UCI: va_eventd.@target[0].type	Web Value		UCI	
Opt: type				
	Syslog  SNIMD Trans	Syslog target	syslog	
	SNMP Trap	SNMP target	snmptrap	
	Email	Email target	email	
	Execute	Execure target	exec	
	SMS	SMS target	sms	
	File	File target	file	
Web: Connection Tester Name	Defines the connection tester (if any) to use to verify the execute			
UCI: va_eventd.@target[0]. conn_tester	target.	No composition tooton IIC	Lanting and apparent	
Opt: conn_tester			ster. UCI option not present.	
	Range		<u> </u>	
Web: Command Template	Defines the command template to use for the event.			
UCI: va_eventd.@target[0].cmd_template	Example to log a syslog message: va_eventd.@target[0].cmd_template="logger -t eventer			
Opt: cmd_template	%{eventName		e="logger -t eventer	
	See the section	on on message templates	below.	
	Range			

Table 148: Information table for event system execute event destination settings

40. Evolt system

## 40.3.3.5 SMS target

When an SMS target receives an event, it sends an SMS message.



Figure 203: The VA event system SMS event destination configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables an event destination.		
UCI: va_eventd.@target[0].enabled	0 Disabled.		
Opt: enabled	1 Enabled.		
Web: Destination name	Defines a name for the event destination.		
UCI: va_eventd.@target[0].name			
Opt: name	Range		
Web: Type UCI: va_eventd.@target[0].type Opt: type	Defines the event destination type. For SMS destination choose <b>SMS</b> .		
	Web Value	Description	UCI
	Syslog		syslog
	SNMP Trap		snmptrap
	Email		email
	Execute		exec
	SMS		sms
	File		file
Web: Connection Tester Name UCI: va_eventd.@target[0]. conn_tester	Defines the connection tester (if any) to use to verify the SMS target.		
Opt: conn_tester	None No connection tester. UCI option not present.		
opt. doi:in_tostor	Range		
Web: Message Template UCI: va_eventd.@target[0].template Opt: template	Defines the message template to use for the event. In general, this should be left empty. Example: va_eventd.@target[0].template="%{eventName}"		
	See the section on message templates below.		
		<u> </u>	
	Range		
Web: Phone Number	Defines the phone number for sending SMS to.		
UCI: va_eventd.@target[0].callee			
Opt: callee	Range		

Table 149: Information table for event system SMS event destination settings

40. Event System

## 40.3.3.6 File target

When file target receives an event, it logs to a file.

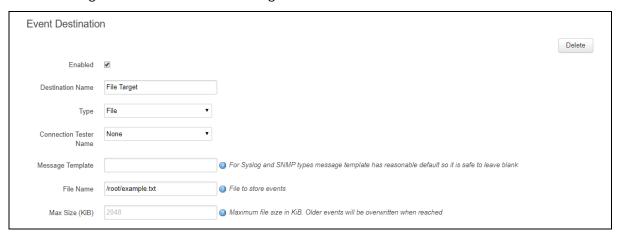


Figure 204: The VA event system file event destination configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled	Enables an event destination.		
UCI: va_eventd.@target[0].enabled	0 Disabled.		
Opt: enabled	1	Enabled.	
Web: Destination Name	Defines a name for the event destination.		
UCI: va_eventd.@target[0].name			
Opt: name	Range		
Web: Type	Defines the event destination type. For file choose <b>File</b> .		
UCI: va_eventd.@target[0].type	Web Value	Description	UCI
Opt: type	Syslog		syslog
	SNMP Trap		snmptrap
	Email		email
	Execute		exec
	SMS		sms
	File		file
Web: Connection Tester Name UCI: va_eventd.@target[0]. conn_tester Opt: conn_tester	Defines the connection tester (if any) to use to verify the File target.  None No connection tester. UCI option not present.  Range		
Web: Message Template UCI: va_eventd.@target[0].template Opt: template	Defines the message template to use for the event. In general, this should be left empty.  See the section on message templates below.  Range		
Web: File Name UCI: va_eventd.@target[0].file_name Opt: file_name	Defines a file name for the event destination. (full path)  Range		
Web: Max Size (KiB)	Defines a file size in kilobits.		
UCI: va_eventd.@target[0].max_size_kb	2048		
Opt: file_name	Range		

Table 150: Information table for event system file event destination settings

### 40.3.4 Event filters

Event filters are use to classify the events to be sent to the event destination. Multiple event filters can be defined. Event filters configure the uci forwarding section rules.

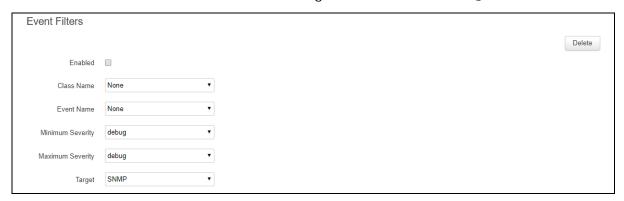


Figure 205: The VA event system event filters configuration page

Web Field/UCI/Package Option	Description		
Web: Enabled UCI: va_eventd.@forwarding[0].enabled Opt: enabled		ent filter. Disabled. Enabled.	
Web: Class Name UCI: va_eventd.@forwarding[0].className Opt: className	Only match events with the given class name. Available class names are listed or can be viewed using the command vae_cli -d		
Web: Event Name UCI: va_eventd.@forwarding[0].eventName Opt: eventName	Only match events with the given event name. Available event names are listed. The event name is optional and can be omitted.		
Web: Minimum Severity UCI: va_eventd.@forwarding[0].severity Opt: severity	Defines the minimum event severity. The minimum severity event is DEBUG. Events generated within the minimum and maximum event severity will be matched.  Minimum and maximum severity are specified in the one UCI option and entered using a dash (-) separator in the form minimum-maximum. Example:  va_eventd.@forwarding[0].severity=debug-error		
	debug info notice warning error critical alert emergency	minimum severity  maximum severity	

0.00

Web: Maximum Severity Defines the maximum event severity. The maximum event severity is EMERGENCY. Events generated within the minimum UCI: va\_eventd.@forwarding[0].severity and maximum event severity will be matched. Opt: severity The UCI command for specifying minimum and maximum severity is the same and is entered with two parameters using a dash (-) separator minimum-maximum. Example: va\_eventd.@forwarding[0].severity=debug-error debug minimum severity info notice warning error critical alert emergency maximum severity Defines the event destination to forward the event to. All Web: Target configured event destinations will be displayed. UCI: va\_eventd.@forwarding[0].target

Table 151: Information table for event system event filters settings

## 40.4 Configuring the event system using command line

The event system configuration files are stored at /etc/config/va\_eventd

There are four config sections main, conn\_tester, target and forwarding.

You can configure multiple conn\_tester, target and forwarding sections.

By default, all conn\_tester instances are named conn\_tester, it is identified by @conn\_tester then the conn\_tester position in the package as a number. For example, for the first conn\_tester in the package using UCI:

```
va_eventd.@conn_tester[0]=conn_tester
va_eventd.@conn_tester[0].enabled=1
```

Or using package options:

Opt: target

```
config conn_tester
option enabled '1'
```

By default, all target instances are named target. The target instance is identified by <code>@target</code> then the target position in the package as a number. For example, for the first target in the package using UCI:

```
va_eventd.@target[0]=target
va_eventd.@target[0].enabled=1
```

Or using package options:

```
config target
option enabled '1'
```

By default, all forwarding instances are named forwarding. The forwarding instance is identified by @forwarding then the forwarding position in the package as a number. For example, for the first forwarding rule in the package using UCI:

```
va_eventd.@lforwarding[0]=forwarding
va_eventd.@forwarding[0].enabled=1
```

Or using package options:

```
config forwarding
option enabled '1'
```

## 40.4.1 Event system using UCI

```
root@VA_router:~# uci show va_eventd
#Sample basic settings
va_eventd.main=va_eventd
va_eventd.main.event_queue_file=/tmp/event_buffer
va_eventd.main.event_queue_size=128K
#Sample SNMP
va_eventd.@conn_tester[0]=conn_tester
va_eventd.@conn_tester[0].type=ping
va_eventd.@conn_tester[0].ping_dest_addr=192.168.100.1
va_eventd.@conn_tester[0].ping_success_duration_sec=60
va_eventd.@conn_tester[0].name=SNMPTest
va_eventd.@conn_tester[0].ping_source=LAN1
va_eventd.@target[0]=target
va_eventd.@target[0].suppress_duplicate_forwardings=no
va_eventd.@target[0].type=snmp
va_eventd.@target[0].agent_addr=localhost
va_eventd.@target[0].name=SNMPTarget
va_eventd.@target[0].conn_tester=SNMPTest
va_eventd.@target[0].target_addr=192.168.100.126:68
va_eventd.@target[0].snmp_version=3
va_eventd.@target[0].snmp_uname=v3username
va_eventd.@target[0].snmp_auth_proto=MD5
va_eventd.@target[0].snmp_auth_pass=md5password
va_eventd.@target[0].snmp_priv_proto=AES
va_eventd.@target[0].snmp_priv_pass=aespassword
va_eventd.@target[0].snmp_context=v3context
```

© Virtual Access 2018

va\_eventd.@target[0].snmp\_context\_eid=v3contextID va\_eventd.@target[0].snmp\_sec\_eid=v3SecurityID va\_eventd.@forwarding[0]=forwarding va\_eventd.@forwarding[0].enabled=yes va\_eventd.@forwarding[0].className=mobile va\_eventd.@forwarding[0].target=SNMPTarget va\_eventd.@forwarding[0].eventName=LinkUp va\_eventd.@forwarding[0].severity=notice-notice #Sample Syslog va\_eventd.@conn\_tester[1]=conn\_tester va\_eventd.@conn\_tester[1].name=SyslogTest va\_eventd.@conn\_tester[1].type=ping va\_eventd.@conn\_tester[1].ping\_dest\_addr=192.168.100.2 va\_eventd.@conn\_tester[1].ping\_source=LAN1 va\_eventd.@conn\_tester[1].ping\_success\_duration\_sec=60 va\_eventd.@target[1]=target va\_eventd.@target[1].name=SyslogTarget va\_eventd.@target[1].type=syslog va\_eventd.@target[1].conn\_tester=SyslogTest va\_eventd.@target[1].target\_addr=192.168.100.2:514 va\_eventd.@target[1].tcp\_syslog=0 va\_eventd.@forwarding[1]=forwarding va\_eventd.@forwarding[1].enabled=yes va\_eventd.@forwarding[1].severity=debug-error va\_eventd.@forwarding[1].target=SyslogTarget #Sample Email va\_eventd.@conn\_tester[2]=conn\_tester va\_eventd.@conn\_tester[2].name=EmailTest va\_eventd.@conn\_tester[2].type=link va\_eventd.@conn\_tester[2].link\_iface=PoAADSL va\_eventd.@target[2]=target va\_eventd.@target[2].timeout\_sec=10 va\_eventd.@target[2].name=EmailTarget va\_eventd.@target[2].type=email va\_eventd.@target[2].conn\_tester=EmailTest

\_\_\_\_

```
va_eventd.@target[2].from=from@example.com
va_eventd.@target[2].to=to@example.com
va_eventd.@target[2].subject_template=%{serial} %{severityName} %{eventName
}!!!
va_eventd.@target[2].body_template=%{eventName} (%{class}.%{subclass})
va_eventd.@target[2].smtp_addr=192.168.100.3:25
va_eventd.@target[2].smtp_user=root
va_eventd.@target[2].smtp_password=admin
va_eventd.@target[2].use_tls=0
va_eventd.@target[2].tls_starttls=0
va_eventd.@target[2].tls_forcess13=0
va_eventd.@forwarding[2]=forwarding
va_eventd.@forwarding[2].enabled=yes
va_eventd.@forwarding[2].className=power
va_eventd.@forwarding[2].eventName=IgnitionOff
va_eventd.@forwarding[2].severity=notice-notice
va_eventd.@forwarding[2].target=EmailTarget
#Sample SMS
va_eventd.@target[3]=target
va_eventd.@target[3].name=SMStarget
va_eventd.@forwarding[3].target=SMStarget
va_eventd.@target[3].type=sms
va_eventd.@target[3].template=%{serial} %{severityName} %{eventName}!!!
va_eventd.@target[3].callee=0123456789
va_eventd.@forwarding[3]=forwarding
va_eventd.@forwarding[3].enabled=yes
va_eventd.@forwarding[3].target=SMStarget
va_eventd.@forwarding[3].className=auth
va_eventd.@forwarding[3].eventName=LoginSSH
va_eventd.@forwarding[3].severity=notice-notice
#Sample Execute
va_eventd.@target[4]=target
va_eventd.@target[4].name=ExecTarget
va_eventd.@target[4].type=exec
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3 va\_eventd.@target[4].cmd\_template=logger -t eventer %{eventName} va\_eventd.@forwarding[4]=forwarding va\_eventd.@forwarding[4].enabled=yes va\_eventd.@forwarding[4].target=ExecTarget va\_eventd.@forwarding[4].className=ppp va\_eventd.@forwarding[4].severity=debug-error #Sample File va\_eventd.@target[5]=target va\_eventd.@target[5].name=FileTarget va\_eventd.@target[5].type=file va\_eventd.@target[5].file\_name=\tmp\eventfile va\_eventd.@target[5].max\_size\_kb=1028 va\_eventd.@forwarding[5]=forwarding va\_eventd.@forwarding[5].enabled=yes va\_eventd.@forwarding[5].target=FileTarget va\_eventd.@forwarding[5].severity=debug-error

## 40.4.1.1 Event system using package options

-----

```
option agent_addr 'localhost'
        option name 'SNMPTarget'
        option conn_tester 'SNMPTest'
        option target_addr '192.168.100.126:68'
        option snmp_version '3'
        option snmp_uname 'v3username'
        option snmp_auth_proto 'MD5'
        option snmp_auth_pass 'md5password'
        option snmp_priv_proto 'AES'
        option snmp_priv_pass 'aespassword'
        option snmp_context 'v3context'
        option snmp_context_eid 'v3contextID'
        option snmp_sec_eid 'v3SecurityID'
config forwarding
        option enabled 'yes'
        option className 'mobile'
        option severity 'notice-notice'
        option target 'SNMPTarget'
        option eventname 'LinkUp'
# Sample Syslog
config conn_tester
        option name 'SyslogTest'
        option type 'ping'
        option ping_dest_addr '192.168.100.2'
        option ping_source 'LAN1'
        option ping_success_duration_sec '60'
config target
        option name 'SyslogTarget'
        option type 'syslog'
        option conn_tester 'SyslogTest'
        option target_addr '192.168.100.2:514'
        option tcp_syslog '0'
config forwarding
```

```
option enabled 'yes'
        option severity 'debug-error'
        option target 'SyslogTarget'
# Sample Email
config conn_tester
        option name 'EmailTest'
        option type 'link'
        option link_iface 'PoAADSL'
config target
        option timeout_sec '10'
        option name 'EmailTarget'
        option type 'email'
        option conn_tester 'EmailTest'
        option from 'from@example.com'
        option to 'to@example.com'
        option subject_template '%{serial} %{severityName} %{eventName}!!!'
        option body_template '%{eventName} (%{class}.%{subclass})
happened! '
        option smtp_addr '192.168.100.3:25'
        option smtp_user 'root'
        option smtp_password 'admin'
        option use_tls 'no'
        option tls_starttls 'no'
        option tls_forcessl3 'no'
config forwarding
        option enabled 'yes'
        option target 'EmailTarget'
        option className 'power'
        option eventName 'IgnitionOff'
        option severity 'notice-notice'
# Sample SMS
config target
        option name 'SMStarget'
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3

```
option type 'sms'
        option template '%{serial} %{severityName} %{eventName}!!!'
        option callee '0123456789'
config forwarding
        option enabled 'yes'
        option target 'SMSTarget'
        option className 'auth'
        option eventName 'LoginSSH'
        option severity 'notice-notice'
# Sample Execute
config target
        option name 'ExecTarget'
        option type 'exec'
        option cmd_template 'logger -t eventer %{eventName}'
config forwarding
        option enabled 'yes'
        option target 'ExecTarget'
        option className 'ppp'
        option severity 'debug-error'
# Sample File
config target
        option name 'FileTarget'
        option type 'file'
        option file_name '\tmp\eventfile'
        option max_size_kb '1028'
config forwarding
        option enabled 'yes'
        option target 'FileTarget'
        option severity 'debug-error'
```

© Virtual Access 2018

40.5 Event system diagnostics

#### 40.5.1 Displaying VA events

To view a list of all available class names, events and severity levels, enter:

```
root@VA_router:~# vae_cli -d
```

The following is an example of the output from this command:

```
Class
            | ID | Name
                                             | Severity | Specific Template
internal
            | 1 | EventdConfigErr
                                             error
| %{p1} %{p2}: %{p3}  has bad value..
| internal | 2 | EventdConfigWarn
                                             warning
| %{p1} %{p2}: %{p3}  has bad value..
| internal | 3 | EventdConfigUnknown
                                             | informat | %{p1} %{p2}:
field '%{p3}' is no..
| internal |
               4 | EventdSystemErr
                                              error
| %{p1} %{p2}: %{p3} %{p4} %{p5} %...
| internal |
               5 | EventdSystemWarn
                                             error
| %{p1} %{p2}: %{p3} %{p4} %{p5} %...
| internal
               6 | EventdUpAndRunning
                                             | informat |
| internal
                7 | EventdStopped
                                             | warning | %{p1}
                                             | SIM card #%{pl}inserted
mobile
                1 | SIMin
                                  notice
                                             | SIM card #%{pl} removed
mobile
                2 | SIMout
                                  notice
mobile
                                             | 3g link %{p1} up using sim
                3 | LinkUp
                                  notice
#%{p2..
| mobile
                4 | LinkDown
                                  notice
                                             | 3g link %{pl} down
mobile
                5 | SMSByPassword | notice
                                             Received SMS from %{p1} (by
pass..
mobile
                6 | SMSByCaller
                                  notice
                                             Received SMS from %{p1}
(%{p2}):..
| mobile
                7 | SMSFromUnknown
                                       warning
                                                  Received SMS from
unknown sender ...
mobile
                8 | SMSSendSuccess
                                       | informat | SMS send success: %{p1}
mobile
                9 | SMSSendError
                                                  | SMS send error: %{p1}
                                       warning
mobile
              10 | SMSSent
                                       notice
                                                  | Sent SMS
to %{p1}: %{p2}
                                                  | Ethernet %{p1} up
ethernet
               1 | LinkUp
                                       notice
ethernet
                2 | LinkDown
                                       notice
                                                  | Ethernet %{p1} down
                2 | BadPasswordSSH
auth
                                       warning
                                                  | SSH login attempt
from %{p2}: ba..
auth
               3 | BadUserConsole
                                       warning
                                                  | Console login attempt
on %{p1}: ..
```

© Virtual Access 2018 GW1000 Series User Manual Issue: 2.3

```
auth
               4 | BadPasswordConsole | warning | Console login attempt
on \{p2\}: ...
                                                  | Telnet login attempt:
auth
                5 | BadUserTelnet
                                       warning
bad username
auth
                6 | BadPasswordTelnet
                                       warning
                                                  | Telnet login attempt:
bad passwo..
auth
                7 | BadUserLuCI
                                       warning
                                                  | LuCI login attempt: bad
username..
auth
                8 | BadPasswordLuCI
                                       warning
                                                  | LuCI login attempt: bad
password..
                                                  | SSH login: user %{p2}
auth
                9 | LoginSSH
                                       notice
from %{p3}
auth
             10 | LogoffSSH
                                                  | SSH logoff: user %{p1}
                                       notice
due to "%..
auth
             11 | LoginConsole
                                       notice
                                                  | Console login:
user \{p1\} on \{p2\}
              12 | LogoffConsole
                                                  | Console logoff on %{p1}
auth
                                       notice
auth
              13 | LoginTelnet
                                                  | Telnet login:
                                       notice
user %{p1}
auth
              14 | LoginLuCI
                                       notice
                                                  | LuCI login: user %{p1}
auth
              15 | ConsoleCommand
                                       | informat | %{p1}@%{p2} %{p3}
              16 | LuCIAction
auth
                                       | informat
| %{p1}@%{p2} %{p3} %{p4} %{p5}
ipsec
                6 | IPSecInitIKE
                                       | informat | IPSec IKE %{p1}
established
ipsec
                7 | IPSecInitSA
                                       | informat | IPSec SA %{p1}
established
                                       | informat | IPSec IKE %{p1} deleted
ipsec
                8 | IPSecCloseIKE
                                       | informat | IPSec SA %{p1} closed
ipsec
                9 | IPSecCloseSA
ipsec
              10 | IPSecDPDTimeOut
                                       | informat | IPSec IKE %{p1} DPD
timed out
wifi
               1 | WiFiConnectedToAP
                                       notice
                                                  | WiFi %{p1} connected to
AP %{p2}
wifi
                                                  | WiFi %{pl} connected to
               1 | WiFiConnectedToAP
                                       notice
AP %{p2}
| wifi
                2 | WiFiDisconnectedFromAP
                                             notice
                                                        | WiFi %{p1}
disconnected from AP
wifi
               2 | WiFiDisconnectedFromAP
                                             notice
                                                        | WiFi %{p1}
disconnected from AP
               3 | WiFiStationAttached
                                                        | WiFi
                                             notice
station %{p2} connected to ...
               3 | WiFiStationAttached
           notice
                                                        | WiFi
station %{p2} connected to ..
```

wifi   4   WiFiStationDetached   notice   WiFi				
station %{p2} disconnected				
wifi   4   WiFiStationDetached   notice   WiFi				
station %{p2} disconnected				
wifi   5   WiFiStationAttachFailed   notice   WiFi				
station %{p2} failed to con				
wifi   5   WiFiStationAttachFailed   notice   WiFi				
station %{p2} failed to con				
ppp				
interface %{p2} (protoco				
ppp				
interface %{p2} (protoco				
ppp   3   ConnEstablished   informat   PPP connection				
for interface %{p				
adsl   1   LinkUp   notice   ADSL trained.				
Starting interface				
adsl   2   LinkDown   notice   ADSL down.				
Stopping interface %{				
adsl   3   Silent   debug   ADSL silent				
adsl   4   Training   debug   ADSL training				
adsl   5   TrainingSuccess   notice   ADSL training				
successful: data				
system   1   BootSuccess   informat   Success booting into %{pl				
system   2   DigitalInputChange   notice   Digital				
Input %{p1} changed valu				
ntp				
time: %{p1}; o				
ntp				
ntp				
out. Ne				
ntp				

41 Configuring data usage monitor

#### 41.1 Introduction

Virtual Access software provides support for monitoring of data usage on mobile interfaces and to disable if the monthly limit is exceeded. This allows an element of control over data usage for SIMs with a limited data plan.

**DISCLAIMER**: data usage statistics calculated by Virtual Access data usage feature are best estimates and may vary from the mobile carrier statistics that are used for billing. Virtual Access cannot be held liable for any fees charged by the carrier to the customer for their data usage. We recommend that the configured data usage is lower than the allowance and that traffic percentage alerts are used.

## 41.2 Configuration package used

Package	Sections
procrustes	limit

## 41.3 Configuring data usage using the web interface

Select **Services -> Data Usage**. The Data Usage page appears.

You can monitor interfaces as a collective group, so enter a name for the group and select **Add**. The examples below show a group name configured as 'wan'.

You can configure multiple groups.



Figure 206: The data usage page

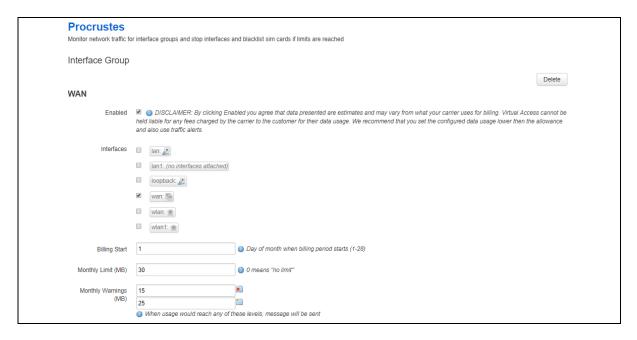


Figure 207: The data usage configuration page

Web Field/UCI/Package Option	Description	
Web: Enabled	Enable dat	a usage monitor on this interface group.
UCI: procrustes.@limit[0].enabled	0	Disabled.
Opt: enabled	1	Enabled.
Web: Billing Start	Day of mor	nth on which the billing period starts.
UCI:	1	
procrustes.@limit[0].billing_period_start_ day	Range	1 – 28
Opt: billing_period_start_day		
Web: Interfaces UCI: procrustes.@limit[0].interfaces Opt: interfaces	Monitor and apply limits to these interfaces as a group. Configure multiple interfaces via UCI using a space separator.  Example:  uci set procrustes.@limit[0].interfaces="lan wan"	
Web: Monthly Limit (MB) UCI:	Defines monthly data traffic limit in megabytes (MB). This is total RX and TX on the interface.	
procrustes@limit[0].monthly_data_limit	0	Zero means no limit.
Opt: monthly_data_limit	Range	
Web: Monthly Warnings (MB) UCI: procrustes.@limit[0].monthly_warning_le	Defines data usage limits for generating a log message and a VA event alert when used traffic reaches specified levels. Levels are specified in MB.  Set multiple limits via UCI using a space separator.  Example:  uci set procrustes.@limit[0].monthly_warning_levels="1525"	
vels		
Opt: monthly_warning_levels		
	0	Zero means no limit.
	Range	

Table 152: Information table for data usage commands

### 41.3.1 Configuring data usage using command line

Data usage is configured under the **procrustes** package **/etc/config/procrustes**.

By default, all limit instances are named 'limit', and are identified by @limit followed by the limit position in the package as a number. For example, for the first limit in the package using UCI:

```
procrustes.@limit[0]=limit
procrustes.@limit[0].enabled=1
```

Or using package options:

```
config limit
option enabled '1'
```

However, to better identify instances, it is recommended to give the limit instance a name. For example, create a limit instance named MOBILE1.

To define a named limit instance using UCI, enter:

```
procrustes.@limit[0]=wan
procrustes.wan.enabled=1
```

To define a named limit instance using package options, enter:

```
config limit 'wan'
option enabled '1'
```

The following examples show two limit groups wan and lan.

### 41.3.2 Procrustes using UCI

```
root@VA_router:~# uci show procrustes

procrustes.lan=limit

procrustes.lan.enabled=1

procrustes.lan.billing_period_start_day=1

procrustes.lan.monthly_data_limit=30

procrustes.lan.monthly_warning_levels=15 25

procrustes.wan=limit

procrustes.wan.enabled=1

procrustes.wan.interfaces=MOBILE1

procrustes.wan.billing_period_start_day=1

procrustes.wan.monthly_data_limit=30

procrustes.wan.monthly_data_limit=30

procrustes.wan.monthly_warning_levels=15 25
```

41.3.3 Procrustes using package options

```
root@VA_router:~# uci export procrustes
package procrustes

config limit 'lan'
    option enabled '1'
    option billing_period_start_day '1'
    option monthly_data_limit '30'
    option monthly_warning_levels '15 25'

config limit 'wan'
    option enabled '1'
    option interfaces 'MOBILE1'
    option billing_period_start_day '1'
    option monthly_data_limit '30'
    option monthly_data_limit '30'
    option monthly_data_limit '30'
    option monthly_warning_levels '15 25'
```

## 41.4 Data usage status

Select **Status -> Overview**. The Status page appears.

To check current data usage, scroll to **Network -> Data Usage (MiB)** row.

Data usage is presented as progress bar.



Figure 208: The data usage status progress bar

## 41.5 Data usage diagnostics

#### 41.5.1 Syslog events

The following events can be generated in logs by the data usage feature:

Severity	Tag	Text
NOTICE	procrustes	<pre><if_group_name>: using counter 1404674 saved on 2017-09-30 16:26:57</if_group_name></pre>
NOTICE	procrustes	<if_group_name>: warning level 2097152 is reached</if_group_name>
WARNING	procrustes	<if_group_name>: hard limit 10485760 is reached</if_group_name>

NOTICE	procrustes	Data limit on SIM <iccid> exceeded and sim will be banned until the next month</iccid>	
ERROR	procrustes	Could not get iccid for <ifname></ifname>	
DEBUG	procrustes	Interface <ifname> is not up</ifname>	
WARNING	procrustes	network. <ifname>.ifname is not defined</ifname>	
NOTICE	procrustes	<ifname>: reached billing start. Resetting</ifname>	
DEBUG	procrustes	Saving current limit values	
NOTICE	procrustes	<if_group_name>: not enabled</if_group_name>	
WARNING	procrustes	<if_group_name>: defines no interfaces</if_group_name>	
DEBUG	procrustes	<if_group_name>: sim interface <ifname></ifname></if_group_name>	
ERROR	procrustes	Daemonization failed	
ERROR	procrustes	another procrustes is running. Exiting	
NOTICE	procrustes	No limits defined. Exiting	
ERROR	mobile	SIM <iccid> is blacklisted, not establishing connection</iccid>	

### 41.5.2 Viewing data usage

The router has monitoring application named **procrustatus.lua** that can be used for viewing data usage.

This application displays data statistics used for different interface groups, percentage of time left to next billing period start and percentage of data left for use before the interface will be shut down.

To view the application, enter the command procrustes.lua

root@VA_router:~# procrustatus.lua					
	name	current/	max	time left	data left
	lan:	1404674/	10485760	1.03%	86.60%
	wan:	433436/	1048576	1.03%	58.66%

Alternatively, total data usage can be checked via the command cat/var/state/procrustes

```
root@VA_router:~# cat /var/state/procrustes
procrustes.lan.total_bytes=215780
procrustes.wan.total_bytes=433436
```

## 41.5.3 Addditional debugging commands

Additional useful debug commands via the command line are described in the table below.

Diagnostic Command	Description	
logread   grep procrustes	Shows logs related to "procrustes" only	
ls /root/procrustes/sim_blacklist/	Shows list of blacklisted SIM iccids	

0.00

## 42 Configuring Terminal Server

#### 42.1 Overview

Terminal Server is a background application whose main task is to forward data between TCP connections or UDP streams and asynchronous or synchronous serial ports.

The Terminal Server application serves up to four sessions simultaneously, one for each serial port, depending on the device. Each Terminal Server session has an IP endpoint and an associated specific serial port.

You can configure the IP endpoint of each Terminal Server session to be a:

- TCP server: each session is listening on a unique port.
- TCP client: Terminal Server makes a TCP connection to external TCP server.
- UDP endpoint: Terminal Server forwards data between a UDP stream and a serial port.

## 42.2 Configuration packages used

Package	Sections
tservd	main
	port

## 42.3 Configuring Terminal Server using the web interface

In the top menu, select **Services -> Terminal Server**. The Terminal Server Configuration page appears. You must configure two main sections:

- Main Settings to enable Terminal Server, syslog settings, and to enable log setting.
- Port Settings section is for general port settings, serial settings such as port mode, port speed, parity stip bit and so on; and finally, network settings to configure the network side of the Terminal Server.

#### 42.3.1 Configure main settings

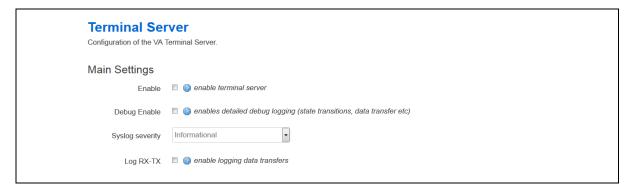


Figure 209: The terminal server main settings page

Web Field/UCI/Package Option	Description			
Web: Enable	Enables Terminal Server on the router.			
UCI: tservd.main.enable	0	Disabled.		
Opt: enable	1	Enabled.		
Web: Debug Enable	Enables detail	ed debug logging.		
UCI: tservd.main.debug_ev_enable	0	Disabled.		
Opt: debug_ev_enable	1	Enabled.		
Web: Syslog severity UCI: tservd.main.log_severity	Determines the logged.	Determines the syslog level. Events up to this priority will be logged.		
Opt: log_severity	0	Emergency		
3_11 15	1	Alert		
	2	Critical		
	3	Error		
	4	Warning		
	5	Notice		
	6	Informational		
	7	Debug		
Web: Log RX-TX	Enables loggir	ng data transfers.		
UCI: tservd.main.debug_rx_tx_enable	0	Disabled.		
Opt: debug_rx_tx_enable	1	Enabled.		

Table 153: Information table for main settings

## 42.3.2 Configure port settings

The Port Settings section is divided into 3 sub-sections:

- General
- Serial
- Network

### 42.3.2.1 Port settings: general section

In this section you can configure general port settings. The settings are usually the same for the central and the remote site.

Port Settings PORT1 Serial Network Enable @ @ enable port Forwarding buffer size (serial to network) Network Forwarding Buffer Size Network Forwarding Timeout (ms) Forwarding timeout in milliseconds (serial to network) Network Forwarding timer mode Sorwarding timer mode (serial to network) Serial Forwarding Buffer Size Forwarding buffer size (network to serial) Serial Forwarding Timeout (ms) Forwarding timeout in milliseconds (network to serial) [a] Forwarding timer mode (network to serial) Serial Forwarding timer Proxy mode a enable proxy mode Disable remote client's local echo (Telnet option) Telnet COM port control (RFC2217) Enable HDLC Pseudowire over UDP (RFC4618) Serial receive debug bytes (0=disable) log size

Serial transmit debug bytes (0=disable) log size

Figure 210: The general tab fields

Web Field/UCI/Package Option	Description		
Web: Enable	Enables Terminal Server port.		
UCI: tservd.@port[0].enable	0	Disabled.	
Opt: enable	1	Enabled.	
Web: Network Forwarding Buffer Size	Forwarding	buffer size in bytes (serial to network).	
UCI: tservd.@port[0].fwd_buffer_size	256	256 bytes	
Opt: fwd_buffer_size	Range	0-2048	
Web: Network Forwarding Timeout(ms)	Forwarding	timeout in milliseconds (serial to network).	
UCI: tservd.@port[0].fwd_timeout	30	30 ms	
Opt: fwd_timeout	Range	0-10000	
Web: Network Forwarding Timer Mode	Forwarding	timer mode (serial to network).	
UCI: tservd.@port[0].fwd_timer_mode	Idle	Timer is re-started on each received data.	
Opt: fwd_timer_mode	Aging	Timer started on the first Rx.	
Web: Serial Forwarding Buffer Size	Forwarding	buffer size in bytes (network to serial).	
UCI: tservd.@port[0].sfwd_buffer_size	Set to <b>0</b> to	use maximum possible network Rx buffer size.	
Opt: sfwd_buffer_size	0	2048 bytes	
	Range	0-2048	
Web: Serial Forwarding Timeout (ms)	Forwarding	timeout in milliseconds (network to serial).	
UCI: tservd.@port[0].sfwd_timeout	Set to <b>0</b> to forward to serial immediately.		
Opt: sfwd_timeout	20	20 ms	
	Range	0-10000	

Web: Serial Forwarding Timer Mode	Forwarding timer mode (network to serial).			
UCI: tservd.@port[0].sfwd_timer_mode	Idle	Timer is re-started on each received data		
Opt: sfwd_timer_mode	Aging	Timer started on the first Rx.		
Web: Proxy Mode UCI: tservd.@port[0].proxy_mode Opt: proxy_mode	Defines if special proxy mode is configured to allow 'hijacking' of the terminal server. It allows a connection to be made from a remote location and redirect terminal server data temporarily for troubleshooting.			
	When enabled, a TCP proxy server is started which listens for an incoming TCP connection from a remote peer. Once an incoming new TCP connection on the proxy server TCP port is accepted:			
	The existing disconnection	ng terminal server TCP client connection is ted.		
	but this ti	The terminal server automatically reconnects the TCP client side but this time to the local loopback address 127.0.0.1 and to the local proxies TCP port number.		
	connected	proxy server has both local and remote TCP sessions I it simply forwards the data between the two ns, taking into account the flow control.		
	When either side TCP socket closes, the main terminal server client re-connects to the normal IP destination and the server proxy returns to listening for another connection from the far end.			
	0	Disabled.		
	1	Enabled.		
Web: Disable Remote Client's Local Echo (Telnet option)		o send IAC WILL ECHO Telnet option to remote client to disable local echo. For server mode only.		
UCI: tservd.@port[0].disable_echo	0	Disabled.		
Opt: disable_echo	1	Enabled.		
Web: Telnet COM Port Control	Set to <b>1</b> to (RFC2217	o enable support for Telnet COM port control ).		
UCI: tservd.@port[0].com_port_control Opt: com_port_control	0	Disabled.		
opt. com_port_control	1	Enabled.		
Web: Enable HDLC Pseudowire over UDP (RFC4618)	Set to <b>1</b> to enable HDLC pseudowire over UDP support based on RFC4618. Requires Transport Mode (udpmode) to be enabled.			
UCI: tservd.@port[0].hdlc_pw_enabled	0	Disabled.		
Opt: hdlc_pw_enabled	1	Enabled.		
Web: Serial Receive Debug Log Size	Configures serial receive log size in bytes and enables receive			
UCI: tservd.@port[0].serialRxLogSize	data logging.  O Disabled.			
Opt: serialRxLogSize				
	1	Enabled.		
Web: Serial Transmit Debug Log Size UCI: tservd.@port[0].serialTxLogSize	Configures serial transmit log size in bytes and enables transmit data logging.			
Opt: serialTxLogSize	0	Disabled.		
opt. 30.1diTAE0g0i20	1	Enabled.		

Table 154: Information table for port settings section

### 42.3.2.2 Port settings: serial section

In this section you can configure serial interface settings, such as port mode, port speed, parity stip bit and so on.

#### Note:

- The displayed settings vary depending on options selected.
- DTR <--> DSR signalling is not available on GW2028 router models.

\_\_\_\_\_

The figure below shows the options available if you have selected RS232 mode.

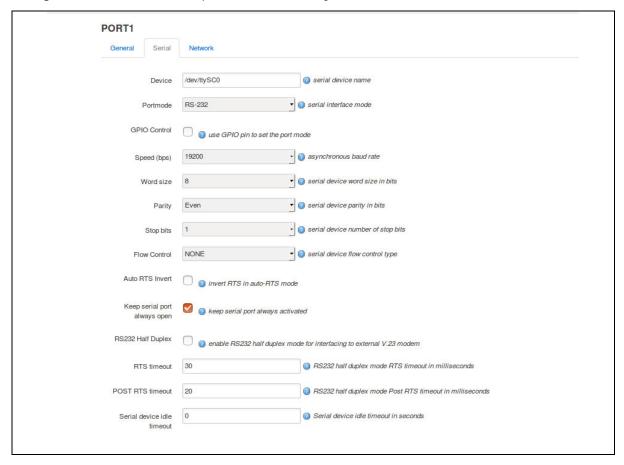


Figure 211: The serial section fields (port mode RS232)

The figure below shows the options available if you have selected RS485 mode.



Figure 212: The serial section fields (port mode RS485)

The figure below shows the options available if you have selected X.21 mode.

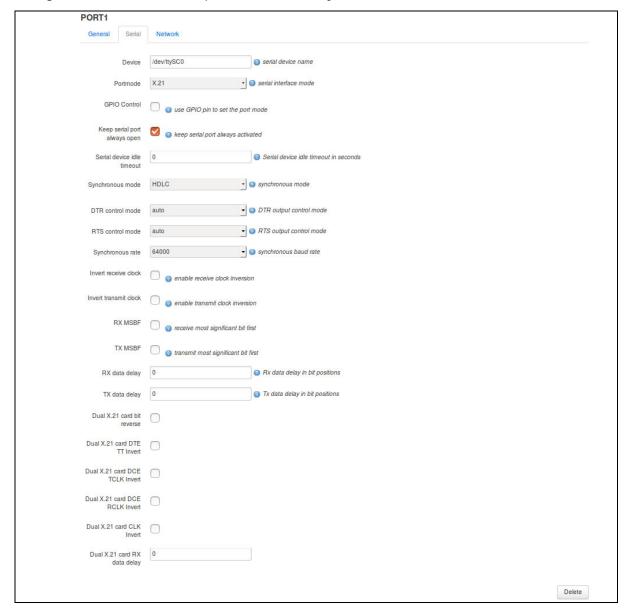


Figure 213: The serial section fields (port mode X.21)

Web Field/UCI/Package Option	Description		
Web: Device	Serial device name.		
UCI: tservd.@port[0].devName	/dev/ttySC0 serial port 1		
Opt: devName	/dev/ttySC1	serial port 2	
	/dev/ttySC2	serial port 3	
	/dev/ttySC3	serial port 4	
Web: Port mode	Sets the serial interface mode.		
UCI: tservd.@port[0].port_mode	rs232 RS232 mode.		
Opt: port_mode	rs485hdx RS485 2 wire half duplex mode in which transmitter drives RTS.		
	rs485fdx	Rs485 4 wire full duplex mode.	
	v23	Uses V.23 leased line card driver.	
	x21	Uses USB serial card in sync mode.	

Web: GPIO Control UCI: tservd.@port[1].serial_mode)gpio_control Opt: serial_mode_gpio_control	Enables or disables software control of the port mode between RS232 and RS485. Applies only to port 1 (ttySC1) and not to port 0.  Note: the port mode is set with the option port mode described above.		
	0	Port mode is configured by hardware settings (not user configurable). Set to <b>0</b> for port 0.	
	1	Enabled. Port mode is configurable by software settings. This is applicable to serial port 1 on devices that are capable of RS485.	
Web: Speed (bps)	Serial device	e speed in baud (bps).	
UCI: tservd.@port[0].speed	9600		
Opt: speed	Range	115200; 57600; 38400; 19200; 9600 4800; 2400; 1800; 1200; 600; 300; 200; 150; 134; 110; 75; 50	
Web: Word size	Serial device	e word size.	
UCI: tservd.@port[0].wsize	8		
Opt: wsize	Range	5-8	
Web: Parity	Serial device	e parity.	
UCI: tservd.@port[0].parity	0	None	
Opt: parity	1	Even	
	2	Odd	
	3	Space	
Web: Stop Bits		e number of stop bits.	
UCI: tservd.@port[0].stops	1	e Hamber of Stop bits.	
Opt: stops	Range	1-2	
Web: Flow Control		control mode.	
UCI: tservd.@port[0].fc_mode	0	None None	
Opt: fc_mode	1	RTS/CTS	
Opt. Ic_mode	2	XON/XOFF	
Web: RS485 Termination UCI:		disable RS485 termination. Applies only if port mode	
tservd.@port[0].rs485_line_termination	0	Disabled.	
Opt: rs485_line_termination	1	Enabled.	
Web: Auto RTS Invert	Invert RTS i	in auto-RTS mode, if port mode is set to RS485.	
UCI: tservd.@port[0].rtsinvert	0	Disabled.	
Opt: rtsinvert	1	Enabled.	
Web: Keep Serial Port Always Open	Keep serial	port always open.	
UCI: tservd.@port[0].tty_always_open	0	Disabled.	
Opt: tty_always_open	1	Enabled.	
Web: RS232 Half Duplex UCI: tservd.@port[0].hd_mode Opt: hd_mode	Defines whe serial driver half-duplex	ether to enable special mode in the asynchronous for communication to an externally connected V.23 modem. <b>Note</b> : this setting does not enable halfe in the serial hardware of the router.	
	0	Full duplex mode.	
	1	Half duplex mode.	
Web: RTS Timeout UCI: tservd.@port[0].rts_timeout Opt: rts_timeout	RTS and ena	alf-duplex mode, time in milliseconds between raising abling the transmitter. For use with an externally /.23 modem.	
Opt. 1t3_tillieout	30	30ms	
	Range		
Web: POST RTS Timeout UCI: tservd.@port[0].post_rts_timeout	dropping RT	alf duplex mode, time in milliseconds between S (transmission finished) and enabling the receiver. In externally connected V.23 modem.	
Opt: post_rts_timeout	20	20 ms	
	Range		

UCI: tservd.@port[0].sync mode		chronous frame mode. This setting is only displayed SB serial card is enabled.
Opt: sync mode	hdlc	HDLC frame mode.
opt. ojoeus	transp	Transparent mode.
Web: Use CRC32 UCI: tservd.@port[0].sync_crc32		ether to use CRC32 or CRC16 in HDLC mode. This ally displayed if an Atmel USB serial card is enabled.
Opt: sync_crc32	0	Use CRC16.
. , _	1	Use CRC32.
Web: DTR control mode UCI: tservd.@port[0].dtr_control_mode		R line control modes. This setting is only displayed if SB serial card is enabled and port mode is X21.
Opt: dtr_control_mode	auto	DTR set to on when port is open. Off when the port is closed.
	on	DTR always on.
	off	DTR always off.
	арр	DTR controlled by the application.
	ontx	In HDLC mode DTR is on during frame transmission.
Web: RTS control mode UCI: tservd.@port[0].rts_control_mode		line control modes. Only displayed if Atmel USB senabled and port mode is X21.
Opt: rts_control_mode	auto	RTS set to on when port is open. Off when the port is closed.
	on	RTS always on.
	off	RTS always off.
	арр	RTS controlled by the application.
	ontx	In HDLC mode RTS is on during frame transmission.
Web: Synchronous rate UCI: tservd.@port[0].sync_speed Opt: sync_speed	clock. If not	synchronous speed in bps. Set to <b>0</b> for external set to 0, an internal clock is used. This setting is ed if an Atmel USB serial card is enabled.  64 kbps
	Range	2048000; 1024000; 768000; 512000; 384000; 256000; 128000; 19200; 9600
Web: Invert receive clock UCI: tservd.@port[0].sync_invert_rxclk Opt: sync_invert_rxclk	falling edge.	eive clock inversion. Normal clock data is sampled or.  Inverted clock data is sampled on rising edge. This also be al
Opt. sync_invert_rxcik	0	Normal.
		Worman.
	1	Invert.
Web: Invert transmit clock UCI: tservd.@port[0].sync_invert_txclk Ont: sync_invert_txclk	Defines tran	
UCI: tservd.@port[0].sync_invert_txclk	Defines tran	Invert.  smit clock inversion. Normal clock data transmitted dge. Inverted clock data transmitted on rising edge.
UCI: tservd.@port[0].sync_invert_txclk	Defines tran on falling ed Only display	Invert.  Insmit clock inversion. Normal clock data transmitted dige. Inverted clock data transmitted on rising edge. red if Atmel USB serial card is enabled.
	Defines tran on falling ed Only display  0  1  Defines whe	Invert.  Insmit clock inversion. Normal clock data transmitted age. Inverted clock data transmitted on rising edge. The inverted if Atmel USB serial card is enabled.  Normal.
UCI: tservd.@port[0].sync_invert_txclk Opt: sync_invert_txclk  Web: RX MSBF UCI: tservd.@port[0].sync_rx_msbf	Defines tran on falling ed Only display  0  1  Defines whe	Invert.  Insmit clock inversion. Normal clock data transmitted dge. Inverted clock data transmitted on rising edge. Yed if Atmel USB serial card is enabled.  Normal.  Invert.  Invert.
UCI: tservd.@port[0].sync_invert_txclk Opt: sync_invert_txclk  Web: RX MSBF UCI: tservd.@port[0].sync_rx_msbf	Defines tran on falling ed Only display 0 1 Defines whe is only display	Invert.  Insmit clock inversion. Normal clock data transmitted dge. Inverted clock data transmitted on rising edge. red if Atmel USB serial card is enabled.  Normal.  Invert.  Invert.  Intert most significant bit is received first. This settin ayed if an Atmel USB serial card is enabled.
UCI: tservd.@port[0].sync_invert_txclk Opt: sync_invert_txclk  Web: RX MSBF	Defines tran on falling ed Only display 0 1 Defines whe is only display 0 1 Defines whe	Invert.  Insmit clock inversion. Normal clock data transmitted dige. Inverted clock data transmitted on rising edge. The difference of the
UCI: tservd.@port[0].sync_invert_txclk Opt: sync_invert_txclk  Web: RX MSBF UCI: tservd.@port[0].sync_rx_msbf Opt: sync_rx_msbf  Web: TX MSBF	Defines tran on falling ed Only display 0 1 Defines whe is only display 0 1 Defines whe	Invert.  Insmit clock inversion. Normal clock data transmitted dge. Inverted clock data transmitted on rising edge. Wed if Atmel USB serial card is enabled.  Normal.  Invert.  Invert.
UCI: tservd.@port[0].sync_invert_txclk Opt: sync_invert_txclk  Web: RX MSBF UCI: tservd.@port[0].sync_rx_msbf Opt: sync_rx_msbf  Web: TX MSBF UCI: tservd.@port[0].sync_tx_msbf	Defines tran on falling ed Only display 0 1 Defines whe is only display 0 1 Defines whe setting is on	Invert.  Insmit clock inversion. Normal clock data transmitted dge. Inverted clock data transmitted on rising edge. red if Atmel USB serial card is enabled.  Normal.  Invert.  Invert.
UCI: tservd.@port[0].sync_invert_txclk Opt: sync_invert_txclk  Web: RX MSBF UCI: tservd.@port[0].sync_rx_msbf Opt: sync_rx_msbf  Web: TX MSBF UCI: tservd.@port[0].sync_tx_msbf	Defines tran on falling ed Only display  0 1 Defines whe is only display  0 1 Defines whe setting is on  1 Defines the detectin	Invert.  Insmit clock inversion. Normal clock data transmitted dge. Inverted clock data transmitted on rising edge. red if Atmel USB serial card is enabled.  Normal.  Invert.  Invert.

Web: TX data delay		umber of bit positions to delay output of data from clock edge. This setting is only displayed if an
UCI: tservd.@port[0].sync_txdata_dly		erial card is enabled.
Opt: sync_txdata_dly	0	
	Range	
Web: Dual X.21 card bit reverse	'	versal of all hits in 9 buts word during transmission
		eversal of all bits in 8 byte word during transmission
UCI: tservd.@port[0].bit_reverse	0	Normal.
Opt: bit_reverse	1	Reverse.
Web: Dual X.21 card DTE TT Invert	Enables X.21	TT clock signal inversion.
UCI: tservd.@port[0].dte_tt_inv	0	Normal.
Opt: dte_tt_inv	1	Invert.
Web: Dual X.21 card DCE TCLK Invert	Enables X.21	DCE TCLK signal inversion.
UCI: tservd.@port[0].dce_tclk_inv	0	Normal.
Opt: dce_tclk_inv	1	Invert.
Web: Dual X.21 card DCE RCLK Invert	Enables X.21	DCE RCLK signal inversion.
UCI: tservd.@port[0].dce_rclk_inv	0	Normal.
Opt: dce_rclk_inv	1	Invert.
Web: Dual X.21 card CLK Invert		DCE CLK signal inversion.
UCI: tservd.@port[0].x21_clk_invert	0	Normal.
Opt: x21_clk_invert	1	Invert.
Web: Dual X.21 card RX data delay	Sets X.21 car	d RX data delay in number of bit positions.
UCI: tservd.@port[0] x21_data_delay	0	
Opt: x21_data_delay	Range	0 – 7
Web: n/a		alue of idle character (decimal) to transmit in case
UCI: tservd.@port[0].sync_tx_idle		nderrun. In HDLC mode, this configures inter-frame
Opt: sync_tx_idle	fill.	T
	0	Transmit 0 (in HDLC mode)
	126	Transmit flags (in HDLC mode)
	255	Transmit 1 (in HDLC mode)
	Range	0 – 255
Web: n/a	Enables signa	alling of carrier by sending special characters.
UCI:	0	Disabled.
tservd.@port[0].v23_inband_carrier_sign	1	Enabled.
alling		
Opt: v23_inband_carrier_signalling	5 6	
Web: n/a		haracter decimal to signal remote carrier on.
UCI: tservd.@port[0].v23_inband_carrier_on_c	255	
har	Range	0 - 255
Opt: v23_inband_carrier_on_char		
Web: n/a	Defines the tr	ransmit gain for v23 mode.
UCI: tservd.@port[0].v23_tx_gain	2	Transmit samples multiplied by 2
		Transmit samples multiplied by 2
Opt: v23_tx_gain	Range	
Web: n/a		eceive loss for v23 mode.
UCI: tservd.@port[0].v23_rx_loss	1	Receive samples divided by 1.
Opt: v23_rx_loss	Range	
Web: n/a	Defines the v	23 modem RTS to CTS delay in milliseconds.
UCI:	20	
tservd.@port[0].v23_rts_to_cts_delay	Range	
Opt: v23_rts_to_cts_delay		
Web: n/a	Defines the V	23 modem LIM operation.
UCI: tservd.@port[0].v23_is_four_wire	0	2-wire
	1 1	1

Web: n/a Defines the V23 modem receive echo suppression timeout in milliseconds. UCI: tservd.@port[0].v23\_tx\_timeout 20 Opt: v23\_tx\_timeout Range Web: n/a Defines the time in milliseconds it takes the V23 transmitter to rampdown carrier from peak to zero UCI: tservd.@port[0].v23\_tx\_rampdown 30 Opt: v23\_tx\_rampdown Range Web: n/a Defines the maximum transmit queue fill level in bytes UCI: tservd.@port[0].v23\_tx\_maxfill

Table 155: Information table for port settings serial section

Range

0 - 255

#### 42.3.2.3 Port settings: network section

Opt: v23\_tx\_maxfill

In this section you can configure the network side of the Terminal Server.

**Note**: the displayed settings vary depending on options selected.

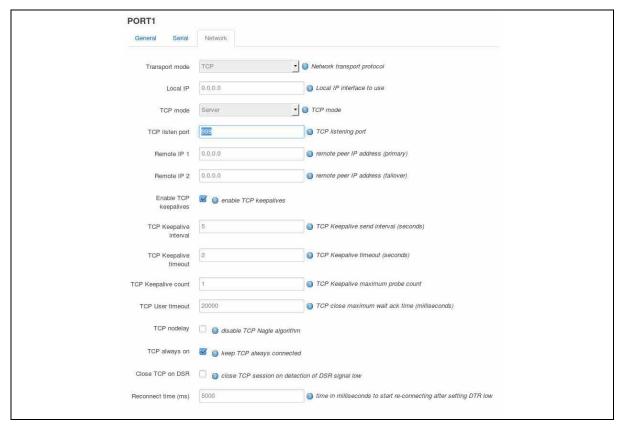


Figure 214: The port settings network fields (TCP server mode)

Web Field/UCI/Package Option	Description	
Web: Transport Mode	Selects the tra	ansport mode.
UCI: tservd.@port[0].udpMode	0	TCP
Opt: udpMode	1	UDP
Web: Local IP	Local IP addre	ess to listen on.
UCI: tservd.@port[0].local_ip	0.0.0.0	Listen on any interface.
Opt: local_ip	Range	IPv4 address.

Web: TCP Mode	Select between	en server and client modes of TCP. Only displayed if
UCI: tservd.@port[0].server_mode	0	Client Mode.
Opt: server_mode	1	Server Mode.
Web: TCP Listen Port		rt for server mode. Only displayed if Transport Mode erver mode is enabled.
UCI: tservd.@port[0].listen_port	999	iver mode is enabled.
Opt: listen_port	Range	1 - 65535
Web: Remote TCP Port 1 UCI: tservd.@port[0].ip_port1		eer port IP 1 number. Only displayed if client mode
Opt: ip_port1	951	
	Range	1 - 65535
Web: Remote TCP Port 2 UCI: tservd.@port[0].ip_port2	Destination p	eer port IP 2 number for failover. Only displayed if s enabled.
Opt: ip_port2	951	
	Range	1 - 65535
Web: Remote IP 1		eer IP 1 address.
UCI: tservd.@port[0].remote_ip1	0.0.0.0	
Opt: remote_ip1	Range	IPv4 address.
Web: Remote IP 2		eer IP 2 address for failover.
UCI: tservd.@port[0].remote_ip2	0.0.0.0	
Opt: remote_ip2	Range	IPv4 address.
Web: Enable TCP Keepalives UCI:	Mode is TCP.	ables TCP keepalives. Only displayed if Transport
tservd.@port[0].tcp_keepalives_enabl ed	0	Disabled.
Opt: tcp_keepalives_enabled	1	Enabled.
Web: TCP Keepalive Interval UCI:		conds between TCP keepalive probes. Only ransport Mode is TCP.
tservd.@port[0].tcp_keepalive_interva	5	5 seconds.
1	Range	0-65535
Opt: tcp_keepalive_interval Web: TCP Keepalive Timeout	Time in secon	nds to wait for response to a TCP keepalive probe.
UCI:		ed if Transport Mode is TCP.
tservd.@port[0].tcp_keepalive_timeou	2	2 seconds.
t	Range	0-65535
Opt: tcp_keepalive_timeout	Ni walan af To	CD transline much so to sound before commention in
Web: TCP Keepalive Count UCI:		CP keepalive probes to send before connection is displayed if Transport Mode is TCP.
tservd.@port[0].tcp_keepalive_count	1	
Opt: tcp_keepalive_count	Range	0-65535
Web: TCP User Timeout UCI: tservd.@port[0].tcp_user_timeout	data to be 'ac	ne in milliseconds for TCP to wait for transmitted cked' before closing connection in established state. se kernel defaults. Only displayed if Transport Mode
Opt: tcp_user_timeout	is TCP.	
	20000	20 seconds.
	Range	0-65535
Web: TCP Nodelay UCI: tservd.@port[0].tcp_nodelay	Sets TCP to d	lelay behaviour. Only displayed if Transport Mode is
Opt: tcp_nodelay	0	Normal operation.
	1	Disable TCP Nagle algorithm. Only displayed if Transport Mode is TCP.

UCI: tservd.@port[0].tcp_always_on  Opt: tcp_always_on  Mode is TCP and client mode is enabled.  Disabled. TCP connection / UDP session is initiated on detecting high state on the DSR interface signal.  Enabled. If it disconnects in the established state the TCP connection / UDP session is reinitiated.  Web: Close TCP on DSR  UCI: tservd.@port[0].close_tcp_on_dsr  Opt: close_tcp_on_dsr  Web: Reconnect Time (ms)  UCI: tservd.@port[0].disc_time_ms  Opt: disc_time_ms  Web: UDP Keepalive Interval  UCI: tservd.@port[0].udpKaIntervalMs  Opt: udpKaIntervalMs  Opt: udpKaIntervalMs  Mode is TCP and client mode is enabled.  Disabled. TCP connection / UDP session is initiated.  Close TCP session on detection of DSR signal low. Only displayed if Transport Mode is TCP and client mode is enabled.  O Disabled. TCP connection / UDP session is initiated.  I Enabled. If it disconnects in the established state the TCP connection of DSR signal low. Only displayed if Transport Mode is TCP and client mode is enabled.  Close TCP session on detection of DSR signal low. Only displayed if Transport Mode is TCP and client mode is enabled.  O Disabled. TCP connection / UDP session is initiated.  Close TCP session on detection of DSR signal low. Only displayed if Transport Mode is TCP and client mode is enabled.  O Disabled. TCP connection / UDP session is initiated.  Transport Mode is TCP and client mode is enabled.  O Disabled. TCP connection / UDP session is initiated.  Transport Mode is TCP and client mode is enabled.  O Disabled. If it disconnects in the established state the TCP connection.  Transport Mode is TCP and client mode is enabled.  O Disabled. If it disconnects in the established state the TCP connection.  I Enabled. Detecting DSR down does not affect the TCP connection.  I Enabled. Detecting DSR down closes the established TCP connection.  I Enabled. Detecting DSR down closes the established TCP connection.  Defense Transport Mode is TCP and client mode is enabled.  Defense Transport Mode is TCP and client mode is enabled.
state the TCP connection / UDP session is re- initiated.  Web: Close TCP on DSR UCI: tservd.@port[0].close_tcp_on_dsr Opt: close_tcp_on_dsr  Web: Reconnect Time (ms) UCI: tservd.@port[0].disc_time_ms Opt: disc_time_ms  Web: UDP Keepalive Interval UCI: tservd.@port[0].udpKaIntervalMs Opt: udpKaIntervalMs  State the TCP connection / UDP session is re- initiated.  Close TCP session on detection of DSR signal low. Only displayed if Transport Mode is TCP and client mode is enabled.  Disabled. Detecting DSR down does not affect the TCP connection.  Time in milliseconds to start reconnecting after setting DTR low 5000
UCI: tservd.@port[0].close_tcp_on_dsr  Opt: close_tcp_on_dsr  Web: Reconnect Time (ms) UCI: tservd.@port[0].disc_time_ms  Opt: disc_time_ms  Opt: dlose_tcp_on_dsr  If Transport Mode is TCP and client mode is enabled.  Disabled. Detecting DSR down does not affect the TCP connection.  Enabled. Detecting DSR down closes the established TCP connection.  Time in milliseconds to start reconnecting after setting DTR low 5000
tservd.@port[0].close_tcp_on_dsr  Opt: close_tcp_on_dsr  Opt: close_tcp_on_dsr  I Disabled. Detecting DSR down does not affect the TCP connection.  Enabled. Detecting DSR down closes the established TCP connection.  Time in milliseconds to start reconnecting after setting DTR low 5000 5 seconds.  Opt: disc_time_ms  Opt: disc_time_ms  Opt: udpKaIntervalMs  Opt: udpKaIntervalMs
1   Enabled. Detecting DSR down closes the established TCP connection.  Web: Reconnect Time (ms)   Time in milliseconds to start reconnecting after setting DTR low 5000
UCI: tservd.@port[0].disc_time_ms Opt: disc_time_ms  Solution  Sol
Opt: disc_time_ms  Range 0 – 10000  Web: UDP Keepalive Interval  UCI: tservd.@port[0].udpKaIntervalMs  Opt: udpKaIntervalMs
Web: UDP Keepalive Interval UCI: tservd.@port[0].udpKaIntervalMs Opt: udpKaIntervalMs  Defines time in milliseconds to send UDP keepalives (empty UD packets) when no data to send. Only displayed if transport modis is UDP.
UCI: tservd.@port[0].udpKaIntervalMs Opt: udpKaIntervalMs  packets) when no data to send. Only displayed if transport mod is UDP.
Opt: udpKaIntervalMs
' Disabled.
Range 0-65535
Web: UDP Keepalive Count UCI: tservd.@port[0].udpKaCount Outs and MaCount
Opt: udpKaCount 3
Range 0-65535
Web: local UDP Port UCI: tservd.@port[0].udpLocalPort  Local UDP port used by terminal server. Only displayed if transport mode is UDP.
Opt: udpLocalPort  Range 0-65535
Web: remote UDP Port UCI: tservd.@port[0].udpRemotePort  Remote UDP port used by terminal server. Only displayed if transport mode is UDP.
Ont: udpDomotoPort

Table 156: Information table for port settings network section

# 42.4 Terminal Server using UCI

```
root@VA_router:~# uci show tservd

tservd.main=tservd

tservd.main.log_severity=0

tservd.main.debug_rx_tx_enable=1

tservd.main.debug_ev_enable=1

tservd.@port[0]=port

tservd.@port[0].devName=/dev/ttySC0

tservd.@port[0].remote_ip1=0.0.0.0

tservd.@port[0].remote_ip2=0.0.0.0
```

42.5 Terminal Server using package options

```
root@VA_router:~# uci export tservd
package tservd

config tservd 'main'
    option log_severity '0'
    option debug_rx_tx_enable '1'
    option debug_ev_enable '1'

config port
    option devName '/dev/ttySCO'
    option remote_ip1 '0.0.0.0'
    option remote_ip2 '0.0.0.0'
```

## 42.6 Terminal server DSR signal management network configuration

On the IP network side, the terminal server can operate in one of three modes:

- TCP Client
- TCP Server
- UDP

Based on the chosen network configuration, the DSR behaviour may vary.

#### 42.6.1 DSR signal behaviour in TCP client mode

#### 42.6.1.1 TCP connection management

Initial TCP connection initiation or next TCP connection initiation after disconnection is affected by configuration options tcp\_always\_on and close\_tcp\_on\_dsr.

When option tcp\_always\_on is enabled terminal server keeps the TCP session always connected. If it disconnects in the established state, the TCP session is reinitiated.

If  $tcp_always_on$  is disabled TCP connection is initiated on detection of a high state on the DSP interface signal.

When option close\_tcp\_on\_dsr is enabled terminal server detecting DSR down signal and closes the established TCP connection.

If option <code>close\_tcp\_on\_dsr</code> is disabled then detecting DSR down does not affect the TCP connection.

#### 42.6.1.2 TCP connection initiation at startup

If you have set option  $tcp_always_on1$ , or DSR state is UP, the TCP connection setup is initiated immediately.

If you have set option tcp\_always\_on0, and DSR is DOWN, the terminal server waits for a DSR UP signal. When DSR UP is detected, the TCP connection is initiated.

#### 42.6.1.3 TCP connection clearing

The TCP connection is cleared either by the network or by the terminal server application itself.

The TCP connection is cleared by the terminal server when it detects DSR interface signal DOWN and option close tcp on dsr is 1.

#### 42.6.1.4 TCP connection re-initiation

After TCP connection clearing, the terminal server takes action to re-setup the TCP connection after a hand off timeout.

If you have set option tcp\_always\_on1, or DSR state is UP, the TCP connection setup is initiated.

If you have set option tcp\_always\_on0, and DSR is DOWN, the terminal server waits for a DSR UP signal and then initiates a new TCP connection.

#### 42.6.2 DSR signal behaviour in TCP server mode

#### 42.6.2.1 TCP connection initiation at startup

After a short startup delay, the terminal server starts listening for an incoming TCP connection from the remote peer.

#### 42.6.2.2 TCP connection clearing

When in a TCP connection state, the TCP connection is cleared only by the network. Serial interface signals such as DSR do not cause TCP disconnection.

#### 42.6.2.3 TCP connection re-initiation

When a TCP session goes down in the connected state, the terminal server immediately restarts listening for a new TCP connection from a remote peer.

#### 42.6.3 DSR signal behaviour in UDP mode

### 42.6.3.1 UDP session setup at startup

If you have set option  $tcp_always_on1$ , or DSR state is UP, the UDP session is setup immediately on startup.

If you have set option tcp\_always\_on0, and DSR is DOWN, the terminal server waits for a DSR UP signal. When DSR UP is detected, the UDP session is setup.

#### 42.6.3.2 UDP session clearing

A UDP session is normally never cleared, but if it is closed by the network sub-system, it gets re-setup after a hand off timeout.

A DSR signal DOWN event does not clear UDP session in the connected state.

#### 42.6.3.3 UDP session reset

After UDP session clearing the terminal server takes action to reset up a UDP session after a hand off timeout.

If you have set option tcp\_always\_on1, or DSR state is UP, the UDP session is setup.

If you have set option tcp\_always\_on0, and DSR is DOWN, the terminal server waits for a DSR UP signal and then it resets up the UDP session.

#### 42.7 Serial mode GPIO control

On some models of Virtual Access routers it is possible to change the physical transmission mode between RS232 and RS485. This is only applicable to the second serial port on the routers: /dev/ttySC1.

To enable serial\_mode\_gpio\_control set the option to 1.

Use the portmode option in addition to serial\_mode\_gpio\_control to select between RS232, RS485 full duplex, RS485 half duplex, X.21 and V.23.

### 42.7.1 Checking the current serial\_mode\_gpio\_control

To check if Terminal Server is running, enter the following command:

```
root@VA_router:~# uci show tservd | grep serial_mode_gpio_control
```

The output of the above command will look similar to the example below if serial\_mode\_gpio\_control is enabled for the second serial port.

```
tservd.port0.serial_mode_gpio_control=0
tservd.port1.serial_mode_gpio_control=1
```

#### 42.8 **Terminal Server diagnostics**

The tservd process has to be running otherwise diagnostics options for Terminal Server will not be available.

#### 42.8.1 Checking Terminal Server process

To check if Terminal Server is running, enter:

```
root@VA router:~# -fl tservd
1264 root
               1032 S tservd
```

If Terminal Server is running it will be shown with its process ID.

#### 42.8.2 Terminal Server statistics

To view Terminal Server statistics, enter:

```
root@VA_router:~# tserv show stats
TERMINAL 1, Dev: /dev/ttySC0
```

© Virtual Access 2018 **GW1000 Series User Manual** Issue: 2.3

ū ū

State:	LISTENIN	G
Serial Bytes	Rx (0)	Tx (0) TxErrs (0)
TCP Packets	Rx (0)	Tx (0) TxErrs (0) TxBlocked (0)
TCP Bytes	Rx (0)	Tx (0)
UDP Datagrams	Rx (0)	Tx (0) TxErrs (0)
UDP Bytes	Rx (0)	Tx (0)
DSR	Up (0)	Down (0)

### 42.8.3 Terminal Server debug statistics

To see debug statistics about Terminal Server, enter:

```
root@VA_router:~# tserv show debug all

TERMINAL 1, Dev: /dev/ttySC0
State: LISTENING
netRxBuf length=0 offset=0 hdrsz=0
ttyRxBuf length=0 offset=16 hdrsz=16
line_status_mask = 0x0 line_status = 0x0
RFC2217 negotiated=0
Tcp tx last error: 0
```

### 42.8.4 Terminal Server serial signals debugging

To see Terminal Server serial signals statistics, enter:

```
root@VA_router:~# tserv show serial

TERMINAL-1, Dev: /dev/ttySC1

DSR=0 DTR=1 RTS=1 CTS=0 CAR=0 CD=0 RNG=0 LE=0 RI=0 ST=0 SR=0

TERMINAL-2, Dev: /dev/ttySC0

DSR=0 DTR=1 RTS=1 CTS=0 CAR=0 CD=0 RNG=0 LE=0 RI=0 ST=0 SR=0
```

### 42.8.5 Terminal Server advanced debugging

To view Terminal Server advanced debug commands for the terminal server, enter:

```
root@VA router:~# tserv
=== Termserv disgnostics. Command syntax: ===
tserv show stats - show statistics
tserv clear stats - clear statistics
tserv show serial - show serial interface status
tserv send serial0 <data>- send data to serial port 0
tserv start capture N, N=port number (0 to 3) - start capturing rx serial
data
tserv print capture N, N=port number (0 to 3) - print captured rx serial
data
tserv show serial txlog-hex <Port> [length], Port=port cfg index (0 to 3),
length=length to show
tserv show serial rxlog-hex <Port> [length], Port=port cfg index (0 to 3),
length=length to show
tserv show serial txlog-asc <Port> [length], Port=port cfg index (0 to 3),
length=length to show
tserv show serial rxlog-asc <Port> [length], Port=port cfg index (0 to 3),
length=length to show
tserv show debug - show debug info
tserv start userial rxlog - start USB serial card rx log
tserv show userial rxlog <offs> <length> - show USB serial card rx log
tserv quit - terminate termserv process
```

## 43 Configuring terminal package

Terminal package is used to automatically add entries for getty to inittab for extra incoming console/terminal connections.

# 43.1 Configuration packages used

Package	Sections
terminal	terminal

## 43.2 Configuring terminal package using the web interface

Terminal package is not available to configure using the web interface.

Web Field/UCI/Package Option	Description	
Web: n/a	Enables Termi	nal on the router.
UCI: terminal.console.enabled	0	Disabled.
Opt: enabled	1	Enabled.
Web: n/a	String value p	oint at the tty device in /dev folder.
UCI: terminal.console.device	None	Default.
Opt: device	<string></string>	Device name.( e.g. ttySC0 to use serial port 0)
Web: n/a	Set the speed	of serial connection.
UCI: terminal.console.speed	115200	Default.
Opt: speed	<range></range>	Supported port speed.
Web: n/a	String value re	epresents supported terminal emulation mode.
UCI: terminal.console.type	vt100	Default.
Opt: type	<string></string>	Supported terminal type.
Web: n/a	Enables hardw	vare flow control RTS/CTS.
UCI: terminal.console.flowcontrol	0	Disabled.
Opt: flowcontrol	1	Enabled.

Table 157: Information table for terminal settings

## 43.3 Configuring terminal package using UCI

```
root@VA_router:~# uci show terminal
terminal.ttySC0=terminal
terminal.ttySC0.enabled=1
terminal.ttySC0.device=ttySC0
terminal.ttySC0.speed=115200
terminal.ttySC0.type=vt100
terminal.ttySC0.flowcontrol=1
```

## 43.4 Configuring terminal using package options

## 43.5 Terminal diagnostics

### 43.5.1 Checking terminal entry in inittab

To check if terminal configuration is running, enter the following commands and confirm the line referring to the device name is present and looks similar to the last line below:

```
root@VA_router:~# cat /etc/inittab
::sysinit:/etc/init.d/rcS S boot
::shutdown:/etc/init.d/rcS K stop
ttyLTQ0::askfirst:getty -L 115200 ttyLTQ0 vt100
ttyLTQ1::askfirst:getty -L 115200 ttyLTQ1 vt100
ttySC0::respawn:getty -h -L 115200 ttySC0 vt100
```

44 Serial interface

### 44.1 Overview

Many different applications and device drivers use the serial interface. You configure the serial interface using the relevant application; for example Terminal Server, therefore there is no standalone serial configuration page.

You can monitor the various serial interfaces using either the command line or the web interface.

## 44.2 Monitoring serial interfaces using the web interface

In the top menu, select **Status -> Serial Interfaces**. Depending on the number of serial interfaces present in the device, a number of tabs will appear giving access to information about each interface. The information presented will also depend on the actual type of the serial interface.

#### 44.2.1 Serial statistics

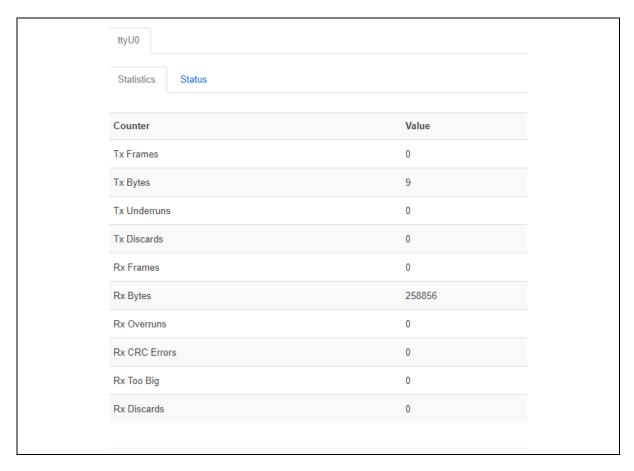


Figure 215: The serial statistics page for serial-0

#### 44.2.2 Serial status

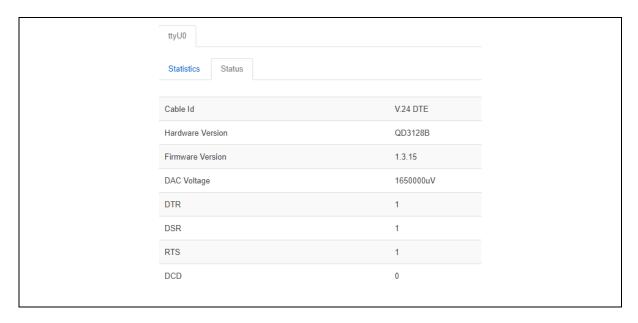


Figure 216: The serial status page for serial-0

## 44.3 Monitoring serial interfaces using command line

## 44.3.1 Serial statistics using command line

To view serial statistics, enter: serial\_stats.

root@VirtualAccess:~# serial_stats		
ttyU0 statistics		
Tx Frames	0	
Tx Bytes	9	
Tx Underruns	0	
Tx Discards	0	
Rx Frames	0	
Rx Bytes	258856	
Rx Overruns	0	
Rx CRC Errors	0	
Rx Too Big	0	
Rx Discards	0	

### 44.3.2 Serial status using command line

To view serial statistics, enter: serial\_status.

root@VirtualAccess:~# serial\_status ttyU0 status Cable Id V.24 DTE Hardware Version QD3128B Firmware Version 1.3.15 DAC Voltage 1650000uV DTR DSR 1 1 RTS DCD 0

## 44.3.3 Resetting serial statistics

To reset serial statistics, enter: serial\_stats\_reset.

root@VirtualAccess:~# serial\_stats\_reset ttyU0
Serial interface statistics reset

You can reset statistics for all or individual serial interfaces.