

User Guide  
6622-2241  
29000589, REV.B



# DR-270



***Multiple Media ADSL/VDSL2  
Router***

[www.westermo.com](http://www.westermo.com)

## **Legal information**

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy and reliability or contents of this document. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at the following Internet address:

**<http://www.westermo.com>**

# Safety

## Before using this unit:

Read this manual completely and gather all information on the unit. Make sure that you understand it fully. Check that your application does not exceed the safe operating specifications for this unit.

Hazardous voltages may occur within this unit when connected to a power supply.

Prevent access to hazardous voltages by disconnecting the unit from its power supply.

Prevent damage to internal electronics from electrostatic discharges (ESD) by discharging your body to a grounding point (e.g. use of wrist strap).

## Before installation:

This unit should only be installed by qualified personnel.

This unit should be built-in to an apparatus cabinet, or similar, where access is restricted to service personnel only.

The power supply wiring must be sufficiently fused, and if necessary it must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.

This unit uses convection cooling. To avoid obstructing the airflow around the unit, follow the spacing recommendations (see Installation section).

## Care recommendations

Follow the care recommendations below to maintain full operation of unit and to fulfil the warranty obligations.

This unit must not be operated with covers or lids removed.

Do not attempt to disassemble the unit. There are no user serviceable parts inside.

Do not drop, knock or shake the unit, rough handling beyond the specification may cause damage to internal circuit boards.

Do not use harsh chemicals, cleaning solvents or strong detergents to clean the unit.

Do not paint the unit. Paint can clog the unit and prevent proper operation.

Do not expose the unit to any kind of liquids (rain, beverages, etc). The unit is not waterproof. -Keep the unit within the specified humidity levels.

Do not use or store the unit in dusty, dirty areas, connectors as well as other mechanical part may be damaged.

If the unit is not working properly, contact the place of purchase, nearest Westermo distributor office or Westermo Tech support.

## GSM specific safety

Please read and follow the guidelines listed below. The precautions must be observed during all phases of the operation. Breaking these rules may be dangerous, illegal or affect performance of the unit and/or invalidate the unit's approval and/or warranty.

## **General**

Remember to follow any special regulations and warnings in force in any area and never use the unit whenever it's forbidden to use it. Do not use the unit when it may cause interference or danger. A wireless device exposed to interference above specified limits could result in deteriorated performance.

## **Hospitals or other Medical environment**

Do not use the unit in a medical environment such as health care facilities. Follow any regulations or rules that instruct you to not use the unit.

### *Pacemakers*

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between cellular wireless equipment and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ⌘ Should ALWAYS keep the the unit and its antenna more than six inches from their pacemaker when the unit is turned ON.
- ⌘ If you have any reason to suspect that interference is taking place, turn your wireless equipment OFF immediately.

### *Hearing Aids*

Some digital wireless equipment may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider [or call the customer service line to discuss alternatives.]

### *Other Medical Devices*

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy.-Your physician may be able to assist you in obtaining this information.

Turn the wireless equipment OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## **Aircraft**

Do not use the unit in an aircraft. The use of a wireless unit in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless network, and may be illegal. Failure to observe these instructions may lead to suspension or denial of cellular services to the offender, legal action, or both.

## **Vehicle**

If the unit is incorrectly installed in a vehicular environment, the operation of the unit could interfere with the vehicle electronics. Faulty installation and/or operation can constitute a safety hazard.

## **For Vehicles equipped with an airbag**

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## **Blasting areas**

Do not use the unit where blasting is in progress or in “blasting areas”. Observe restrictions and follow any regulation or rules.

## **Explosive atmospheres**

Do not use the unit in any area with a potentially explosive atmosphere.

Potentially explosive areas are often, but not always, clearly marked.

They include fuelling areas such as petrol stations, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powder.

## **RF energy**

The DR-270/3G is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from the wireless unit. All radio-transmitting devices send signals, which may cause interference in different electronic devices. To avoid interference, place the unit's antenna a sufficiently long distance from other electronics.

## **Critical applications**

Cellular units operate using radio signals and cellular networks cannot be guaranteed to connect in all conditions. Therefore you should never rely solely on a wireless device for essential communications, for example medical emergencies.

## **Backup copies**

Remember to make backup copies of all important data, for example PIN/PUK codes, contents of SIM card etc.

## **Antenna care**

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the unit and may violate current regulations. Do not touch the antenna unnecessarily when the unit is in use. Contact with the antenna affects call quality and may cause the unit to operate at a higher power level than otherwise needed.

## **Maintenance**

No maintenance is required, as long as the unit is used as intended within the specified conditions.

## Type tests and environmental conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact	± 4 kV
		Enclosure air	± 8 kV
RF field AM modulated	EN 61000-4-3	Enclosure	3 V/m 80% AM (1 kHz), 80 – 1000 MHz, 1400 MHz – 2000
Fast transient	EN 61000-4-4	Signal ports	± 0.5 kV
		Power ports	± 1 kV
Surge	EN 61000-4-5	Telecom/Signal ports	± 0.5 kV line to earth
		Power ports	± 2 kV line to earth, ± 2 kV line to line
RF conducted	EN 61000-4-6	Power ports	3V/m 80% AM (1 kHz), 0.15 – 80 MHz
Voltage dips and interruption	EN 61000-4-11	AC power ports	10 & 100 ms, interruption 10 ms, 30% reduction 100 ms, 60% reduction 5000 ms, >95% reduction +30% above & -20% below rated voltage
Radiated emission	EN 55022	Enclosure	Class B
	FCC part 15		Class B
Conducted emission	EN 55022	AC power ports	Class A
	FCC part 15	AC power ports	Class B
	EN 55022	DC power ports	Class B
Temperature		Operating DR-270 DR-270 + 3G	-40 to +75° Celsius -40 to +167° Fahrenheit
		Operating DR-270 + 3G + WiFi DR-270 + WiFi	-20 to +75° Celsius -68 to +167° Fahrenheit
		Storage & Transport	-40 to +85° Celsius -40 to +185° Fahrenheit
Humidity		Operating	5 to 95% relative humidity
		Storage & Transport	5 to 95% relative humidity
Altitude		Operating	2000 m / 70 kPa
Reliability prediction (MTBF)	Belcore RQGR at 40°C		Models and their values DR-270 125361 h DR-270 + WiFi 105455 h DR-270 + 3G 105015 h DR-270 + 3G + WiFi 90677 h
Enclosure			Pressed steel
Dimension W x H x D			262 x 40.5 x 141 mm 10.3 x 1.6 x 5.5 inches
Weight			1.4 kg
Degree of protection	IEC529	Enclosure	IP 30
Cooling			Convection
Mounting			Horizontal on 35 mm DIN-rail or flat on level surface

## Description

Remote access removes boundaries, eliminates the need for time consuming site visits and provide a network infrastructure suitable for today's "always-on" society. The DR-270 ADSL / VDSL2 router uses the Internet to cost effectively inter-connect systems, allowing HMI, PLCs, sensors etc to communicate with each other.


The optional multiple media interfaces ensures high availability for critical applications. Mobile broadband (3G) in conjunction with ADSL/VDSL2 protects against digging accidents or other issues that may occur in a wired environment.

Devices connected to the Internet require countermeasures towards cyber threats. The DR-270 offers protection of transmissions from malicious eavesdroppers via encrypted communication tunnels (VPN), access prevention from unauthorized addresses, and extensive logging to detect intrusion attempts. With an advanced and highly configurable firewall the unit is easily set up to only allow valid application data.

Certain carriers discontinue leased line service to its customers but that does not mean that the need for communication has changed. The DR-270 with its built-in serial port offers a simple solution, modem replacement, with the benefit of not having to reprogram or change any other component.

The powerful software in the DR-270 offers methods to engineers to easily analyze the data-flow, valuable for fast troubleshooting of connected devices.

## Dimensional drawing

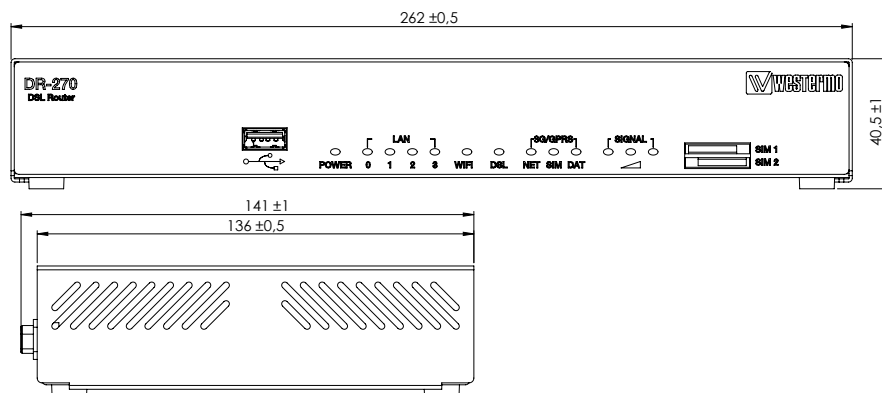

## Agency approvals and standards compliance

Type		Approval / Compliance	
EMC		EN 55024, EN 55024 A1, EN 55024 A2, Electromagnetic compatibility - Immunity IT equipment	
		EN 55022, EN 55022 A1, Information technology equipment. Radio disturbance characteristics. Limits and methods of measurement	
		FCC part 15 Class B	
Safety		IEC / EN 60950-1, IT equipment	
R&TTE	Article 3.1a	EN 60950	Safety
		EN 50385	EMF exposure
	Article 3.1b	EN 301 489-1	ERM/EMC
		EN 301 489-7	ERM/EMC GSM
		EN 301 489-24	ERM/EMC 3G
	Article 3.2	EN 301 908-1	ERM 3G
		EN 301 908-2	ERM 3G
		EN 301 511	GSM

### FCC Part 15.105 Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ⌘ Reorient or relocate the receiving antenna
- ⌘ Increase the separation between the equipment and receiver
- ⌘ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- ⌘ Consult the dealer or an experienced radio/TV technician for help.



# Declaration of Conformity



Westermo Teleindustri AB

## Declaration of conformity

The manufacturer Westermo Teleindustri AB  
SE-640 40 Stora Sundby, Sweden

Herewith declares that the product(s)

Type of product	Model	Art no
Cellular router	DR-270A series	3622-0310, 3622-0315, 3622-0320, 3622-0325
	DR-270B series	3622-0340, 3622-0345, 3622-0350, 3622-0355

is in conformity with the following EC directive(s).

No	Short name
1999/5/EC	Radio equipment and Telecommunications terminal equipment (R&TTE)
2011/65/EU	Restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)

References of standards applied for this EC declaration of conformity.

No	Title	Issue
EN 60950-1	Information technology equipment - Safety – General requirements	2006 +A11:2009 +A1:2010 +A12:2011
EN 61000-3-2	Electromagnetic compatibility (EMC): Limits - Limits for harmonic current emissions	2006 +A1:2009 +A2:2009
EN 61000-3-3	Electromagnetic compatibility (EMC) : Limits - Limitation of voltage changes, voltage fluctuations and flicker in public low voltage supply systems.	2008
EN 301489-7	Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS)	V1.3.1
EN 301 511	Global System for Mobile communications (GSM); Harmonized EN for mobile stations in the GSM 900 and GSM 1800 bands.	V9.0.2
EN 301 526	Electromagnetic compatibility and Radio spectrum Matters (ERM); Harmonized EN for CDMA spread spectrum mobile stations operating in the 450 MHz cellular band (CDMA 450) and 410, 450 and 870 MHz PAMR bands.	V1.1.1
EN 301 908-1	IMT cellular networks; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive; Part 1: Introduction and common requirements	V5.2.1
EN 301 908-2	IMT cellular networks; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive; Part 2: CDMA Direct Spread (UTRA FDD) User Equipment (UE)	V5.2.1
EN 55024	Information technology equipment – Immunity characteristics Limits and methods of measurement	1998 +A1:2001 +A2:2003
EN 55022	Information technology equipment – Radio disturbance characteristics – Limits and methods of measurement	2006 +A1:2007

The last two digits of the year in which the CE marking was affixed:

13

Signature

Pierre Öberg  
Technical Manager  
30th July 2013

Postadress/Postal address  
S-640 40 Stora Sundby  
Sweden

Tel.  
016-428000  
Int+46 16428000

Telefax  
016-428001  
Int+46 16428001

Postgiro  
52 72 79-4

Bankgiro  
5671-5550

Org nr/  
Corp. identity number  
556361-2604

Registered office  
Eskilstuna

## Interface specifications

Power	
Rated voltage	9 – 36 VDC
Operating voltage	9 – 36 VDC
Power consumption	DR-270 – typical: 1.02 A = 12.24 W, max: 1.03 A = 12.36 W DR-270 + WiFi – typical: 1.12 A = 13.44 W, max: 1.140 A = 13.68 W DR-270 + 3G – typical: 1.23 A = 14.76 W, max: 1.24 A = 14.88 W DR-270 + 3G + Wi-Fi – typical: 1.31 A = 15.72 W, max: 1.42 A = 17.04 W
Rated frequency	DC

RS-232	
Electrical specification	EIA RS-232
Data rate	300 bit/s – 115.2 kbit/s
Data format	7 or 8 data bits, Odd, even or none parity, 1 or 2 stop bits
Protocol	Transparent, optimised by packing algorithm
Circuit type	SELV
Transmission range	15 m / 49 ft
Connection	9 pin D-sub female
Shielded cable	Not required
Conductive housing	Yes
Number of ports	1

Ethernet TX	
Electrical specification	IEEE std 802.3. 2005 Edition
Data rate	10 Mbit/s, 100 Mbit/s, manual or auto
Duplex	Full or half, manual or auto
Circuit type	SELV
Transmission range	100 m / 328 ft
Isolation to	All other
Connection	RJ-45 auto MDI/MDIX
Shielded cable	Not required, except when installed in Railway applications as signalling and telecommunications apparatus and located close to rails.*
Conductive housing	Yes
Number of ports	4

\* To minimise the risk of interference, a shielded cable is recommended when the cable is located inside 3 m boundary to the rails and connected to this port.  
 The cable shield should be properly connected (360°) to an earthing point within 1 m from this port.  
 This earthing point should have a low impedance connection to the conductive enclosure of the apparatus cabinet, or similar, where the unit is built-in. This conductive enclosure should be connected to the earthing system of an installation and may be directly connected to the protective earth.

<b>Antenna (option)</b>	
Frequency bands	850 MHz – 2100 MHz
Connection	SMA female, impedance: 50 ohm

<b>SIM (option)</b>	
Electrical specification	3 volts SIM supported
Number of slots	2

<b>USB</b>	
Electrical specification	USB 2.0 host interface
Data rate	Up to 12 Mbit/s (full-speed mode)
Circuit type	SELV
Maximum supply current	500 mA in total for both ports
Connection	USB receptacle connector type A
Number of ports	1

<b>DSL</b>	
Data rate	100 Mbit Downlink, 100 Mbit Uplink
Protocol	LLC/VC-MUX encap Ethernet, PPPoA, PPPoE, IPoA
Connection	RJ-11
Shielded cable	Not required, except when installed in Railway applications as signalling and telecommunications apparatus and located close to rails.*
Number of ports	1
<b>Standard</b>	<b>Annex</b>
ETSI TS 101 270	N/A
ITU-T 993.2 (VDSL2)	A, B,
T1.424	N/A
ITU-T G.992.1 (ADSL)	A,B (non overlap)
ITU-T G.992.3 (ADSL2)	A,B,I,L,M (non overlap)
ITU-T G.992.5 (ADSL2+)	A,B,I,M (non overlap)
ANSI T1.413	N/A

\* To minimise the risk of interference, a shielded cable is recommended when the cable is located inside 3 m boundary or the cable is longer than 30 m and inside 10 m boundary to the rails and connected to this port.

<b>WiFi (option)</b>	
Connection	2 × 50 Ω RP-SMA (Center pin: male)
Data Rate	11 – 54 Mbit/s
Standard	802.11b/g/n
Transmit power	20 dBm +1.0 / –1.5 dBm
Receive sensitivity	11 Mbps / –90 dBm, 54 Mbps / <–72 dBm



# Connections

## SIM Card Sockets

The two sockets at the left side of the front panel are for the GSM SIM card(s) that you will receive from your service providers. SIM 1 and SIM 2 cannot be used to access two networks simultaneously.

The SIM card(s) should be inserted into SIM cardholders on the right of the front panel as illustrated below.

In both cases, the end of the SIM card with the chamfered corner should be inserted first. For SIM 1 the contacts should be face down. For SIM 2 the contacts should be face up.

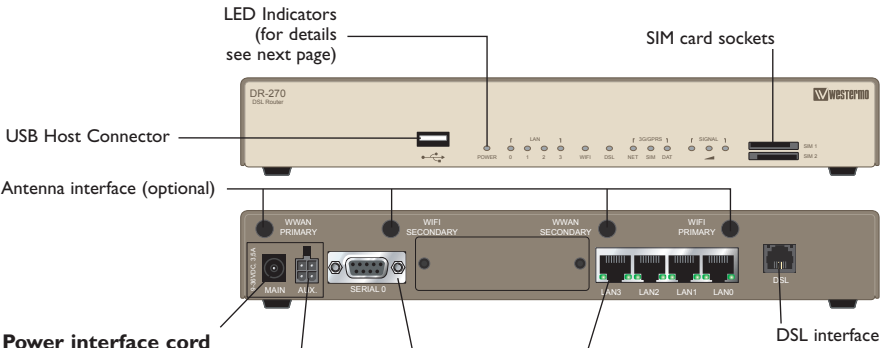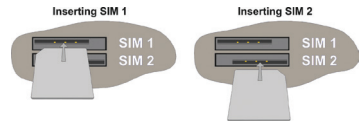

## Power interface cord

Cable	Description
Black	-VDC
Red	+VDC

## Pin-out interface

Pin	Wire Color	Signal
1	Black	Gnd
2	Blue	Input
3	Green	Input/Output
4	Red	Power

## Ethernet TX Connections (RJ-45 connector) LAN 0-3

Position	Direction	Description
1	In/Out	TD+
2	In/Out	TD-
3	In/Out	RD+
4	-	Not Connected
5	-	Not Connected
6	In/Out	RD-
7	-	Not Connected
8	-	Not Connected

## RS-232 interface (DCE Female)

Position	Name	Direction	Description
1	DCD	Out	Data Carrier Detect
2	RxD	Out	Receive Data
3	TxD	In	Transmit Data
4	DTR	In	Data Terminal Ready
5	SG	-	Signal Ground
6	DSR	Out	Data Set Ready
7	RTS	IN	Request to Send
8	CTS	Out	Clear to Send
9	RI	Out	Ring Indicator


## LED Indicators

LED		Status	Description
PWR		OFF	Unit has no power
		GREEN	All OK
		RED	Lit until unit has started up
LAN 0,1,2,3		OFF	No link
		GREEN	Link established
		GREEN FLASH	Data traffic indication
WIFI		N/A	N/A
DSL		RED	No DSL link
		GREEN	DSL link established
		RED FLASH	DSL link negotiation
		GREEN BLINK	Data traffic indication
3G / GPRS	NET	OFF	No wireless network has been detected
		GREEN	A wireless network has been detected
	SIM	OFF	No valid SIM installed
		GREEN	A valid SIM card is installed in the unit
	DAT	OFF	No data is being transferred over the wireless network
		GREEN	Data is being transferred over the wireless network
SIGNAL	ALL	OFF	No signal / less than -113 dBm
	1 LED	GREEN	Low signal strength / between -112 dBm and -87 dBm
	2 LEDs	GREEN	Medium signal strength / between -86 dBm and -71 dBm
	3 LEDs	GREEN	Strong signal strength / between -70 dBm and -51 dBm


## Description of AUX-connector and I/O signal lines

The auxiliary power connector has two programmable signal lines. One is an input line, the other can be configured as either an input line or an output line. The mode of operation of the input/output line is configurable through the CLI.

The signal lines can be wired as shown in the following diagrams


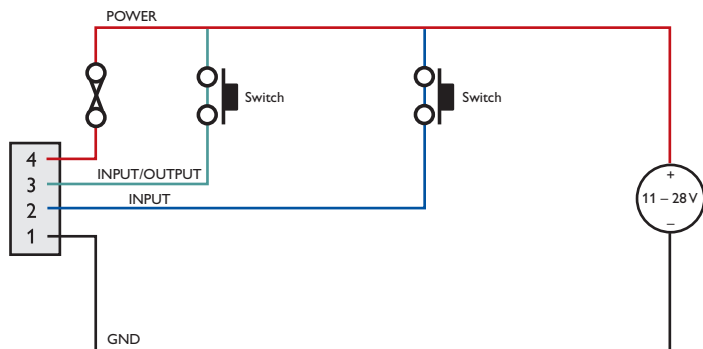


2 Inputs, Supply Voltages up to 28 VDC

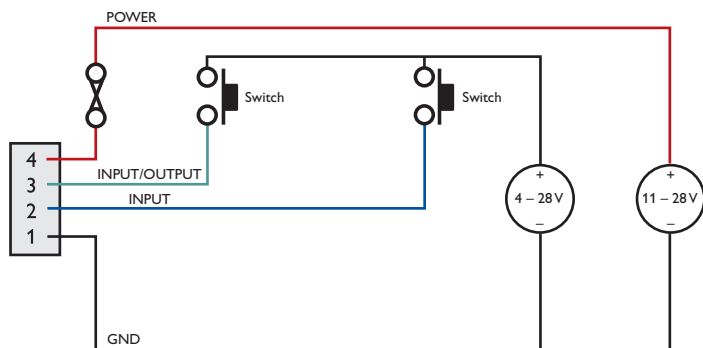

2 Inputs, Supply Voltages up to 58 VDC

If the auxiliary power connector is being used, the main power connector should **NOT** be used.

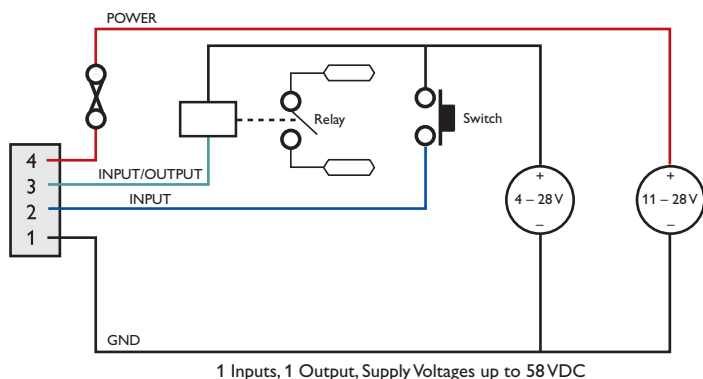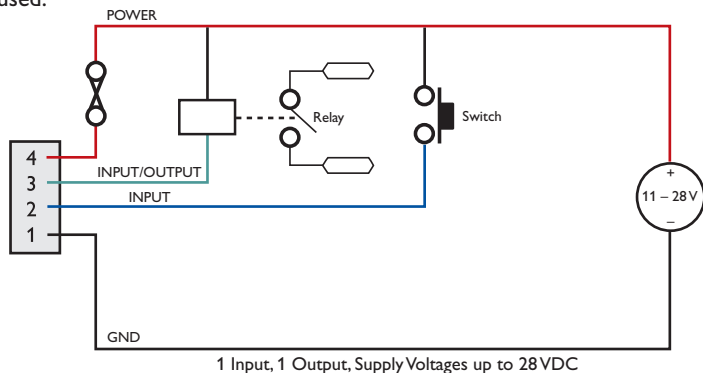

### Input Signal Information

- ⌘ Applied input voltage to activate: +4V to +28VDC
  - ⌘ Applied input voltage to deactivate: 0V to +1VDC (Negative voltages can be applied to -28VDC)
  - ⌘ Maximum input current: 3 mA
  - ⌘ Input protection activates at more than  $\pm 28$  VDC.
- External current limiting is needed to protect input voltages above  $\pm 28$  VDC.



Connector Pin Numbers

### Output Signal Information

- ⌘ Maximum voltage switched: +28 VDC
  - ⌘ Maximum current switched: +40 mA
  - ⌘ Output leakage current is equivalent to a 10 Kohms resistor to Ground.
  - ⌘ Suggested minimum Relay Coil resistances:
    - Supply Voltage 6VDC, minimum resistance 100 Ohms
    - Supply Voltage 12VDC, minimum resistance 240 Ohms
    - Supply Voltage 24VDC, minimum resistance 480 Ohms
  - ⌘ The output switch is protected against back-EMFs generated at relay turn-off.
  - ⌘ Output protection activates at more than  $\pm 28$  VDC.
- External current limiting is needed to protect input voltages above  $\pm 28$  VDC.

## Protocols and Functionality

<b>Ethernet Technologies</b>	IEEE 802.3 for 10BaseT IEEE 802.3u for 100BaseTX
<b>ADSL Technologies</b>	ITU-T G.992.1 ADSL (Annex A, B (non overlap)) ITU-T G.992.2 ADSL Lite (Annex A (non overlap)) ITU-T G.992.3 ADSL2 (Annex A, B, I, L, M (non overlap)) ITU-T G.992.5 ADSL2+ (Annex A, B, I, M (non overlap)) ITU-T 993.2 VDSL2 (Annex A, B) RFC2684 Bridged LLC and Bridged VC-MUX ATM encap. (ADSL) ADSL2++ Quad spectrum downstream and double upstream
<b>Cellular Technologies (optional)</b>	GSM GPRS Multi-slot class 12, mobile station class B, PBCCH support, coding schemes CS 1-4 EDGE Multi-slot class 12 (max 236.8 Kbit/s), mobile station class B, modulation and coding scheme MCS 1-9 3G (WCDMA) 384 Kbit/s downlink / uplink HSDPA up to 14.4 Mbit/s downlink HSUPA up to 5.7 Mbit/s uplink EV-DO Rev A
<b>WiFi Technologies (optional)</b>	Modes + Access point + Client + Multiple SSID Security + WEP (64 and 128 bit) encryption + WPA/WPA2 with Radius (WPA Enterprise and pre-shared keys)
<b>Serial Port Technologies</b>	RS-232 Serial Over IP (Serial Extender and Virtual Serial Port) LAPB
<b>Resiliency and High Availability</b>	IEEE 802.1D Spanning Tree Protocol (STP) IEEE 802.1w Rapid STP (RSTP)
<b>Layer-2 Switching</b>	IEEE 802.1Q Static VLAN and VLAN Tagging IEEE 802.3x Flow Control IGMPv2/v3 snooping Static Multicast MAC filters
<b>Layer-2 QoS</b>	IEEE 802.1p Class of Service Flexible classification VLAN tag, VLAN ID, IP DSCP/ToS, Port ID)



<b>IP Routing, Firewall, VPN and Cyber Security</b>	<p>Static IP routing</p> <p>Dynamic IP routing</p> <ul style="list-style-type: none"> <li>• BGP</li> <li>• OSPFv2</li> <li>• RIPv1/v2</li> </ul> <p>VRRP, VRRP+™</p> <p>GRE</p> <p>Stateful inspection Firewall / ACL, NAT, 1:1 NAT, Port Forwarding</p> <p>IPSec VPN including failover functionality, PSK &amp; X.509, SCEP</p> <ul style="list-style-type: none"> <li>• 20 Encrypted tunnels included, supports 200 tunnels in total with upgrade.</li> </ul> <p>L2TP, PPTP</p> <p>OpenVPN / SSL VPN</p> <p>TACACS+</p> <p>RADIUS</p> <p>SMS Control (Requires 3G Option)</p>
<b>Manageability</b>	<p>Management tools</p> <ul style="list-style-type: none"> <li>• Web interface (HTTP and HTTPS)</li> <li>• Command Line Interface (CLI) via console port, SSHv2 and TELNET</li> <li>• SNMPv1/v2c/v3</li> <li>• Powerful Packet/Protocol Analyzer with PCAP-export support</li> <li>• Flexible management of configuration and log files <ul style="list-style-type: none"> <li>• Local file management via HTTP, FTP, TFTP and SCP</li> <li>• Load/save files from/to USB memory stick</li> <li>• Upgrade firmware from USB memory stick</li> </ul> </li> </ul> <p>Flexible alarm/event handling system</p> <p>Syslog (log files and remote syslog server)</p> <p>Port Monitoring</p> <p>SNTP (NTP client)</p> <p>PPPoA &amp; PPPoE client</p> <p>DHCP server &amp; client</p> <p>DDNS</p>
<b>Programming Custom Control</b>	<p>ScriptBasic</p> <p>Python</p>

## Factory default/reset

Perform the following 4 steps to reset the unit to its factory default settings.

1. Power up the unit.
2. Locate the reset switch on the underside of the unit, near the front ventilation holes.
3. Press and hold the reset switch gently, with the tip of a pen or other similar device, until you see the front LEDs flashing (~5 sec).
4. Remove the tip of the pen and wait for the unit to reboot.

**Note!** Do not power off the unit while the factory reset procedure is in place

### Default Network Settings

IP address (Ethernet ports)	192.168.2.200
Netmask (Ethernet ports)	255.255.255.0
Username	admin
Password	westermo

### Default DSL Settings

DSL Connection type	ADSL/ADSL2/ADSL2+ on Annex A
VPI / VCI	0 / 38
Authentication	PPPoA

### Reset/set IP address using an RS-232 serial connection

If the IP address of the device is unknown the best way to access the unit is by performing a factory reset, however, in some instances it may be required to only change, or set, the IP address of the device. This can be achieved by connecting an RS-232 cable between the Serial 0 port on the device to your PC.

### RS-232 PC settings


Data rate	115.200 bit/s
Data bits	8
Stop bits	1
Parity	None
Flow control	None

Execute the following commands and change them to match your desired network settings.

```
Eth 0 ipaddr 192.168.2.200
Eth 0 mask 255.255.255.0
Eth 0 gateway 192.168.2.200
Eth 0 status
Config 0 save
```

The device can now be reached on the IP-address configured above.

Step-by-step guide to configure a DSL-connection using the web interface

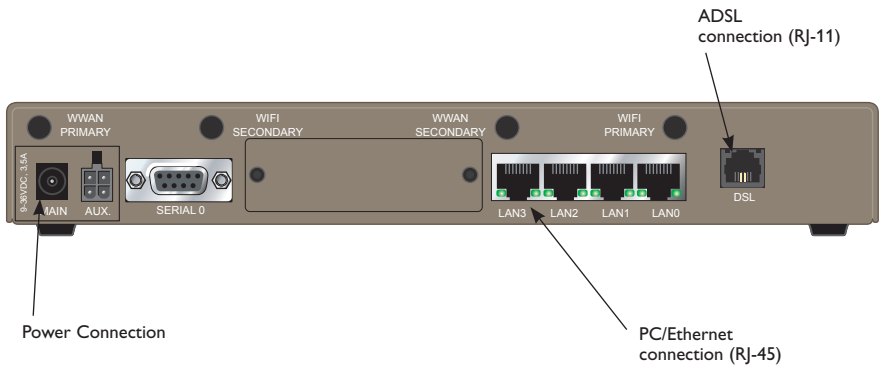

Step 1 – Power-up the unit and wait for it to become ready

Connect the DR-270 to the DSL-network using the RJ-11, connect an RJ-45 cable from one of the four Ethernet-ports to your PC, and then connect the unit to an appropriate PSU and power it up.

The unit will start to negotiate the DSL-connection after approximately 15 – 20 seconds, please note that the default settings might not be appropriate for your specific connection. Continue reading in order to assure that you have a valid setup.

Step 2 – Configure your PC

Make the following changes in your PC.

IP address	192.168.2.100*
Netmask (Ethernet ports)	255.255.255.0
Gateway	192.168.2.200
Preferred DNS server	192.168.2.200


\* Can be any address in the 192.168.2.0-255-range except 192.168.2.200.

**Note!** If you are unsure or unable to change the above – consult your network administrator.

### Step 3 – Accessing the unit

Start a web browser on your PC and type in the following address

http://192.168.2.200



### Step 4 – Login screen

After step 3 you will be presented with a login screen which asks for a username and a password. Please type in the following:

Username **admin**

Password **westermo**




### Step 5 – Welcome screen

You have now successfully logged into the unit and are ready to set up your DSL-connection.



Robust Industrial Data Communications - Made Easy

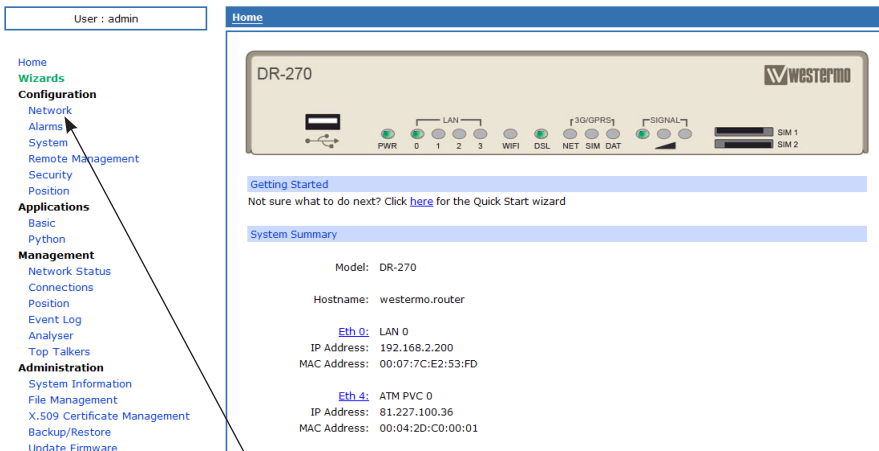


Please click on **Network** under the **Configuration**-menu item.

## Step 6 – Alternative 1 – DSL Setup for PPPoA (e.g. UK) / PPPoE (e.g. DE)

The DR-270 comes pre-configured to match connections using ADSL with VPI/VCI set to 0/38, authentication via PPPoA. Should the default settings not match your connection you can always change the parameters to match your specific details.

### Configuration - Network > Interfaces > DSL

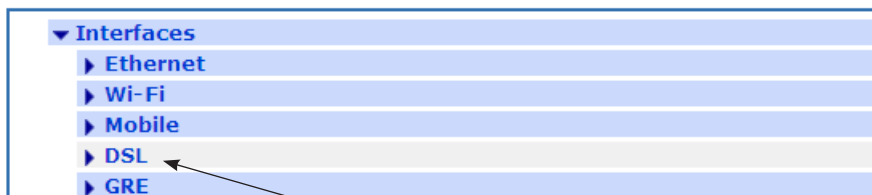

Then click on **DSL** under the **Interface**-context.

ADSL Settings per country					
Country	Provider	Annex	Mode	ATM Enc.	VPI / VCI
Sweden	TeliaSonera	A	DHCP	LLC	8/35
Germany	Deutsche Telekom (DT)	B	PPPoE	LLC	1/32
United Kingdom	British Telecom (BT)	A	PPPoA	LLC	0/38

## DSL

☒ Enable DSL

Configure PVC [0]

Link VDSL interface with Ethernet: [None]

## PVC Configuration

☒ Enable this PVC

Encapsulation: [PPPoA LLC]

VPI: [8] VCI: [35]

## DSL Network Settings

This DSL PVC is using PPP 1

Description [DSL]

Username: [Enter ADSL Username]

Password: [ ]

Confirm password: [ ]

☒ Enable NAT on this interface☐ IP address ☒ IP address and Port

NAT Source IP address: [0]

☒ Enable IPsec on this interface☐ Keep Security Associations (SAs) when this DSL interface is disconnected

Use interface [Default] [0] for the source IP address of IPsec packets

☐ Enable the firewall on this interface☐ Limit the data transmitted over this interface

Issue a warning event after [0] KBytes

Stop data from being transmitted after [0] KBytes

Reset the data limit on the [0] day of the month

## PVC Traffic Shaping

## Advanced

Apply

In the DSL setup screen you configure the DSL-broadband connection according to the information you received from your service provider.

When you are done, please press **Apply** and then **Save** to save your configuration.

## Step 6 – Alternative 2 – DSL Setup for DHCP / Routed access (e.g. SE)

Some ISPs does not require any username or password and usually provides Internet access via DHCP. To setup the DR-270 in those countries/ISPs please follow the actions below.

### PVC Configuration

☒ Enable this PVC

Encapsulation:

VPI:  VCI:

### DSL Network Settings

This DSL PVC is using PPP 1

Description

- PPPoA LLC
- PPPoA VC-Mux
- PPPoA LLC
- PPPoE VC-Mux
- PPPoE LLC
- Bridged Ethernet VC-Mux
- Bridged Ethernet LLC**
- Routed IP VC-Mux
- Routed IP LLC

First change from PPPoA LLC to Bridged Ethernet LLC under PVC Configuration

▼ DSL

☒ Enable DSL

Configure PVC

Link VDSL interface with Ethernet:

PVC Configuration

☒ Enable this PVC

Encapsulation:

VPI:  VCI:

Configure this device as a ☒ Router ☐ Bridge

DSL Network Settings

This DSL PVC is using ETH 4

▼ ETH 4

Description:

☒ Get an IP address automatically using DHCP

Override these DHCP server values:

Mask:

Gateway:

DNS Server:

Secondary DNS Server:

☐ Use the MAC address as the client ID

☐ Use the following settings

Changes to these parameters may affect your browser connection

► Advanced

Make sure that the radio-button for **Get an IP address automatically using DHCP** is selected.



## Step 7 – Unit ready and online

The DR-270 will immediately start to negotiate the DSL-connection with the new details after Step 6. To monitor the connection progress, navigate to Network Status→ Interfaces→ DSL. Under Modem Status you see the status of the DSL-connection.

## Step 8 – Test your connection


In your Internet browser type in [www.westermo.com](http://www.westermo.com) and test your connection, you should be able to see the Westermo website.

***You are now ready to use the DR-270!***

## Change the IP address of the unit

First follow steps 1 through 5 above.

Then click on Interfaces→ Ethernet → ETH 0 – LAN 0

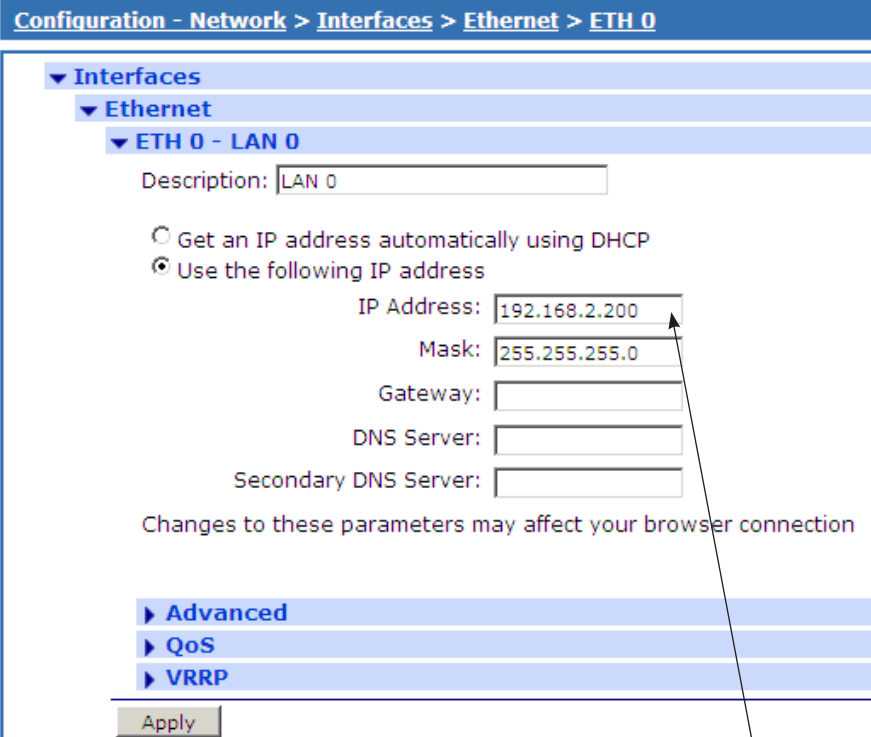

The screenshot shows the configuration page for the Ethernet interface (ETH 0 - LAN 0). The breadcrumb trail at the top reads: **Configuration - Network > Interfaces > Ethernet > ETH 0**. The left sidebar shows a tree structure: **Interfaces** > **Ethernet** > **ETH 0 - LAN 0**. The main content area for **ETH 0 - LAN 0** includes a **Description:** field with the value **LAN 0**. Below this are two radio button options:   
- ☐ Get an IP address automatically using DHCP  
- ☒ Use the following IP address  
The second option is selected. Below it are input fields for:   
- **IP Address:** 192.168.2.200  
- **Mask:** 255.255.255.0  
- **Gateway:** (empty)  
- **DNS Server:** (empty)  
- **Secondary DNS Server:** (empty)  
A warning message states: "Changes to these parameters may affect your browser connection". At the bottom, there are three expandable sections: **Advanced**, **QoS**, and **VRRP**. An **Apply** button is located at the bottom left. A black arrow points from the **IP Address** field to the text below the screenshot.

Type the desired IP address into the text box next to IP Address and then press **Apply** and **Save**.







Westermo • SE-640 40 Stora Sundby, Sweden

Tel +46 16 42 80 00 Fax +46 16 42 80 01

E-mail: [info@westermo.com](mailto:info@westermo.com)

[www.westermo.com](http://www.westermo.com)

## Sales Units

### Westermo Data Communications

---

#### China

[sales.cn@westermo.com](mailto:sales.cn@westermo.com)

[www.cn.westermo.com](http://www.cn.westermo.com)

#### France

[infos@westermo.fr](mailto:infos@westermo.fr)

[www.westermo.fr](http://www.westermo.fr)

#### Germany

[info@westermo.de](mailto:info@westermo.de)

[www.westermo.de](http://www.westermo.de)

#### North America

[info@westermo.com](mailto:info@westermo.com)

[www.westermo.com](http://www.westermo.com)

#### Singapore

[sales@westermo.com.sg](mailto:sales@westermo.com.sg)

[www.westermo.com](http://www.westermo.com)

#### Sweden

[info.sverige@westermo.se](mailto:info.sverige@westermo.se)

[www.westermo.se](http://www.westermo.se)

#### United Kingdom

[sales@westermo.co.uk](mailto:sales@westermo.co.uk)

[www.westermo.co.uk](http://www.westermo.co.uk)

#### Other Offices



*For complete contact information, please visit our website at [www.westermo.com/contact](http://www.westermo.com/contact) or scan the QR code*